

Manual


Backpack gas sprayer

6.6 gal

FUG-252

Applies for:

Code	Model
101568	FUG-252

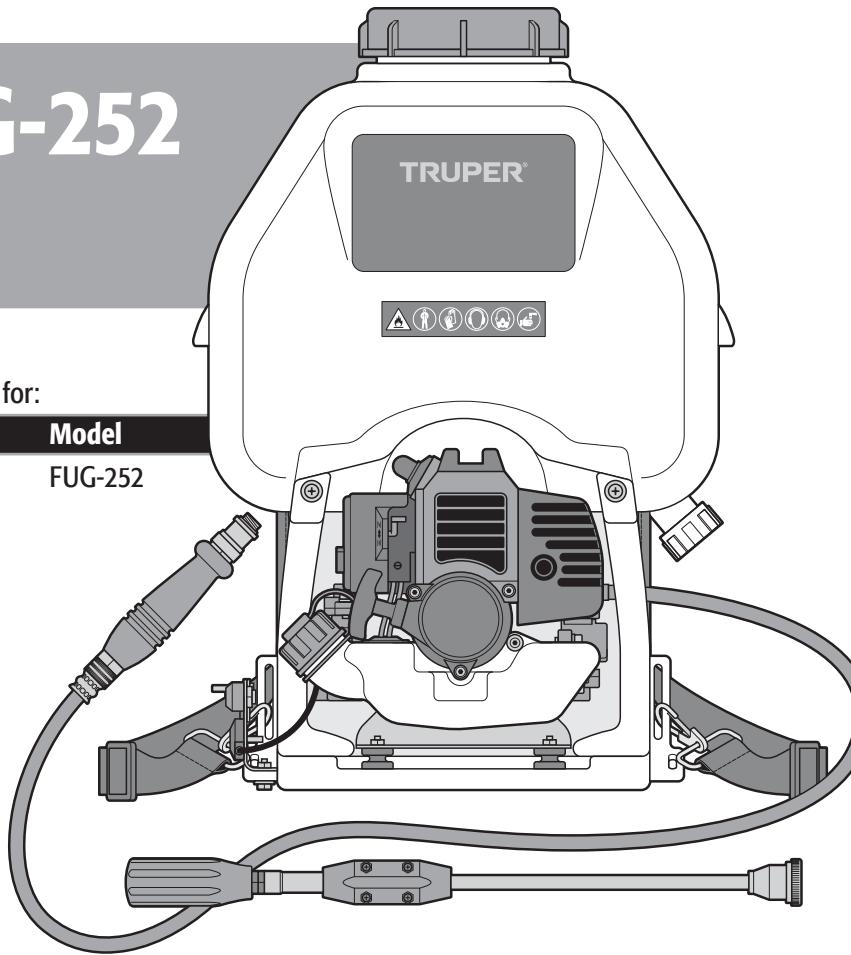

Read the user's manual thoroughly
before operating this tool.

1 YEAR WARRANTY
AÑO DE GARANTÍA -

Technical data	3
Fuel Specifications	3
 General motor tool safety warnings	4
 Safety Warnings for Using Sprayers	5
Parts	6
Assembly	7
Fuel Supply	8
Ignition	9
Tank filling	9
Operation	10
Maintenance	10
Accessories and spare parts	11
Troubleshooting	12
Authorized Service Centers	13
Warranty Policy	14

CAUTION

To gain the best performance of the tool, prolong the duty life, make the Warranty valid if necessary, and to avoid hazards of fatal injuries please read and understand this Manual before using the tool.

Keep this manual for future references.

The illustrations in this manual are for reference only. They might be different from the real tool.

Use and care recommendations

 For better performance and durability, use high-octane gasoline. In Mexico, we recommend using **PREMIUM** gasoline mixed with **2-STROKE ENGINE OIL**. Using the wrong mixture can cause serious engine damage.



 **DO NOT** use **GASOLINE MIXTURE** that has been stored for over 15 days.

 **ALWAYS** run your machine at **FULL POWER** with the throttle **FULLY** engaged.

 Keep the engine's ventilation slots **CLEAR**.



 Perform regular **MAINTENANCE** on your machine (Page 10).

FUG-252

Code •	101568
Description •	Backpack gas sprayer
Net Weight •	19.8 lb
Motor •	25 cc
Rated Motor Power •	0.8 Hp
Fuel Tank •	6.6 gal
Work Pressure •	270 PSI
Maximum liquid flow •	1.6 GPM
Work Cycle •	30 minutes' rest per tank consumed. Maximum 6 hours daily
Type of Fuel •	Gasoline / Oil Mix (50 : 1)
Type of starter •	Recoil starter

Fuel Specifications



For better performance and durability use higher-octane gasoline. In Mexico, we suggest using PREMIUM gasoline.

- The sprayer has a 2-stroke air-cooled engine that uses a blend of unleaded gasoline and high-quality auto-mix oil with fuel stabilizer specified for two-stroke air-cooled engine.
- The engine is certified to run on unleaded gasoline for vehicles with an octane rating of 87 ([R+M]/2) or higher.
- Do not use any type of gasoline premixed with oil purchased at gas stations, such as gasoline intended for motorcycles.
- Do not use automotive oil or 2-stroke outboard motor oil.
- The ratio of the mixture should be 50 gasoline to 1 oil (50:1 ratio). Prepare the mixture in an approved gasoline container. Always mix well before pouring into the engine tank.

CAUTION Do not use fuel mixture stored for more than 15 days. Make the mixture in small quantities.

WARNING Never smoke near the fuel, in the area where the gasoline is supplied, or where you prepare the mixture with the oil, or when operating the crop sprayer.

WARNING Any attempt to start the sprayer without adding oil to the fuel mixture will cause engine failure.



Use TRUPER ACES-2, ACES-5 or ACES-20 oil caps** to measure the mix.
Mix 5 capfuls oil per each gasoline liter.



A wrong mix may cause the motor to throw a rod causing expensive repairs!



Gasoline
PREMIUM



50:1

Mix

To prolong the useful life of the motor use TRUPER two-cycle synthetic motor oil.

* 1 gallon = 3.78 liter

** Not included

General motor tool
safety warnings

Keep your work area tidy and with good lighting.

CAUTION Cluttered and dark areas can cause injuries.Never use the mixer in explosive environments or
where there are flammable liquids present.**DANGER** Set the mixer 30 ft. away from the fuel filling up area
before starting the motor.Keep children and passersby at a safe distance while
the mixer is operating.**WARNING** Distractions can make you loose control and
cause accidents.

Avoid making contact with power lines and circuits.

DANGER Find and avoid all power lines and circuits, especially
hidden wiring. Also keep away from grounded objects.

Stay always alert, be prudent and use common sense.

CAUTION Even tough you are familiar with the use of the mixer do
not get distracted while operating the machine. It can
cause accidents.Do not operate the mixer when tired or under the
influence of drugs, alcohol or medication.**DANGER** A moment of distraction while operating the mixer can
cause severe personal injury.Use the mixer with the guards and protector installed
and in good repair.**WARNING** Failure to comply with this warning leads to severe personal
injury.

Never force the concrete mixer.

CAUTION Working within the range designed assures a better job
and is safer.Store the mixer is a safe place away from the reach of
children.**WARNING** Motor concrete mixers are dangerous near inexperienced
hands.

Wear the right clothes.

WARNING Loose clothing, jewelry or long hair can get
tangled in the moving parts.Keep your hands away from the rotating or moving
parts.**WARNING** Failure to comply with this warning leads to
severe personal injury.

Do not use the mixer in enclosed areas.

DANGER To prevent accumulation of carbon monoxide, an
odorless toxic gas potentially deadly.

Use the right personal protection equipment.

CAUTION Using eye protection, anti-dust masks, non-skid safety
shoes, helmet, hearing protection and safety gloves
considerably reduce the risk of injury.Turn off the mixer before adjusting, changing
accessories or storing.**WARNING** Double-check the mixer motor switch is in the OFF position.Never run the mixer if the switch is not working or is
not duly assembled.**WARNING** The operator is exposed to severe injury. Take it to repair
immediately to a TRUPER Authorized Service Center.

Do not overreach.

CAUTION Good footing and balance give better control of the mixer in
unexpected situations.

Prevent unintentional starting.

WARNING Double-check the mixer motor is OFF before
leaving or servicing.

Remove any vise fixed in the mixer before starting it.

DANGER Additional tools or wrenches fixed in a rotating part in
the mixer can cause severe personal injury.Service the mixer and double-check it is in the best
conditions before starting it.**CAUTION** Check carefully the moving parts. See alignment and
assembly. Do it periodically. Look for damaged elements
or part that is not functioning correctly. Repair
immediately in a TRUPER Authorized Service Center.

Accessories.

CAUTION Use only accessories or spare parts indicated in this
Manual or certified by TRUPER.Never leave the concrete mixer running and
unattended.**DANGER** To prevent severe accidents turn off the mixer after
operating and before setting it in a safe place.

Never smoke near fuel.

DANGER Do not smoke near the area where fuel is being supplied
or when operating the mixer.

Safety Warnings for Using Sprayers

TRUPER

- The sprayer is designed for agricultural use.
- Do not attempt to spray hot solutions or solutions that can become hot with the sprayer.

DANGER • Do not attempt to spray gasoline, flammable liquids, caustic alkalis or corrosive acids with the sprayer.

Fuel handling

- Never smoke near the fuel, in the area where the gasoline is dispensed, or where you prepare the mixture with the oil, or when operating the sprayer.
- To reduce the risk of fire or burns, handle fuel carefully, it is highly flammable.
- Do not let gasoline or oil touch your skin.
- Protect your eyes from gasoline and oil splashes. In case of accidental contact, wash immediately with clean water. If irritation persists, consult a doctor.
- Mix and store fuel in a container designed for this purpose.

WARNING • Mix fuel outdoors away from any sparks or flames.

• Before refueling the sprayer turn off the engine, place it on clear ground and wait for the engine to cool down.

CAUTION • Clean up any fuel that may have fallen into the sprayer before operating it.

CAUTION • Check for fuel leaks and correct them before using the sprayer to prevent fire or burn injury.

• Move the sprayer at least 30 feet (9 meters) away from the fueling site before starting the engine.

• Under no circumstances burn spilled fuel for disposal.

• Do not use any type of fuel other than that specified for the sprayer in these instructions.

Before operating the sprayer

CAUTION • Equip yourself with adequate protection: protective clothing, goggles and respirators with suitable cartridges so as not to inhale the sprayed chemicals.



WARNING • Familiarize yourself with the first aid procedures described on the chemical container prior to application.

WARNING • For operator safety, spraying must be carried out strictly in accordance with the chemical instructions. Spraying extremely poisonous chemicals is strictly prohibited.

During the use of the sprayer

CAUTION • Never leave the sprayer unattended.

- Take care of the sprayer from knocks and falls, especially when it is pressurized.
- Do not exceed the level indicated on the tank when filling the sprayer.

WARNING • Do not spray while the wind is blowing or in any other condition that may expose you or others to the sprayed chemical.

- Do not remove any parts or attempt to make repairs while the sprayer is pressurized.
- Never carry the sprayer by the hose.

WARNING • Do not eat, drink, or smoke while using the sprayer.

After using the sprayer

CAUTION • Always empty and clean the sprayer after each use.

CAUTION • Clothes used during application should be washed daily, separately from everyday clothes.

Chemicals

WARNING • Keep the sprayer and chemicals out of the reach of children. Store in a safe place.



• Do not store chemicals in the sprayer tank.

CAUTION • After preparing the compound it should be applied immediately.

CAUTION • Be sure to read and understand the instructions and precautions for the chemicals to be used with the equipment before use.

WARNING • Be sure to use the specific chemical in amounts appropriate for the job to be done. Wrong chemicals and quantities can damage the sprayer, spoil the sprayed product, cause hazardous situations and serious ecological damage.




WARNING • Even if the chemical is stored in a plastic container, it may damage some of the equipment parts. Make sure that the chemical is compatible with high density polypropylene sprayers.

WARNING • Many of the chemicals commonly used with the sprayer are hazardous if handled or used incorrectly.


CAUTION • In case of poisoning, seek medical advice immediately and show the doctor the label of the chemical used.


CAUTION • If the chemical splashes in the mouth or eyes, wash them out with clean water and then see a doctor.

CAUTION • If the operator has a headache or dizziness, stop work immediately and see a doctor immediately.

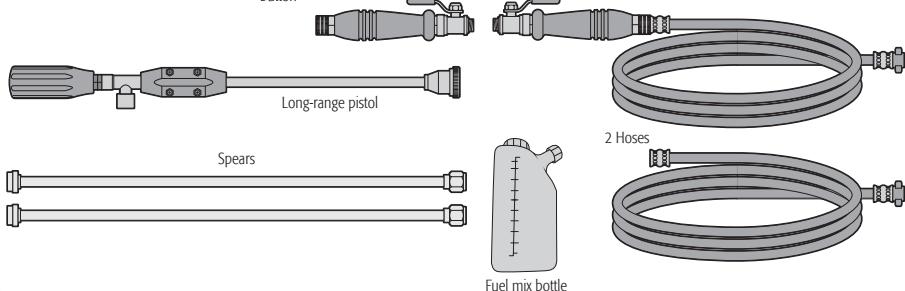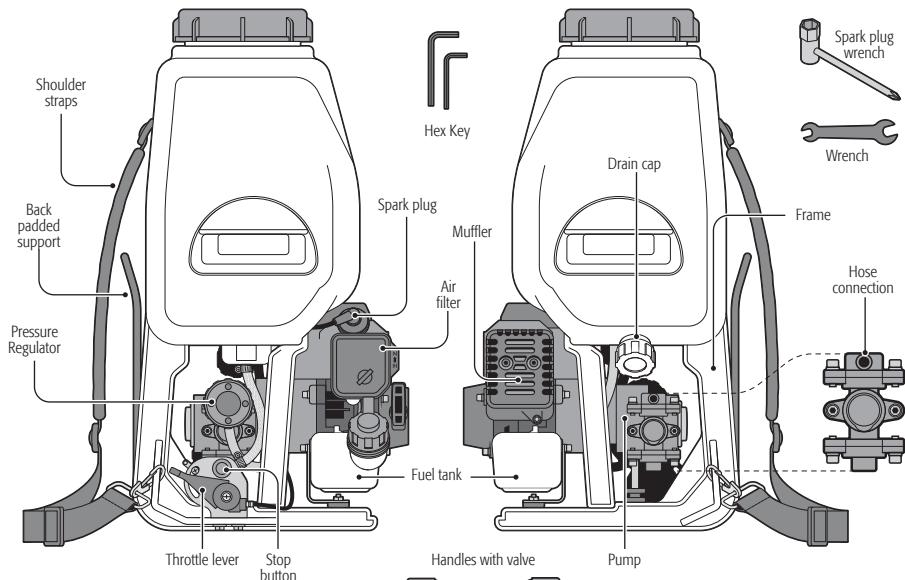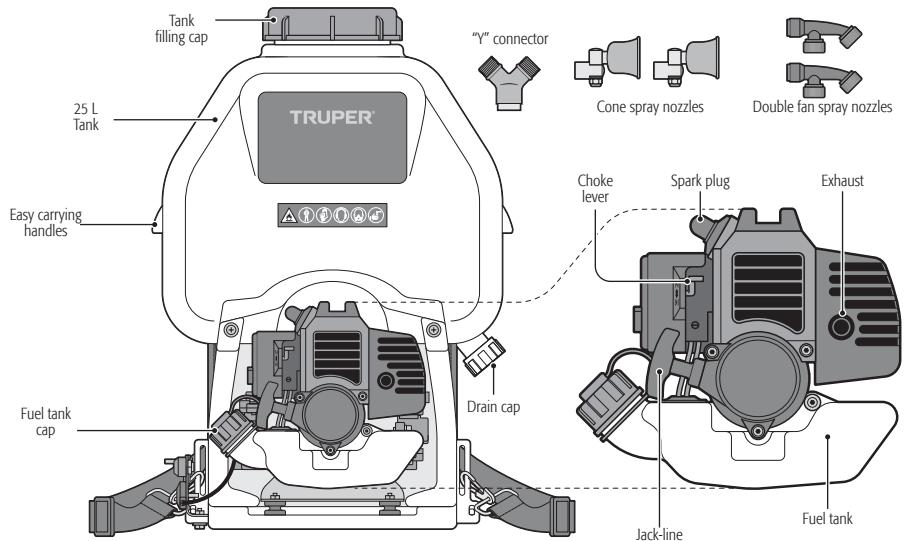

Hose, valve and spears

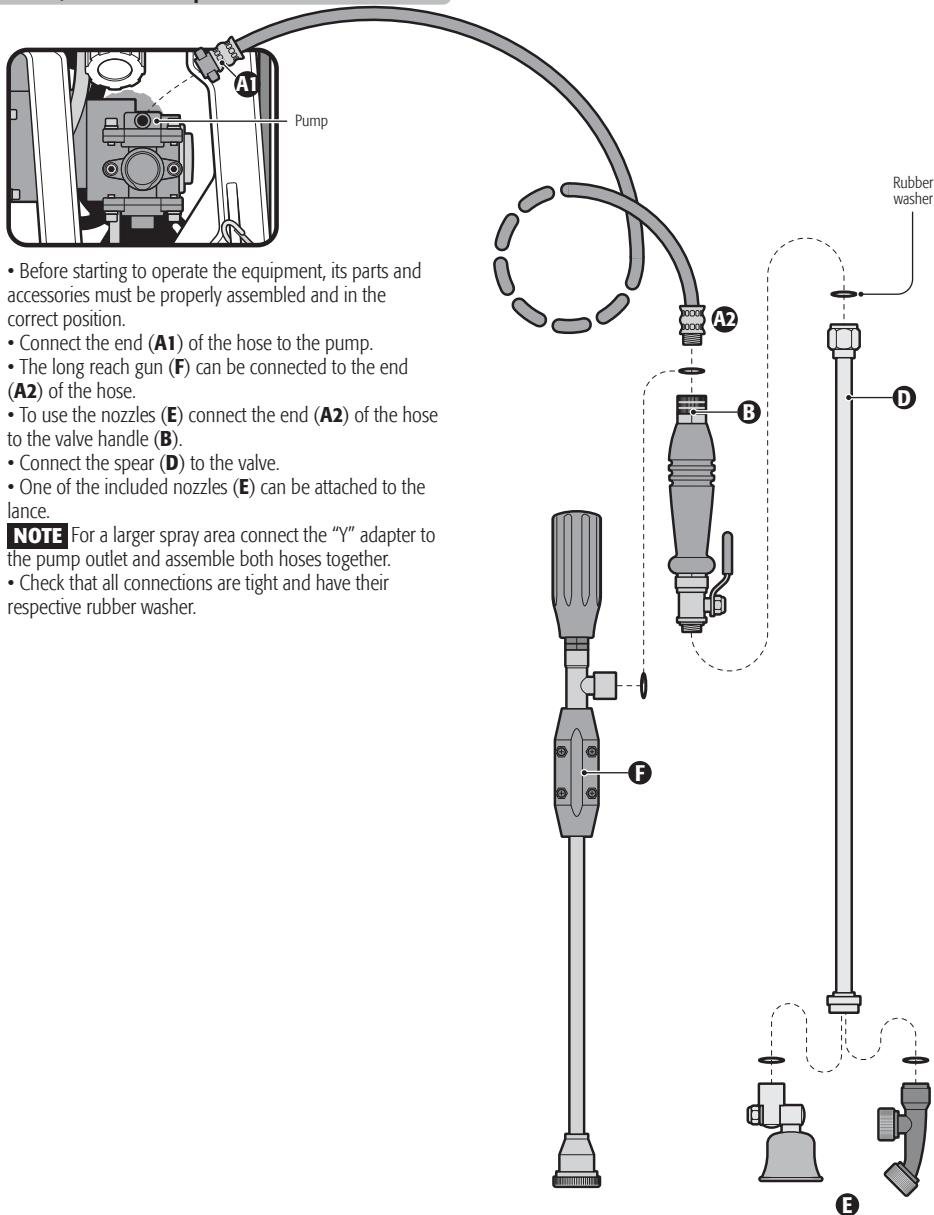


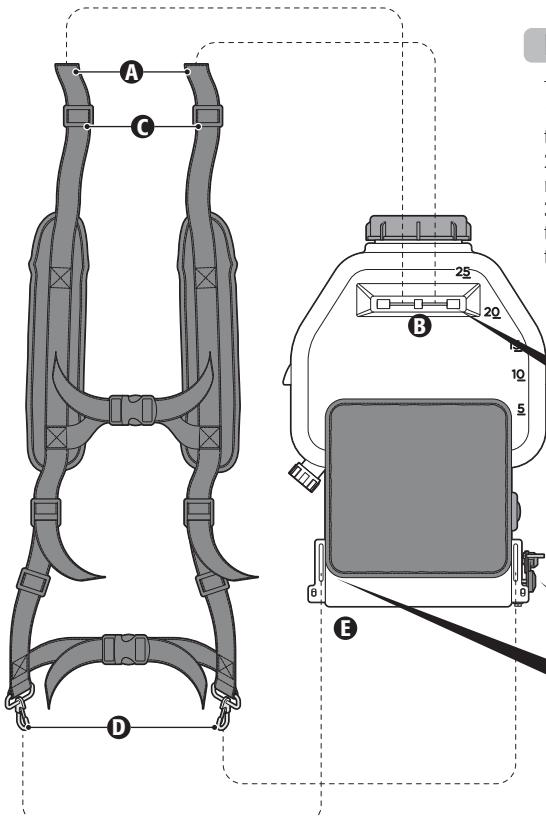

Harness assembly

To mount the straps to the equipment:


1. Insert the ends of each strap (A) behind the mounting bolt (B).
2. Pass the end of the straps through its respective buckle (C) as shown in the image.
3. Place the metal hooks of each strap (D) in the plastic supports (E) on the bottom of the tank.

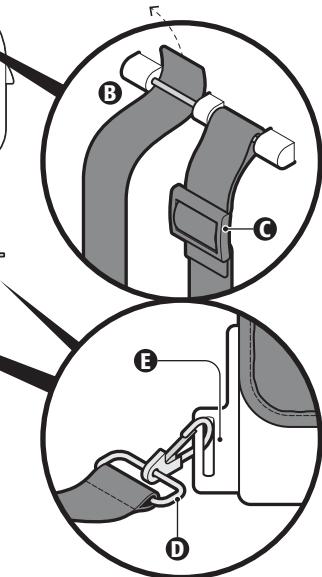

Fuel Supply

- Follow the safety rules for fuel handling (page 5).
- Wait for the engine to cool down completely before refueling.
- Install the equipment on a flat surface.
- Clean around the fuel tank cap to prevent contamination.
- Slowly loosen the fuel tank cap.
- Taking care to avoid spillage, pour the fuel mixture into the tank. **CAUTION** Follow the fuel specifications (page 3).
- Before capping the fuel tank, check and clean the gaskets.
- Immediately install the fuel tank cap and tighten it by hand.
- Wipe up any spilled fuel.


CAUTION On a new engine, smoke emissions are normal during and after first use.

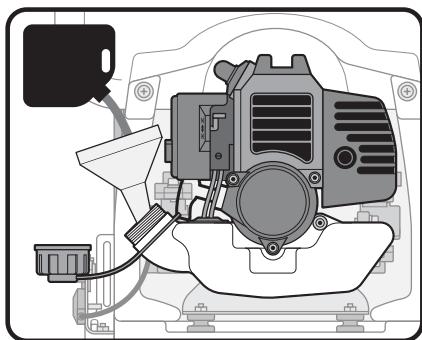

Cold motor ignition

- Install the unit on a firm, level surface.
- Move the throttle lever to one third of the scale (A).
- Press and release the choke bulb 10 times (B).
- Move the choke lever to the "||" (1) position.
- Pull the starter 3 to 5 times (C) to get fuel into the engine, then pull the starter fast and hard to start the engine. Once the engine starts do not let go of the starter, carefully return it to its initial position to avoid damaging it.
- Once the engine starts slowly install the choke lever in the "||" (2) position.
- Adjust the throttle lever (A) to a position suitable for spraying operation.
- The machine is now ready for operation.

NOTE • The new machine should not be operated in the fully open position for the first 4 hours. The speed should be controlled at 4 000 RPM - 5 000 RPM, thus allowing the motor to have a good adaptation and perform a reliable work.

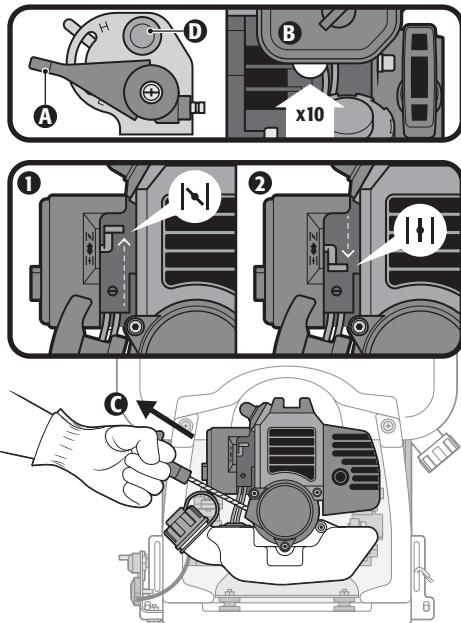

Hot motor ignition


- Move the fuel lever to one third of the scale (A).
- Move the choke lever to the "||" (2) position.
- Pull the starter (C) until the engine starts.
- Adjust the throttle lever (A).

Shutdown

- Move the throttle lever (A) to its lowest position.
- Press the stop button (D), until the motor stops.

Tank filling

CAUTION • When adding the liquid, the engine does not have to stop, but it must be at low speed (i.e., in the minimum throttle position).

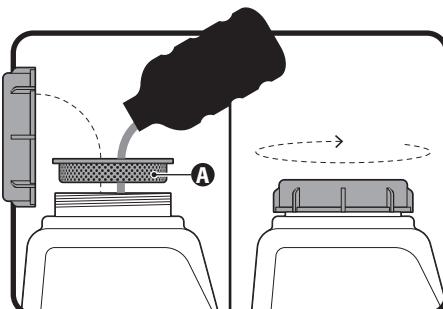

CAUTION • BEFORE USING THE SPRAYER WITH CHEMICALS, YOU MUST TEST THE TANK UNDER RUNNING WATER. If you find any leaks or malfunctioning parts, repair or replace before using any chemicals.

CAUTION • Determine the proper amounts of chemical concentrate and water to prepare the spray mixture. The ratio is indicated on the label of the concentrated chemical container.


- Remove the tank lid and make sure the particle filter (A) is in place.
- Pour the appropriate amount of mixture into the tank, after pouring hold the container down for a minimum of 30 seconds to allow it to empty completely.

CAUTION • Do not exceed the limit marked on the tank.

- Close the tank by screwing the cap clockwise until the tank is perfectly sealed.

Pressure regulation

- The pressure at which the liquid comes out of the pump is regulated at the factory.
- If adjustment is necessary, wait until the motor speed is 5 000 RPM - 6 000 RPM and make adjustments by means of the pressure adjustment knob (A).
- Release the knob lock and turn clockwise to increase pressure and counterclockwise to decrease pressure.

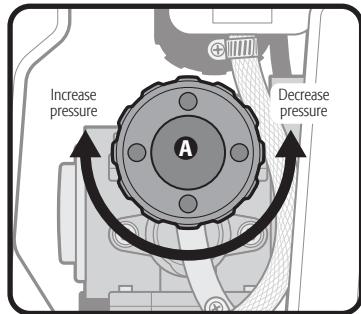


Pump oil

- Remove the padded back support carefully to avoid damaging the plastic fixing rivets.
- Place the sprayer on a stable and flat surface.
- Check the oil level through the plastic oil inspection window. The proper level is when the oil is halfway down the line.
- If the level is insufficient, use SAE 85W-90 oil to refill the pump.

Spraying

- Chemical spraying should be done in cool weather with little wind. For example, in the early morning or late afternoon. This reduces evaporation and drift of the chemicals as well as improves product application.
- Wear all personal protective equipment before carrying the equipment on your shoulders.
- Set the equipment on a table that will support its weight, so that the shoulder straps are off the edge of the table.
- Put your shoulders through the straps and secure the equipment behind your back.
- Adjust the throttle lever to operate the motor.
- Open the handle valve to start spraying.
- After opening the valve keep the handle moving so that the spray is not concentrated in one spot. Failure to do so may result in chemical damage.
- Remember that the operator must face into the wind.
- The lance or gun should form a level angle of about 15°
- During spraying, the spray tube should oscillate continuously between left and right to increase the spraying range. The advanced steps should match the oscillation speed.

Protective equipment

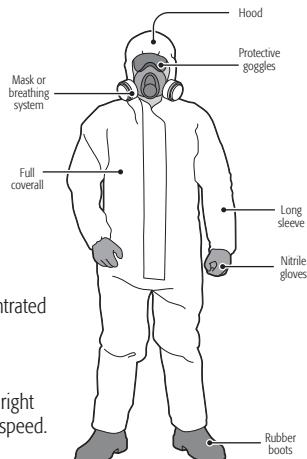

Maintenance

- The following maintenance tasks should be carried out whenever you finish operating the equipment.
- Clean all surfaces.
- Clean the chemical tank with clean water and dry it.
- Check all connections for water or fuel leaks. In case of a leak, repair it immediately.
- Check all bolts for looseness. Tighten them firmly or replace them if necessary.

- After maintenance, the machine should be left to dry in a ventilated place. It must be far from any source of light and avoid sunlight.
- If the equipment is to be stored for a long time, in addition to the above points:
 - Completely discharge the fuel from the tank and carburetor. Turn off the choke, pull the starter 3 - 5 times.
 - Remove the spark plug and pour some oil into the cylinder. Then pull the starter lightly 2 - 3 times. Then install the spark plug.


Periodic maintenance	Each use	Every 25 h of use	Every 50 h of use	Every 150 h of use	Every 250 h of use
General cleaning	✓				
Air filter cleaning					
Check-fill oil level in the pump					
Carburetor cleaning*					
Spark plug inspection and adjustment*					
Fuel tank cleaning**					
Fuel filter change**					
Fuel Hose Replacement**					
Exhaust and muffler cleaning**					

*Trained user or Truper Authorized Service Center

**Truper Authorized Service Center

Accessories and spare parts

Available accessories and replacement parts list

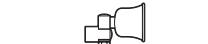Component	Code	Part	Description
	101995	LAN-FUG	Long-range pistol
	101996	VAR-FUG	Stainless steel wand
	101997	MANG-FUG	Reinforced hose
	101998	BOQ1-FUG	Cone spray nozzle
	101999	BOQ2-FUG	Double fan spray nozzle
	102030	ARN-FUG	Harness
	102031	MAN-FUG	Handle
	102032	VAL-FUG	Valve
	102034	CB-FUG-252	Carburetor

Problem	Cause	Solution
Equipment does not start.	<ul style="list-style-type: none"> Did not press the choke. Water mixed with fuel. Deterioration or carbon deposits on the spark plug. No contact between spark plug and coil wire. 	<ul style="list-style-type: none"> Press 10 times as indicated. (p. 9) Change the fuel. Replace the spark plug. Check and adjust.
The equipment starts, but does not run at high speed.	<ul style="list-style-type: none"> Choke not in fully open position. Incorrect fuel ratio. Water in fuel. 	<ul style="list-style-type: none"> Open to full position. Change fuel. Change fuel.
The equipment works, but has low efficiency.	<ul style="list-style-type: none"> The air cleaner or filter is dirty. The outside of the cylinder and muffler have carbon deposits. Piston, piston ring, cylinder is excessively worn. 	<ul style="list-style-type: none"> Check and clean. Check and clean. Go to a TRUPER Authorized Service Center to replace.
The equipment stops when running.	<ul style="list-style-type: none"> Out of fuel. The coil or spark plug wire is loose. The spark plug is covered with carbon. The filter is clogged. Gasoline has water in it. The air hole in the tank cap is clogged. 	<ul style="list-style-type: none"> Add fuel. Check, replace and tighten. Replace spark plug. Clean filter. Change fuel. Clean it.
No liquid comes out.	<ul style="list-style-type: none"> Inlet and outlet valves are blocked. Damage to bearing 6004Z. Damage to the piston. 	<ul style="list-style-type: none"> Replace or clean. Go to a TRUPER Authorized Service Center to replace.
Spray volume and pressure is not enough.	<ul style="list-style-type: none"> The regulated pressure is not enough. The elastic force of the regulating spring is not enough. Corrosion-resistant steel ball worn. Pressure regulating valve seat worn. 	<ul style="list-style-type: none"> Make the adjustment. Go to a TRUPER Authorized Service Center to replace.
The pressure is adequate but the spray is not.	<ul style="list-style-type: none"> Worn piston. Piston clearance not adequate. Inlet and outlet valves are worn. Spraying parts are clogged. 	<ul style="list-style-type: none"> Go to a TRUPER Authorized Service Center or repairs or replacement. Clean the parts.
The spraying mist is uneven.	<ul style="list-style-type: none"> The holes in the spraying nozzle are worn out. The spraying parts are clogged. 	<ul style="list-style-type: none"> Go to a TRUPER Authorized Service Center to replace. Clean the parts.

If the problems persist despite performing the recommended corrective actions, contact a TRUPER Authorized Service Center.

Authorized Service Centers

TRUPER

In the event of any problem contacting a TRUPER Authorized Service Center, please see our webpage WWW.TRUPER.COM to get an updated list, or call our toll-free numbers **800 690-6990** or **800 018-7873** to get information about the nearest Service Center.

AGUASCALIENTES	DE TODO PARA LA CONSTRUCCIÓN GRAL. BARRAGÁN #1201, COL. GREMIAL, C.P. 20030, AGUASCALIENTES, AGS. TEL.: 449 994 0537	MORELOS	FIX FERRETERÍAS CAPITÁN ANZURES #95, ESQ. JOSÉ PERDIZ, COL. CENTRO, C.P. 62740, CUAUTLA, MOR. TEL: 735 352 8931
BAJA CALIFORNIA	SUCRASAL TIJUANA AV. LA ENCANTADA, LOTE #5, PARQUE INDUSTRIAL EL FLORIDO II, C.P. 22244, TIJUANA, B.C. TEL.: 664 969 5100	NAYARIT	HERRAMIENTAS DE TEPIC MAZATLÁN #117, COL. CENTRO, C.P. 63000, TEPIC, NAY. TEL: 311 258 0540
BAJA CALIFORNIA SUR	FIX FERRETERÍAS FELIPE ANGELES ESQ. RUIZ CORTÍNEZ S/N, COL. PUEBLO NUEVO, C.P. 23670, CD. CONSTITUCIÓN, B.C.S. TEL: 613 132 1115	NUEVO LEÓN	SUCRASAL MONTERREY CARRETERA LAREDO #300, 1B MONTERREY PARKS, COLONIA PUERTA DE ANAHUAC, C.P. 66052, ESCOBEDO, NUEVO LEÓN, TEL: 81 8352 8791 / 81 8352 8790
CAMPECHE	TORNILLERÍA Y FERRETERÍA AAA AV. ÁLVARO OBREGÓN #324, COL. ESPERANZA C.P. 24080 CAMPECHE, CAMP. TEL.: 981 815 2808	OAXACA	FIX FERRETERÍAS AV. 20 DE NOVIEMBRE #910, COL. CENTRO, C.P. 68300, TUXTEPEC, OAX. TEL: 287 106 3092
CHIAPAS	FIX FERRETERÍAS AV. CENTRAL SUR #27, COL. CENTRO, C.P. 30700, TAPACHULA, CHIS. TEL: 962 118 4083	PUEBLA	SUCRASAL PUEBLA AV PERIFÉRICO #2-A, SAN LORENZO ALMECATLA, C.P. 72710, CUATLACINGO, PUE. TEL: 222 282 8282 / 84 / 85 / 86
CHIHUAHUA	SUCRASAL CHIHUAHUA AV. SILVESTRE TERRAZAS #128-11, PARQUE INDUSTRIAL BAFAR, CARRETERA MÉXICO CUAUHTEMOC, C.P. 31415, CHIHUAHUA, CHIH. TEL. 614 434 0052	QUERÉTARO	ARU HERRAMIENTAS S.A DE C.V. AV. PUERTO DE VERACRUZ #110, COL. RANCHO DE ENMEDIO, C.P. 76842, SAN JUAN DEL RÍO, QRO. TEL: 427 268 4544
CIUDAD DE MÉXICO	FIX FERRETERÍAS ELMONSTRUO DE CORREGIDORA, CORREGIDORA # 35, COL. CENTRO, C.P. 06060, CUAUHTEMOC, CDMX. TEL: 55 5522 5031 / 5522 4861	QUINTANA ROO	FIX FERRETERÍAS CARRETERA FEDERAL MZ. 46 LT. 3 LOCAL 2, COL EJIDAL, C.P. 77710 PLAYA DEL CARMEN, Q.R. TEL: 984 267 3140
COAHUILA	SUCRASAL TORREÓN CALLE METAL MECÁNICA #280, PARQUE INDUSTRIAL ORIENTE, C.P. 27278, TORREÓN, COAH. TEL: 871 209 68 23	SAN LUIS POTOSÍ	FIX FERRETERÍAS AV. UNIVERSIDAD #1850, COL. EL PASEO, C.P. 78320, SAN LUIS POTOSÍ, S.L.P. TEL: 444 822 4341
COLIMA	BOMBAS Y MOTORES BYMTESA DE MANZANILLO BLVD. MIGUEL DE LA MADRID #190, COL. 16 DE SEPTIEMBRE, C.P. 28239, MANZANILLO, COL. TEL: 314 332 1986 / 332 8013	SINALOA	SUCRASAL CULIACÁN AV. JESÚS KUMATE SUR #4301, COL. HACIENDA DE LA MORA, C.P. 80143, CULIACÁN, SIN. TEL: 667 173 9139 / 173 8400
DURANGO	TORNILLOS ÁGUILA, S.A. DE C.V. MAZURIJO #200, COL. LUIS ECHEVERRÍA, DURANGO, DGO.TEL: 618 817 1946 / 618 818 2844	SONORA	FIX FERRETERÍAS CALLE 5 DE FEBRERO #517, SUR LT. 25 MZ. 10, COL. CENTRO, C.P. 85000, CD. OBREGÓN, SON. TEL: 644 413 2392
ESTADO DE MÉXICO	SUCRASAL CENTRO JILOTEPEC PARQUE INDUSTRIAL # 1, COL. PARQUE INDUSTRIAL JILOTEPEC, JILOTEPEC, EDO. DE MÉX. C.P. 54257 TEL: 761 782 9101 EXT. 5728 Y 5102	TABASCO	SUCRASAL VILLAHERMOSA CALLE HELIO LOTES 1, 2 Y 3 MZ. #1, COL. INDUSTRIAL, 2A ETAPA, C.P. 86010, VILLAHERMOSA, TAB. TEL: 993 353 7244
GUANAJUATO	CÍA. FERRETERA NUEVO MUNDO S.A. DE C.V. AV. MÉXICO - JAPÓN #225, CD. INDUSTRIAL, C.P. 38010, CELAYA, GTO. TEL: 461 617 7578 / 79 / 80 / 88	TAMAULIPAS	VM ORINGS Y REFACCIONES CALLE ROSITA #527 ENTRE 20 DE NOVIEMBRE Y GRAL. RODRÍGUEZ, FRACC. REYNOSA, C.P. 88780, REYNOSA, TAMS. TEL: 899 926 7552
GUERRERO	CENTRO DE SERVICIO ECLIPSE CALLE PRINCIPAL MZ.1 LT. 1, COL. SANTA FE, C.P. 39010, CHILPANCINGO, GRO. TEL: 747 478 5793	TLAXCALA	SERVICIOS Y HERRAMIENTAS INDUSTRIALES PABLO SIDAR #132, COL. BARRIO DE SAN BARTOLOMÉ, C.P. 90970, SAN PABLO DEL MONTE, TLAX. TEL: 222 271 7502
HIDALGO	FERREPRECIOS S.A. DE C.V. LIBERTAD ORIENTE #304 LOCAL 30, INTERIOR DE PASAJE ROBLEDO, COL. CENTRO, C.P. 43600, TULANCINGO, HGO. TEL: 775 753 6615 / 775 753 6616	VERACRUZ	LA CASA DISTRIBUIDORA TRUPER BLVD. PRIMAVERA, ESQ. HORTENSIA S/N, COL. PRIMAVERA C.P. 93308, POZA RICA, VER. TEL: 782 823 8100 / 826 8484
JALISCO	SUCRASAL GUADALAJARA AV. ADOLFO B. HORN # 6800, COL: SANTA CRUZ DEL VALLE, C.P.: 45655, TLAJOMULCO DE ZÚÑIGA, JAL. TEL: 33 3606 5285 AL 90	YUCATÁN	SUCRASAL MÉRIDA CALLE 33 #600 Y 602, LOCALIDAD ITZINCAB Y MULSAY, MPIO. UMÁN, C.P. 97390, MÉRIDA, YUC. TEL: 999 912 2451
MICHOACÁN	FIX FERRETERÍAS AV. PASEO DE LA REPÚBLICA #3140-A, COL. EX-HACIENDA DE LA HUERTA, C.P. 58050, MORELIA, MICH. TEL: 443 334 6858		

Code	Model	Brand
101568	FUG-252	TRUPER®

Warranty. Duration: 1 year. Coverage: parts, components and workmanship against manufacturing or operating defects, except if used under conditions other than normal; when it was not operated in accordance with the instructive; was altered or repaired by personnel not authorized by TRUPER®. To make the warranty valid, present the product, stamped policy or invoice or receipt or voucher, in the establishment where you bought it or in Corregidora 35, Centro, Cuauhtémoc, CDMX, 06060, where you can also purchase parts, components, consumables and accessories. It includes the costs of transportation of the product that derive from its fulfillment of its service network. Phone number 800-018-7873. Made in China. Imported by TRUPER, S.A. de C.V. Parque Industrial 1, Parque Industrial Jilotepec, Jilotepec, Edo. de Méx. C.P. 54257, Phone number 761 782 9100.



Stamp of the business. Delivery date: