

Manual

Compact electric pressure washer



Applies for:

Code Model

102795 HILA-1600C

HILA-1600C

**CAUTION**

Read this manual thoroughly
before using the tool.



Technical data	3
Power requirements	3
 General power tools safety warnings	4
 Safety warnings for using pressure washers	5
Parts	6
Assembly	7
Startup	8
Maintenance	9
Accessories and spare parts	10
Troubleshooting	10
Authorized service centers	11
Warranty policy	12

CAUTION

To gain the best performance of the tool, prolong the duty life, make the Warranty valid if necessary, and to avoid hazards of fatal injuries please read and understand this Manual before using the tool.


Keep this manual for future references.

The illustrations in this manual are for reference only. They might be different from the real tool.

Use and care recommendations

 **RESPECT THE WORK CYCLES.**
50 min of work per 20 min of rest. Maximum 6 hours daily 

 **THIS MACHINE DOES NOT SUCK WATER FROM PONDS OR TANKS.**
It must be connected to a supply outlet or an elevated tank. 

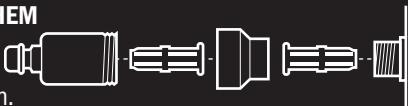 **ALWAYS USE THE FILTERS AND CLEAN THEM AFTER EACH USE.**
Replace the filter when it is cracked or worn. 

 Perform periodic **MAINTENANCE** to your machine (page 9).

HILA-1600C

Code	•	102795
Description	•	Compact electric pressure washer
Maximum pressure	•	1 600 PSI
Minimum and maximum water input pressure	•	36 PSI - 50 PSI
Maximum flow rate	•	1.4 GPM
Maximum inlet temperature	•	122 °F
Voltage	•	127 V~
Current	•	11 A
Power	•	1 400 W
Noise level	•	85 dB
Vibration level	•	2.3 m/s ²
Weight	•	11.6 lb
Work cycle	•	50 min of work per 20 min of rest. Maximum 6 hours daily
Conductors	•	16 AWG x 2C with 221 °F insulation temperature
Insulation	•	Class II
		IP Grade • IPX5

Power cord grips used in this product: Type "Y"

Build quality: Reinforced insulation

Thermal insulation on motor winding: Class F

WARNING Avoid the risk of electric shock or severe injury. When the power cable gets damaged it should only be replaced by the manufacturer or at a TRUPER Authorized Service Center.

The build quality of the electric insulation is altered if spills or liquid gets into the tool while in use.


Do not expose to rain, liquids and/or dampness.

WARNING Before gaining access to the terminals all power sources should be disconnected.



Power requirements

WARNING Tools with double insulation and reinforced insulation are equipped with a polarized plug (one prong is wider than the other). This plug will only fit in the right way into a polarized outlet. If the plug cannot be introduced into the outlet, reverse the plug. If it still doesn't fit, call a qualified electrician to install for you a polarized outlet. Do not alter the plug in any way. Both insulation types eliminates the need of both a grounded third power cord with three prongs or a grounded power connection.

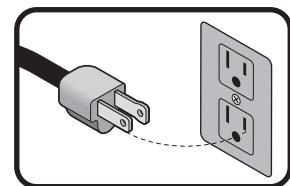

WARNING When using an extension cable, verify the gauge is enough for the power that your product needs. A lower gauge cable will cause voltage drop in the line, resulting in power loss and overheating. The following table shows the right size to use depending on cable's length and the ampere capability shown in the tool's nameplate. When in doubt use the next higher gauge.

Amperes Capacity	Number of Conductors	Extension gauge from 5.9' to 49.2'	higher than 49.2'
from 0 A and up to 10 A		18 AWG (*)	16 AWG
from 10 A and up to 13 A		16 AWG	14 AWG
from 13 A and up to 15 A	3 (one grounded)	14 AWG	12 AWG
from 15 A and up to 20 A		8 AWG	6 AWG

* It is safe to use only if the extensions have a built-in artifact for over current protection.

AWG = American Wire Gauge. Reference: NMX-J-195-ANCE

WARNING When operating power tools outdoors, use a  Volteck grounded extension cable labeled "For Outdoors Use". These extensions are specially designed for operating outdoors and reduce the risk of electric shock.



⚠ WARNING! Read carefully all safety warnings and instructions listed below. Failure to comply with any of these warnings may result in electric shock, fire and / or severe damage. Save all warnings and instructions for future references.

Work area

Keep your work area clean, and well lit.

Cluttered and dark areas may cause accidents.



Never use the tool in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.



Sparks generated by power tools may ignite the flammable material.

Keep children and bystanders at a safe distance while operating the tool.



Distractions may cause loss of control.

Electrical Safety

The tool plug must match the power outlet. Never modify the plug in any way. Do not use any adapter plugs with grounded power tools.



Modified plugs and different power outlets increase the risk of electric shock.

Avoid body contact with grounded surfaces, such as pipes, radiators, electric ranges and refrigerators.

The risk of electric shock increases if your body is grounded.

Do not expose the tool to rain or wet conditions.

Water entering into the tool increases the risk of electric shock.

Do not force the cord. Never use the cord to carry, lift or unplug the tool. Keep the cord away from heat, oil, sharp edges or moving parts.

Damaged or entangled cords increase the risk of electric shock.

When operating a tool outdoors, use an extension cord suitable for outdoor use.

Using an adequate outdoor extension cord reduces the risk of electric shock.

If operating the tool in a damp location cannot be avoided, use a ground fault circuit interrupter (GFCI) protected supply.

Using a GFCI reduces the risk of electric shock.

Personal safety

Stay alert, watch what you are doing and use common sense when operating a tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.

A moment of distraction while operating the tool may result in personal injury.

Use personal protective equipment. Always wear eye protection.

Protective equipment such as safety glasses, anti-dust mask, non-skid shoes, hard hats and hearing protection used in the right conditions significantly reduce personal injury.



Prevent unintentional starting up. Ensure the switch is in the "OFF" position before connecting into the power source and / or battery as well as when carrying the tool.

Transporting power tools with the finger on the switch or connecting power tools with the switch in the "ON" position may cause accidents.

Remove any wrench or vice before turning the power tool on.

Wrenches or vices left attached to rotating parts of the tool may result in personal injury.

Do not overreach. Keep proper footing and balance at all times.

This enables a better control on the tool during unexpected situations.

Dress properly. Do not wear loose clothing or jewelry. Keep hair, clothes and gloves away from the moving parts.

Loose clothes, jewelry, or long hair may get caught in moving parts.



If you have dust extraction and recollection devices connected onto the tool, inspect their connections and use them correctly.

Using these devices reduce dust-related risks.

Power Tools Use and Care

Do not force the tool. Use the adequate tool for your application.

The correct tool delivers a better and safer job at the rate for which it was designed.



Do not use the tool if the switch is not working properly.

Any power tool that cannot be turned ON or OFF is dangerous and should be repaired before operating.

Disconnect the tool from the power source and / or battery before making any adjustments, changing accessories or storing.

These measures reduce the risk of accidentally starting the tool.



Store tools out of the reach of children. Do not allow persons that are not familiar with the tool or its instructions to operate the tool.

Power tools are dangerous in the hands of untrained users.



Service the tool. Check the mobile parts are not misaligned or stuck. There should not be broken parts or other conditions that may affect its operation. Repair any damage before using the tool.

Most accidents are caused due to poor maintenance to the tools.

Keep the cutting accessories sharp and clean.

Cutting accessories in good working conditions are less likely to bind and are easier to control.

Use the tool, components and accessories in accordance with these instructions and the projected way to use it for the type of tool when in adequate working conditions.

Using the tool for applications different from those it was designed for, could result in a hazardous situation.

Service

Repair the tool in an Authorized TRUPER Service Center using only identical spare parts.

This will ensure that the safety of the power tool is maintained.

Children or people with reduced physical, sensory or mental capabilities shall not operate the tool, neither inexperienced people or without knowledge in the use of the tool, unless supervised by a person responsible of their safety or if receiving previous instructions about the tool operation.



Children shall be kept under supervision to double-check they will not play with the tool. Tight supervision shall be used with children or disabled persons to prevent from using or being close to any household tool.

Safety warnings for using pressure washers

TRUPER

- A certified electrician shall carry out the connection to the power supply. It is recommended to include in said supply a residual current device to interrupt the power supply if the grounded leakage current is exceeding 30 mA per 30 s or a device that delivers the ground circuit.

WARNING • This device has been designed to be used with the cleaning agent supplied or recommended by the manufacturer. Using other type of cleaning agents or chemical substances may seriously affect the device safety.

WARNING • Do not use the device in the presence of third parties unless wearing protective clothes.

WARNING • High-pressure jet may be dangerous if misused. The jet shall not be aimed directly against any living being, active electric equipment or the device.

- Do not aim the jet against yourselves or third parties to clean clothes or shoes.
- Disconnect the device from the power supply before carrying out user's maintenance.
- The pressure washer shall not be used by children or people with no training in its use.
- To guarantee the device safety, use original or factory approved spare parts.

WARNING • High pressure nozzles, guards and couplings are important for the device safety. Use only nozzles, guard and couplings recommended by the manufacturer.


- Do not use the device if the power cable of important parts in the device show damage, for example, safety devices, high-pressure nozzles, high-pressure gun, etc.

- If using an extension cord for the power cable, the plug and power supply shall be constructed against water seeping in.

WARNING • An inadequate extension cable



can be dangerous.

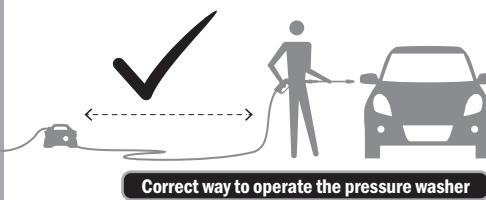

Correct way to operate the pressure washer



Wrong way to operate the pressure washer

Before operating the pressure washer

CAUTION • Pressurized spray is very powerful and dangerous if misused. It is not recommended for painted surfaces, wood surfaces or articles attached with adhesive.

WARNING • Do not use bleach, chloride, chemical products or any other cleaner containing acid or that is not specific for pressure washers. Otherwise the device can be seriously damaged.

- To minimize the amount of water entering in contact with the pressure washer during the operation, set it as far as possible from the place to be washed.

When operating the pressure washer

WARNING • Wear eye protection and thick clothes.

- When spraying, always use both hands to gain total control of the lance.

WARNING • Never touch the nozzle or the water spray while the pressure washer is in operation.

- To allow free air circulation while being operated DO NOT cover it.

WARNING • Keep all the connections dry and above ground.

WARNING • Do not touch the plug with wet hands

After operating the pressure washer

- Disconnect the power cable when not using the pressure washer and before removing the high-pressure hose.

CAUTION • When the pressure washer is not being used and to prevent an accidental discharge, enable the trigger lock in the spraying gun.


- Never make knots nor fold the high-pressure hose. It may get damaged.




CAUTION • Do not use or store this product when temperature falls below 40 °F. The warranty will not cover damage due to freezing.

Automatic stop

- The pressure washer is built with a stopping device that detects when the spraying gun trigger is released. It opens and electric circuit in the motor to stop the pressure washer.

WARNING • If the Automatic Stop fails, DO NOT USE the pressure washer. Contact a TRUPER Authorized Service Center. Using the pressure washer in this condition may damage the device and / or cause personal injuries

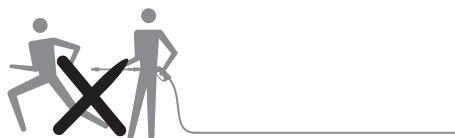

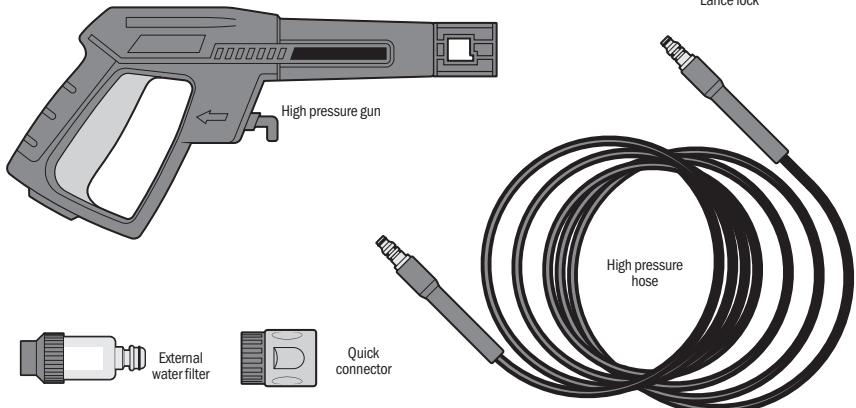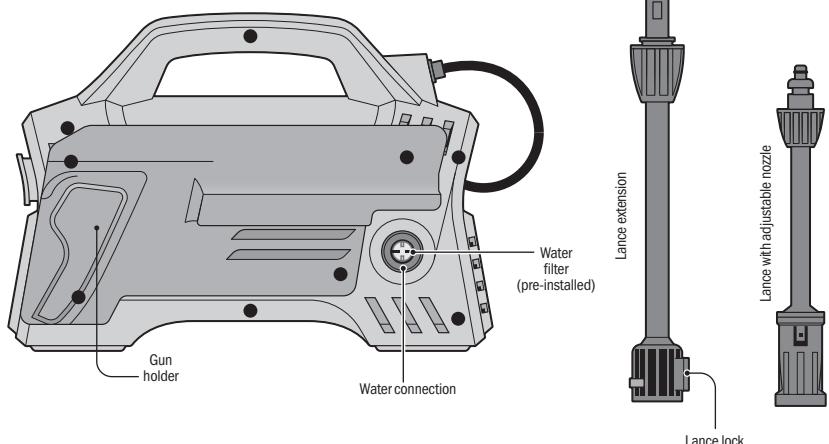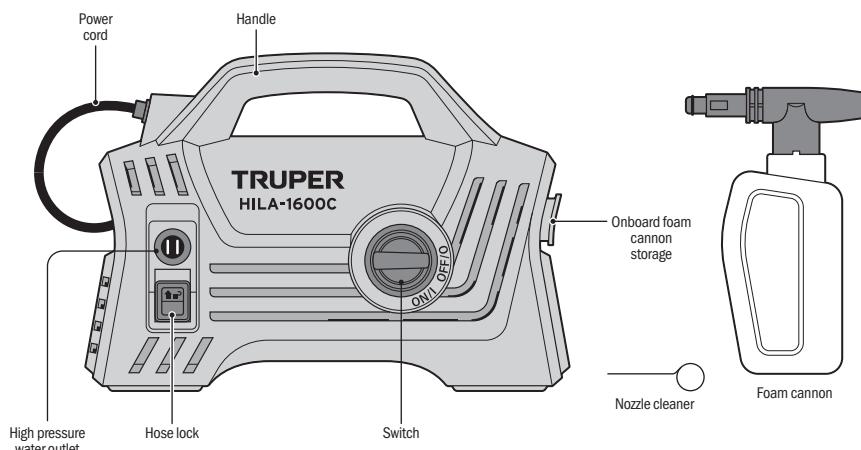


- Remove the packing caps from the equipment's water inlet and outlet.
- Ensure that the water inlet (A) has the pre-installed internal filter properly attached before also positioning the external filter (B) onto it.

CAUTION Before connecting the garden hose, run water through it to flush out any object inside.

- Connect the garden hose (C, not included) to the quick connector (D) and this to the filter (B).

- Hold the latch (F) up to engage the high-pressure hose (G) to the high-pressure outlet of the pressure washer (E). Release the latch to secure connection.

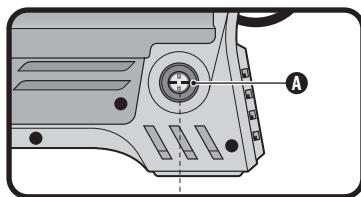


- Keep the button (I) pressed when connecting the end of the high-pressure hose (H) to the high-pressure gun, when the end of the hose stops, release the button to secure the hose and prevent leakage.

- *Insert the "T" lock of the lance extension (K) into the slot of the high-pressure gun in the vertical position. When the lance reaches the spring, press to overcome the force of the spring and simultaneously rotate the lance 1/4 turn clockwise, until the lance is firmly in place.

- Press the lance lock (K²) and insert the quick connection of the lance with adjustable nozzle (L) into the end of the lance extension (K¹).

- Release the latch to lock the lance to the extension.

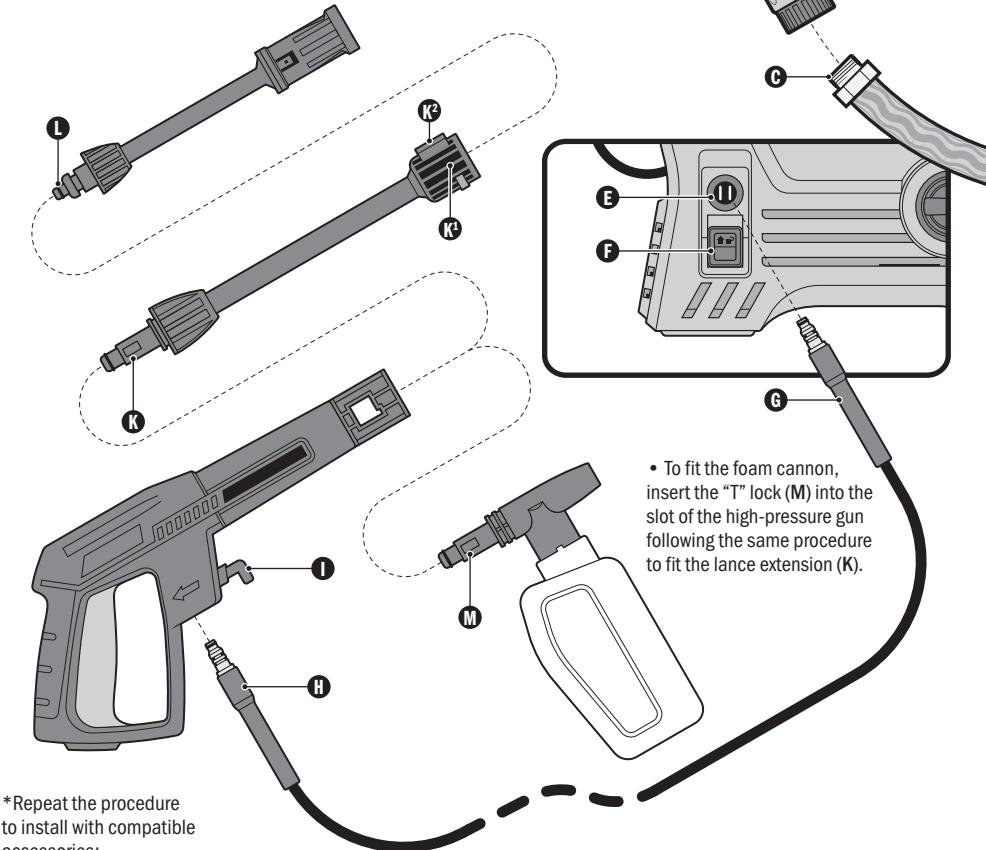


*Repeat the procedure to install with compatible accessories:

- To fit the foam cannon, insert the "T" lock (M) into the slot of the high-pressure gun following the same procedure to fit the lance extension (K).

Turning ON


- 1.- Open the water faucet. Keep it open while using the pressure washer.
- 2.- Completely untangle the power cable and connect the plug into the power supply. In this step, do not turn ON the pressure washer.
- 3.- Press and hold the high-pressure gun trigger to release the air trapped inside the pressure washer. Release the trigger when the water flows constantly.
- 4.- Turn the switch into position I (ON). The motor will start momentarily and then, it will stop.

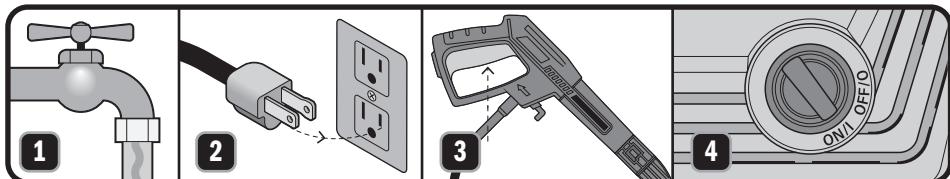**Use of stored water in an elevated tank**


- To use stored water instead of tap water, place the water container at least 1 meter above the machine's water inlet. It is necessary to have a proper and secure connection (flexible hose).
- Before operating the pressure washer, make sure that the machine is disconnected from the power supply.
- Connect the flexible hose that comes from the stored water container to the flow inlet of the pressure washer. Check that the flow to the pressure washer is constant (not less than 5.5 L/min).
- Press the trigger of the gun to allow the flow of water.
- Turn on the pressure washer until water flows steadily from the gun.

Note: The pressure washer should not operate without water for more than one minute.


WARNING • It is important that the stored water tank is always filled, as using the pressure washer dry for more than one minute could cause damage to the high-pressure pump that is not covered by the warranty.

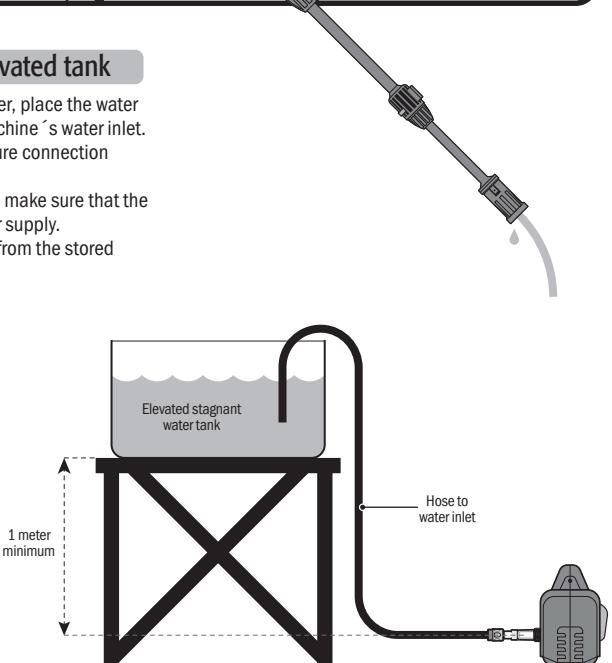**Spraying**

- Press the gun trigger to start spraying.
- To stop spraying, just release the trigger.
- The gun has a blocking button (A) to prevent accidental spraying. Pointing the gun to the front, the button will show to the left when the trigger is blocked and to the right, when it is released.

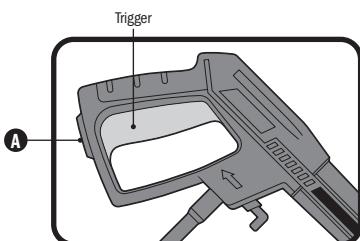

Lance with adjustable nozzle

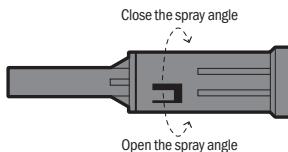

- Adjustable spray nozzle:
Turn the nozzle to open or close the spray angle. The mist, with the open angle encompasses a wider surface and is ideal to rinse surfaces. With the angle closed, spray is aimed to one point and is ideal to clean.

Maintenance

WARNING Disconnect the power cable from the power supply before carrying adjustments, service or maintenance to the pressure washer.

- Any repairs or maintenance shall be carried out only in a TRUPER Authorized Service Center.
- It is recommended to take the equipment for maintenance once a year to inspect components such as carbons, bearings, etc.

Cleaning and care

- Keep the pressure washer free of dust. Never use water or chemical cleaners to clean the pressure washer. Clean only with a clean and dry cloth.
- Always keep the air vents clean and free of obstructions to guarantee the adequate cooling of the motor.
- Regularly inspect all the mounting screws and make sure the screws are tight. If one screw is losing, tighten immediately.
- The shield and the motor are the pressure water heart. Use care no grease or water affect them.
- Regularly check the power cable to detect any type of damage. If damaged, replace the cable in a TRUPER Authorized Service Center.

Lubrication of the pressure washer

- The pressure washer design includes a permanent lubrication system. It is not necessary to check and replace oil.


CAUTION If there is an oil leak, go to a TRUPER Authorized Service Center.

Water filter

- Any foreign particles that enter the pressure washer pump can damage it. To avoid this possibility, the pressure washer has double filter protection.
- Filters must always be clean to maintain water flow and prevent pump damage.


Internal filter cleaning (A):

- Remove the filter carefully.
- Rinse it and place it inside the machine.

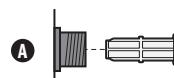

Cleaning the external filter (B):

- After each use, unscrew the filter. Disassemble and rinse the three pieces.
- Assemble it again and verify that the thread closes hermetically without forcing. Do not overtighten so as not to damage the thread.

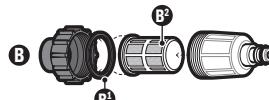

CAUTION Before closing the filter, make sure that the screen (B²) is assembled in the center of the seal (B¹) and not over it, this to avoid leaks or damage to the filter.

- Replace the filters when they are broken or show some wear.

Lubrication of connections

The pressure washer hose, high-pressure gun and lances connections shall be cleaned regularly to prevent leaks and damage to each connection seals.

Lubrication of nozzles

- Nozzles shall be regularly lubricated with non-soluble oil or light oil.
- A blocked nozzle makes the pressure pump pressure rise too much. It shall be cleaned immediately.

- 1) Remove blockage in the nozzle introducing the nozzle cleaner through the center orifice.
- 2) Purge the nozzle with water. Restart the pressure washer and press the spray gun trigger.

If pressure is still high, repeat steps 1 and 2.

Carbon brushes replacement


- Carbon brushes shall be checked periodically and be replaced always in a TRUPER Authorized Service Center when worn. After being replaced, ask the technician to inspect if the carbon brushes move freely in the carbon brushes housing. Ask to turn ON the pressure washer 5 minutes to even out the carbon brushes and commutator contact.
- Only use original TRUPER spare carbons specifically designed with the hardness and electric resistance for each type of motor. Carbon brushes that are out of specification may damage the motor.
- When replacing carbon brushes always replace both.

Winter storage

- Turn OFF the pressure washer and depress the trigger to release the pressure trapped inside the unit.
- Remove the garden hose and the pressure hose.
- Turn ON the pressure washer and leave it running 5 seconds to eliminate almost all the water trapped inside the pump.
- Disconnect the pressure washer and put away the cable.
- Store the pressure washer and the accessories in a dry environment with controlled temperature. Do not store the pressure washer and the accessories where temperature can drop to 40 °F.

CAUTION DAMAGE DUE TO FREEZING IS NOT COVERED BY THE WARRANTY.

Accessories and spare parts

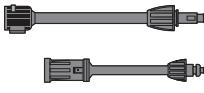	102818	MA5-H1600C	High pressure hose
	102871	FIL-H1600C	Water filter
	102816	PI-H1600C	High pressure gun
	102870	LA-H1600C	Adjustable nozzle & extension wand sets
	102819	SOAP-H1600C	Foam cannon

Troubleshooting

Problem	Possible Cause	Solution
The pressure washer is not starting.	<ul style="list-style-type: none">• Pressure washer is not connected.• Faulty power supply.• Blown fuse.• Defective extension cable.	<ul style="list-style-type: none">• Connect the pressure washer.• Use a different power supply.• Replace the fuse. Turn OFF other machines.• Replace the extension cable.
Pressure is not constant.	<ul style="list-style-type: none">• The pump is drawing in air.• Dirty, worn, or stuck valves.• Worn pump seals.	<ul style="list-style-type: none">• Check the hoses and connections have no leaks.• Clean the dirty parts and replace the worn ones.• Go to a TRUPER Authorized Service Center if the problem still persists.
The pressure washer stops while working.	<ul style="list-style-type: none">• Blown fuse.• Incorrect power supply.• Thermal sensor is activated.• Nozzle partially blocked.	<ul style="list-style-type: none">• Replace the fuse.• Turn OFF other machines. Check the voltage supply is matching the specified voltage specified in this instruction.• Allow the pressure washer to cool down.• Clean the nozzle.
The fuse blows.	<ul style="list-style-type: none">• The fuse is too small.	<ul style="list-style-type: none">• Change to an installation higher than the ampere consumption of the pressure washer.• Try not using the extension cable.
The pressure washer is pulsating.	<ul style="list-style-type: none">• Air in the hose.• Wrong water supply.• Nozzle partially blocked.• Air filter blocked.• Tangled hose.	<ul style="list-style-type: none">• Run the pressure washer with the trigger open until it runs regularly and pressure restarts.• Check the water supply meets the required specifications and that the flow is not less than 1.4 GPM. Avoid using long and thin hoses. Minimum $\frac{1}{2}$" of diameter.• Clean the nozzle.• Clean the filter.• Straighten the hose.
The pressure washer starts but no water comes out.	<ul style="list-style-type: none">• Frozen pump, hoses or accessories.• No water supplies.• The water filter is blocked.• The nozzle is blocked.	<ul style="list-style-type: none">• Wait for the thawing of the pump, hoses or accessories.• Connect the water input.• Clean the filter.• Clean the nozzle.

In the event of any problem contacting a TRUPER Authorized Service Center, please see our webpage WWW.TRUPER.COM to get an updated list, or call our toll-free numbers **800 690-6990** or **800 018-7873** to get information about the nearest Service Center.

AGUASCALIENTES	DE TODO PARA LA CONSTRUCCIÓN
	GRAL. BARRAGÁN #1201, COL. GREMIAL, C.P. 20030, AGUASCALIENTES, AGS. TEL: 449 994 0537
BAJA CALIFORNIA	SUCURSAL TIJUANA
	AV. LA ENCANTADA, LOTE #5, PARQUE INDUSTRIAL EL FLORIDO II, C.P. 22244, TIJUANA, B.C. TEL: 664 969 5100
BAJA CALIFORNIA SUR	FIX FERRETERÍAS
	FELIPE ÁNGELES ESQ. RUIZ CORTÍNEZ S/N, COL. PUEBLO NUEVO, C.P. 23670, CD. CONSTITUCIÓN, B.C.S. TEL: 613 132 1115
CAMPECHE	TORNILLERÍA Y FERRETERÍA AAA
	AV. ÁLVARO OBREGÓN #324, COL. ESPERANZA C.P. 24080 CAMPECHE, CAMP. TEL: 981 815 2808
CHIAPAS	FIX FERRETERÍAS
	AV. CENTRAL SUR #27, COL. CENTRO, C.P. 30700, TAPACHULA, CHIS. TEL: 962 118 4083
CHIHUAHUA	SUCURSAL CHIHUAHUA
	AV. SILVESTER TERRAZAS #128-11, PARQUE INDUSTRIAL BAFAR, CARRETERA MÉXICO CUAUHTÉMOC, C.P. 31415, CHIHUAHUA, CHIH. TEL: 614 434 0052
CIUDAD DE MÉXICO	FIX FERRETERÍAS
	EL MONSTRUO DE CORREGIDORA, CORREGIDORA # 35, COL. CENTRO, C.P. 06060, CUAUHTÉMOC, CDMX. TEL: 55 5522 5031 / 5522 4861
COAHUILA	SUCURSAL TORREÓN
	CALLE METAL MECÁNICA #280, PARQUE INDUSTRIAL ORIENTE, C.P. 27278, TORREÓN, COAH. TEL: 871 209 68 23
COLIMA	BOMBAS Y MOTORES BYMTESA DE MANZANILLO
	BLVD. MIGUEL DE LA MADRID #190, COL. 16 DE SEPTIEMBRE, C.P. 28239, MANZANILLO, COL. TEL: 314 332 1986 / 332 8013
DURANGO	TORNILLOS ÁGUILA, S.A. DE C.V.
	MAZURIÓ #200, COL. LUIS ECHEVERRÍA, DURANGO, DGO. TEL: 618 817 1946 / 618 818 2844
ESTADO DE MÉXICO	SUCURSAL CENTRO JILOTEPEC
	PARQUE INDUSTRIAL # 1, COL. PARQUE INDUSTRIAL JILOTEPEC, JILOTEPEC, EDO. DE MÉX. C.P. 54257 TEL: 761 782 9101 EXT. 5728 Y 5102
GUANAJUATO	CÍA. FERRETERA NUEVO MUNDO S.A. DE C.V.
	AV. MÉXICO - JAPÓN #225, CD. INDUSTRIAL, C.P. 38010, CELAYA, GTO. TEL: 461 617 7578 / 79 / 80 / 88
GUERRERO	CENTRO DE SERVICIO ECLIPSE
	CALLE PRINCIPAL MZ.1 LT. 1, COL. SANTA FE, C.P. 39010, CHILPANCINGO, GRO. TEL: 747 478 5793
HIDALGO	FERREPRECIOS S.A. DE C.V.
	LIBERTAD ORIENTE #304 LOCAL 30, INTERIOR DE PASAJE ROBLEDO, COL. CENTRO, C.P. 43600, TULANCINGO, HGO. TEL: 775 753 6615 / 775 753 6616
JALISCO	SUCURSAL GUADALAJARA
	AV. ADOLFO B. HORN # 6800, COL. SANTA CRUZ DEL VALLE, C.P.: 45655, TLALOJMULCO DE ZÚÑIGA, JAL. TEL: 33 3606 5285 AL 90
MICHOACÁN	FIX FERRETERÍAS
	AV. PASEO DE LA REPÚBLICA #3140-A, COL. EX-HACIENDA DE LA HUERTA, C.P. 58050, MORELIA, MICH. TEL: 443 334 6858

MORELOS	FIX FERRETERÍAS
	CAPITÁN ANZURES #95, ESQ. JOSÉ PERDIZ, COL. CENTRO, C.P. 62740, CUAUTLA, MOR. TEL: 735 352 8931
NAYARIT	HERRAMIENTAS DE TEPIC
	MAZATLÁN #117, COL. CENTRO, C.P. 63000, TEPIC, NAY. TEL: 311 258 0540
NUEVO LEÓN	SUCURSAL MONTERREY
	CARRETERA LAREDO #300, 1B MONTERREY PARKS, COLONIA PUERTA DE ANÁHUIAC, C.P. 66052, ESCOBEDO, NUEVO LEÓN, TEL: 81 8352 8791 / 81 8352 8790
OAXACA	FIX FERRETERÍAS
	AV. 20 DE NOVIEMBRE #910, COL. CENTRO, C.P. 68300, TUXTEPEC, OAX. TEL: 287 106 3092
PUEBLA	SUCURSAL PUEBLA
	AV. PERIFÉRICO #2-A, SAN LORENZO ALMECATLA, C.P. 72710, CUAUTLACINGO, PUE. TEL: 222 282 8282 / 84 / 85 / 86
QUERÉTARO	ARU HERRAMIENTAS S.A DE C.V.
	AV. PUERTO DE VERACRUZ #110, COL. RANCHO DE ENMEDIO, C.P. 76842, SAN JUAN DEL RÍO, QRO. TEL: 427 268 4544
QUINTANA ROO	FIX FERRETERÍAS
	CARRETERA FEDERAL MZ. 46 LT. 3 LOCAL 2, COL. EJIDAL, C.P. 77710 PLAYA DEL CARMEN, Q.R. TEL: 984 267 3140
SAN LUIS POTOSÍ	FIX FERRETERÍAS
	AV. UNIVERSIDAD #1850, COL. EL PASEO, C.P. 78320, SAN LUIS POTOSÍ, S.L.P. TEL: 444 822 4341
SINALOA	SUCURSAL CULIACÁN
	AV. JESÚS KUMATE SUR #4301, COL. HACIENDA DE LA MORA, C.P. 80143, CULIACÁN, SIN. TEL: 667 173 9139 / 173 8400
SONORA	FIX FERRETERÍAS
	CALLE 5 DE FEBRERO #517, SUR LT. 25 MZ. 10, COL. CENTRO, C.P. 85000, CD. OBREGÓN, SON. TEL: 644 413 2392
TABASCO	SUCURSAL VILLAHERMOSA
	CALLE HELIO LOTES 1, 2 Y 3 MZ. #1, COL. INDUSTRIAL, 2A ETAPA, C.P. 86010, VILLAHERMOSA, TAB. TEL: 993 353 7244
TAMAULIPAS	VM ORINGS Y REFACCIONES
	CALLE ROSITA #527 ENTRE 20 DE NOVIEMBRE Y GRAL. RODRÍGUEZ, FRACC. REYNOSA, C.P. 88780, REYNOSA, TAMS. TEL: 899 926 7552
TLAXCALA	SERVICIOS Y HERRAMIENTAS INDUSTRIALES
	PABLO SIDAR #132, COL. BARRIO DE SAN BARTOLOMÉ, C.P. 90970, SAN PABLO DEL MONTE, TLAX. TEL: 222 271 7502
VERACRUZ	LA CASA DISTRIBUIDORA TRUPER
	BLVD. PRIMAVERA. ESQ. HORTENSIA S/N, COL. PRIMAVERA C.P. 93308, POZA RICA, VER. TEL: 782 823 8100 / 826 8484
YUCATÁN	SUCURSAL MÉRIDA
	CALLE 33 #600 Y 602, LOCALIDAD ITZINCAB Y MULSAY, MPIO. UMÁN, C.P. 97390, MÉRIDA, YUC. TEL: 999 912 2451

Code**102795****Model****HILA-1600C****Brand****TRUPER**

Warranty. Duration: 1 year. Coverage: parts, components and workmanship against manufacturing or operating defects, except if used under conditions other than normal; when it was not operated in accordance with the instructive; was altered or repaired by personnel not authorized by TRUPER®. To make the warranty valid, present the product, stamped policy or invoice or receipt or voucher, in the establishment where you bought it or in Corregidora 35, Centro, Cuauhtémoc, CDMX, 06060, where you can also purchase parts, components, consumables and accessories. It includes the costs of transportation of the product that derive from its fulfillment of its service network. Phone number 800-018-7873. Made in China.
Imported by TRUPER, S.A. de C.V. Parque Industrial 1, Parque Industrial Jilotepec, Jilotepec, Edo. de Méx. C.P. 54257, Phone number 761 782 9100.

Stamp of the business. Delivery date:

