

Manual

## Gas brushcutter

Applies for:

| Codes | Models  |
|-------|---------|
| 11031 | DES-430 |
| 11032 | DES-520 |

**DES-430**  
**DES-520**

**43 CC and 52 CC**

Motor

**CAUTION**



Read the user's manual thoroughly  
before operating this tool.



|                                                                                                                        |    |
|------------------------------------------------------------------------------------------------------------------------|----|
| Technical Data .....                                                                                                   | 3  |
| Fuel Specifications .....                                                                                              | 3  |
|  Safety warnings for motor tools .....  | 4  |
|  Safety warnings for brushcutters ..... | 5  |
| Parts .....                                                                                                            | 6  |
| Assembly .....                                                                                                         | 7  |
| Fuel supply .....                                                                                                      | 9  |
| Tuning on .....                                                                                                        | 10 |
| Operation .....                                                                                                        | 11 |
| Maintenance .....                                                                                                      | 12 |
| Available accessories<br>and replacement parts list .....                                                              | 13 |
| Troubleshooting .....                                                                                                  | 14 |
| Authorized service centers .....                                                                                       | 15 |
| Warranty policy .....                                                                                                  | 16 |

## WARNING

To gain the best performance of the tool, prolong the duty life, make the warranty valid if necessary, and to avoid hazards of fatal injuries please read and understand this Manual before using the tool.

Keep this manual for future references.

The illustrations in this manual are for reference only. They might be different from the real tool.

## Use and care recommendations



For better performance and durability, use high-octane gasoline. In Mexico, we recommend using **PREMIUM** gasoline mixed with **2-STROKE ENGINE OIL**.

Using the wrong mixture can cause serious engine damage.



+



= 50:1

Mix



**DO NOT** use **GASOLINE MIXTURE** that has been stored for over 15 days.



Always **USE** the **SAFETY GUARD** and nylon line with a **DIAMETER** of 0.080 in to 0.145 in.



**ALWAYS** run your machine at **FULL POWER** with the throttle **FULLY** engaged.



Perform regular **MAINTENANCE** on your machine (page 12)

# Technical data

# TRUPER

|                       | DES-430                                                           | DES-520 |
|-----------------------|-------------------------------------------------------------------|---------|
| Code •                | 11031                                                             | 11032   |
| Description •         | Gas brushcutter                                                   |         |
| Net weight •          | 20.2 lb                                                           |         |
| Motor •               | 43 cc                                                             | 52 cc   |
| Motor rated power •   | 1.7 Hp                                                            | 2 Hp    |
| Fuel tank •           | 0.3 gal                                                           |         |
| Speed •               | 9000 RPM                                                          |         |
| Cutting diameter •    | 18"                                                               |         |
| Axis length •         | 5.2 ft                                                            |         |
| Cutting systems •     | Nylon line spool and blade                                        |         |
| Blade diameter •      | Outer: 10" Inner: 1"                                              |         |
| Nylon line diameter • | From 0.080" to 0.145" (recommended)                               |         |
| Type of handle •      | "Bicycle" type                                                    |         |
| Work cycle •          | 20 minutes rest per each tank consumed.<br>Maximum 6 hours daily. |         |

## Fuel specifications



For better performance and durability use higher-octane gasoline. In Mexico, we suggest using PREMIUM gasoline.

- The brushcutter has an air-cooled 2-cycle motor using a mix of unleaded gasoline and high quality self-propulsion oil for air-cooled two-cycle motors.
- The motor is certified to run with unleaded gasoline for vehicles with 87 or more  $(R+M)/2$  octane level.
- Do not use any type of gasoline premixed with oil bought in service stations such as gasoline for motorcycles.
- Do not use automotive oil or oil for 2-cycle outboard motors oil.
- The mix ratio should be 50 parts gasoline per 1 part oil (50:1 ratio). Prepare the mix in a gasoline-approved container. Always mix thoroughly before pouring in the motor tank.

**CAUTION** Do not use fuel mix stored longer than 15 days. Make small amounts of mix.

**WARNING** Never smoke near fuel, the gasoline filling up area or where the oil mix is being prepared or when operating the tool.



**WARNING** Any attempt to start the brushcutter with no oil added to the fuel mix will damage to the brushcutter.

Use TRUPER ACES-2, ACES-5 or ACES-20 oil caps\*\* to measure the mix.  
Mix 4 capfuls oil per each gasoline liter.



A wrong mix may cause the motor to throw a rod causing expensive repairs!



4 capfuls oil



Gasoline  
PREMIUM



**50:1**

Mix

To prolong the useful life of the motor use TRUPER two-cycle synthetic motor oil.

\* 1 gallon = 3.78 liter

\*\* Not included

## Safety warnings for motor tools



**Keep your work area clean, tidy and well lit.**

**CAUTION** Cluttered and dark areas may cause accidents.



**Never use the brushcutter in explosive areas or in the presence of flammable liquids.**

**DANGER** Before starting the motor keep the brushcutter at least 9 meters (30 feet) away from the fill up area.



**Keep children and passersby at a safe distance while operating the brushcutter.**

**WARNING** Distractions could cause losing control and cause accidents.



**Avoid contact with power lines and circuits.**

**DANGER** Find and avoid power lines and circuits, especially hidden wiring as well as any grounded object.



**Stay alert, use care and common sense.**

**CAUTION** Familiarity with the brushcutter operation could lead to distractions. It could cause accidents.

**Refrain from using the brushcutter if tired or under the influence of drugs, alcohol or medication.**

**DANGER** Being momentarily distracted while using the brushcutter could cause severe personal injury.

**Operate the brushcutter with guards and protection devices in place and in good working condition.**

**WARNING** Failure to comply with this warning is a hazard of severe personal injury.

**Do not force the brushcutter.**

**CAUTION** Working within the tool's working design assures a better and safer job.



**Keep the brushcutter in a safe place and out of the reach of children.**

**WARNING** Motor powered tools are dangerous to inexperienced people.



**Wear proper clothes.**

**WARNING** Loose clothes, jewelry or long hair could get caught in the mobile parts.



**Keep hands away from rotating and/or mobile parts.**

**WARNING** Failure to comply with this warning is a hazard of severe personal injury.



**Do not operate the brushcutter in enclosed areas.**

**DANGER** Avoid breathing accumulated carbon monoxide, a potentially deadly odorless toxic gas.



**Wear adequate protective safety accessories.**

**CAUTION** Wear eye protection, dust mask, non-skid safety shoes, helmet and ear plugs. These safety gears reduce the risk of injury.



**Turn off the brushcutter before adjusting, changing accessories or storin.**

**WARNING** Double check the brushcutter switch is in the off position.

**Refrain from operating the brushcutter if the switch is not working or is not properly assembled.**

**WARNING** Failure to complain with this warning is a hazard of personal injury. Immediately send it to a TRUPER Authorized Service Center.

**Do not overreach.**

**CAUTION** Good balance and support lead to better controlling the tool in unexpected situations.

**Avoid the brushcutter to unintentionally start.**

**WARNING** Double-check the brushcutter motor is off before maintenance or putting it away.



**Remove brackets before turning on the brushcutter.**

**DANGER** Additional tools or vices installed in a rotating part could cause severe personal injury.

**Service the brushcutter and double-check it is in good working conditions before operating.**

**CAUTION** Carefully check mobile parts, alignment and assembly. Do it periodically. Look for any damaged element or part not working properly. Repair immediately in a TRUPER Authorized Service Center.



**Accessories.**

**CAUTION** Use only accessories or spare parts indicated in this Manual or certified by TRUPER.

**Never leave a running brushcutter unattended.**

**DANGER** Turn off and disconnect the brushcutter after using. Set it in a safe position to avoid severe injury.

**Never smoke in the proximity of fuel.**

**DANGER** Do not smoke in the proximity of the fuelling area or when using the brushcutter.



# Safety warnings for brushcutters

# TRUPER

## Fuel handling

- Never smoke near fuel or where gasoline is supplied. 
- Or where the oil mix is prepared or while operating the brushcutter.

- Handle fuel with care to reduce risk of fire or burns. 

Fuel is very flammable.

- Do not allow gasoline or oil getting contact with your skin.

- Protect your eyes. Avoid spilling oil or gasoline. In the event of accidental contact, wash eyes immediately with clean water. If irritation persists, see a doctor.

- Mix and store fuel in a labeled container.

**⚠ WARNING** • Mix fuel outdoors away from flames or sparks.

- Before refueling the brushcutter turn off the motor. Set the brushcutter in the ground in a clear surface. Wait for the motor to cool down.

**⚠ CAUTION** • Clean all the fuel that might have been spilled before operating the brushcutter.

**⚠ CAUTION** • Verify there are no leaks. If so, correct them before using the brushcutter to prevent fire or burns.

- Move the brushcutter at least 30 feet away from the fuel filling up site before starting the motor.

- Under no circumstance burn spilled fuel.

- Under no circumstance, use any other type of fuel different from the specified in this Manual.

## Before operating the brushcutter

- Wear the right clothes to operate the brushcutter. Tight fitting clothes, strong pants, anti-skid safety boots, heavy-duty protecting gloves and safety glasses with side protection complying with ANSI Z87.1. Standard.



**⚠ WARNING** • Remove any accessory or loose clothes that could get caught by the moving cutter head. Fasten your long hair above your shoulders.

- Verify the brushcutter is in perfect working conditions. Do not turn on is not properly adjusted or fully assembled to work in a safe manner, or if the fuel tank shows leakage or loose screws.

- Verify the cutter head stops moving when the throttle trigger is released. If it does not stop shut off the brushcutter. Go to a TRUPER Authorized Service Center to solve the problem.

- Verify the brushcutter is clean, dry and free of oil or fuel.
- Double-check the work area is in an open area and is well ventilated.

- Check the work area. Remove stones, pieces of broken glass, nails, wire or rope. They could be soot out or be tangled in the brushcutter.

- In extreme temperatures verify there are no ice

formations or condensation in the brushcutter.

- Verify visibility and light condition are adequate to see clearly. Otherwise do not use the brushcutter.
- Do not use the brushcutter with any guards in place. Or if the guards show any type of damage or they have missing parts.

## When operating the brushcutter

**⚠ CAUTION** • Keep passersby, children and animals away no less than 50 feet away.

- Verify the cutter head is not making contact with any object before starting the motor.

**⚠ WARNING** • Keep both feet firmly set on the ground and both hands holding the brushcutter by the handles. Never operate the brushcutter single-handed. Otherwise the operator and any other person present may be injured.

- Keep all your body away from the cutter head when the motor is running.

- Always keep the cutting head pointed downwards, below your waist level. Never raise it above 2.4 feet from the ground.

- Keep all your body parts away from the muffler.

Otherwise severe burns can occur.

- Keep the brushcutter away from flammable materials.

- The blades are designed to cut grass and vines no thicker than 0.5" in diameter.

- Do not use the brushcutter to cut woody shrubs.

- Be alert to surrounding risks. The brushcutter noise could prevent you from noticing them.

**⚠ DANGER** • If making jobs near traffic roads, stop cutting until there are no vehicles in sight. The brushcutter could shoot particles towards the moving vehicles and produce a severe accident.

## After operating the brushcutter

**⚠ WARNING** • Do not try to stop the cutter head rotating movement in any other way than releasing the switch. Wait for the cutter head stop after shutting off the brushcutter. It will take a couple of seconds.


**⚠ CAUTION** • Always carry the brushcutter with the motor off and the muffler away from your body. Before putting the brushcutter in a vehicle, drain the fuel tank.

**⚠ WARNING** • Turn off the motor before idling the brushcutter. DO NOT leave the motor running unattended. Wait for the brushcutter to cool off before storing.

**⚠ CAUTION** • Highly trained personnel of a TRUPER Authorized Service Center should only carry out service and repairs.


**⚠ WARNING** • Do not try to modify the brushcutter or manufacture not recommended accessories. Otherwise, the user may suffer severe injuries and will make the warranty void.

**⚠ WARNING** • When assembling parts, always disconnect the motor spark plug cable to prevent an accidental start up causing severe personal injuries.

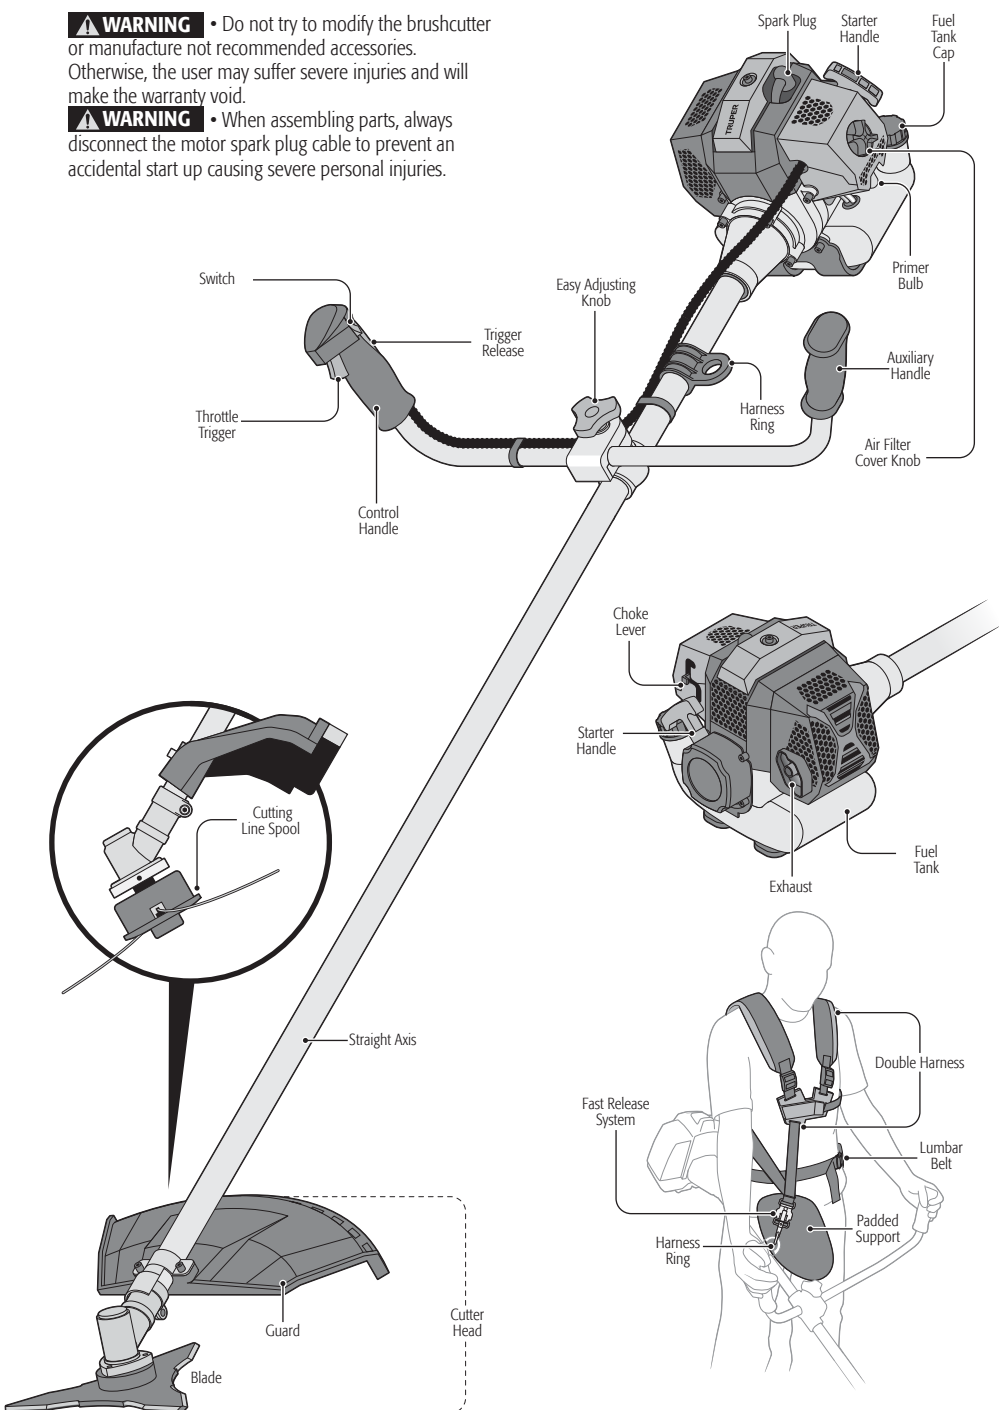


## Handle

- Separate the hinge bracket from the straight axis frame loosening the easy adjusting knob (a).
- Set the handle in the straight axis frame.
- Secure the handle in place and tighten the easy adjusting knob firmly.

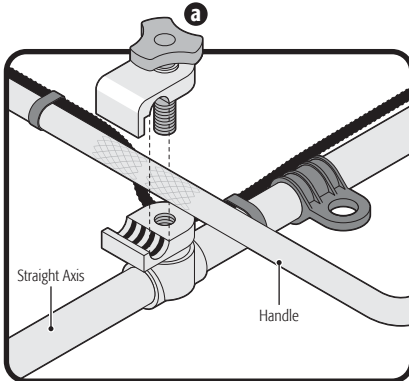

- To rotate the handle, loosen the easy adjusting knob and turn the handle (b) 90°. This is useful to store and transport the brushcutter.


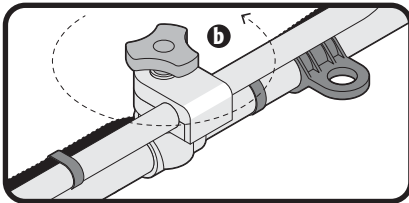


## Blade installation

- Set the turn table onto the cutter head (1).
- Set the blade onto the pressed turn table making sure the turning direction of the blade is the same as the sense labeled on the guard (2).
- Set the flange onto the blade (3).
- Set the cover and the lock nut (4).
- Insert the Hex key in the pressed turn table to block the axis (5) and tighten the lock nut counterclockwise using the included wrench (6).
- Use the guard with the protection removed. See the guard section.


## Guard

- Fasten the guard into the cutting head using the bracket and the bolts included (A).
- If using the line spool, use the guard with the protection (B) included.
- When using the blade, remove the screw in the rear of the guard (C). Press both clips (D) and remove the protection.

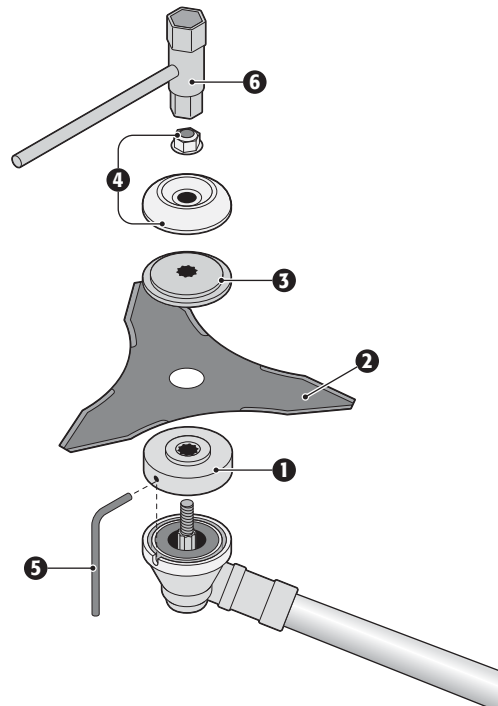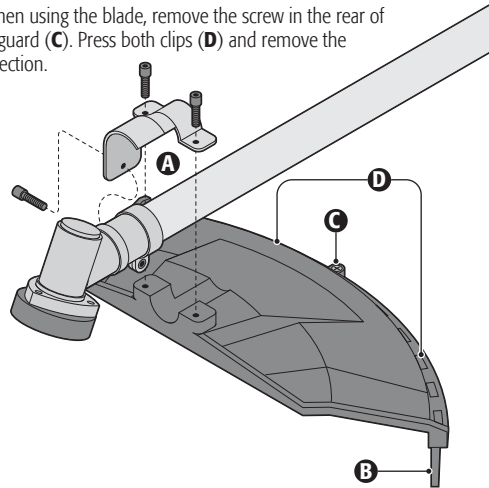

## Line spool installation





- Set the pressure turn table onto the cutter head (7).
- Set the flange onto the turn table (8).
- Insert the Hex key into the turn table side to block the axis (5).
- Place the threaded spool in the axis and tighten counterclockwise using your hand (9).
- Use the guard with the protection. See the guard section.

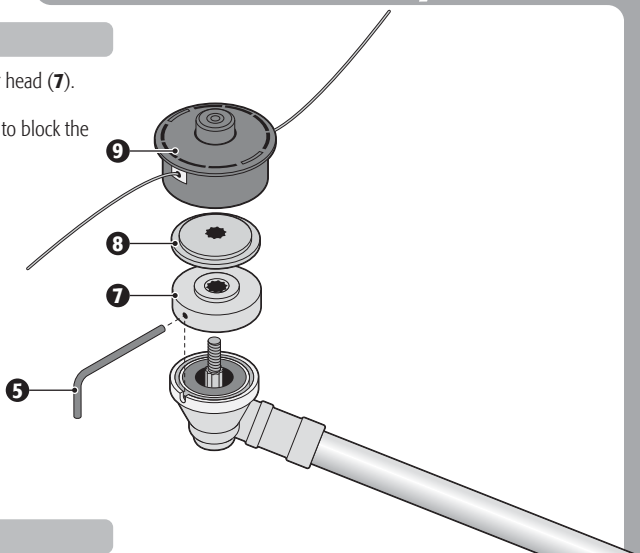

## Refilling the trimmer line

1. Turn off the brushcutter and disconnect the spark plug wire to prevent accidental startup. Note: You don't need to remove the spool holder to refill the trimmer line.
2. Press the spool cover latches (A) while pulling the retainer (B) to release the assembly.
3. Remove the empty spool (C), being careful not to lose the spool spring.
4. Check all components for cracks, fissures, or excessive wear. Replace any damaged components immediately.
5. Cut a piece of line about 13 feet long.




6. Fold the line in half and insert it into slot (D). Wind each end of the line clockwise onto the spool grooves (upper and lower).
7. Leave about 6 inches of each end of the line unwound. Insert the ends of the line through the additional notches (E) on the top of the spool.
8. Place the spool in the retainer and thread each end of the line through the corresponding slots (F).
9. Align the spool cover latches with the holes in the retainer and press until you hear a click (G).

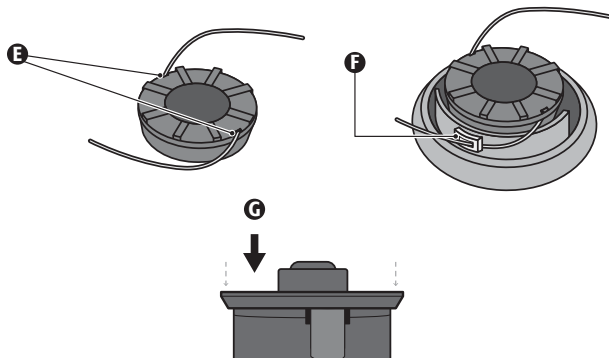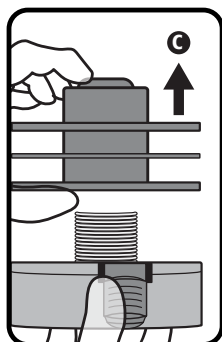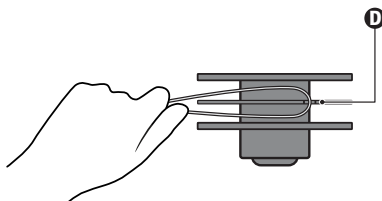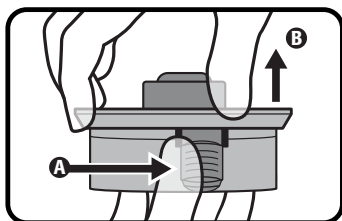



## Balancing the brushcutter


- Wear the harness and adjust to set it firmly and comfortably.
- Join the harness into the harness ring of the straight axis of the brushcutter.
- Travel the ring upwards and downwards until the brushcutter is balanced and the cutter head points down, below the user's waist and no more than 30" away from the ground.
- When using the line spool, the cutter head shall touch the ground slightly (**A**).
- When using the blade, the cutter head shall be approximately 8" away from the ground (**B**).

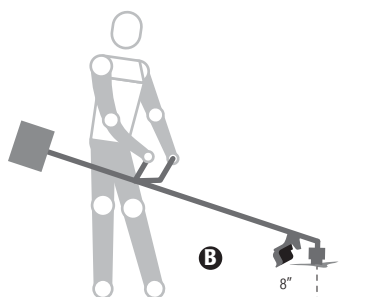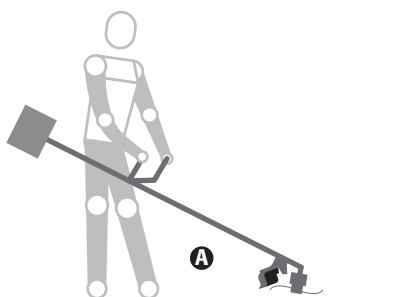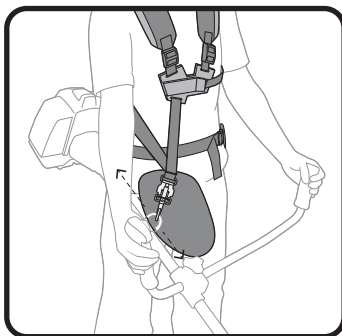

## Fuel supply





- Follow the safety standards for handling fuel (page 5).
- Wait until the motor has cooled down completely before supplying fuel.
- Set the brushcutter onto a flat surface.
- Wipe clean around the fuel tank cap to prevent contamination.
- Slowly loosen the fuel tank cap.
- Use care to prevent spills. Pour the fuel mix into the tank. **CAUTION** Follow the fuel specifications (page 3).
- Before capping the fuel tank check and clean the joints.
- Set immediately the fuel tank cap and tighten with your hand.
- Clean all fuel spilled.

**CAUTION** In a new motor smoke emissions are normal during and after using for the first time.

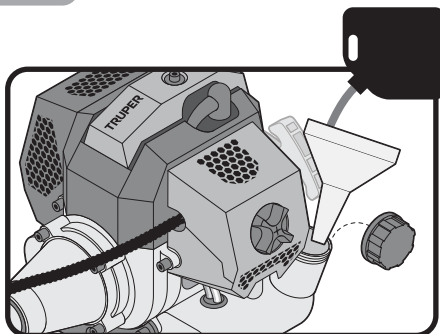

### Start up with a cold motor

- Set the brushcutter on level ground where the blade or spool will not make contact with any obstacle.
- Set the switch into the ON position (A).
- Press and release the primer bulb 10 times (B).
- Move the choke lever upwards (C).
- Press simultaneously the trigger release (D) and the throttle trigger (E). Keep the trigger depressed.
- Pull the starter handle (G) to start the motor. Do NOT pull more than 4 times to avoid flooding the motor.
- If the motor is not starting, move the choke lever downwards (H). Pull again the starter handle (I) until the motor starts. DO NOT pull more than 6 times (although in cold climate you may need to pull the starter handle more times).
- If the motor is not starting still, repeat steps from (B) and on.
- Once the motor starts, leave it running a few seconds in that position.
- Press and release the throttle trigger to set the motor idle (K).
- The brushcutter is now ready to operate. Hold both handles using both hands and lift it to start the job.

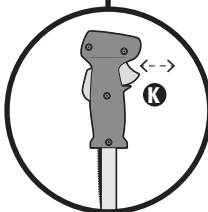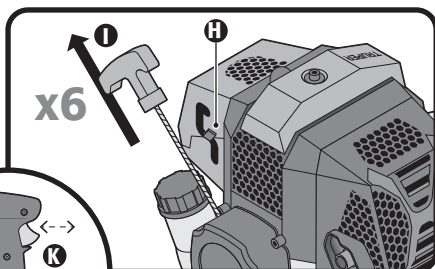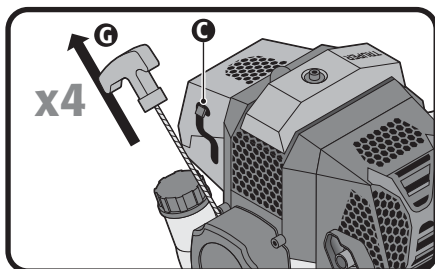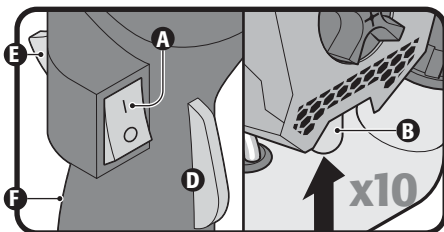


# Turning on

# TRUPER



## Start up with a hot motor

- Set the brushcutter on level ground where the blade or spool will not make contact with any obstacle.
- Set the switch into the ON position (A).
- Press simultaneously the trigger release (D) and the throttle trigger (E). Keep the trigger depressed.
- Pull the starter handle (G) to start the motor.
- Press and release the throttle trigger to set the motor idle (K).

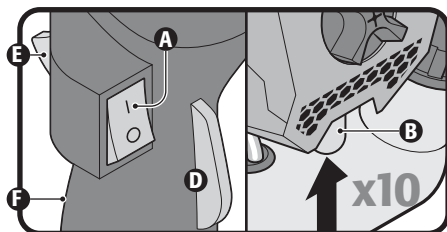

## Turning off



- Press and hold the switch into the OFF position (E) until the motor stops.

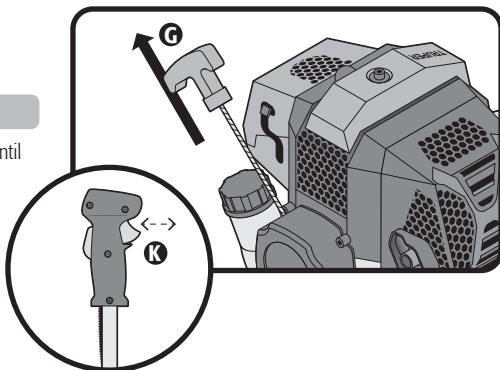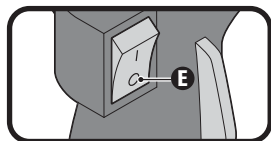

## Operation

- CAUTION** • Remember, you as the brushcutter operator is responsible of your own safety as well as people close to the work area. Follow all safety warnings (pages 4 and 5) before operating the brushcutter.
- Keep a balanced stance with both feet firmly set onto the ground.
  - Hold the brushcutter firmly in front of you; one hand holds the handle and the other holds the auxiliary handle so that the brushcutter is aligned to your body and pointing the cutter head 30° downwards, away from your feet.

- DANGER** • Do not start the brushcutter in a different position.
- Turn ON the brushcutter and cut from left to right rotating your waist and keeping the brushcutter position.
  - As the cut is performed, the cutting line wears out and will be detached. To release more line from the spool, press the brushcutter slightly downwards. The ground will depress the retention cap against the spool and will release more line. The guard blade will cut the remaining line. Then, stop pushing the brushcutter against the ground to save line lengths.
  - To cut brush or grass, cut gradually. Do not try to cut in one movement from the base because the residues may clog the cutting head or can go out of control from the operator.

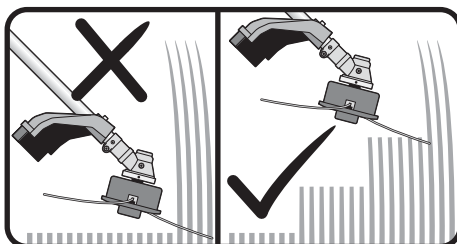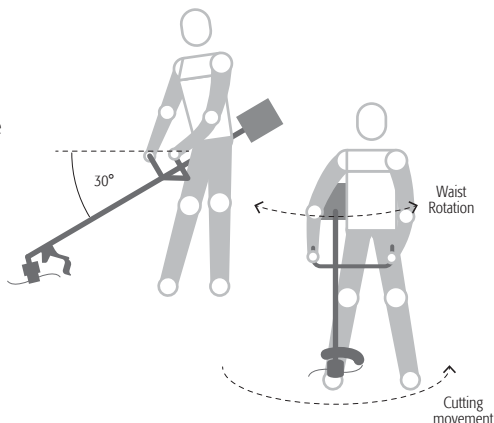

• Before inspecting, cleaning or servicing the tool turn the motor off, wait for all the mobile parts to stop, disconnect the spark plug cable and set it away from the spark plug. Otherwise, the operator may suffer severe burns and / or damage the tool.

## General cleaning

- Using a brush or compressed air, clean and clear the ventilation slots from the starter unit when necessary.
- Likewise, clean periodically the motor cylinder and fan blades to remove debris. Otherwise the motor may get damaged do to overheating.

## Air filter cleaning

- Remove the air filter cover loosening the cap knob.
- Remove the air filter.
- Depending on how long the machine is used, you may clean the filter by superficially tapping it lightly against a flat surface to displace most of the particles.
- You may also use compressed air on both sides of the filter to blow away dirt.
- For a more thorough cleansing clean the air filter in soapy water. Rinse and let it dry completely before installing it back into the brushcutter.
- Set back the filter. Verify it is flush in place.
- Clean the air filter as frequently as necessary to keep it always clean. Otherwise the motor efficiency may lessen.

## Fuel filter

- Check the gasoline filter frequently.
- If the filter is dirty, replace it.
- If the gasoline tank is dirty inside, rinse with gasoline.

## Carburetor adjustment

- It is recommended to carry out the carburetor adjustment in a TRUPER Authorized Service Center.
- A faulty adjustment can damage the motor and makes warranty void.

## Blade

- Check and maintain the blade always in the best condition.
- Sharpen if necessary with a flat file. Use care not to change the blade profile and the sharpness to assure the best performance of the brushcutter.

## Spark plug replacement



- The motor runs with a NGK BPMR7A spark plug with 0.025" electrode gap. Replace the spark plug once a year with and identical spark plug.
- With the motor totally cold, loosen the worn spark plug towards the left using a spark plug wrench and remove it.
- Insert the new spark plug and using your hand tighten towards the right.
- ⚠ **DANGER** • Use care not to damage the spark plug thread. Otherwise it can damage the motor.
- Give the spark plug half-a turn more using the spark plug wrench included.

## Muffler and exhaust cleaning

- The muffler and exhaust can get clogged with carbon deposits dependent of type of fuel, amount of oil used and / or conditions of the use of the brushcutter. If there is power loss, deposits shall need to be removed to improve performance. Go to a TRUPER Authorized Service Center to carry out the service.
- The muffler is built with a spark-arrest screen inside the muffler. After long periods of use the screen gets dirty and the muffler needs replacement. Go to a TRUPER Authorized Service Center to carry out the replacement.
- ⚠ **DANGER** • Check often that the muffler has the fasteners perfectly secured and that there is no damage or corrosion. In the event of leaks stop the brushcutter and take it immediately to a TRUPER Authorized Service Center to repair.

## Lubrication

- The inside of the cutting head gearbox is lubricated with lithium-based multiple use grease. Add grease every 25 hours use.
- To add grease set the grease device into the nipple (A)

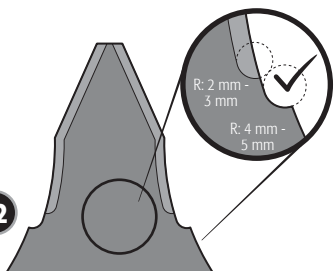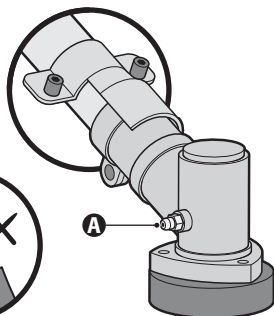

## Gas Brushcutter Storage

In the event of storing the Gas Brushcutter for one month or longer, bear in mind the following considerations:

 
 
- Drain all the fuel tank contents into an approved gasoline container. All the remaining fuel can be re-used in another tool that uses 2-stroke motor with a 50:1 ratio.
- Start the motor until the rest of fuel is consumed and the motor shuts down. This will eliminate the fuel residues and will prevent gum formations that damage the fuel system.
- Clean the Gas Brushcutter thoroughly.
- Store the unit in a well-ventilated space, away from corrosive agents such as garden chemical products or de-icing salts. And away from children's reach.
- Observe all the government rulings concerning safety in management and storing fuel.

| Regular maintenance                    | Every use | Every 25 h of use | Every 50 h of use | Every 150 h of use | Every 250 h of use |
|----------------------------------------|-----------|-------------------|-------------------|--------------------|--------------------|
| General cleaning                       |           |                   |                   |                    |                    |
| Air filter cleaning                    |           |                   |                   |                    |                    |
| Cutterhead Gearbox Lubrication         |           |                   |                   |                    |                    |
| Carburetor cleaning *                  |           |                   |                   |                    |                    |
| Spark plug inspection and adjustment * |           |                   |                   |                    |                    |
| Fuel tank cleaning **                  |           |                   |                   |                    |                    |
| Fuel filter change **                  |           |                   |                   |                    |                    |
| Fuel chamber replacement **            |           |                   |                   |                    |                    |
| Combustion chamber cleaning **         |           |                   |                   |                    |                    |

\* Trained user or TRUPER Authorized Service Center

\*\* TRUPER Authorized Service Center

## Available accessories and replacement parts list

| Component                                                                           | Code   | Part            | Description                                           |
|-------------------------------------------------------------------------------------|--------|-----------------|-------------------------------------------------------|
|    | 17243  | RET-GRUPO-03    | Spool retainer for Truper brushcutter                 |
|   | 17248  | TAP-GRUPO-03    | Trimmer spool head replacement for Truper brushcutter |
|  | 17249  | REP-GRUPO-03    | Bump feed head for Truper brushcutter                 |
|  | 17112  | CU-TRI-GRUPO-01 | Brushcutter blade                                     |
|  | 101871 | CB-DES-520      | Carburetor for brushcutter                            |
|  | 101872 | CB-DES-430      | Carburetor for brushcutter                            |
|   | 101755 | KC-DES-520      | Carburetor maintenance kit                            |
|   | 101754 | KC-DES-430      | Carburetor maintenance kit                            |

## Problem

## Cause

## Solution

The motor does not start.

- There is no spark.
- There is no fuel.
- The motor is flooded.
- The starter jack-line is harder to pull than when it was new.

- Check the spark. Remove the motor cover. Remove the spark plug from the cylinder. Connect the spark plug cable and set it onto the motor cylinder, with the metal part touching the cylinder. Pull the jack-line and observe the spark in the spark plug electrode. If there is no spark, repeat the test using a new spark plug.
- Press the starter choke until fuel is visible in the bulb. If fuel is not visible, it means the primary system in the fuel supply is blocked. Contact a TRUPER Authorized Service Center. If the starter choke is filled with fuel, the motor is flooded.
- With the switch off, remove the spark plug. Move the choke lever downwards and pull the jack-line 15 to 20 times to eliminate excessive fuel from the motor. Clean the spark plug and set it back in place. Follow the normal starting procedure (see page 10). If the motor is not starting, repeat the procedure using a new spark plug.
- Take the Gas Brushcutter to a TRUPER Authorized Service Center.

The motor starts but will not accelerate.

- The motor needs a couple of minutes to be hot.

- Allow the motor to be completely hot. If the motor will not accelerate after three minutes, contact your TRUPER Authorized Service Center.

The motor starts but runs only in high speed with half a choke.

- The carburetor has to be adjusted.

- Take the Gas Brushcutter to a TRUPER Authorized Service Center.

The motor is not reaching full speed and starts having smoke emissions.

- Check the oil / fuel mix.
- The air filter is dirty.
- The spark arrest screen is dirty.

- Use new fuel and the right oil mix for a 2-stroke motor.
- Clean the air filter. See page 12.
- Take the Gas Brushcutter to a TRUPER Authorized Service Center.

The motor starts, runs, accelerates but there is no idle speed.

- The idle screw in the carburetor need to be adjusted.

- Turn the idle screw clockwise to increase speed.

In the event of any problem contacting a TRUPER Authorized Service Center, please see our webpage [WWW.TRUPER.COM](http://WWW.TRUPER.COM) to get an updated list, or call our toll-free numbers 800 690-6990 or 800-018-7873 to get information about the nearest Service Center.

**AGUASCALIENTES** **DE TODO PARA LA CONSTRUCCIÓN**  
GRAL. BARRAGÁN #1201, COL. GREMIAL, C.P. 20030,  
AGUASCALIENTES, AGS. TEL.: 449 994 0537

**BAJA CALIFORNIA** **SUCURSAL TIJUANA**  
AV. LA ENCANTADA, LOTE #5, PARQUE INDUSTRIAL EL  
FLORIDO II, C.P. 22244, TIJUANA, B.C.  
TEL.: 664 969 5100

**BAJA CALIFORNIA SUR** **FIX FERRETERÍAS**  
FELIPE ANGELES ESQ. RUIZ CORTÍNEZ S/N, COL. PUEBLO  
NUEVO, C.P. 23670, CD. CONSTITUCIÓN, B.C.S.  
TEL.: 613 152 1115

**CAMPECHE** **TORNILLERÍA Y FERRETERÍA AAA**  
AV. ÁLVARO OBREGÓN #324, COL. ESPERANZA  
C.P. 24080 CAMPECHE, CAMP. TEL.: 981 815 2808

**CHIAPAS** **FIX FERRETERÍAS**  
AV. CENTRAL SUR #27, COL. CENTRO, C.P. 30700,  
TAPACHULA, CHIS. TEL.: 962 118 4083

**CHIHUAHUA** **SUCURSAL CHIHUAHUA**  
AV. SILVESTRE TERRAZAS #128-11, PARQUE INDUSTRIAL  
BAFAR, CARRETERA MÉXICO CUAUHTÉMOC, C.P. 31415,  
CHIHUAHUA, CHIH. TEL.: 614 434 0052

**CIUDAD DE MÉXICO** **FIX FERRETERÍAS**  
EL MONSTRUO DE CORREGIDORA, CORREGIDORA # 35,  
COL. CENTRO, C.P. 06060, CUAUHTÉMOC, CDMX.  
TEL.: 55 5522 5031 / 5522 4861

**COAHUILA** **SUCURSAL TORREÓN**  
CALLE METAL MECÁNICA #280, PARQUE INDUSTRIAL  
ORIENTE, C.P. 27278, TORREÓN, COAH.  
TEL.: 871 209 68 25

**COLIMA** **BOMBAS Y MOTORES BYMTESA DE MANZANILLO**  
BLVD. MIGUEL DE LA MADRID #190, COL. 16 DE  
SEPTIEMBRE, C.P. 28239, MANZANILLO, COL.  
TEL.: 314 352 1986 / 352 8013

**DURANGO** **TORNILLOS ÁGUILA, S.A. DE C.V.**  
MAZURIO #200, COL. LUIS ECHEVERRÍA, DURANGO,  
DGO. TEL.: 618 817 1946 / 618 818 2844

**ESTADO DE MÉXICO** **SUCURSAL CENTRO JILOTEPEC**  
PARQUE INDUSTRIAL # 1, COL. PARQUE INDUSTRIAL  
JILOTEPEC, JILOTEPEC, EDO. DE MÉX. C.P. 54257  
TEL.: 761 782 9101 EXT. 5728 Y 5102

**GUANAJUATO** **CÍA. FERRETERA NUEVO MUNDO S.A. DE C.V.**  
AV. MÉXICO - JAPÓN #225, CD. INDUSTRIAL, C.P. 38010,  
CELAYA, GTO. TEL.: 461 617 7578 / 79 / 80 / 88

**GUERRERO** **CENTRO DE SERVICIO ECLIPSE**  
CALLE PRINCIPAL MZI LT. 1, COL. SANTA FE, C.P. 39010,  
CHILPANCIINGO, GRO. TEL.: 747 478 5793

**HIDALGO** **FERREPRECIOS S.A. DE C.V.**  
LIBERTAD ORIENTE #304 LOCAL 30, INTERIOR DE PASAJE  
ROBLEDO, COL. CENTRO, C.P. 43600, TULANCINGO,  
HGO. TEL.: 775 753 6615 / 775 753 6616

**JALISCO** **SUCURSAL GUADALAJARA**  
AV. ADOLFO B. HORN # 6800, COL. SANTA CRUZ DEL  
VALLE, C.P.: 45655, TLAJOMULCO DE ZUÑIGA, JAL.  
TEL.: 33 3606 5285 AL 90

**MICHOACÁN** **FIX FERRETERÍAS**  
AV. PASEO DE LA REPÚBLICA #3140-A, COL.  
EX-HACIENDA DE LA HUERTA, C.P. 58050, MORELIA,  
MICH. TEL.: 443 334 6858

**MORELOS** **FIX FERRETERÍAS**  
CAPITÁN ANZURES #95, ESQ. JOSÉ PERDIZ, COL.  
CENTRO, C.P. 62740, CUAUTLA, MOR.  
TEL.: 735 352 8931

**NAYARIT** **HERRAMIENTAS DE TEPIC**  
MAZATLAN #117, COL. CENTRO, C.P. 65000, TEPIC, NAY.  
TEL.: 311 258 0508

**NUEVO LEÓN** **SUCURSAL MONTERREY**  
CARRETERA LAREDO #300, 1B MONTERREY PARKS,  
COLONIA PUERTA DE ANAHUAC, C.P. 66052, ESCOBEDO,  
NUEVO LEÓN, TEL.: 81 8352 8791 / 81 8352 8790

**OAXACA** **FIX FERRETERÍAS**  
AV. 20 DE NOVIEMBRE #910, COL. CENTRO, C.P. 68300,  
TUXTEPEC, OAX. TEL.: 287 106 3092

**PUEBLA** **SUCURSAL PUEBLA**  
AV. PERIFÉRICO #2-A, SAN LORENZO ALMECATLA,  
C.P. 72710, CUAUTLACINGO, PUE.  
TEL.: 222 282 8282 / 84 / 85 / 86

**QUERÉTARO** **ARU HERRAMIENTAS S.A. DE C.V.**  
AV. PUERTO DE VERACRUZ #110, COL. RANCHO DE  
ENMEDIO, C.P. 76842, SAN JUAN DEL RÍO, QRO.  
TEL.: 427 268 4544

**QUINTANA ROO** **FIX FERRETERÍAS**  
CARRETERA FEDERAL MZ. 46 LT. 3 LOCAL 2, COL. EJIDAL,  
C.P. 77710 PLAYA DEL CARMEN, Q.R.  
TEL.: 984 267 3140

**SAN LUIS POTOSÍ** **FIX FERRETERÍAS**  
AV. UNIVERSIDAD #1850, COL. EL PASEO, C.P. 78320,  
SAN LUIS POTOSÍ, S.L.P. TEL.: 444 822 4341

**SINALOA** **SUCURSAL CULIACÁN**  
AV. JESÚS KUMATE SUR #4301, COL. HACIENDA DE LA  
MORA, C.P. 80143, CULIACÁN, SIN.  
TEL.: 667 173 9139 / 173 8400

**SONORA** **FIX FERRETERÍAS**  
CALLE 5 DE FEBRERO #517, SUR LT. 25 MZ. 10, COL.  
CENTRO, C.P. 85000, CD. OBREGÓN, SON.  
TEL.: 644 413 2392

**TABASCO** **SUCURSAL VILLAHERMOSA**  
CALLE HELIO LOTES 1, 2 Y 3 MZ. #1, COL. INDUSTRIAL,  
2A ETAPA, C.P. 86010, VILLAHERMOSA, TAB.  
TEL.: 993 353 7444

**TAMAULIPAS** **VM ORINGS Y REFACCIONES**  
CALLE ROSITA #527 ENTRE 20 DE NOVIEMBRE Y GRAL.  
RODRÍGUEZ, FRACC. REYNOSA, C.P. 88780, REYNOSA,  
TAMS. TEL.: 899 926 7552

**TLAXCALA** **SERVICIOS Y HERRAMIENTAS INDUSTRIALES**  
PABLO SIDAR #132, COL. BARRIO DE SAN BARTOLOMÉ,  
C.P. 90970, SAN PABLO DEL MONTE, TLAX.  
TEL.: 222 271 7502

**VERACRUZ** **LA CASA DISTRIBUIDORA TRUPER**  
BLVD. PRIMAVERA, ESQ. HORTENSIA S/N, COL.  
PRIMAVERA, C.P. 93508, POZA RICA, VER.  
TEL.: 782 823 8100 / 826 8484

**YUCATÁN** **SUCURSAL MÉRIDA**  
CALLE 33 #600 Y 602, LOCALIDAD ITZINCAB Y MULSA,  
MPIO. UMAN, C.P. 97390, MÉRIDA, YUC.  
TEL.: 999 912 2451

| Codes | Models  | Brand  |
|-------|---------|--------|
| 11031 | DES-430 | TRUPER |
| 11032 | DES-520 |        |

Warranty. Duration: 1 year. Coverage: parts, components and workmanship against manufacturing or operating defects, except if used under conditions other than normal; when it was not operated in accordance with the instructive; was altered or repaired by personnel not authorized by TRUPER®. To make the warranty valid, present the product, stamped policy or invoice or receipt or voucher, in the establishment where you bought it or in Corregidora 35, Centro, Cuauhtémoc, CDMX, 06060, where you can also purchase parts, components, consumables and accessories. It includes the costs of transportation of the product that derive from its fulfillment of its service network. Phone number 800-018-7873. Made in China. Imported by TRUPER, S.A. de C.V. Parque Industrial 1, Parque Industrial Jilotepec, Jilotepec, Edo. de Méx. C.P. 54257, Phone number 761 782 9100.

Stamp of the business. Delivery date:

