




Manual

Air impact wrench

1/2"

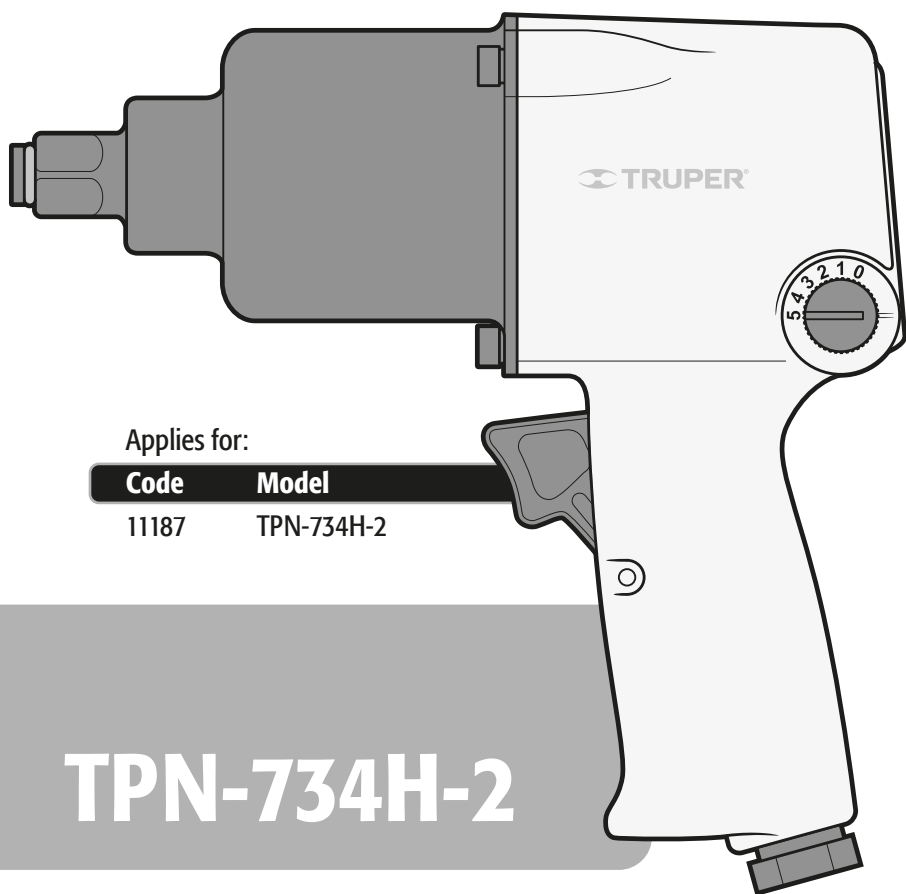

Applies for:

Code	Model
11187	TPN-734H-2

TPN-734H-2

! WARNING

Use oil continuously and dosed to lubricate the tool.

! CAUTION



Read this manual thoroughly before using the tool.




Technical Data	3
Filtering and Lubrication Requirements	3
 General Safety Warnings for Pneumatic Tools	4
 Risk Control When Using Pneumatic Tools	5
Parts	7
Assembly	7
Start Up	8
Maintenance	9
Notes	10
Authorized Service Centers	11
Warranty Policy	12

CAUTION

To gain the best performance of the tool, prolong the duty life, make the Warranty valid if necessary, and to avoid hazards of fatal injuries please read and understand this Manual before using the tool.

Keep this manual for future references.

The illustrations in this manual are for reference only. They might be different from the real tool.

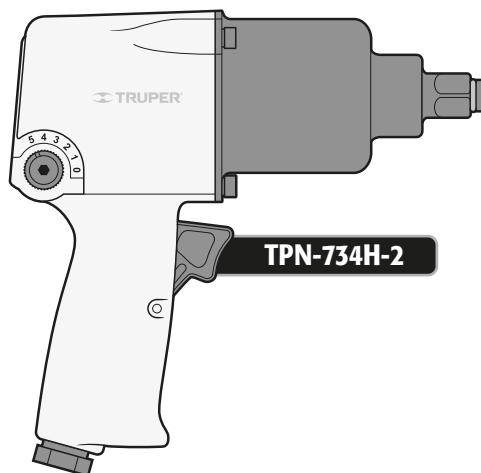

Technical Data




TPN-734H-2

Code	•	11187
Description	•	Air impact wrench
Impact Mechanism	•	Twin Hammer
Box Impeller	•	1/2"
Screws Capacity	•	3/4"
Maximum Torque	•	400 lb-ft
Air Ejection	•	Head on
Noise Level	•	115 dB
Vibration	•	> 2.5 m/s ²
Free speed	•	7 000 RPM
Weight	•	5.7 lb
Total Length	•	6-1/2"
Air Pressure	•	90 PSI
Air Consumption	•	4.4 CFM
Air Inlet Connection	•	1/4" NPT
Hose Inside Diameter	•	3/8"

CAUTION Please consider the increase in pressure in the line or the hose inside diameter to compensate the use of too long hoses (more than 26.2 ft). The hose minimum inside diameter shall be 3/8" and the connectors shall be 1/4 NPT. Use the right size and good quality couplers and accessories.

Filtering and Lubrication Requirements

CAUTION Dust, water and lack of oil specific for pneumatic tools are the main cause of potential malfunction of the tool. Setting up a **TRUPER** Brand **UNI-LL-1/4** centralized filter-oiler system is recommended. This system ensures lubrication reducing oil consumption 80% increasing significantly the quality of air the operator is breathing.

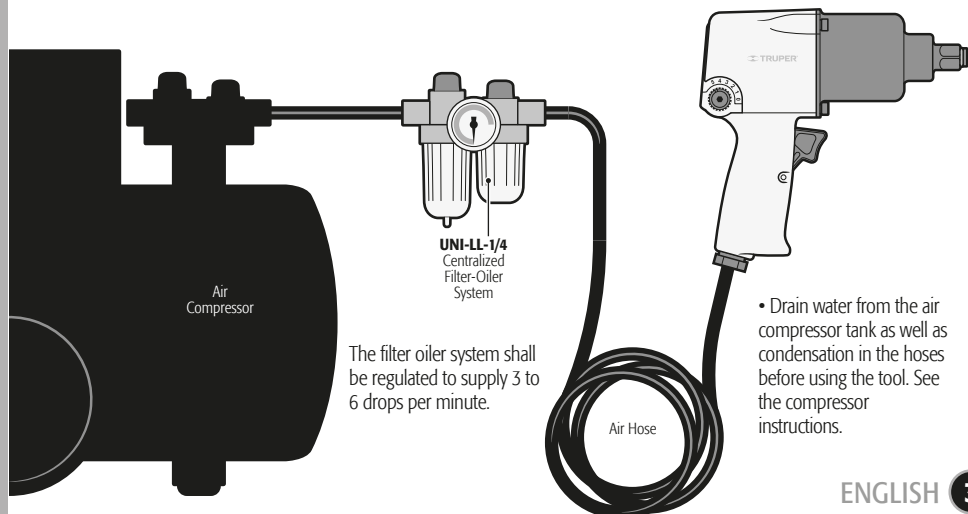

The filter oiler system shall be regulated to supply 3 to 6 drops per minute.

- Drain water from the air compressor tank as well as condensation in the hoses before using the tool. See the compressor instructions.

Keep your work area clean, tidy and well lit.

CAUTION Cluttered and dark areas may cause accidents.



Never use the tool in explosive areas or in the presence of flammable liquids or with no ventilation.

DANGER Sparks the tool generates could trigger an explosion or start a fire.



Keep children and passersby at a safe distance while operating the tool.

WARNING Distractions can cause losing control and cause accidents.



Avoid making contact with power lines and circuits.

DANGER Find and avoid power lines and circuits, especially hidden wiring as well as any grounded object.



Stay alert, use care and common sense.

CAUTION Familiarity with the tool operation could lead to distractions while using it. It could cause accidents.



Refrain from using the tool if tired or under the influence of drugs, alcohol or medication.

DANGER Being momentarily distracted while using the tool could cause severe personal injury.



Operate the tool with guards and protection devices in place and in good working condition.

WARNING Failure to comply with this warning is a hazard of severe personal injury.



Securely fasten and support the work piece.

CAUTION Use brackets and a stable work surface.

Never force the tool.

CAUTION Working within the tool's working design assures a better and safer job.



Keep the tool in a safe place and out of the reach of children.

WARNING Power tools are dangerous to inexperienced people.



Wear proper clothes.

WARNING Loose clothes, jewelry or long hair could get caught in the mobile parts.



Keep hands away from rotating and/or mobile parts.

WARNING Failure to comply with this warning is a hazard of severe personal injuries or crushing.



Wear adequate protective safety accessories.

CAUTION Wear eye protection, dust mask, non-skid safety shoes, helmet and ear plugs. In normal conditions, the risk of injury is reduced.



Unplug the air hose from the tool before carrying out maintenance or replacing accessories.

WARNING Prevent accidental startups that cause accidents.



Refrain from operating the tool if the switch is not working or is not properly assembled.

WARNING Failure to comply with this warning is a hazard of personal injury. Immediately send it to a TRUPER® Authorized Service Center.



Do not overreach.

CAUTION Good balance and support lead to better controlling the tool in unexpected situations.



Never pull the air hose.

WARNING Do not use it to carry or unplug the tool from the air outlet. Damaged or tangled hoses may burst and project residues towards the operator.



Prevent unintentionally starting the tool.

WARNING Double-check the motor is OFF before lubricating, setting up accessories or carry out maintenance.



Remove brackets before turning on the tool.

DANGER Additional tools or vices installed in a rotating part could cause severe personal injury.



Double-check maintenance and good working conditions before using the tool.

CAUTION Carefully check mobile parts, alignment and assembly. Do it periodically. Look for any damaged element or parts not working properly. Repair immediately in a TRUPER® Authorized Service Center.



Accessories.

CAUTION Use only accessories or spare parts indicated in this Manual or certified by TRUPER.



Never leave a running tool unattended.

CAUTION Turn off and disconnect tool after using. Set it in a safe position to avoid severe injury.



Risk Control When Using Pneumatic Tools



Risk of injury in head and eyes



⚠ WARNING • Compressed air out of pneumatic equipment may be dangerous. Objects like brackets, burrs, splinters, dust and other residues may be impelled towards head and eyes due to high speed of the air flow. The air flow itself can only injure soft tissue such as eyes, ears, etc.

⚠ CAUTION • The tool attachments may get lose or break and project particles towards the operator or other operators in the work area.

To prevent head and eyes injuries

- Always, when operating pneumatic equipment wear protection glasses in compliance with the ANSI Z87.1 Standard. As additional protection, wear a mask.
- Never aim the air flow towards people or animals.
- Disconnect the air hose from the tool when not in use.
- Never set a tool unattended when connected to the air outlet.
- Before using the tool verify all the parts and accessories are perfectly secured.



Risk of explosion



⚠ WARNING • Incorrect handling of pressure in pneumatic equipment may cause an explosion causing severe injuries.

To prevent explosions

- Before using the tool double check the compressed air source is regulated to the tool specified pressure and must not exceed 1 380 kPa (200 PSI).

Risk of hearing loss



⚠ WARNING • Being exposed long periods of time to noise pneumatic tools produce may damage hearing permanently causing hearing loss.

To prevent hearing loss

- Always, when operating pneumatic equipment wear hearing protection in compliance with the ANSI S3.19 Standard



Risk of inhaling particles



⚠ WARNING • Abrasive tools like grinders, sanders and cutting tools generate dust and particles that damage the lungs and respiratory system.

- Some materials like resin or adhesive are made with chemicals and the vapors emitted may cause serious damage if the operator is exposed for long periods of time.

To prevent inhaling particles

- Always wear a face mask or breathing device when operating these types of tools.
- Always work in a clean, well ventilated area.



Risk of electric shock



⚠ WARNING • Pneumatic tools do not have electric insulation. If during the operation, the tool makes contact with a source of electricity, the energy will be conducted to the operator causing a fatal electrocution.

To prevent electric shock

- Never use pneumatic tools to work energized electric wiring.
- Before operating the tool find the possible hidden wiring in the work zone to prevent making contact.
- Avoid contact with grounded surfaces like pipes, radiators or refrigerators. The risk of electrocution increases if the operator's body gets grounded.

Risk of damaging the tool



⚠ WARNING • Pneumatic tools forced beyond the capacity and lacking of adequate lubrication or used to loosen rusted nuts (with air impact wrench) will get damaged and make the Warranty void.

To prevent damaging the tool

- Keep the tool duly lubricated.
- Do not force the tool.
- Apply "loose it all" liquid to rusted nuts or lugs before trying to loosen with the tool (air impact wrench).

Risk of injuries



⚠ WARNING • Damaged hoses may burst and cause serious injuries or deafness.

To prevent injuries

• Pneumatic tools connected to the compressed air source, if operated by untrained staff or underage people, will cause severe injuries.

• Do not abuse the hose or the connectors.
• Keep the hose away from sharp or abrasive edges.
• Unplug the hose when setting up accessories like grinding discs or bits.
• Never use the hose to carry the tool.
• Never pull the hose to unplug it.
• Do not expose the hose to heat, oil or solvents.
• Before operating the tool, verify the hoses are not damaged.

• The compressed air used in pneumatic equipment may be dangerous. Objects like vices, burrs, splinters, dust and other residues may be impelled by the high-speed air flow towards the operator or other people in the work area.

• Unplug the air hose when the tool is not in use. Store the tool in a safe place away from children or untrained people. Keep children and untrained people away from the work area.

• Using inflation nozzles to clean or torch blowing may cause severe injuries.

• Keep the work area clean, tidy and with good lighting.
• Remove any wrench or plier from the tool before operating.

• Tools and accessories not suitable, damaged or low quality like grinding discs, chisels, contacts, drills, brad nailer, staplers, etc., may shoot out during the operation and project particles causing severe injuries.

• Do not use inflation nozzles to clean or to torch blowing.

• Brackets may get lose and be projected causing severe injuries or damage to property.

• Use only parts, vices and accessories recommended by  **TRUPER®**.

• Tools that accidentally start may cause severe injuries.

• Double check all connections are correctly installed.
• Never carry the tool by the trigger.
• Disconnect the air hose out from the tool when not in use.
• Never leave the tool unattended when connected to the air outlet.

• Tools and accessories with no maintenance may cause severe injuries.


• Keep the tool handle clean and dry, free of oil or grease.
• Keep tools clean. A meticulously cleaned and oiled tool delivers a more effective performance and is easier to control.
• Any type of repair can only be carried out in a  **TRUPER®** Authorized Service Center.

• Tools using accessories without  **TRUPER®** certification may cause severe injuries.

• Use always accessories matching the tool speed.
• Use only  **TRUPER®** certified accessories.

• Damaged or banged tools may cause severe injuries.

• Do not use damaged or banged tools.

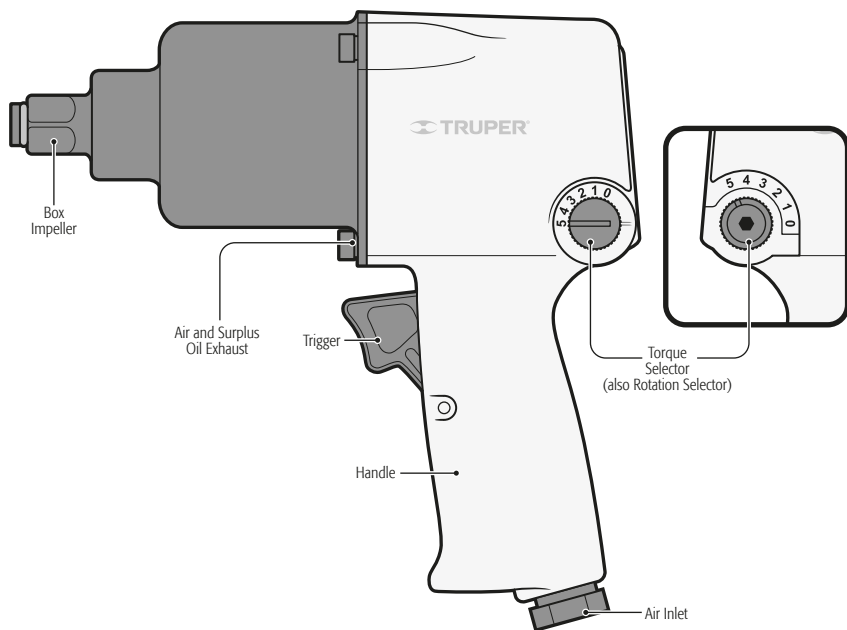

Assembly

Die Set Up

- Disconnect the tool from the air outlet before replacing the die.
- Select the die you need and set it in the box impeller.

• Always use impact dies with this tool. Do not use dies for hand tools. Consult the **TRUPER** catalog to learn about our accessories variety.



- Use 1/2" dies for box impellers.

• Using adaptors for other sizes are not recommended. Use only if strictly necessary.

• If the die has orifices always use rubber rings and steel tips when setting it into the box impeller.


• When the box impeller is made with a retaining ring, verify it is in good repair. If damaged, replace immediately.

⚠ WARNING • When a die has not been secured and adjusted as indicated, it can shoot out and injure the operator.

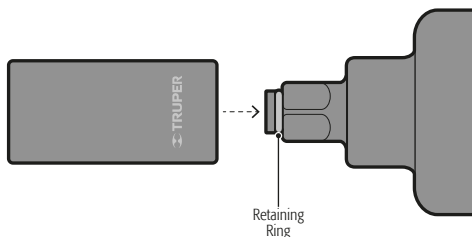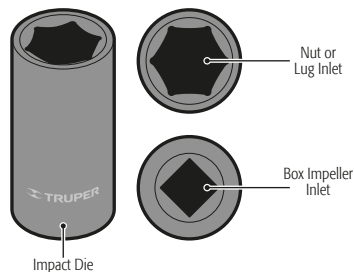



Air Outlet Connection

- ⚠ CAUTION** • We recommend using fast couple hoses to easily get them connected to the included nipple. This way it can be connected and disconnected tools fast and interchange easily.
- Remove the plastic cap covering the air inlet in the handle base.
 - Screw the included nipple to the air inlet
 - Connect the air hose via the quick-connect nipple.

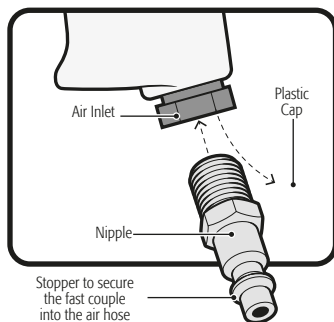


Rotation Direction and Torque Selection

- The rotation direction gets adjusted with the rotation selector.
- To tighten a nut or lug, push the rotation selector and turn clockwise. To loosen, push the rotation selector and turn counterclockwise.
- To select torque and prevent from applying too much force to a nut or lug, turn the torque selector up to the desired level according to the lower table. To adjust torque to tighten use the Allen key. To loosen torque use a flat screwdriver.
- We recommend using maximum torque in the event of not having a torque meter to verify the right torque.
- Torque value may vary depending of the air compressor size and the amount of cubic feet of air (CFM) it delivers.

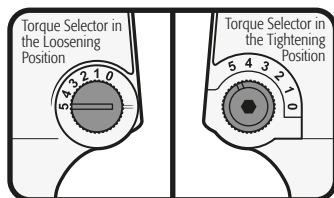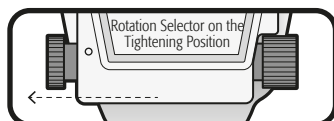

Turning ON

- Turn the air compressor ON and allow it to get filled.
 - Regulate the air compressor outlet pressure to 90 PSI to 110 PSI.
- ⚠ WARNING** • The tool operates with this pressure range. If operating in a higher pressure range the tool useful life will be shorter.
- Let run some air through the hose and coupling to verify both are clean before connecting into the tool.
 - Select the adequate rotation direction and torque.
 - Press the trigger so that the die can rotate.
 - Release the trigger to stop the die.

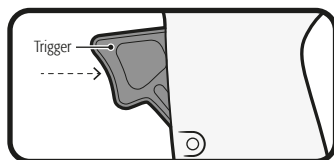

Operation

- Set the die in the nut or lug you want to loosen or tighten.
- Do not try to make contact with the nut or lug with the die moving. Do not press the trigger unless the nut or lug is set correctly inside the die.
- Apply firm and constant pressure without forcing the tool. Otherwise it can be damaged.

Lubrication

- Pneumatic tools need constant lubrication along their useful life and during the operation. The compressed air needed in the tool to run carry humidity which could oxidize the motor and bearing in the tool. To prevent this possibility, it is necessary to constantly deliver lubricating oil through a  **TRUPER®** Brand **UNI-LL-1/4** centralized filter-oiler system installed between the air compressor and the tool.


 **WARNING** • Any excess of oil in the motor is immediately expelled through the exceeding oil escape. Keep the escape free of obstructions and never point it towards people or objects.

- If not using the tool for long periods of time, it shall need to be lubricated with care.
- After 60 hours' operation, the tool mechanism need a little greasing. Excessive grease may diminish power.

Service

- Servicing the tool shall be carried out every 3 months only in a  **TRUPER®** Authorized Service Center. Service and maintenance carried out by not certified people may be dangerous and can cause severe personal injuries as well as making the product Warranty void.

- Malfunction in the tool caused by not using the recommended dose of lubrication, or not complying with this Instructions, or repairs carried out by people not certified by  **TRUPER®** will not be covered with the Warranty. We reserve the right to carry out technical improvements without notice.

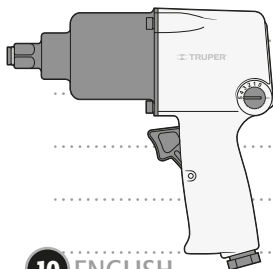

In the event of any problem contacting a Truper Authorized Service Center, please see our webpage www.truper.com to get an updated list, or call our toll-free numbers **800 690-6990** or **800 0187-8737** to get information about the nearest Service Center.

AGUASCALIENTES **DE TODO PARA LA CONSTRUCCIÓN**
GRAL. BARRAGÁN #1201, COL. GREMIAL, C.P. 20030,
AGUASCALIENTES, AGS. TEL.: 449 994 0537

BAJA CALIFORNIA **SUCURSAL TIJUANA**
AV. LA ENCANTADA, LOTE #5, PARQUE INDUSTRIAL EL
FLORIDO II, C.P. 22244, TIJUANA, B.C.
TEL.: 664 969 5100

BAJA CALIFORNIA SUR **FIX FERRETERÍAS**
FELIPE ÁNGELES ESQ. RUIZ CORTÍNEZ S/N, COL. PUEBLO
NUEVO, C.P. 23670, CD. CONSTITUCIÓN, B.C.S.
TEL.: 613 132 1115

CAMPECHE **TORNILLERÍA Y FERRETERÍA AAA**
AV. ÁLVARO OBREGÓN #324, COL. ESPERANZA
C.P. 24080 CAMPECHE, CAMP. TEL.: 981 815 2808

CHIAPAS **FIX FERRETERÍAS**
AV. CENTRAL SUR #27, COL. CENTRO, C.P. 30700,
TAPACHULA, CHIS. TEL.: 962 118 4083

CHIHUAHUA **SUCURSAL CHIHUAHUA**
AV. SILVESTRE TERRAZAS #128-11, PARQUE INDUSTRIAL
BAFAR, CARRETERA MÉXICO CUAUHTÉMOC, C.P. 31415,
CHIHUAHUA, CHIH. TEL.: 614 434 0052

MEXICO CITY **FIX FERRETERÍAS**
EL MONSTRUO DE CORREGIDORA, CORREGIDORA # 22,
COL. CENTRO, C.P. 06060, CUAUHTÉMOC, CDMX.
TEL.: 55 5522 5051 / 5522 4861

COAHUILA **SUCURSAL TORREÓN**
CALLE METAL MECÁNICA #280, PARQUE INDUSTRIAL
ORIENTE, C.P. 27278, TORREÓN, COAH.
TEL.: 871 209 68 23

COLIMA **BOMBAS Y MOTORES BYMATES DE MANZANILLO**
BLVD. MIGUEL DE LA MADRID #190, COL. 16 DE
SEPTIEMBRE, C.P. 28239, MANZANILLO, COL.
TEL.: 314 332 1986 / 332 8013

DURANGO **TORNILLOS ÁGUILA, S.A. DE C.V.**
MAZURIO #200, COL. LUIS ECHEVERRÍA, DURANGO,
DGO. TEL.: 618 817 1946 / 618 818 2844

ESTADO DE MÉXICO **SUCURSAL CENTRO JILOTEPEC**
AV. PARQUE INDUSTRIAL 1, PARQUE INDUSTRIAL
JILOTEPEC, JILOTEPEC, EDO. DE MÉX., C.P. 54257,
TEL.: 761 782 9101 EXT. 5728 Y 5102

GUANAJUATO **CÍA. FERRETERA NUEVO MUNDO S.A. DE C.V.**
AV. MÉXICO - JAPÓN #225, CD. INDUSTRIAL, C.P. 38010,
CELAYA, GTO. TEL.: 461 617 7578 / 79 / 80 / 88

GUERRERO **CENTRO DE SERVICIO ECLIPSE**
CALLE PRINCIPAL MZ 1 LT. 1, COL. SANTA FE, C.P. 39010,
CHILPANCIÑO, GRO. TEL.: 747 478 5793

HIDALGO **FERREPRECIOS S.A. DE C.V.**
LIBERTAD ORIENTE #504 LOCAL 30, INTERIOR DE PASAJE
ROBLEDO, COL. CENTRO, C.P. 43600, TULANCINGO,
HGO. TEL.: 775 753 6615 / 775 753 6616

JALISCO **SUCURSAL GUADALAJARA**
AV. ADOLFO B. HORN # 6800, COL. SANTA CRUZ DEL
VALLE, C.P.: 45655, TLAJOMULCO DE ZÚÑIGA, JAL.
TEL.: 33 3606 5285 AL 90

MICHOACÁN **FIX FERRETERÍAS**
AV. PASEO DE LA REPÚBLICA #3140-A, COL.
EX-HACIENDA DE LA HUERTA, C.P. 58050, MORELIA,
MICH. TEL.: 443 334 6858

MORELOS **FIX FERRETERÍAS**
CAPITÁN ANZURES #95, ESQ. JOSÉ PERDIZ, COL.
CENTRO, C.P. 62740, CUAUTLA, MOR.
TEL.: 735 352 8931

NAYARIT **HERRAMIENTAS DE TEPIC**
MAZATLAN #117, COL. CENTRO, C.P. 63000, TEPIC, NAY.
TEL.: 311 258 0540

NUEVO LEÓN **SUCURSAL MONTERREY**
CARRETERA LAREDO #300, 18 MONTERREY PARKS,
COLONIA PUERTA DE ANÁHUAC, C.P. 66052, ESCOBEDO,
NUEVO LEÓN, TEL.: 81 8352 8791 / 81 8352 8790

OAXACA **FIX FERRETERÍAS**
AV. 20 DE NOVIEMBRE #910, COL. CENTRO, C.P. 68300,
TUXTEPEC, OAX. TEL.: 287 106 3092

PUEBLA **SUCURSAL PUEBLA**
AV. PERIFÉRICO #2-A, SAN LORENZO ALMECATLA,
C.P. 72710, CUAUHTLACINGO, PUE.
TEL.: 222 282 8282 / 84 / 85 / 86

QUERÉTARO **ARU HERRAMIENTAS S.A. DE C.V.**
AV. PUERTO DE VERACRUZ #110, COL. RANCHO DE
ENMEDIO, C.P. 76842, SAN JUAN DEL RÍO, QRO.
TEL.: 427 268 4544

QUINTANA ROO **FIX FERRETERÍAS**
CARRETERA FEDERAL MZ. 46 LT. 3 LOCAL 2, COL. EJIDAL,
C.P. 77710 PLAJA DEL CARMEN, Q.R.
TEL.: 984 267 5140

SAN LUIS POTOSÍ **FIX FERRETERÍAS**
AV. UNIVERSIDAD #1850, COL. EL PASEO, C.P. 78320,
SAN LUIS POTOSÍ, S.L.P. TEL.: 444 822 4341

SINALOA **SUCURSAL CULIACÁN**
AV. JESÚS KUMATE SUR #4301, COL. HACIENDA DE LA
MORA, C.P. 80143, CULIACÁN, SIN.
TEL.: 667 173 9139 / 173 8400

SONORA **FIX FERRETERÍAS**
CALLE 5 DE FEBRERO #517, SUR LT. 25 MZ. 10, COL.
CENTRO, C.P. 85000, CD. OBREGÓN, SON.
TEL.: 644 413 2392

TABASCO **SUCURSAL VILLAHERMOSA**
CALLE HELIO LOTES 1, 2 Y 3 MZ. #1, COL. INDUSTRIAL,
2A ETAPA, C.P. 86010, VILLAHERMOSA, TAB.
TEL.: 993 353 7244

TAMAULIPAS **VM ORINGS Y REFACCIONES**
CALLE ROSITA #527 ENTRE 20 DE NOVIEMBRE Y GRAL.
RODRÍGUEZ, FRACC. REYNOSA, C.P. 88780, REYNOSA,
TAMS. TEL.: 899 926 7552

TLAXCALA **SERVICIOS Y HERRAMIENTAS INDUSTRIALES**
PABLO SIDAR #132, COL. BARRIO DE SAN BARTOLOMÉ,
C.P. 90970, SAN PABLO DEL MONTE, TLAX.
TEL.: 222 271 7502

VERACRUZ **LA CASA DISTRIBUIDORA TRUPER**
BLVD. PRIMAVERA ESQ. HORTENSIA S/N, COL.
PRIMAVERA C.P. 93508, POZA RICA, VER.
TEL.: 782 823 8100 / 826 8484

YUCATÁN **SUCURSAL MÉRIDA**
CALLE 33 #600 Y 602, LOCALIDAD ITZINCAB Y Mulsay,
MPIO. UMAN, C.P. 97390, MÉRIDA, YUC.
TEL.: 999 912 2451

Code	Model	Brand
11187	TPN-734H-2	 TRUPER®

This product is guaranteed for 2 years. To make the warranty valid or purchase parts and components you must present the product in Corregidora 22, Col. Centro, Alc. Cuauhtémoc, CDMX C.P. 06060 or at the establishment where you purchased it, or at any Truper® Service Center listed in the annex to the warranty policy and/or in www.truper.com . Transportation costs resulting from compliance of this warranty will be covered by  **TRUPER®**

For questions or comments, call **800-690-6990**. Made in China. Imported by Truper S.A. de C.V. Parque Industrial 1, Parque Industrial Jilotepec, Jilotepec, Edo. de Méx. C.P. 54257

Stamp of the business. Purchase date:

