


Manual

# Electric paint sprayer

600 W

Power

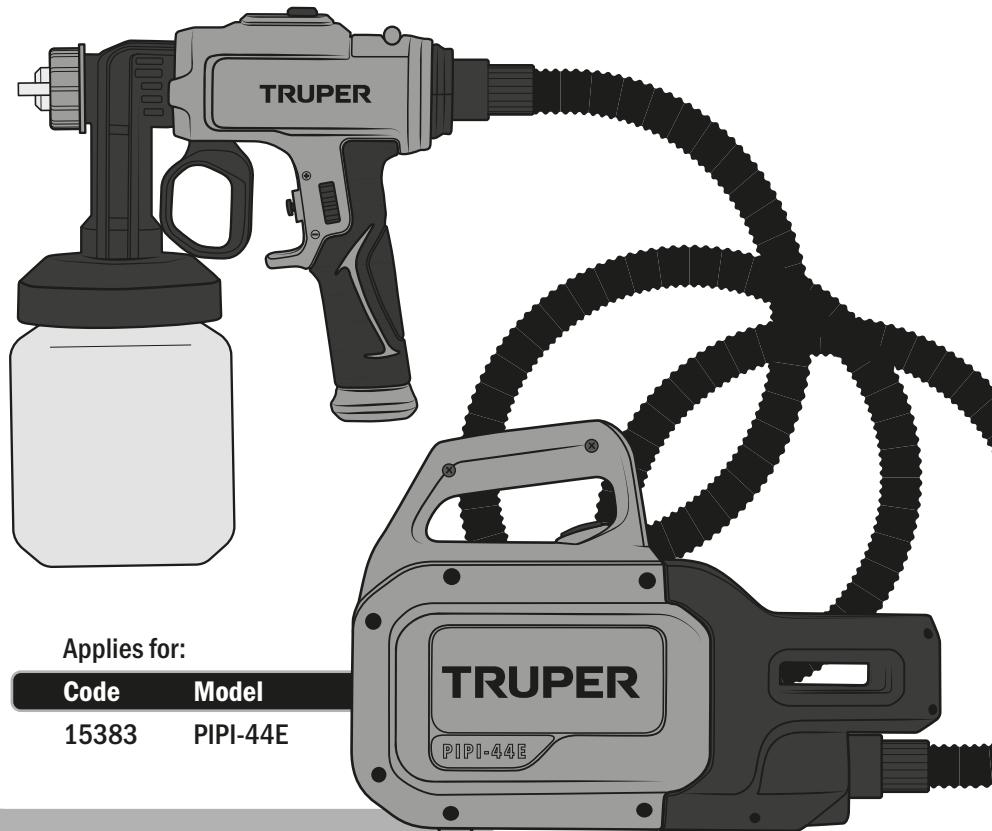

Applies for:

Code	Model
15383	PIPI-44E

# PIPI-44E



Read the user's manual thoroughly  
before operating this tool.



Technical data .....	3
Power requirements .....	3
 General power tool safety warnings .....	4
 Safety warnings for electric spray guns .....	5
Parts .....	6
Preparation .....	7
Start up .....	8
Maintenance .....	9
Troubleshooting .....	10
Authorized Service Centers .....	11
Warranty Policy .....	12

## CAUTION

To gain the best performance of the tool, prolong the duty life, make the Warranty valid if necessary, and to avoid hazards of fatal injuries please read and understand this Manual before using the tool.

Keep this manual for future references.

The illustrations in this manual are for reference only. They might be different from the real tool.

## Use and care recommendations



### RESPECT THE WORK CYCLES

30 min of work per 15 min of rest. Maximum 3 hours daily



**AVOID** using the cord to move, lift or disconnect the tool



Refer to the CORRECT VISCOSITY preparation (page 7).



To **EXTEND** the life of your tool, use compressed air (blow) to clean it after each use



Keep the tool's ventilation slots **CLEAN**



Perform regular **MAINTENANCE** to your machine after each use (page 9).

## PIPI-44E

Code	15383
Description	Electric paint sprayer
Voltage	127 V ~
Frequency	60 Hz
Current	5.2 A
Power	600 W
Container	30 oz
Maximum flow	450 ml / min
Duty cycle	30 minutes work and 15 minutes idle. Maximum 3 hours per day
Conductors	18 AWG x 2C with insulating temperature of 221 °F
Insulation	Class II
	Grade IP • IP20

Power Cord Grips Type: Y.

Build Quality: Double Insulation.

Thermal Insulation on Motor Winding: Class F.


**WARNING** Avoid the risk of electric shock or severe injury. When the power cable gets damaged it should only be replaced by the manufacturer or at an Authorized TRUPER Service Center. The build quality of the electric insulation is altered if spills or liquid gets into the tool while in use. Do not expose to rain, liquids and/or dampness.

**WARNING** Before gaining access to the terminals all power sources should be disconnected.



## Power requirements

**WARNING** Tools with double insulation are equipped with a polarized plug (one prong is wider than the other). This plug will only fit in the right way into a polarized outlet. If the plug cannot be introduced into the outlet, reverse the plug. If it still doesn't fit, call a qualified electrician to install for you a polarized outlet. Do not alter the plug in any way. Double insulation eliminates the need of both a grounded third power cord with three prongs or a grounded power connection.

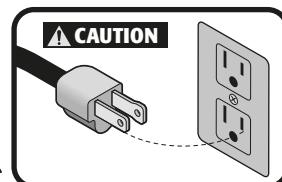

**WARNING** When using an extension cable, verify the gauge is enough for the power that your product needs. A lower gauge cable will cause voltage drop in the line, resulting in power loss and overheating. The following table shows the right size to use depending on cable's length and the ampere capability shown in the tool's nameplate. When in doubt use the next higher gauge.

Ampere Capacity	Number of Conductors	Extension Gauge	
		From 6 ft to 49 ft	Higher than 49 ft
From 0 A and up to 10 A		18 AWG	16 AWG
From 10 A and up to 13 A		16 AWG	14 AWG
From 13 A and up to 15 A	3 (one grounded)	14 AWG	12 AWG
From 15 A and up to 20 A		8 AWG	6 AWG

\* It is safe to use only if the extensions have a built-in artifact for over current protection.

AWG = American Wire Gauge - Reference NMX - J - 195 - ANCE

**WARNING** When operating power tools outdoors, use a VOLTECK grounded extension cable labeled "For Outdoors Use". These extensions are especially designed for operating outdoors and reduce the risk of electric shock.



**⚠ WARNING!** Read carefully all safety warnings and instructions listed below. Failure to comply with any of these warnings may result in electric shock, fire and / or severe damage. Save all warnings and instructions for future references.

#### Work area

**Keep your work area clean, and well lit.**



Cluttered and dark areas may cause accidents.

**Never use the tool in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.**



Sparks generated by power tools may ignite the flammable material.

**Keep children and bystanders at a safe distance while operating the tool.**



Distractions may cause loss of control.

#### Electrical Safety

**The tool plug must match the power outlet. Never modify the plug in any way. Do not use any adapter plugs with grounded power tools.**

Modified plugs and different power outlets increase the risk of electric shock.



**Avoid body contact with grounded surfaces, such as pipes, radiators, electric ranges and refrigerators.**

The risk of electric shock increases if your body is grounded.

**Do not expose the tool to rain or wet conditions.**

Water entering into the tool increases the risk of electric shock.

**Do not force the cord. Never use the cord to carry, lift or unplug the tool. Keep the cord away from heat, oil, sharp edges or moving parts.**

Damaged or entangled cords increase the risk of electric shock.

**When operating a tool outdoors, use an extension cord suitable for outdoor use.**

Using an adequate outdoor extension cord reduces the risk of electric shock.

**If operating the tool in a damp location cannot be avoided, use a ground fault circuit interrupter (GFCI) protected supply.**

Using a GFCI reduces the risk of electric shock.

#### Personal safety

**Stay alert, watch what you are doing and use common sense when operating a tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.**

A moment of distraction while operating the tool may result in personal injury.

**Use personal protective equipment. Always wear eye protection.**

Protective equipment such as safety glasses, anti-dust mask, non-skid shoes, hard hats and hearing protection used in the right conditions significantly reduce personal injury.



**Prevent unintentional starting up. Ensure the switch is in the "OFF" position before connecting into the power source and / or battery as well as when carrying the tool.**

Transporting power tools with the finger on the switch or connecting power tools with the switch in the "ON" position may cause accidents.

**Remove any wrench or vice before turning the power tool on.**

Wrenches or vices left attached to rotating parts of the tool may result in personal injury.



#### General power tool safety warnings



**Do not overreach. Keep proper footing and balance at all times.**

This enables a better control on the tool during unexpected situations.

**Dress properly. Do not wear loose clothing or jewelry. Keep hair, clothes and gloves away from the moving parts.**



Loose clothes, jewelry or long hair may get caught in moving parts.

**If you have dust extraction and recollection devices connected onto the tool, inspect their connections and use them correctly.**

Using these devices reduce dust-related risks.

#### Power Tools Use and Care

**Do not force the tool. Use the adequate tool for your application.**

The correct tool delivers a better and safer job at the rate for which it was designed.



**Do not use the tool if the switch is not working properly.**

Any power tool that cannot be turned ON or OFF is dangerous and should be repaired before operating.

**Disconnect the tool from the power source and / or battery before making any adjustments, changing accessories or storing.**

These measures reduce the risk of accidentally starting the tool.

**Store tools out of the reach of children. Do not allow persons that are not familiar with the tool or its instructions to operate the tool.**



Power tools are dangerous in the hands of untrained users.

**Service the tool. Check the mobile parts are not misaligned or stuck. There should not be broken parts or other conditions that may affect its operation. Repair any damage before using the tool.**

Most accidents are caused due to poor maintenance to the tools.



**Keep the cutting accessories sharp and clean.**

Cutting accessories in good working conditions are less likely to bind and are easier to control.

**Use the tool, components and accessories in accordance with these instructions and the projected way to use it for the type of tool when in adequate working conditions.**

Using the tool for applications different from those it was designed for, could result in a hazardous situation.

#### Service

**Repair the tool in an Authorized TRUPER Service Center using only identical spare parts.**

This will ensure that the safety of the power tool is maintained.

**Children or people with reduced physical, sensory or mental capabilities shall not operate the tool, neither inexperienced people or without knowledge in the use of the tool, unless supervised by a person responsible of their safety or if receiving previous instructions about the tool operation.**



Children shall be kept under supervision to double-check they will not play with the tool. Tight supervision shall be used with children or disabled persons to prevent from using or being close to any household tool.



This tool is in compliance with the Official Mexican Standard (NOM - Norma Oficial Mexicana).

## Substances and materials

**⚠ CAUTION** • The device is designed to apply coating materials like paint, varnish, enamel, etc. These materials shall have a flashpoint not lower than 70° F.

**⚠ WARNING** • Do not spray substances you are not familiar with and the potential hazard is unknown.

**⚠ WARNING** • Do not spray flammable substances. Use care with hazards originated by the substances sprayed. Review the text and information in the cans and containers, or the manufacturer specifications.

## Suitable materials



- Water solvent based paint, finish, primer, and paint with two components, transparent finish, automotive finish, sealer, and wood sealer.

## Non suitable materials



- Wall paint (emulsion), alkaline or acidic paint. Coating with a flashpoint lower to 70° F.

## Before operating the device

**⚠ CAUTION** • The device shall not be used in enclosed spaces or explosive environments.

- When working outside consider the wind direction. Wind can carry the coating long distances and cause damage and make the job difficult.

**⚠ CAUTION** • When working indoors verify there is adequate ventilation.

**⚠ WARNING** • The work area shall be free of ignition sources. Do not smoke while spraying or near the work place.



**⚠ CAUTION** • Use a breathing mask and safety glasses when spraying to prevent damaging your lungs and eyes.

- Use hearing protection.



**⚠ CAUTION** • People with medical implants. Before using the sprayer is recommended to visit their physician and consult with the implant manufacturer. The electro-magnetic field produced could interfere with the medical implant function.

## While operating the device

**⚠ CAUTION** • Never point the sprayer towards your body, passersby or animals.

- Make sure that the equipment does not absorb any steam solvent.

**⚠ CAUTION** • In the event you need to pause during the application process, do not set the sprayer sideways. Set it onto the container base to keep the device in a vertical position.




- Disconnect the sprayer from the power source when filling up with paint or other product.

- Keep in mind the long exposure to vibration produced by tools may be harmful. Remember, a tool in good repair vibrates much less than a tool in disrepair.

## After operating the device

**⚠ WARNING** • Do not use solvents with a flashpoint lower than 70° F to clean the sprayer.

**⚠ WARNING** • Never open the device to carry out repairs in the electric system.

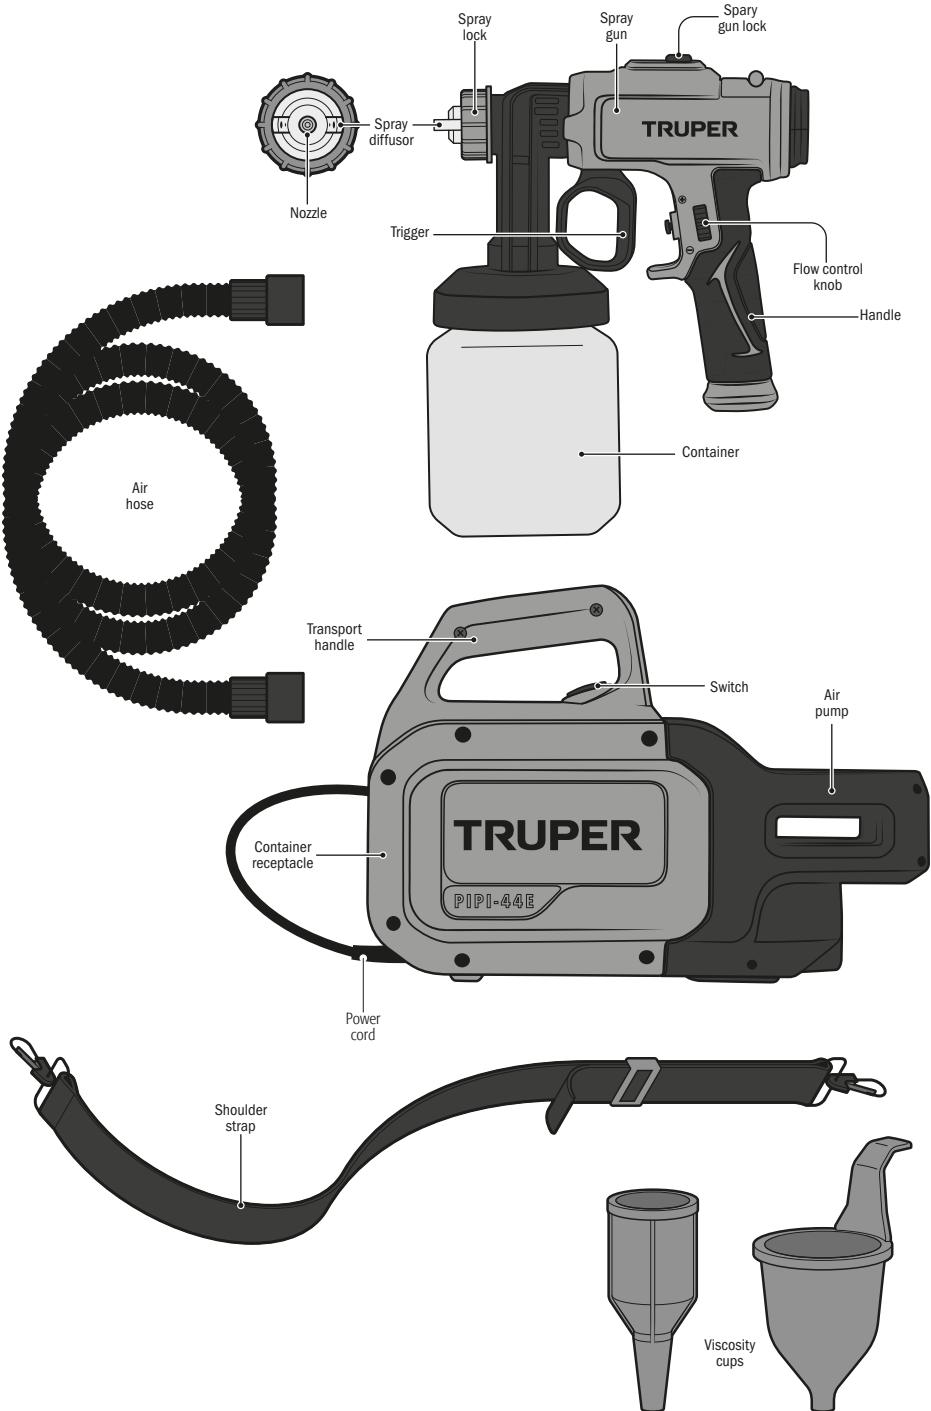

To gain in good results the coating job it is important to prepare the surface to be sprayed. Before applying, thin the paint or product to get the right viscosity.

Double-check the surface to be sprayed is free of dust, dirt or grease. Mask the areas that are not to be sprayed with good quality masking tape. The paint or product to be sprayed shall be totally mixed and free of lumps or other particles. Many substances can be sprayed with the paint sprayer. Read the manufacturer recommendations before buying the product.

## Thinning the material

- Most paints are sold ready to apply with a brush, but thinning is needed to be adequate for paint spraying. Follow the product manufacturer indications to thin the product correctly.
- Add thinner from 5% to 10% until reaching the right viscosity to apply the material.
- The viscosity cups included helps to determine the paint right viscosity.

Viscosity is determined with the seconds the material takes to be discharged from the viscosity cup. The next table shows the recommended times for the different types of product.

Product	Seconds to be discharged
Water based paint	20 - 25
Primer	24 - 28
Varnish	20 - 25
Oil based paint	18 - 22
Enamel paint	18 - 22
Aluminum paint	22 - 25
Automotive sealant	25 - 35
Wood sealant	28 - 35
Wood preserver	No thinner required
Wood stain	No thinner required

- If after thinning the product the dispersion capacity is too low, add more thinner. Slowly add more thinner from 5% to 10% until the dispersion capacity meets your needs.

## Filling up the container

**CAUTION** • Disconnect the sprayer when filling up the container with paint or product.

- Unscrew the sprayer container.
- Align the suction pipe depending the job to be carried out:



To spray horizontal objects set the suction pipe forward (A).

To spray objects above head set the suction pipe backwards (B).

- Set the container onto a piece of paper. Pour the prepared coating and fasten the container in the sprayer.


## Hose and carrying belt connection

- Fix the carrying belt in the air pump.
- Insert firmly the hose ends into the sprayer and air pump.

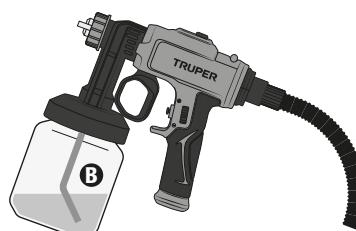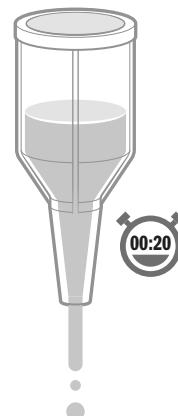


## Adjustable spray pattern


- Before starting the paint sprayer adjust the type of spray suitable for the job.
- Loosen slightly the spray lock (A) so that the spray disperser (B) is released.
- Turn the disperser into the position most suitable for the job.
- Adjust back the spray lock.

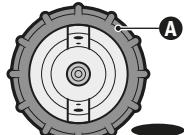

Horizontal spray pattern

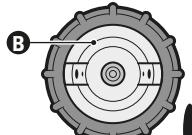


Vertical spray pattern

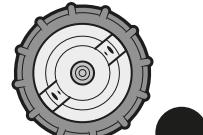

Round spray pattern

## Material volume selector

- Turn the flow control knob (C) to adjust the volume of the spraying material.
- Turn the flow control knob downwards to decrease the spraying material.

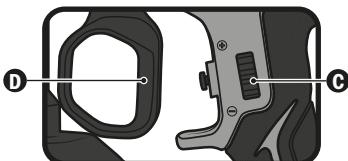




## Turning on

- Plug the cable into the power outlet.
- Press the switch on the air pump
- Press the trigger switch (D) to start the paint sprayer motor and the product starts flowing out. Aim the sprayer at a piece of cardboard until the product is sprayed.
- Release the trigger to stop the spray flow.

**WARNING** • Never press the trigger while adjusting the spray selector.

## Spraying techniques

- To gain good results always keep the sprayer level and parallel to the surface (E). Keep the nozzle at 10" - 12" from the surface and spray evenly from side to side and up and down. Do not spray in an angle otherwise the paint will run on the surface. Work with light and even passes. When spraying large surfaces use a crossed pattern (F).
- Never start or stop the sprayer while aiming at the surface to be sprayed.
- Move the sprayer with a constant and uniform speed. Fast movements produce thin layers. Slow movements produce thick layers.
- Apply one layer at a time. Before applying second layer read the drying recommendation of the product manufacturer. Remember, to get a better finish it is better to apply two thin layers than only one thick layer.
- When spraying small areas keep the outlet control down. It prevents from using too much paint and prevents from over doing the spraying.
- Prevent when possible stopping and continuing the spraying of an object. It causes too much or very little paint.
- Do not tilt the paint sprayer in an angle higher than 45°.

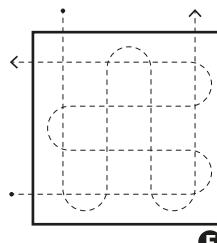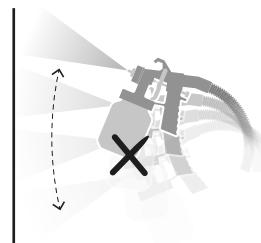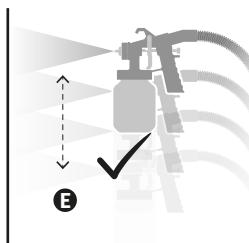

## Cleaning and care

- It is very important to thoroughly clean the paint sprayer after each use.

**WARNING** • An inadequate cleaning will result in a bad performance and will make the Warranty void.


- Disconnect the power cable.
- Press the spray gun lock (G) to separate the pulverizing cylinder (H) from the sprayer housing.
- Separate the container and empty it completely.
- Clean the container with a brush and solvent adequate for the product that was used.
- Pour a little amount of the same solvent into the container.
- Fasten back the container and assemble the sprayer again.
- Connect the power cable.
- Start the sprayer and spray into a container until the solvent comes out clean from the nozzle.

- Turn off the sprayer and disconnect.
- Clean the sprayer outer parts and the container with cloth damped with solvent or water.
- Unscrew the spray lock (I) and remove the air cap and the nozzle. Clean the air cap and the nozzle with a brush and solvent or water.

**WARNING** • Never clean the seals, diaphragm and nozzle, the air orifices or any part of the sprayer with metal objects.

- The ventilation hose and diaphragm are solvent resistant up to a determined limit. Do not submerge the sprayer in solvent. Apply solvent only to clean with a cloth.

**WARNING** • Never place the air pump under water jets or submerge in liquid. Clean the housing using only a damp cloth.

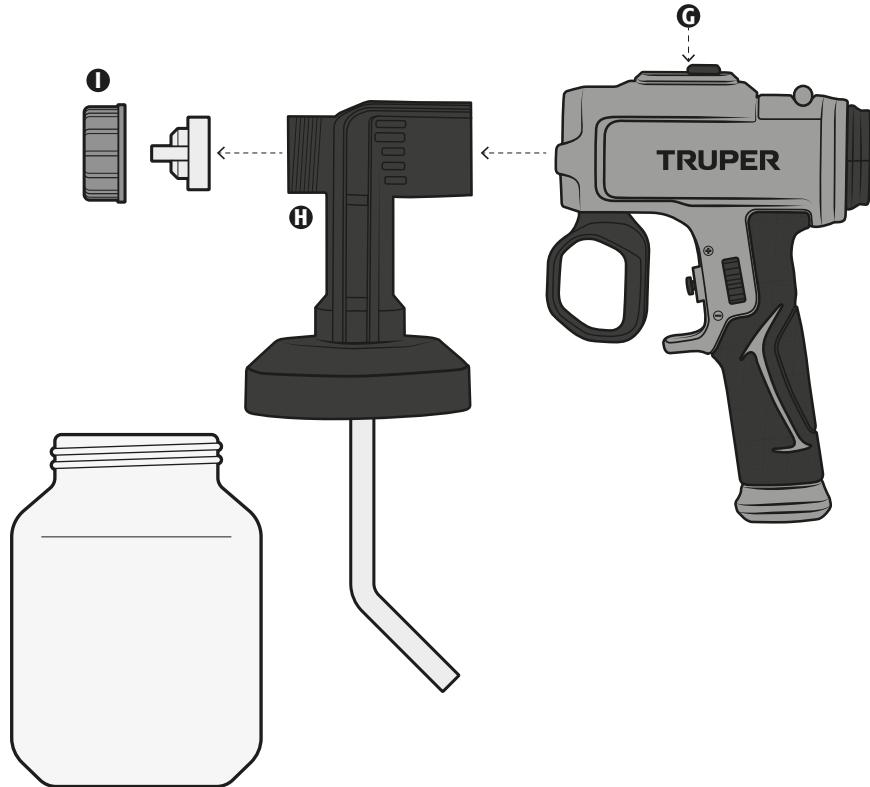

**Problem****Cause****Solution**

The material is not coming out from the nozzle .

- The nozzle is blocked.
- The suction pipe is blocked.
- The position of the volume selector is facing totally down (-).
- The feeding pipe is loose.
- There is no pressure accumulated in the container.

- Clean the nozzle.
- Clean the suction pipe.
- Turn the selector up (+).
- Install the pipe correctly.
- Tighten the container.

The material drips out from the nozzle.

- The nozzle is loose.
- The nozzle is worn.
- The nozzle seal is worn.
- The coating material is built up in the air cap, the nozzle or the needle.

- Tighten the nozzle.
- Replace the nozzle.
- Replace the nozzle seal.
- Clean the build up.

The spray is too thick.

- Viscosity in the coating material is too high.
- Volume of the material is too much.
- The volume selector position is totally up (+).
- The nozzle is contaminated.
- The air filter is very dirty.
- Not enough pressure accumulated in the container.

- Thin the material (see page 7).
- Turn the volume selector down (-).
- Turn the volume selector down (-).
- Clean the nozzle.
- Replace the filter.
- Tighten the container.

The spray jet is coming out irregularly.

- The container is getting empty.
- The air filter is too dirty.

- Fill up the container again.
- Replace filter.

The coating produce "tears".

- Too much coating material was applied.

- Turn the volume selector down (-).

The material is producing too much mist (Over-spraying).

- Too much distance away from the object.
- Too much coating was applied.

- Reduce the distance.
- Turn the volume selector down (-).

There is paint in the air hose.

- The diaphragm is dirty.
- The diaphragm is defective.

- Clean the diaphragm.
- Replace the diaphragm.

If the problems cannot be solved despite the recommended corrective actions visit an Authorized TRUPER Service Center.

# Authorized Service Centers

**TRUPER**

In the event of any problem contacting an Authorized TRUPER Service Center, please see our webpage [WWW.TRUPER.COM](http://WWW.TRUPER.COM) to get an updated list, or call our toll-free numbers 800 690-6990 or 800 018-7873 to get information about the nearest Service Center.

AGUASCALIENTES	<b>DE TODO PARA LA CONSTRUCCIÓN</b> GRAL. BARRAGÁN #1201, COL. GREMIAL, C.P. 20030, AGUASCALIENTES, AGS. TEL: 449 994 0537
BAJA CALIFORNIA	<b>SUCURSAL Tijuana</b> AV. LA ENCANTADA, LOTE #5, PARQUE INDUSTRIAL EL FLORIDO II, C.P. 22244, Tijuana, B.C. TEL: 664 969 5100
BAJA CALIFORNIA SUR	<b>FIX FERRETERÍAS</b> FELIPE ÁNGELES ESQ. RUIZ CORTÍNEZ S/N, COL. PUEBLO NUEVO, C.P. 23670, CD. CONSTITUCIÓN, B.C.S. TEL: 613 132 1115
CAMPECHE	<b>TORNILLERÍA Y FERRETERÍA AAA</b> AV. ÁLVARO OBREGÓN #324, COL. ESPERANZA C.P. 24080 CAMPECHE, CAMP. TEL: 981 815 2808
CHIAPAS	<b>FIX FERRETERÍAS</b> AV. CENTRAL SUR #27, COL. CENTRO, C.P. 30700, TAPACHULA, CHIS. TEL: 962 118 4083
CHIHUAHUA	<b>SUCURSAL CHIHUAHUA</b> AV. SILVESTRE TERRAZAS #128-11, PARQUE INDUSTRIAL BAFAR, CARRETERA MÉXICO CUAUHTEMOC, C.P. 31415, CHIHUAHUA, CHIH. TEL: 614 434 0052
MEXICO CITY	<b>FIX FERRETERÍAS</b> EL MONSTRUO DE CORREGIDORA, CORREGIDORA # 35, COL. CENTRO, C.P. 06060, CUAUHTEMOC, CDMX. TEL: 55 5522 5031 / 5522 4861
COAHUILA	<b>SUCURSAL TORREÓN</b> CALLE METAL MECÁNICA #280, PARQUE INDUSTRIAL ORIENTE, C.P. 27278, TORREÓN, COAH. TEL: 871 209 68 23
COLIMA	<b>BOMBAS Y MOTORES BYMTESA DE MANZANILLO</b> BLVD. MIGUEL DE LA MADRID #190, COL. 16 DE SEPTIEMBRE, C.P. 28239, MANZANILLO, COL. TEL: 314 332 1986 / 332 8013
DURANGO	<b>TORNILLOS ÁGUILA, S.A. DE C.V.</b> MAZURIO #200, COL. LUIS ECHEVERRÍA, DURANGO, DGO. TEL: 618 817 1946 / 618 818 2844
ESTADO DE MÉXICO	<b>SUCURSAL CENTRO JILOTEPEC</b> AV. PARQUE INDUSTRIAL #1-A, C.P. 54240, JILOTEPEC, EDO. DE MÉX. TEL: 761 782 9101 EXT. 5728 Y 5102
GUANAJUATO	<b>CÍA. FERRETERA NUEVO MUNDO S.A. DE C.V.</b> AV. MÉXICO - JAPÓN #225, CD. INDUSTRIAL, C.P. 38010, CELAYA, GTO. TEL: 461 617 7578 / 79 / 80 / 88
GUERRERO	<b>CENTRO DE SERVICIO ECLIPSE</b> CALLE PRINCIPAL MZ.1 LT. 1, COL. SANTA FE, C.P. 39010, CHILPANCINGO, GRO. TEL: 747 478 5793
HIDALGO	<b>FERREPRECIOS S.A. DE C.V.</b> LIBERTAD ORIENTE #304 LOCAL 30, INTERIOR DE PASAJE ROBLEDO, COL. CENTRO, C.P. 43600, TULANCINGO, HGO. TEL: 775 753 6615 / 775 753 6616
JALISCO	<b>SUCURSAL GUADALAJARA</b> AV. ADOLFO B. HORN # 6800, COL: SANTA CRUZ DEL VALLE, C.P.: 45655, TLAJOMULCO DE ZÚÑIGA, JAL. TEL: 33 3606 5285 AL 90
MICHOACÁN	<b>FIX FERRETERÍAS</b> AV. PASEO DE LA REPÚBLICA #3140-A, COL. EX-HACIENDA DE LA HUERTA, C.P. 58050, MORELIA, MICH. TEL: 443 334 6858

MORELOS	<b>FIX FERRETERÍAS</b> CAPITÁN ANZURES #95, ESQ. JOSÉ PERDIZ, COL. CENTRO, C.P. 62740, CUAUTLA, MOR. TEL: 735 352 8931
NAYARIT	<b>HERRAMIENTAS DE TEPIC</b> MAZATLÁN #117, COL. CENTRO, C.P. 63000, TEPIC, NAY. TEL: 311 258 0540
NUEVO LEÓN	<b>SUCURSAL MONTERREY</b> CARRETERA LA PEPEDA #300, 1B MONTERREY PARKS, COLONIA PUERTA DE ANÁHUAZ, C.P. 66052, ESCOBEDO, NUEVO LEÓN, TEL: 81 8352 8791 / 81 8352 8790
OAXACA	<b>FIX FERRETERÍAS</b> AV. 20 DE NOVIEMBRE #910, COL. CENTRO, C.P. 68300, TUXTEPEC, OAX. TEL: 287 106 3092
PUEBLA	<b>SUCURSAL PUEBLA</b> AV. PERIFÉRICO #2-A, SAN LORENZO ALMECATLA, C.P. 72710, CUAUTLACINGO, PUE. TEL: 222 282 8282 / 84 / 85 / 86
QUERÉTARO	<b>ARU HERRAMIENTAS S.A DE C.V.</b> AV. PUERTO DE VERACRUZ #110, COL. RANCHO DE ENMEDIO, C.P. 76842, SAN JUAN DEL RÍO, QRO. TEL: 427 268 4544
QUINTANA ROO	<b>FIX FERRETERÍAS</b> CARRETERA FEDERAL MZ. 46 LT. 3 LOCAL 2, COL. EJIDAL, C.P. 77710 PLAYA DEL CARMEN, Q.R. TEL: 984 267 3140
SAN LUIS POTOSÍ	<b>FIX FERRETERÍAS</b> AV. UNIVERSIDAD #1850, COL. EL PASEO, C.P. 78320, SAN LUIS POTOSÍ, S.L.P. TEL: 444 822 4341
SINALOA	<b>SUCURSAL CULIACÁN</b> AV. JESÚS KUMATE SUR #4301, COL. HACIENDA DE LA MORA, C.P. 80143, CULIACÁN, SIN. TEL: 667 173 9139 / 173 8400
SONORA	<b>FIX FERRETERÍAS</b> CALLE 5 DE FEBRERO #517, SUR LT. 25 MZ. 10, COL. CENTRO, C.P. 85000, CD. OBREGÓN, SON. TEL: 644 413 2392
TABASCO	<b>SUCURSAL VILLAHERMOSA</b> CALLE HELIO LOTES 1, 2 Y 3 MZ. #1, COL. INDUSTRIAL, 2A ETAPA, C.P. 86010, VILLAHERMOSA, TAB. TEL: 993 353 7244
TAMAULIPAS	<b>VM ORINGS Y REFACCIONES</b> CALLE ROSITA #527 ENTRE 20 DE NOVIEMBRE Y GRAL. RODRIGUEZ, FRACC. REYNOSA, C.P. 88780, REYNOSA, TAMS. TEL: 899 926 7552
TLAXCALA	<b>SERVICIOS Y HERRAMIENTAS INDUSTRIALES</b> PABLO SIDAR #132, COL. BARRIO DE SAN BARTOLOMÉ, C.P. 90970, SAN PABLO DEL MONTE, TLAX. TEL: 222 271 7502
VERACRUZ	<b>LA CASA DISTRIBUIDORA TRUPER</b> BLVD. PRIMAVERA, ESQ. HORTENSIA S/N, COL. PRIMAVERA C.P. 93308, POZA RICA, VER. TEL: 782 823 8100 / 826 8484
YUCATÁN	<b>SUCURSAL MÉRIDA</b> CALLE 33 #600 Y 602, LOCALIDAD ITZINCAB Y MULSAY, MPIO. UMÁN, C.P. 97390, MÉRIDA, YUC. TEL: 999 912 2451

Code	Model	Brand
15383	PIPI-44E	TRUPER®

Warranty. Duration: 1 year. Coverage: parts, components and workmanship against manufacturing or operating defects, except if used under conditions other than normal; when it was not operated in accordance with the instructive; was altered or repaired by personnel not authorized by TRUPER®. To make the warranty valid, present the product, stamped policy or invoice or receipt or voucher, in the establishment where you bought it or in Corregidora 35, Centro, Cuauhtémoc, CDMX, 06060, where you can also purchase parts, components, consumables and accessories. It includes the costs of transportation of the product that derive from its fulfillment of its service network. . Phone number 800-018-7873. Made in China. Imported by TRUPER, S.A. de C.V. Parque Industrial 1, Parque Industrial Jilotepec, Jilotepec, Edo. de Méx. C.P. 54257, Phone number 761 782 9100.



Stamp of the business. Delivery date: