

## INSTRUCTIVE

## ASP-12V-P

## Código: 22090

**ATTENTION** Before using the device please read carefully the operation instructions. Power Cord Grips used in this product: Type "Y".

**WARNING** Avoid the risk of electric shock or severe injury. When the power cable gets damaged it should only be replaced by the manufacturer to avoid any risk of discharge or considerable accident. The build quality of the electric insulation is altered if spills or liquid gets into the tool while in use. Do not expose to rain, liquids and/or dampness. Before gaining access to the terminals all power sources should be disconnected.

## SAVE THESE INSTRUCTIONS

These instructions are meant to simplify installation, use and maintenance of this product.

Pay attention to the recommendation and caution notes to assure the correct operation of the vacuum cleaner.

We recommend using original spare parts to guarantee efficiency and service of the car vacuum cleaner.



## SAFETY INSTRUCTIONS

Using this product in an incorrect manner may be dangerous. Please follow these instructions:

- Under no circumstances should you use this equipment to vacuum liquids.
- No dot set the vacuum cleaner close to your eyes or ears while it is running.
- Do not expose the vacuum cleaner to rain.
- When not using the vacuum cleaner keep it in a cool place away from the reach of children.
- Double-check the vacuum has the filter installed and replace when necessary.
- Do not vacuum flammable materials or cigarette ends.
- Do not vacuum while driving your car.
- Take care and keep clean this device. Try to empty debris frequently to have an optimum performance.
- Do not operate the device where toxic, gases or explosive materials are kept. The motor usually produces sparks and could cause fire when is near these materials.
- You can use the vacuum cleaner during 30 minutes without turning it off. It will not affect the car battery.
- Switch on the device pressing the On / OFF Switch.
- The required power must be 12 V---
- Connect the vacuum cleaner cable adapter to the car cigarette lighter orifice. Double-check there are no cigarette residues.
- To gain a better performance keep the filter clean at all times
- The included extension wand vacuums hard-to- reach areas and surfaces. Just set it into the vacuum nose.
- Children or people with reduced physical, sensory or mental capabilities shall not operate the tool, neither inexperienced people or without knowledge in the use of the tool, unless supervised by a person responsible of their safety or if receiving previous instructions about the tool operation.
- Children shall be kept under supervision to double-check they will not play with the tool. Tight supervision shall be used with children or disabled persons to prevent from using or being close to any household tool.



## REPLACE AND / OR CLEAN THE FILTER

1. To remove and clean the filter. Hold the vacuum cleaner with one hand pressing the ejector and pull the nose while holding the handle with your other hand. (Figure 1).
2. Remove the filter and discard all the debris. (Figure 2). In case the power cord in this product is damaged it shall be replaced with a specific cable or assembly available in the Truper® Branches.
3. To clean the filter. Using a soft brush carefully remove the small debris residues. You can also use a small amount of mild detergent or soap.
4. Set back the clean filter and the vacuum cleaner nose into the body unit. Snap in the upper part first to prevent damaging the plastic. (Figure 3).

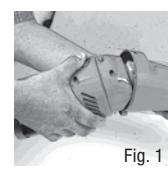


Fig. 1



Fig. 2



Fig. 3