


Cordless hedge trimmer

Manual

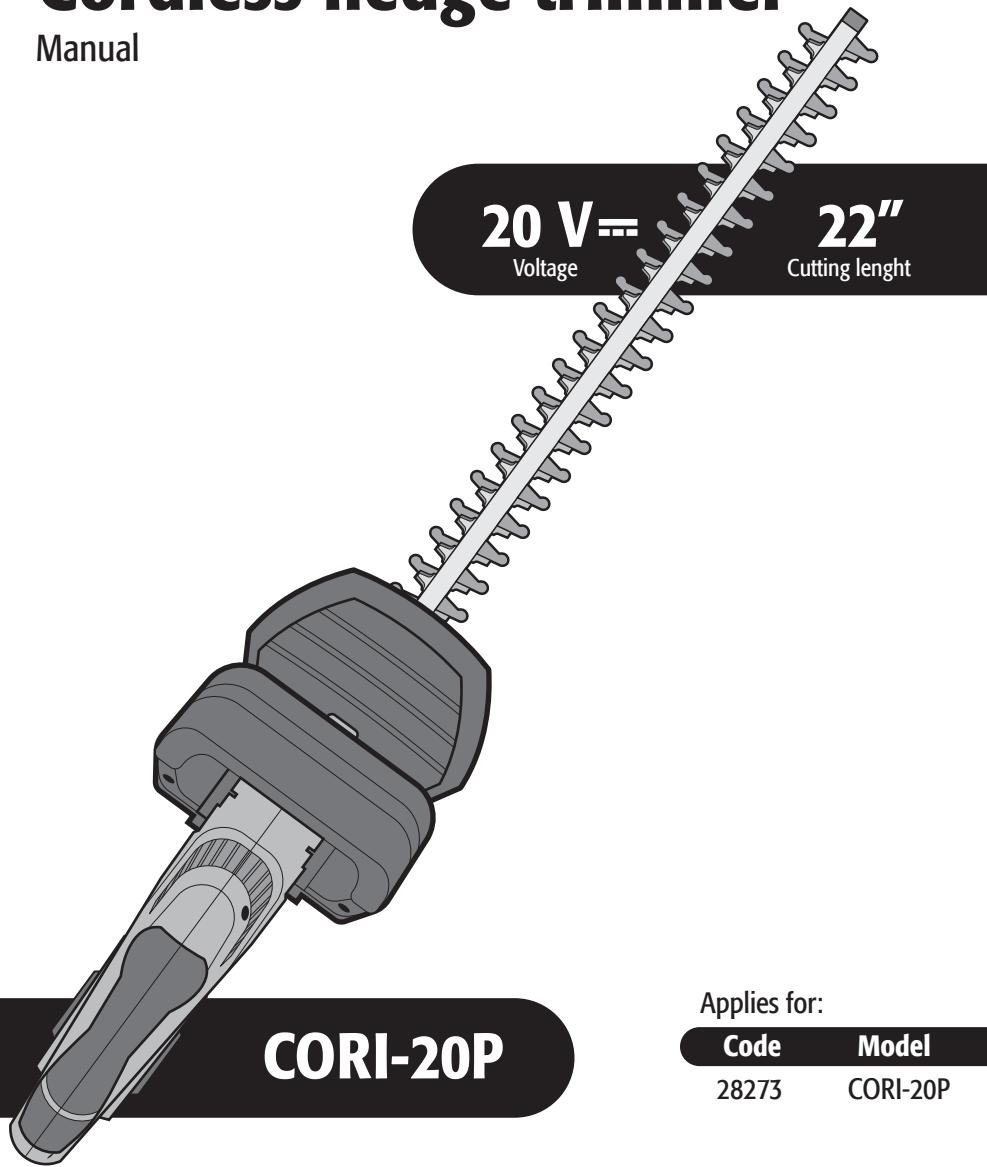

Applies for:

Code
28273

Model
CORI-20P



CAUTION



Read this manual thoroughly
before using the tool.



Technical data	3
Power requirements	3
 General power tool safety warnings	4
 Safety warnings for the use of hedge trimmers	5
Parts	7
Assembly	8
Start up	9
Maintenance	11
Troubleshooting	11
Notes	12
Authorized service centers	13
Warranty policy	14

CAUTION

To get the most out of the tool, extend its lifespan, claim the warranty if necessary, and avoid serious risks or injuries, it is essential to read this manual in its entirety before using the tool.

Keep this manual for future references.

The illustrations in this manual are for reference and may differ from the real appearance of the tool.

Usage and care Recommendations

 Charge the battery only with the included charger or its equivalent recommended by **TRUPER**.

 Follow the battery usage **CONSIDERATIONS** (page 9).

 Keep the ventilation openings of the tool and charger clean.

 Perform periodic **MAINTENANCE** on your machine (page 11).

CORI-20P

Code	•	28273
Description	•	Cordless hedge trimmer
Cutting lenght	•	22"
Voltage	•	20 V ===
Cutting capacity	•	3/8"
Speed	•	1 500 strokes/min
Blade	•	Double-edged
Tooth spacing	•	14 mm
Battery	•	Ion-lithium 20V === 2 Ah Charging time: 55 minutes approx.
Charger	•	Input: Voltage: 127 V ~ Frequency: 60 Hz Input Current: 0.9 A Output: 21 V === 2.5 A

The power cable has Y-type cable holders

The tool's construction class is Class III.

The charger's construction class is Reinforced Insulation.

WARNING If the power cable is damaged, it must be replaced by the manufacturer or a TRUPER Authorized Service Center to prevent any risk of electric shock or significant accidents. The electrical insulation of this tool is altered by splashes or spillage of liquids during its operation. Do not expose it to rain, liquids, and/or moisture.


WARNING Before accessing the terminals, all power circuits must be disconnected.



Power requirements

WARNING Double-insulated and reinforced insulated tools eliminate the need for a 3-prong grounded power cord or a grounded electrical system.

WARNING When using an extension cord, make sure to use a gauge sufficient to carry the current your tool will consume. A lower gauge cable will cause voltage drops in the line, resulting in power loss and motor overheating. The following table shows the correct size to be used depending on the cable length and the amperage capacity indicated on the tool's data plate. If in doubt, use the next higher gauge.

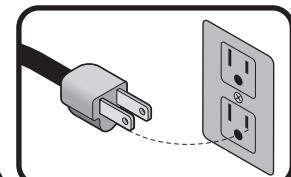

Capacity in Amperes	Number of conductors	Extension gauge from 5.9' to 49'	higher than 49'
from 0 to 10A		18 AWG(*)	16 AWG
from 10A to 13A		16 AWG	14 AWG
from 13A to 15A		14 AWG	12 AWG
from 15A to 20A	3 (one to ground)	8 AWG	6 AWG

* It is allowed to use it if the extensions themselves have an overcurrent protection device. AWG = American Wire Gauge. Reference: NMX-J-195-ANCE.

WARNING When operating electric tools outdoors, use a grounded extension cord marked as **VOLTECK**. 'Outdoor Use'. These extensions are specially designed for outdoor use and reduce the risk of electric shock.



⚠️ WARNING! Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shocks, fires, and/or serious injuries. **Keep all warnings and instructions for future reference.** The term "power tool" in the warnings refers to your corded electric power tool or cordless power tool (battery-operated).

Work area

Keep your work area clean, organized, and well-lit.

Cluttered and dim areas can lead to accidents.



Do not operate the tool in explosive atmospheres, such as in the presence of flammable liquids, gas, or dust.

The electric tools produce sparks that can ignite flammable material.



Keep children and other individuals at a safe distance while using the equipment.

Distractions can cause loss of control and lead to accidents.



Electrical Safety

The tool plug must match the outlet. Never modify a plug.

Do not use any type of adapter for grounded tool plugs.

Modified plugs and different outlets increase the risk of electrical shock.



Avoid body contact with grounded surfaces such as pipes, radiators, electric stoves, and refrigerators.

There is an increased risk of electrical shock if the body is grounded.

Do not expose the tool to rain or humid conditions.

Water entering the tool increases the risk of electrical shock.

Do not force the cable. Never use the cable to transport, lift, or disconnect the tool. Keep the cable away from heat, oil, sharp edges, or moving parts.

Damaged or tangled cables increase the risk of electrical shock.

Personal Safety

Be alert, watch what you are doing, and use common sense when handling a tool. Do not use it if you are tired or under the influence of drugs, alcohol, or medication.

A moment of distraction while using the tool can cause personal injury.

Use safety equipment. Always wear eye protection.

The use of safety equipment such as safety glasses, dust mask, slip-resistant shoes, helmet, and ear protection in appropriate conditions significantly reduces the risk of personal injury.



Avoid accidental starts. Ensure the switch is in the "off" position before connecting to the power source and/or the battery or transporting the tool.

Carrying power tools with your finger on the switch or connecting power tools with the switch in the "on" position can cause accidents.

Remove any wrenches or adjusting tools before starting the power tool.

Wrenches or tools left on the rotating parts of the tool can cause personal injury.

Do not exceed your range of motion. Keep both feet firmly planted on the ground and always maintain balance.

This allows better control of the tool in unexpected situations.

Dress appropriately. Do not wear loose clothing or jewelry.

Keep your hair, clothing, and gloves away from moving parts. Loose clothes, jewelry, or long hair can get caught in moving parts.



If dust extraction and collection devices are available for the tool, check their connections and use them correctly.

The use of these devices reduces risks associated with dust.

Tool Use and Care

Do not force the tool. Use the appropriate tool for the task at hand.

The right tool performs better and is safer when used at the intended pace.



Do not use the tool if the switch is not functioning.

Any power tool that cannot be turned on or off is dangerous and must be repaired before operation.

Disconnect the tool from the power source and/or battery before making any adjustments, changing accessories, or storing it.

These measures reduce the risk of accidentally starting the tool.

Store the tools out of the reach of children and do not allow them to be handled by individuals unfamiliar with the tools or their instructions.

Power tools are dangerous in untrained hands.



Maintain the tool. Ensure that the moving parts are not misaligned or jammed, and that there are no broken parts or other conditions that may affect its operation. Repair any damage before using the tool.

Many accidents are caused by inadequate tool maintenance.



Keep cutting accessories sharp and clean.

Well-maintained cutting accessories are less likely to jam and easier to control.

Use the tool, its components, and accessories in accordance with these instructions and as intended for the type of tool, in appropriate working conditions.

Using the tool for applications other than those for which it is designed could cause a hazardous situation.

Use and care of the battery-powered tool

Only recharge with the charger specified by TRUPER.

Using a different charger may cause a fire hazard.

Use batteries specifically designed for the tool.

Using any other battery may pose a risk of damage and fire.

NOM

General safety warnings

⚠ for cordless hedge trimmer use ⚠

PRETUL

Safety is a combination of common sense, alertness, and knowledge of how the tool operates.

⚠ CAUTION • Read the instructions carefully before using the tool. Pay attention to safety rules, warning symbols and hazard warnings, and caution notices in the instructions and on the labels attached to the tool.

⚠ CAUTION • The tool is designed exclusively for cutting bushes, do not attempt to cut any other type of material.

Batteries and charger

⚠ DANGER • Use only the PRETUL included charger to charge the battery. Using another charger may cause a fire or injury risks.

⚠ DANGER • Use only batteries designed specifically for the tool. Other batteries may cause risks of injury or fire.
• Plug the charger only to an alternating current (AC) power supply.

⚠ DANGER • Do not use the charger outdoors.

- Respect the "+/-" polarity when charging.
- Never recharge a leaking battery.
- Do not use batteries or the charger for purposes other than those they were designed for.
- Do not modify the battery or charger contacts.
- Do not expose the battery pack to temperatures above 50 °C (122 °F).

⚠ DANGER • Never expose batteries to fire; they could explode.

⚠ CAUTION • The battery can be damaged by sharp objects such as nails or screwdrivers or if subjected to external force. An internal short circuit may occur, causing the battery to catch fire, emit smoke, explode, or overheat.

⚠ CAUTION • Do not open the battery. There is a risk of a short circuit. Protect the battery from heat, intense continuous sunlight, fires, water, and moisture.

⚠ DANGER • Risk of explosion. In case of damage and improper use of the battery, it may emit vapors. Ventilate the area and seek medical help if you feel unwell. Vapors can irritate the respiratory system.

⚠ CAUTION • To maximize the battery lifespan, ensure to discharge it fully at least once a month. Do not leave the battery uncharged for more than three months. Always charge the battery to its maximum capacity. Before using the machine for the first time, charge the battery for a minimum of 1.5 hours.

⚠ CAUTION • When batteries are not in use, keep it away from any metallic objects such as clips, coins, keys, nails, screws, or any metallic object that may create a connection from one terminal to another. 

- Short-circuiting between battery terminals may cause burns or fire.
- In abusive conditions, battery liquid may be expelled; avoid contact. If there is accidental contact, rinse with water. If the liquid meets the eyes, seek medical assistance.
- The expelled liquid can cause irritation or burns.

- Avoid frequent interruptions while working with the tool; to prevent damage to the battery.

- Do not throw the batteries into the fire; the battery may explode. Consult local codes for possible special disposal instructions.

- Do not open or mutilate the batteries. The released electrolyte is corrosive and can cause damage to the eyes or skin. It can be toxic if ingested.

- Do not charge the battery in the rain or in damp locations.

Before operating the tool

• Do not use the tool in the rain or damp conditions. The electric motor is not waterproof.

• Novice users should be trained by an experienced user in the use of the tool.

• The tool should not be used by children or individuals under 18 years old. Individuals over 16 years old may do so if they receive training under expert supervision.

⚠ DANGER • Never use the tool when tired, ill, or under the influence of drugs, alcohol, or medication.

⚠ CAUTION • Wear appropriate clothing to operate the tool: snug-fitting clothes, thick pants, slip-resistant safety boots, heavy-duty protective gloves, and safety glasses with side protection under ANSI Z87.1 standards.

• Ensure that the tool is in perfect condition for safe use. Do not turn it on if it is improperly adjusted, not fully assembled, or has any loose screws.

• Do not use the tool without the properly mounted and secured protective guards.

• Check the work area and remove any stones, glass, nails, wire, rope, or any foreign objects. They could be thrown or entangled in the tool.

• Ensure that visibility and lighting conditions are suitable for clear vision; otherwise, do not use the tool.

When operating the tool

- Keep all body parts away from the cutting blade. Do not remove the cut material or hold the material to be cut when the blades are in motion. Make sure the switch is turned off when removing jammed material.
- Hold the tool only by the insulated grip surfaces, as the cutting blade may come into contact with hidden electrical wiring to avoid the possibility of electric shock.

DANGER • Keep your hands away from the blade. Contact with the blade can cause serious personal injuries.

WARNING • Keep both feet firmly planted on the floor and both hands holding the tool by the handles; never operate it with one hand as the operator and others present may be injured.

CAUTION • If the blade comes into contact with a fence or any other hard object, immediately turn off the motor and remove the battery pack. Check if the blade is damaged, and if so, fix it immediately.


• Before checking the tool, performing maintenance, troubleshooting, or removing material trapped in the blade, always turn off the tool and remove the battery pack.

WARNING • Never point the blades towards yourself or others.

CAUTION • If the blades become jammed during operation, turn off the tool and remove the battery pack, then remove foreign objects using a tool like pliers. Do not do it by hand, as the blades may move when removing foreign objects, causing injury.

After operating the tool


- When transporting, even during work, or storing the tool, turn off the motor, remove the batteries, and place the blade cover.
- Clean the tool, especially the blade, after use and before storing it. Lightly grease the blade and place the cover.
- Store the tool with its cover on, in a dry place, out of reach of children. Never store the tool outdoors.

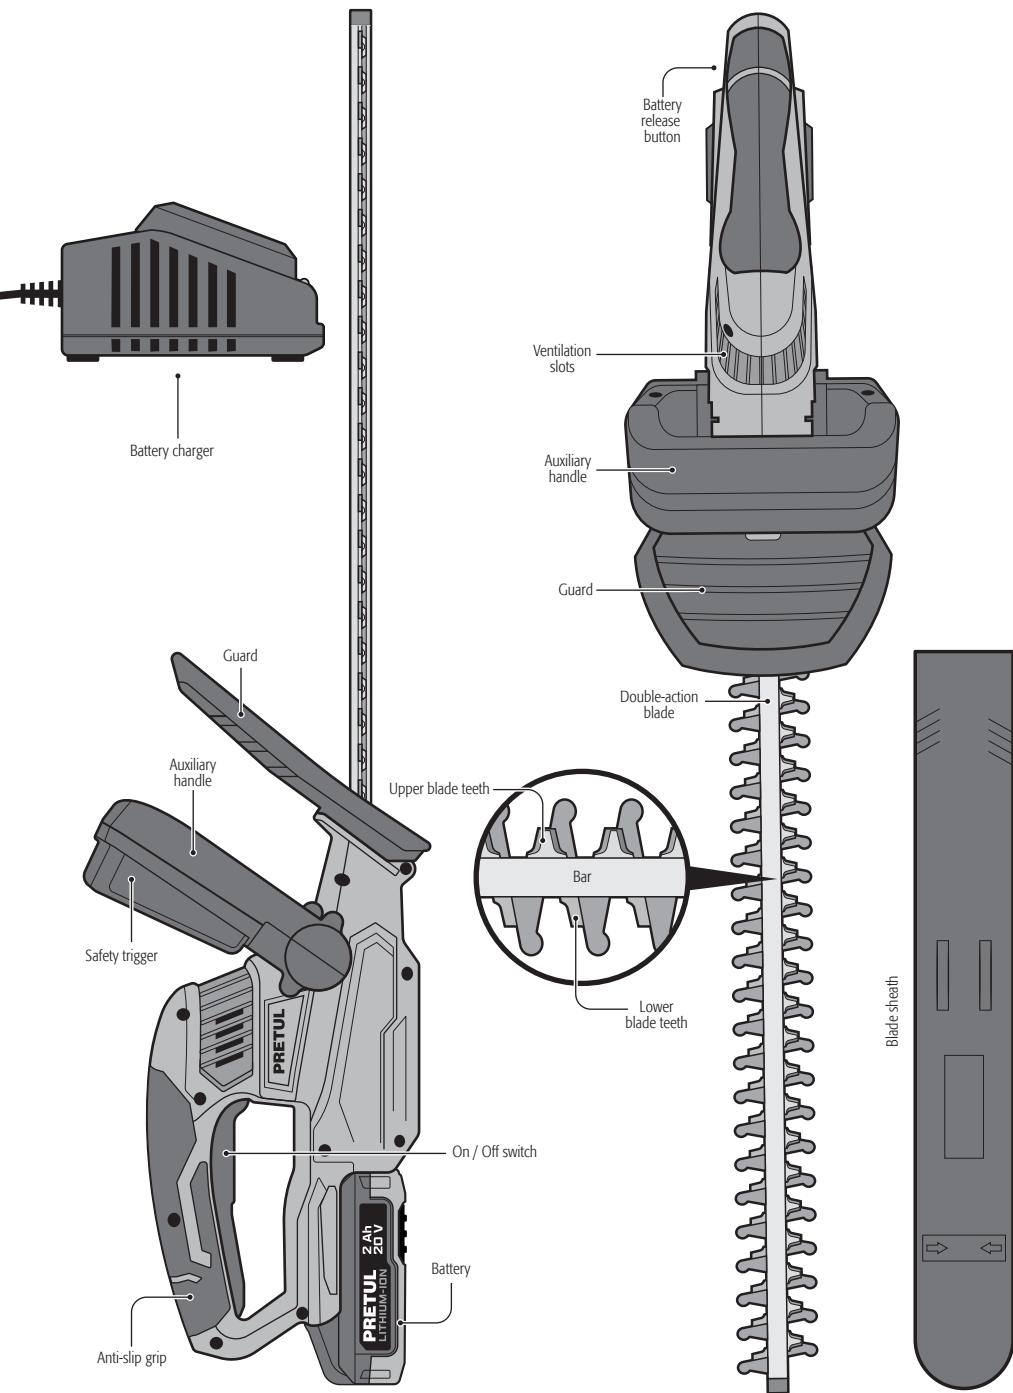

CAUTION Before performing any work on the cordless tool, remove the battery. The battery must be charged before using the machine for the first time.


Front Handle Assembly

- Place the front handle on the machine, tightening the four screws.

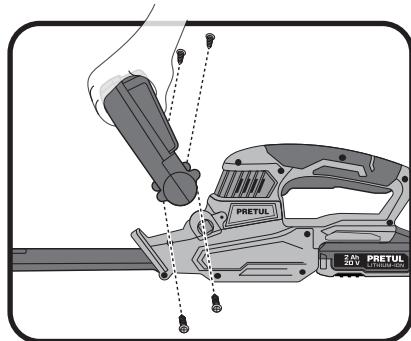

Guard Assembly


CAUTION You cannot use the hedge trimmer without the guard. • Attach the guard to the machine, tightening the two screws (3).

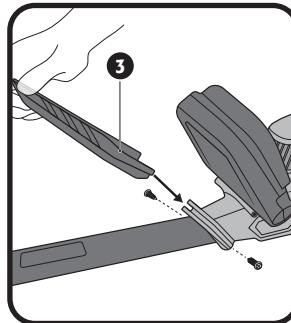

Battery

CAUTION Remove the battery before performing any work on the power tool. The battery must be charged before the first use.


- Ensure that the exterior of the battery is clean and dry before connecting it to the charger or the machine.
- Insert the battery into the base of the machine and push it until it clicks into place (2).
- To remove it, press the battery release button (1).

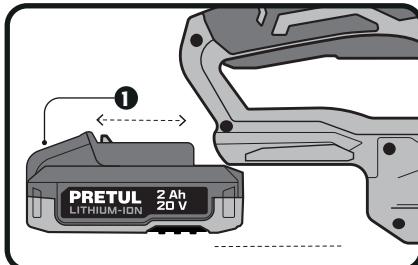

Battery Charge

- Connect the charger plug to a 127 V~ electrical outlet. (The green light on the charge indicator will turn on.)
- Insert the battery into the charger by sliding it as shown. The green light will turn off, and the red light should turn on, indicating that the charging has started.
- When the battery is fully charged, the green light will turn on, and the red light will turn off.
- Disconnect the charger from the power source once the charging is complete.

CAUTION It is advisable to store the machine with a charged battery if it will not be used for an extended period of time.

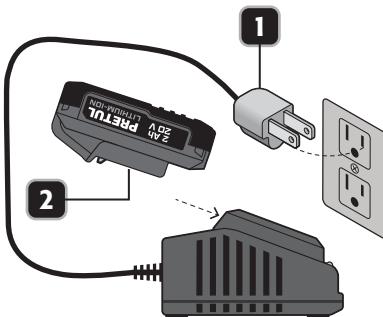

Battery failure

- If the red light on the battery level indicator flashes, it means the battery temperature is below 32 °F or above 113 °F. Wait for the battery temperature to be within the appropriate range before charging.
- If the battery indicator lights do not turn on after placing the battery into the charger, it indicates that the battery is defective. Please replace the battery with a new one.

Considerations for battery use

The battery is shipped in a DISCHARGED state by default. It is necessary to charge it for approximately 3 hours before use. The normal charging temperature is from 32 °F to 113 °F. Charging is automatically suspended outside this range until it reaches the correct temperature. The normal discharge/working temperature is from 32 °F to 167 °F. If the temperature exceeds 167 °F, the electronic control will shut off power until the tool reaches the optimal temperature range. If the battery voltage drops below the normal level during operation, the tool will stop working. Between each charge, allow the charger a 15-minute break. In a warm environment or after prolonged use, the battery may become too hot to recharge. Allow the battery to cool down before attempting to recharge it.

⚠️ WARNING Before use, inspect to ensure that the blades, blade screws, and cutting assembly are not worn out or damaged.


⚠️ WARNING You cannot use the hedge trimmer without the guard.

⚠️ WARNING Always hold the hedge trimmer with both hands and keep it away from the body.

Blade cover


⚠️ WARNING • Be careful not to touch the blades when installing or removing the blade cover.

- To remove the cover, press where the arrows indicate and pull the cover outward.
- To reattach the cover, insert the blade into the cover until it reaches the bottom, securing it with the same cover.

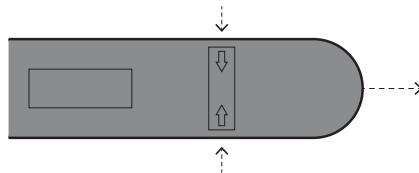


Power On/Off of the Machine

- To turn on the hedge trimmer, press the safety button (B) and the start button (A) simultaneously.
- To turn it off, release either one of the two buttons.

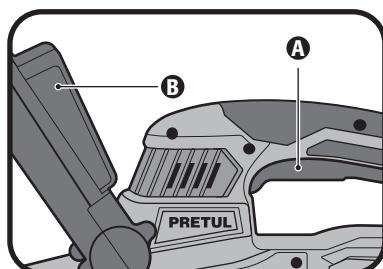



Cutting Tips

- To cut the top of a hedge uniformly, tie a string at the desired height of the hedge.
- Use a string as a reference to keep the blade at the same height throughout the cut.

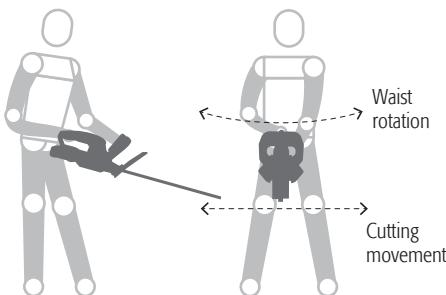

Basic Operation

- In addition to hedges, the hedge trimmer can also be used to cut shrubs.
- The best cut is achieved by placing the blade at an angle of approximately 15°.
- Opposing rotating blades cut on both sides, allowing for trimming the hedge in both directions.
- Trim the sides of the hedge with curved movements from bottom to top.

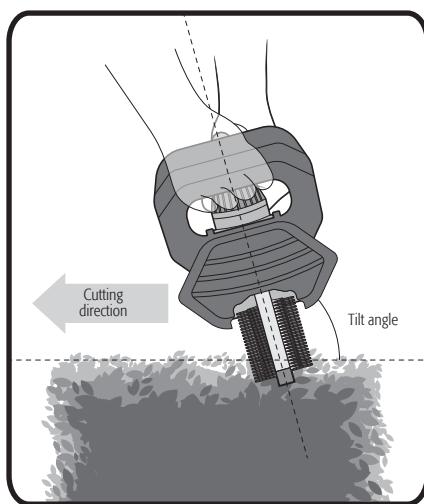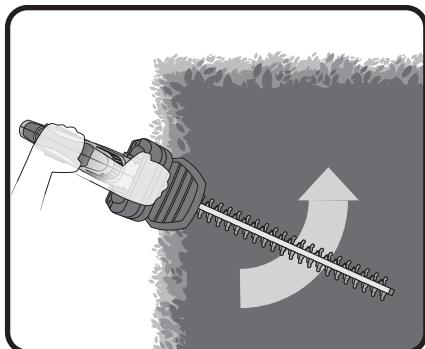

WARNING Always keep both hands on the tool handles.

WARNING Before cleaning and performing maintenance, always turn off the machine and remove the battery pack from the machine.

Cleaning and Care

- Clean the battery casings regularly with a soft cloth, preferably after each use.
- Ensure that the ventilation slots are free of dust and dirt. Remove persistent dust using a soft cloth dampened with water and soap.
- Do not use solvents such as gasoline, alcohol, ammonia, etc. Such chemicals can damage synthetic components.
- Periodically check the battery for any damage. If damaged, have the battery replaced at an authorized TRUPER Service Center.

Service

Tool service should only be performed at an authorized TRUPER Service Center. Service and maintenance performed by unqualified individuals can be dangerous and may cause personal injury, in addition to voiding the product warranty.

Troubleshooting

Environmental protection

WARNING Defective and/or discarded electrical or electronic devices should be collected at appropriate recycling facilities.

Cutting Blade

- Use gloves whenever handling or cleaning the cutting blade.
- Clean the cutting blade and spray it with a protective oil after each use. It is advisable to regularly lubricate the cutting blade with protective oil during extended periods of use.
- Visually inspect the condition of the cutting blade. Ensure that the screws are securely tightened to the cutting blade.
- Ensure that the blade guard is properly attached to the machine.

Storage

Store the hedge trimmer in a dry and secure place, out of reach of children. Do not place other objects on top of it.

Problem

Cause

Corrective action

The hedge trimmer loses efficiency.	<ul style="list-style-type: none">• Low battery.	<ul style="list-style-type: none">• Charge the battery.
The trigger can be pressed, but the machine does not operate.	<ul style="list-style-type: none">• The battery is fully discharged.• Safety switch not engaged.	<ul style="list-style-type: none">• Charge the battery.• Ensure you are pressing the safety switch.
The battery is leaking.	<ul style="list-style-type: none">• Normal minor dripping may occur in external temperatures or after heavy use.• Intense or very noticeable dripping is due to a damaged battery.	<ul style="list-style-type: none">• Clean any liquid immediately with water and soap from skin or clothing.• Replace the battery immediately.
The battery does not charge, and the charge level indicator light does not turn on.	<ul style="list-style-type: none">• Charger connection improperly installed on the battery.• Charger not properly connected to the power outlet.	<ul style="list-style-type: none">• Correctly insert the charger connection into the battery.• Check that the charger plug is securely connected to the power outlet.
The hedge trimmer heats up after extended periods of work.	<ul style="list-style-type: none">• Normal heating due to the energy absorption generated by the motor gears and electricity during operation.	<ul style="list-style-type: none">• Allow the hedge trimmer to cool for 5 minutes.
The battery heats up during operation.	<ul style="list-style-type: none">• Normal heating due to the energy extraction from the battery while the hedge trimmer is running causes it to heat up.	<ul style="list-style-type: none">• Stop the hedge trimmer for 5 minutes to let the battery cool.
The battery heats up during charging.	<ul style="list-style-type: none">• Normal heating due to chemical reactions occurring inside the battery during charging.	
The charger heats up during charging.	<ul style="list-style-type: none">• Normal heating due to voltage regulation.	

In the event of any problem contacting a Service Center, please see our webpage WWW.TRUPER.COM to get an updated list, or call our toll-free numbers 800 690-6990 or 800 018-7873 to get information about the nearest TRUPER Authorized Service Center.

AGUASCALIENTES	DE TODO PARA LA CONSTRUCCIÓN GRAL. BARRAGÁN #1201, COL. GREMIAL, C.P. 20030, AGUASCALIENTES, AGS. TEL.: 449 994 0537	MORELOS	FIX FERRETERÍAS CAPITÁN ANZURES #95, ESQ. JOSÉ PERDIZ, COL. CENTRO, C.P. 62740, CUAUTLA, MOR. TEL.: 735 352 8931
BAJA CALIFORNIA	SUCURSAL TIJUANA AV. LA ENCANTADA, LOTE #5, PARQUE INDUSTRIAL EL FLORIDO II, C.P. 22244, TIJUANA, B.C. TEL.: 664 969 5100	NAYARIT	HERRAMIENTAS DE TEPIC MAZATLÁN #117, COL. CENTRO, C.P. 63000, TEPIC, NAY. TEL.: 311 258 0540
BAJA CALIFORNIA SUR	FIX FERRETERÍAS FELIPE ÁNGELES ESQ. RUIZ CORTÍNEZ S/N, COL. PUEBLO NUEVO, C.P. 23670, CD. CONSTITUCIÓN, B.C.S. TEL.: 613 132 1115	NUEVO LEÓN	SUCURSAL MONTERREY CARRETERA LAREDO #500, 1B MONTERREY PARKS, COLONIA PUERTA DE ANÁHUAC, C.P. 66052, ESCOBEDO, NUEVO LEÓN, TEL.: 81 8352 8791 / 81 8352 8790
CAMPECHE	TORNILLERÍA Y FERRETERÍA A.AA AV. ÁLVARO OBREGÓN #524, COL. ESPERANZA C.P. 24080 CAMPECHE, CAMP. TEL.: 981 815 2808	OAXACA	FIX FERRETERÍAS AV. 20 DE NOVIEMBRE #910, COL. CENTRO, C.P. 68300, TUXTEPEC, OAX. TEL.: 287 106 3092
CHIAPAS	FIX FERRETERÍAS AV. CENTRAL SUR #27, COL. CENTRO, C.P. 30700, TAPACHULA, CHIS. TEL.: 962 118 4083	PUEBLA	SUCURSAL PUEBLA AV. PERIFERICO #2-A, SAN LORENZO ALMECATLA, C.P. 72710, CUAUTLA/CINGO, PUE. TEL.: 222 282 8282 / 84 / 85 / 86
CHIHUAHUA	SUCURSAL CHIHUAHUA AV. SILVESTRE TERRAZAS #128-11, PARQUE INDUSTRIAL BAFAR, CARRETERA MÉXICO CUAUHTÉMOC, C.P. 31415, CHIHUAHUA, CHIH. TEL.: 614 434 0052	QUERÉTARO	ARU HERRAMIENTAS S.A DE C.V. AV. PUERTO DE VERACRUZ #110, COL. RANCHO DE ENNEDIO, C.P. 76842, SAN JUAN DEL RÍO, QRO. TEL.: 427 268 4544
CIUDAD DE MÉXICO	FIX FERRETERÍAS EL MONSTRUO DE CORREGIDORA, CORREGIDORA # 35, COL. CENTRO, C.P. 06060, CUAUHTÉMOC, CDMX. TEL.: 55 5522 5031 / 5522 4861	QUINTANA ROO	FIX FERRETERÍAS CARRETERA FEDERAL MZ. 46 LT. 3 LOCAL 2, COL EJIDAL, C.P. 77710 PLATA DEL CARMEN, Q.R. TEL.: 984 267 3140
COAHUILA	SUCURSAL TORREÓN CALLE METAL MECÁNICA #280, PARQUE INDUSTRIAL ORIENTE, C.P. 27228, TORREÓN, COAH. TEL.: 871 209 68 23	SAN LUIS POTOSÍ	FIX FERRETERÍAS AV. UNIVERSIDAD #1850, COL. EL PASEO, C.P. 78320, SAN LUIS POTOSÍ, S.L.P. TEL.: 444 822 4341
COLIMA	BOMBAS Y MOTORES BYMTESA DE MANZANILLO BLVD. MIGUEL DE LA MADRID #190, COL. 16 DE SEPTIEMBRE, C.P. 28239, MANZANILLO, COL. TEL.: 314 332 1986 / 332 8013	SINALOA	SUCURSAL CULIACÁN AV. JESÚS KUMATE SUR #4301, COL. HACIENDA DE LA MORA, C.P. 80143, CULIACÁN, SIN. TEL.: 667 173 9139 / 173 8400
DURANGO	TORNILLOS ÁGUILA, S.A. DE C.V. MAZURIÓ #200, COL. LUIS ECHEVERRÍA, DURANGO, DGO.TEL.: 618 817 1946 / 618 818 2844	SONORA	FIX FERRETERÍAS CALLE 5 DE FEBRERO #517, SUR LT. 25 MZ. 10, COL. CENTRO, C.P. 85000, CD. OBREGÓN, SON. TEL.: 644 413 2392
ESTADO DE MÉXICO	SUCURSAL CENTRO JILOTEPEC PARQUE INDUSTRIAL # 1, COL. PARQUE INDUSTRIAL JILOTEPEC, JILOTEPEC, EDO. DE MÉX. C.P. 54257 TEL.: 761 782 9109 EXT. 5728 5102	TABASCO	SUCURSAL VILLAHERMOSA CALLE HELIO LOTES 1, 2 Y 3 MZ. #1, COL. INDUSTRIAL, 2A ETAPA, C.P. 86010, VILLAHERMOSA, TAB. TEL.: 993 353 7244
GUANAJUATO	CÍA. FERRETERA NUEVO MUNDO S.A. DE C.V. AV. MÉXICO - JAPÓN #225, CD. INDUSTRIAL, C.P. 38010, CELAYA, GTO. TEL.: 461 617 7578 / 79 / 80 / 88	TAMAULIPAS	VM ORINGS Y REFACCIONES CALLE ROSITA #527 ENTRE 20 DE NOVIEMBRE Y GRAL. RODRÍGUEZ, FRACC. REYNOSA, C.P. 88780, REYNOSA, TAMS. TEL.: 899 926 7552
GUERRERO	CENTRO DE SERVICIO ECLIPSE CALLE PRINCIPAL MZ.1 LT. 1, COL. SANTA FE, C.P. 39010, CHILPANCINGO, GRO. TEL.: 747 478 5793	TLAXCALA	SERVICIOS Y HERRAMIENTAS INDUSTRIALES PABLO SIDAR #132, COL. . BARRIO DE SAN BARTOLOMÉ, C.P. 90970, SAN PABLO DEL MONTE, TLAX. TEL.: 222 271 7502
HIDALGO	FERREPRECIOS S.A. DE C.V. LIBERTAD ORIENTE #304 LOCAL 30, INTERIOR DE PASAJE ROBLEDO, COL. CENTRO, C.P. 43600, TULANCINGO, HGO. TEL.: 775 753 6615 / 775 753 6616	VERACRUZ	LA CASA DISTRIBUIDORA TRUPER BLVD. PRIMAVERA, ESQ. HORTENSIA S/N, COL. PRIMAVERA C.P. 93308, POZA RICA, VER. TEL.: 782 823 8100 / 826 8484
JALISCO	SUCURSAL GUADALAJARA AV. ADOLFO B. HORN # 6800, COL: SANTA CRUZ DEL VALLE, C.P.: 45655, TLAJOMULCO DE ZUÑÍGA, JAL. TEL.: 33 3606 5285 AL 90	YUCATÁN	SUCURSAL MÉRIDA CALLE 33 #600 Y 602, LOCALIDAD ITZINCAB Y MULSAY, MPIO. UMÁN, C.P. 97390, MÉRIDA, YUC. TEL.: 999 912 2451
MICHOACÁN	FIX FERRETERÍAS AV. PASEO DE LA REPÚBLICA #3140-A, COL. EX-HACIENDA DE LA HUERTA, C.P. 58050, MORELIA, MICH. TEL.: 443 334 6858		

Code

28273

Model

CORI-20P

Brand**PRETUL**

Warranty. Duration: 1 year. Coverage: parts, components and workmanship against manufacturing or operating defects, except if used under conditions other than normal; when it was not operated in accordance with the instructive; was altered or repaired by personnel not authorized by TRUPER®. To make the warranty valid, present the product, stamped policy or invoice or receipt or voucher, in the establishment where you bought it or in Corregidora 35, Centro, Cuauhtémoc, CDMX, 06060, where you can also purchase parts, components, consumables and accessories. It includes the costs of transportation of the product that derive from its fulfillment of its service network. Phone number 800-018-7873. Made in China. Imported by TRUPER, S.A. de C.V. Parque Industrial 1, Parque Industrial Jilotepec, Jilotepec, Edo. de Méx. C.P. 54257, Phone number 761 782 9100.



Stamp of the business. Delivery date: