


A

No.	Código	Clave	Descripción
1	944493	R1-BOS-1LH	Interruptor tipo flotador
2	944494	R2-BOS-1LH	Protector de cable
3	944495	R3-BOS-1LH	Tornillo M5x16
4	944496	R4-BOS-1LH	Manija
5	944497	R5-BOS-1LH	Tornillo M5x14
6	944498	R6-BOS-1LH	Abrazadera para cable
7	944499	R7-BOS-1LH	Cable de alimentación
8	944500	R8-BOS-1LH	Cincho
9	944501	R9-BOS-1LH	Tornilo M8x10
10	944502	R10-BOS-1LH	Empaque Ø8
11	944503	R11-BOS-1LH	Cubierta superior
12	944504	R12-BOS-1LH	Tornillo M6x20
13	944505	R13-BOS-1LH	Arandela de presión Ø6
14	944506	R14-BOS-1LH	Capacitor 40F
15	944507	R15-BOS-1LH	Empaque Ø35x3.1
16	944508	R16-BOS-1LH	Capuchón I
17	944509	R17-BOS-1LH	Capuchón II
18	944510	R18-BOS-1LH	Protector de polvo
19	944511	R19-BOS-1LH	Terminal de ojillo
20	944512	R20-BOS-1LH	Tornillo M4x8
21	944513	R21-BOS-1LH	Arandela de presión Ø4
22	944514	R22-BOS-1LH	Arandela de seguridad Ø4
23	944515	R23-BOS-1LH	Base de balero superior
24	944516	R24-BOS-1LH	Sello Ø96
25	944517	R25-BOS-1LH	Arandela ondulada




A

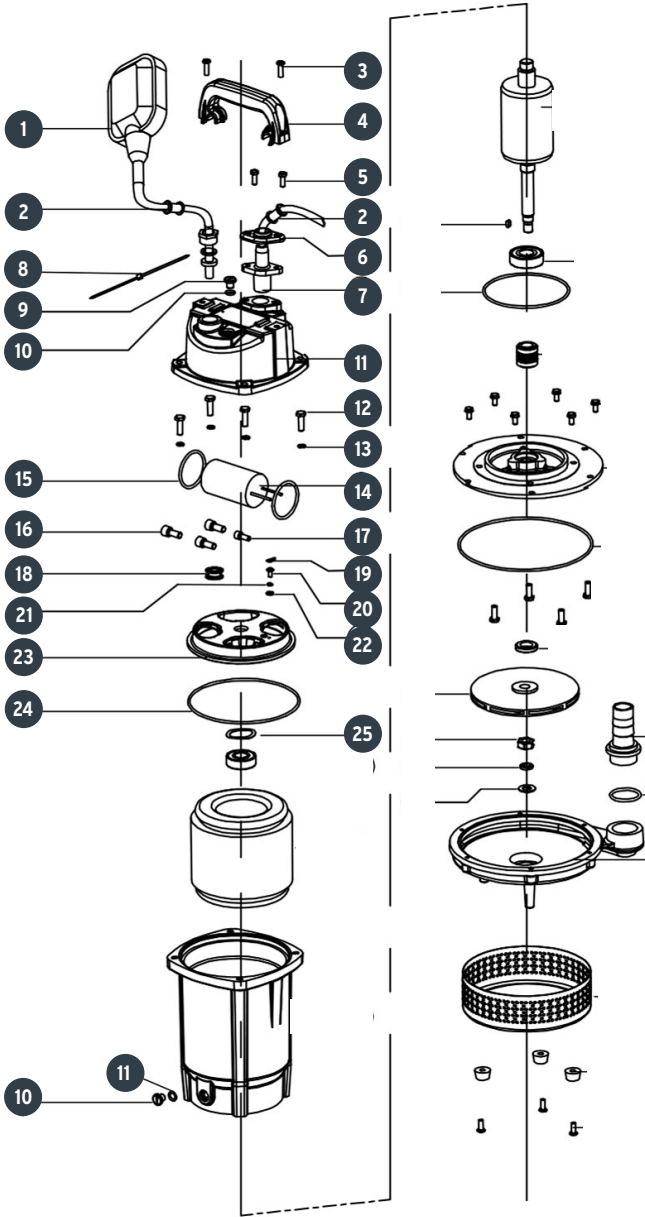

B

No.	Código	Clave	Descripción
26	944518	R26-BOS-1LH	Balero de bolas 6201
27	944519	R27-BOS-1LH	Campo
28	944520	R28-BOS-1LH	Rotor
29	944521	R29-BOS-1LH	Carcasa de motor
30	944522	R30-BOS-1LH	Cuñero
31	944523	R31-BOS-1LH	Balero de bolas 6203
32	944524	R32-BOS-1LH	Sello Ø70x2.65
33	944525	R33-BOS-1LH	Sello mecánico
34	944526	R34-BOS-1LH	Tornillo M5x12
35	944527	R35-BOS-1LH	Tapa de la cámara
36	944528	R36-BOS-1LH	Sello Ø110
37	944529	R37-BOS-1LH	Tornillo M5x20
38	944530	R38-BOS-1LH	Retén
39	944531	R39-BOS-1LH	Impulsor
40	944532	R40-BOS-1LH	Tuerca M10
41	944533	R41-BOS-1LH	Arandela de presión Ø10
42	944534	R42-BOS-1LH	Arandela plana Ø10.5
43	944535	R43-BOS-1LH	Conector de manguera
44	944536	R44-BOS-1LH	Sello Ø35x3.1
45	944537	R45-BOS-1LH	Base
46	944538	R46-BOS-1LH	Filtro
47	944539	R47-BOS-1LH	Patas
48	944540	R48-BOS-1LH	Tornillo M5x18

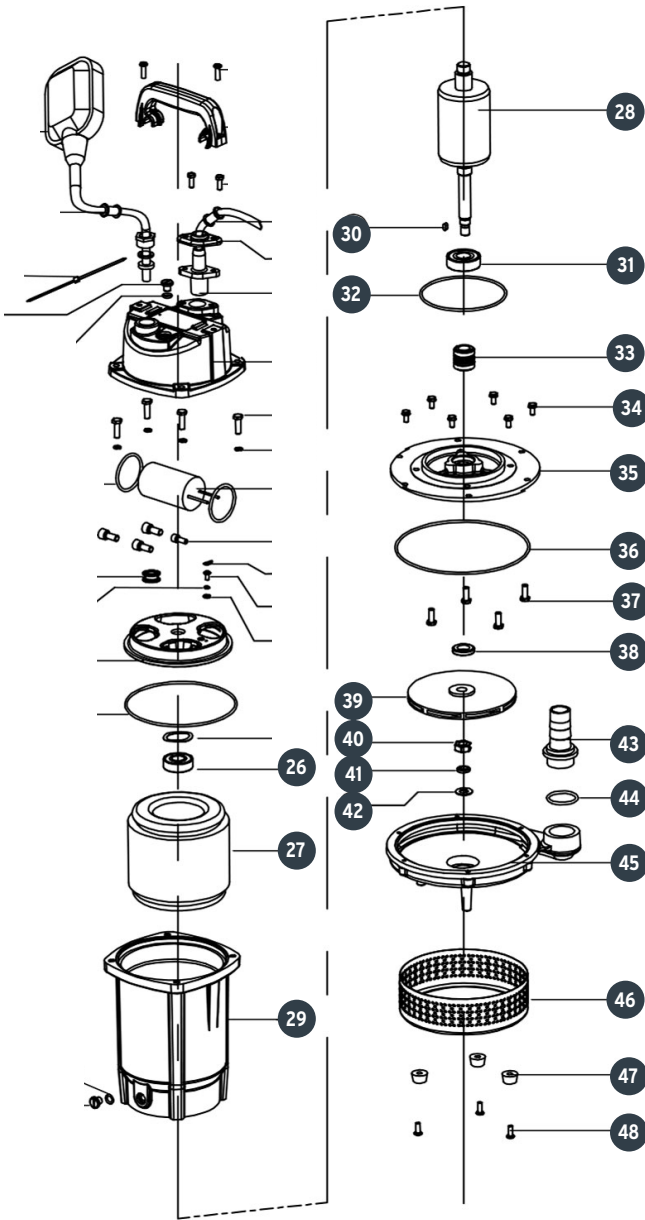

B

