


A

No.	Código	Clave	Descripción
1	909799	R1-BOAC-2	Tapón de drenado
2	909800	R2-BOAC-2	Empaque de hule Ø8.2
3	909801	R3-BOAC-2	Tapa antipolvo
4	909802	R4-BOAC-2	Cubierta de bomba
5	909803	R5-BOAC-2	Tuerca hexagonal M10
6	909804	R6-BOAC-2	Rondana de presión Ø10
7	909805	R7-BOAC-2	Rondana plana Ø10
8	909806	R8-BOAC-2	Impulsor
9	909807	R9-BOAC-2	Sello mecánico
10	909808	R10-BOAC-2	Anillo sellador
11	909809	R11-BOAC-2	Cubierta de soporte de bomba
12	909810	R12-BOAC-2	Tornillo hexagonal M6x28 mm
13	909811	R13-BOAC-2	Sello
14	909812	R14-BOAC-2	Soporte de bomba
15	909813	R15-BOAC-2	Rondana plana Ø10
16	909814	R16-BOAC-2	Tornillo hexagonal M10x28 mm
17	909815	R17-BOAC-2	Balero de bolas 6204Z
18	909816	R18-BOAC-2	Cuña 5x14mm
19	909817	R19-BOAC-2	Rotor
20	909818	R20-BOAC-2	Anillo "C" Ø20
21	909819	R21-BOAC-2	Rondana ondulada Ø47
22	909820	R22-BOAC-2	Tapa antipolvo
23	909821	R23-BOAC-2	Tapón de drenado
24	909822	R24-BOAC-2	Perno 5x22mm
25	909823	R25-BOAC-2	Soporte

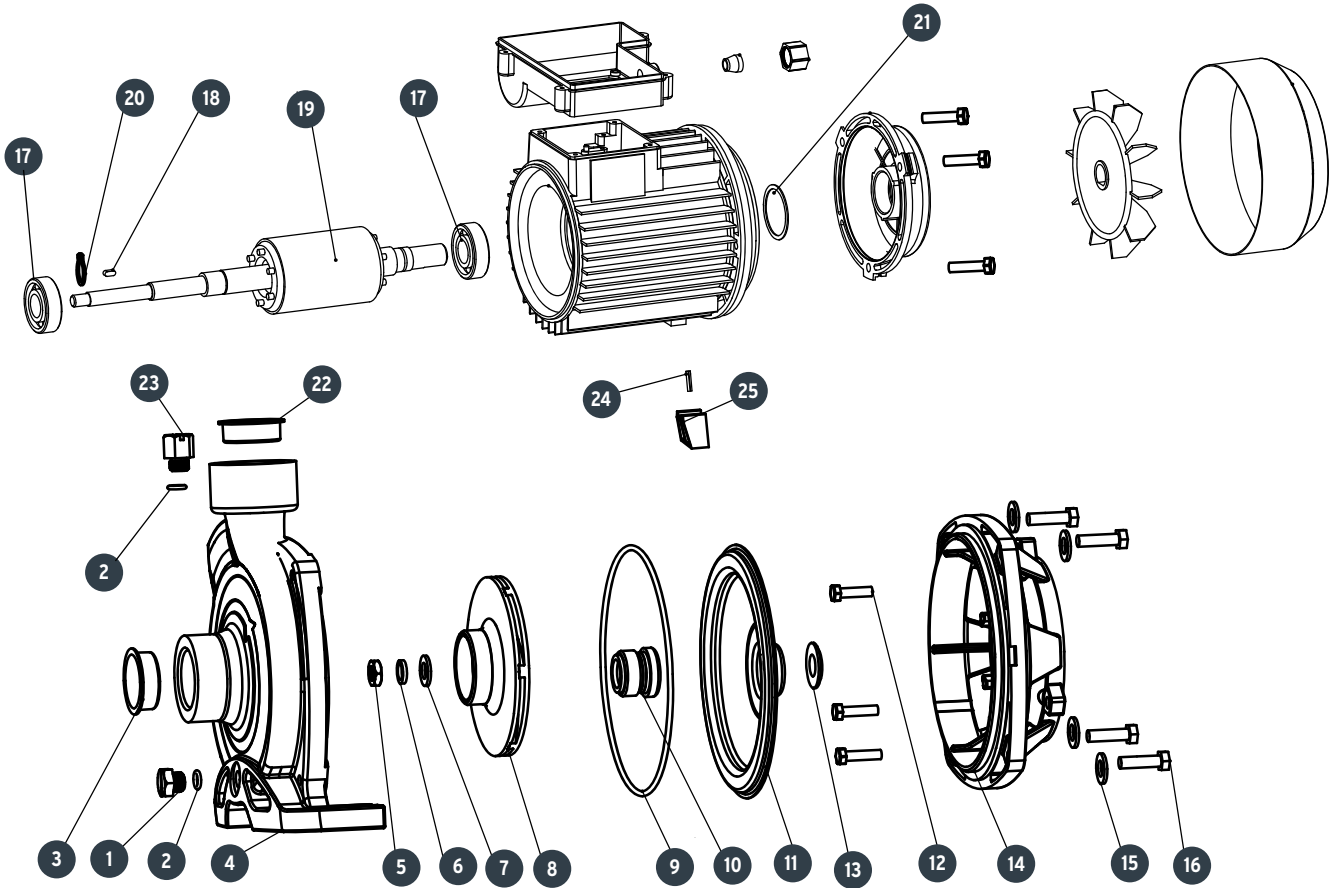


A



B

No.	Código	Clave	Descripción
26	909824	R26-BOAC-2	Tornillo hex. M6x32mm
27	909825	R27-BOAC-2	Campo
28	909826	R28-BOAC-2	Rondana plana Ø4
29	909827	R29-BOAC-2	Tuerca hexagonal M4
30	909828	R30-BOAC-2	Tornillo pan M4x8mm
31	909829	R31-BOAC-2	Rondana plana Ø4
33	909830	R33-BOAC-2	Tuerca hexagonal M4
34	909831	R34-BOAC-2	Caja de capacitores
35	909832	R35-BOAC-2	Capacitor de arranque 50 F
36	909833	R36-BOAC-2	Capacitor de trabajo 45 F
37	909834	R37-BOAC-2	Cubierta superior
38	909835	R38-BOAC-2	Tornillo pan M4x16 mm
39	909836	R39-BOAC-2	Buje de hule
40	909837	R40-BOAC-2	Protector de cable
41	909838	R41-BOAC-2	Cable de alimentación
42	909839	R42-BOAC-2	Tornillo pan M4x14mm
43	909840	R43-BOAC-2	Opresor de cable
44	909841	R44-BOAC-2	Tornillo pan M4x6mm
45	909842	R45-BOAC-2	Rondana de presión Ø4
46	909843	R46-BOAC-2	Rondana dentada Ø4
47	909844	R47-BOAC-2	Cubierta trasera
48	909845	R48-BOAC-2	Tornillo hexagonal M6x30 mm
49	909846	R49-BOAC-2	Ventilador
50	909847	R50-BOAC-2	Cubierta de ventilador

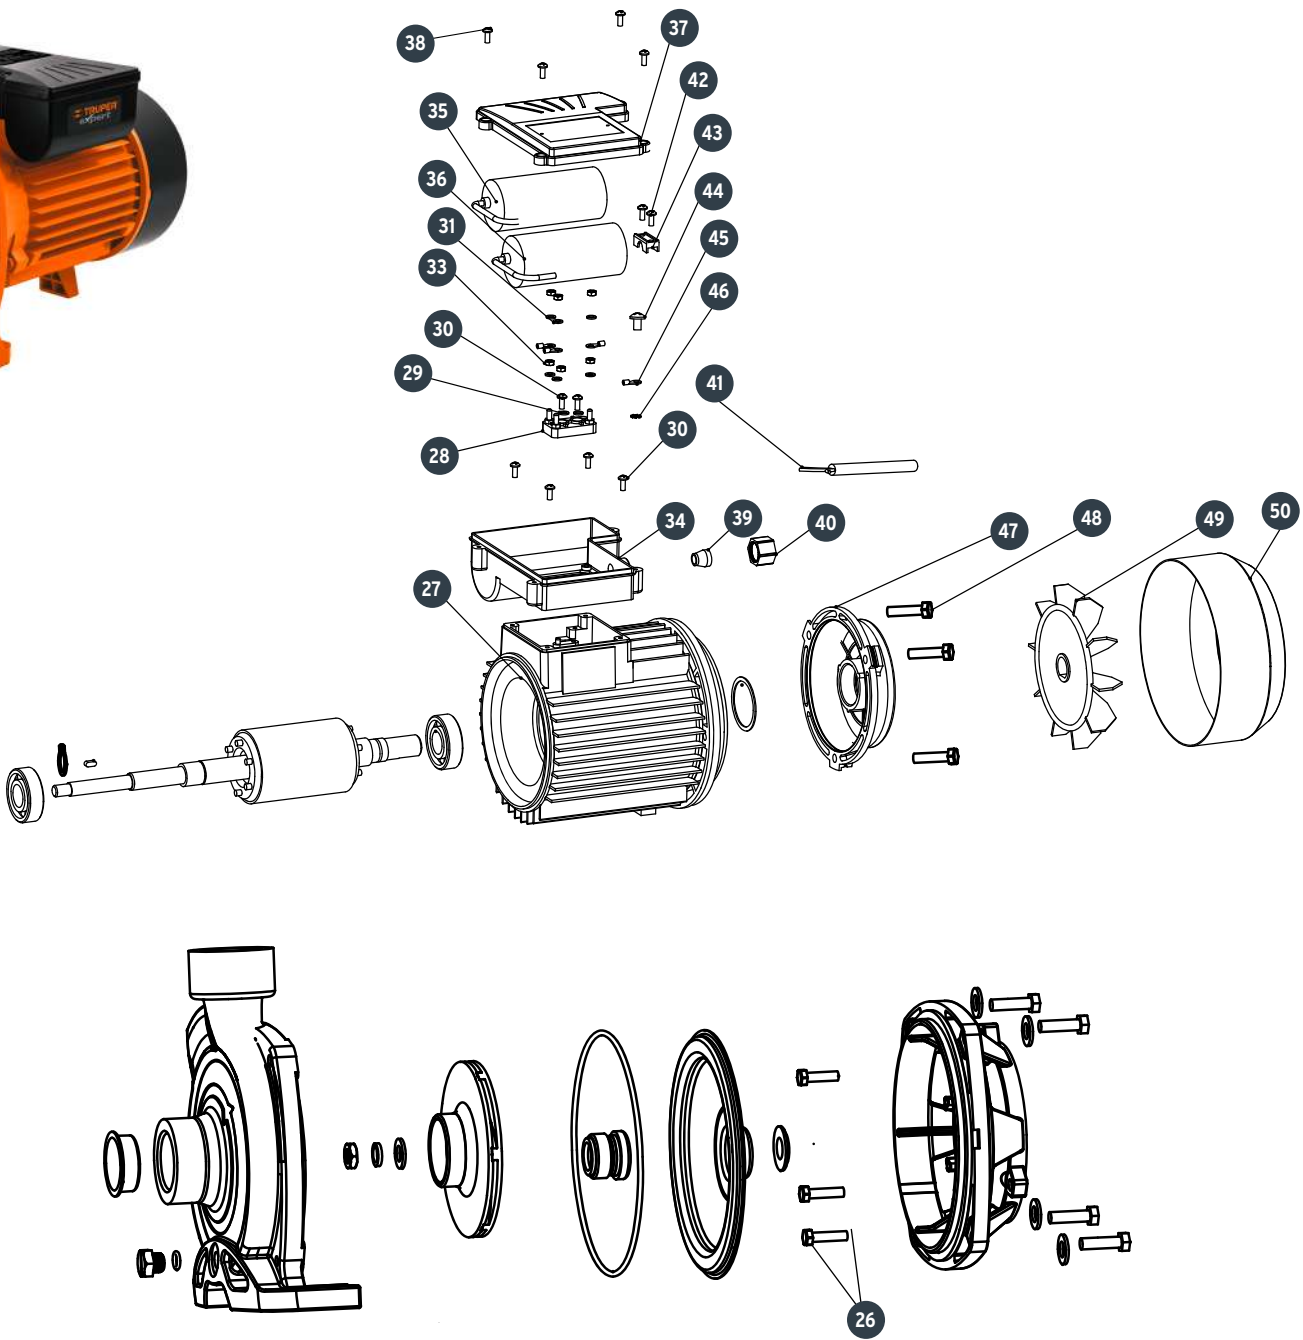

B