


A

No.	Código	Clave	Descripción
1	99305	R1-BOAP-3/4	Tornillo
2	99306	R2-BOAP-3/4	Cubierta de bomba
3	99307	R3-BOAP-3/4	Tapón de llenado
4	99308	R4-BOAP-3/4	Anillo sellador
5	99309	R5-BOAP-3/4	Impulsor
6	99310	R6-BOAP-3/4	Seguro
7	99311	R7-BOAP-3/4	Rondana
8	99312	R8-BOAP-3/4	Sello mecánico
9	99313	R9-BOAP-3/4	Anillo sellador
10	99314	R10-BOAP-3/4	Sello
11	99315	R11-BOAP-3/4	Tornillo
12	99316	R12-BOAP-3/4	Soporte de bomba
13	99317	R13-BOAP-3/4	Balero de bolas 6202
14	99318	R14-BOAP-3/4	Cuña
15	99319	R15-BOAP-3/4	Rotor
16	99320	R16-BOAP-3/4	Balero de bolas 6202
17	99321	R17-BOAP-3/4	Arandela ondulada
18	99322	R18-BOAP-3/4	Cubierta superior
19	99323	R19-BOAP-3/4	Conector de terminales
20	99324	R20-BOAP-3/4	Campo

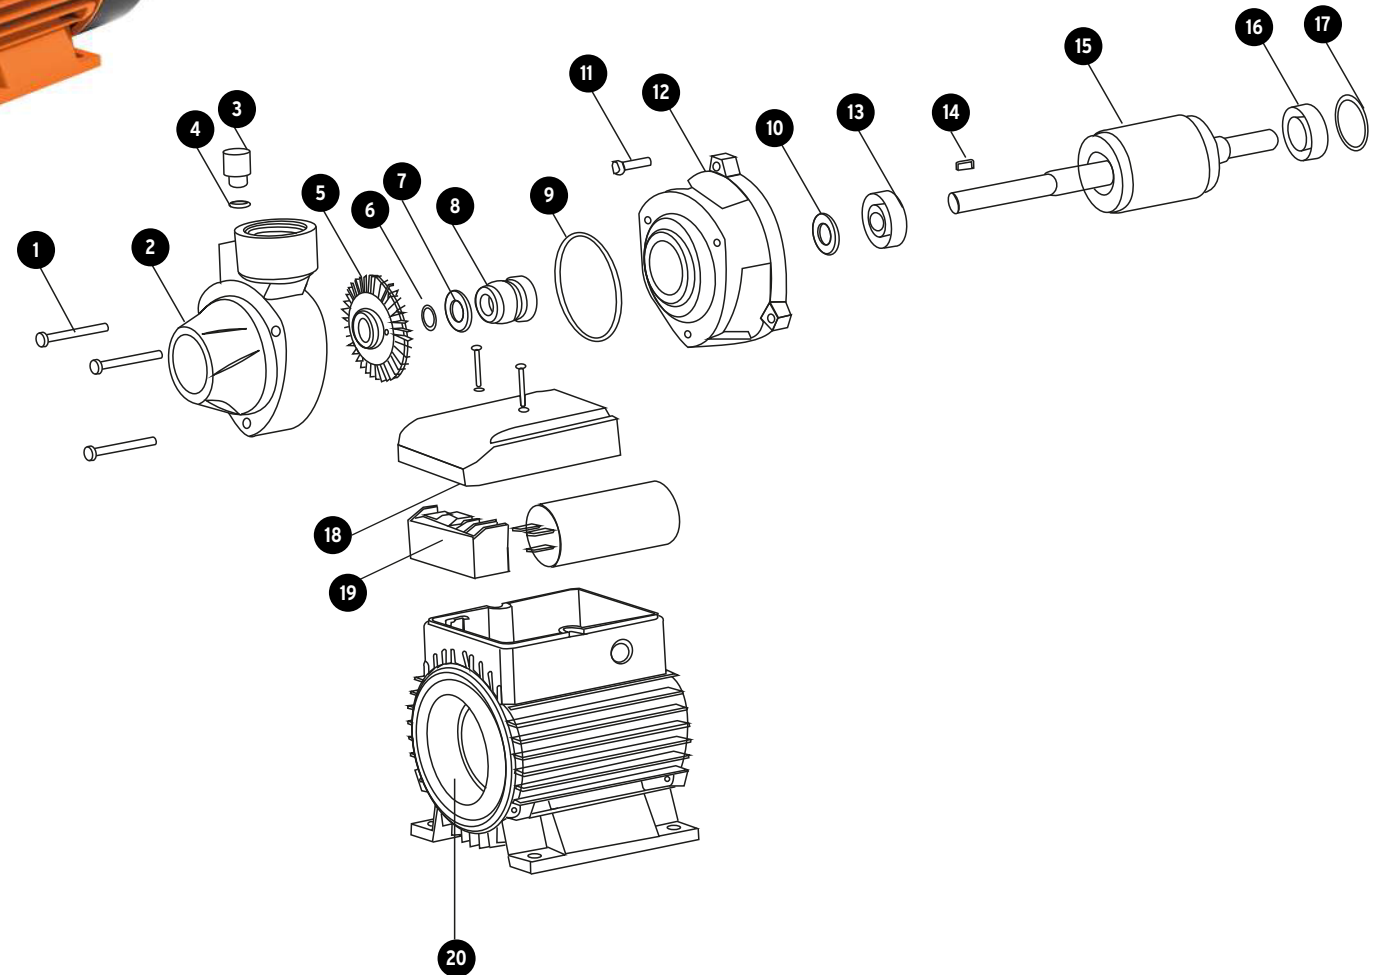

A

**B**

No.	Código	Clave	Descripción
21	99325	R21-BOAP-3/4	Protector de cable
22	99326	R22-BOAP-3/4	Cubierta trasera
23	99327	R23-BOAP-3/4	Tornillo
24	99328	R24-BOAP-3/4	Ventilador
25	99329	R25-BOAP-3/4	Cubierta de ventilador
26	99330	R26-BOAP-3/4	Tornillo
27	99331	R27-BOAP-3/4	Capacitor
28	99332	R28-BOAP-3/4	Tornillo
29	99333	R29-BOAP-3/4	Opresor de cable
30	99334	R30-BOAP-3/4	Anillo sellador
31	99335	R31-BOAP-3/4	Tornillo de conexión a tierra
32	99336	R32-BOAP-3/4	Rondana dentada
33	99337	R33-BOAP-3/4	Cable de alimentación



**B**

