

No.	Código	Clave	Descripción
1	947491	R1-MAX-20LS	Tornillo cbz phillips M4x18
2	947492	R2-MAX-20LS	Tapa de insercciones
3	947493	R3-MAX-20LS	Junta de ailsmiento
4	947494	R4-MAX-20LS	Sello de eje de salida
5	947495	R5-MAX-20LS	Arandela para eje
6	947496	R6-MAX-20LS	Eje de impacto
7	947497	R7-MAX-20LS	Manga del grupo de imapacto B
8	947498	R8-MAX-20LS	Engrane de planetario
9	947499	R9-MAX-20LS	Perno M4x10
10	947500	R10-MAX-20LS	Cremallera
11	947501	R11-MAX-20LS	Seguro cremallera
12	947502	R12-MAX-20LS	Arandela M17
13	947503	R13-MAX-20LS	Balero bolas 6902 RS
14	947504	R14-MAX-20LS	Cubierta de balero
15	947505	R15-MAX-20LS	Sello empaque Ø16
16	947506	R16-MAX-20LS	Anillo empaque
17	947507	R17-MAX-20LS	Ensamble de rotor
21	947508	R21-MAX-20LS	Pantalla transparente
22	947509	R22-MAX-20LS	Rejilla de ventilación
23	947510	R23-MAX-20LS	Mascara transparente
24	947511	R24-MAX-20LS	Boton de nivel de bateria
25	947512	R25-MAX-20LS	Conexion rapida
26	947513	R26-MAX-20LS	Resorte de soporte
27	947514	R27-MAX-20LS	Tarheta de control
28	947515	R28-MAX-20LS	Interruptor
29	947516	R29-MAX-20LS	Barra de sentido de rotacion
30	947517	R30-MAX-20LS	Jgo de carcasa izq. y der.
31	947518	R31-MAX-20LS	Tuerca M4
34	947519	R34-MAX-20LS	Tapa trasera
35	947520	R35-MAX-20LS	Tornillo cbz hexagonal S3x14
36	947521	R36-MAX-20LS	Escudo protector
37	947522	R37-MAX-20LS	Anillo limitador

