


A

No.	Código	Clave	Descripción
2	952786	R2-PREM-1/2	Adaptador para control aut.
5	952787	R5-PREM-1/2	Tornillo hex.M5.5x94
5.1	952788	R5.1-PREM-1/2	Arandela plana diam 6x12x1
5.2	952789	R6-PREM-1/2	Arandela de presión diam 6
6	952790	R6-PREM-1/2	Cuerpo de bomba
8	952791	R8-PREM-1/2	Sello de hule diam.120x130x5
9	952792	R9-PREM-1/2	Carcasa de bomba
10	952793	R10-PREM-1/2	TapónM13x9
11	952794	R11-PREM-1/2	Sello de hule diam 10.5x2
12	952795	R12-PREM-1/2	Tuerca M10
13	952796	R13-PREM-1/2	Arandela de presión diam 10
14	952797	R14-PREM-1/2	Base soporte
15	952798	R15-PREM-1/2	Impulsor
16	952799	R16-PREM-1/2	Difusor
17	952800	R17-PREM-1/2	Tapa de difusor
18	952801	R18-PREM-1/2	Soporte de bomba
19	952802	R19-PREM-1/2	Tornillo ST4x16
20	952803	R20-PREM-1/2	Capacitor 25uF

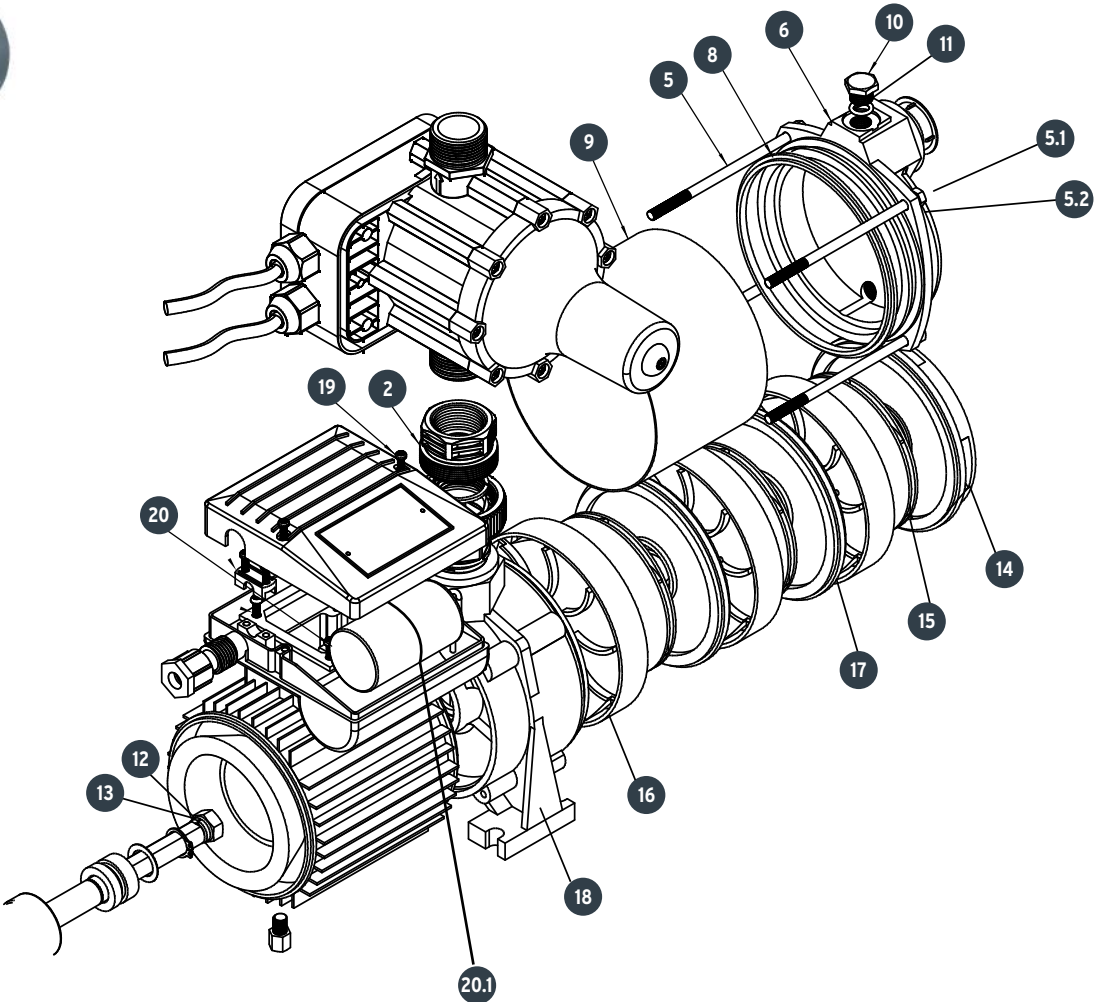


A



B

No.	Código	Clave	Descripción
20.1	952804	R20.1-PREM-1/2	Sello de hule diam. 31x37x3
21	952805	R21-PREM-1/2	Opresor
22	952806	R22-PREM-1/2	Tableta de conexiones
23	952807	R23-PREM-1/2	Tuerca M4
24	952808	R24-PREM-1/2	Arandela plana diam. 4x9x1
25	952809	R25-PREM-1/2	Tornillo M4x8
26	952810	R26-PREM-1/2	Cable de alimentación
26.1	952811	R26.1-PREM-1/2	Cable para conexión electronico
26.2	952812	R26.2-PREM-1/2	Tornillo cbz. phill. para tierra M4x4
27	952813	R27-PREM-1/2	Ensamble de caja
27.1	952814	R27.1-PREM-1/2	Tornillo cbz. phillips M4x10
28	952815	R28-PREM-1/2	Campo
29	952816	R29-PREM-1/2	Pata M8x25
30	952817	R30-PREM-1/2	Seguro "C" diam.15x19x1
31	952818	R31-PREM-1/2	Sello mecanico
32	952819	R32-PREM-1/2	alero 6203
33	952820	R33-PREM-1/2	Rotor
34	952821	R34-PREM-1/2	Balero 6202
35	952822	R35-PREM-1/2	Arandela ondulada diam. 27x34x.3
36	952823	R36-PREM-1/2	Tornillo hex. M5x138
37	952824	R37-PREM-1/2	Tornillo cbz. phillips M4x4
38	952825	R38-PREM-1/2	Cubierta trasera
39	952826	R39-PREM-1/2	Ventilador
40	952827	R40-PREM-1/2	Cubierta de ventilador

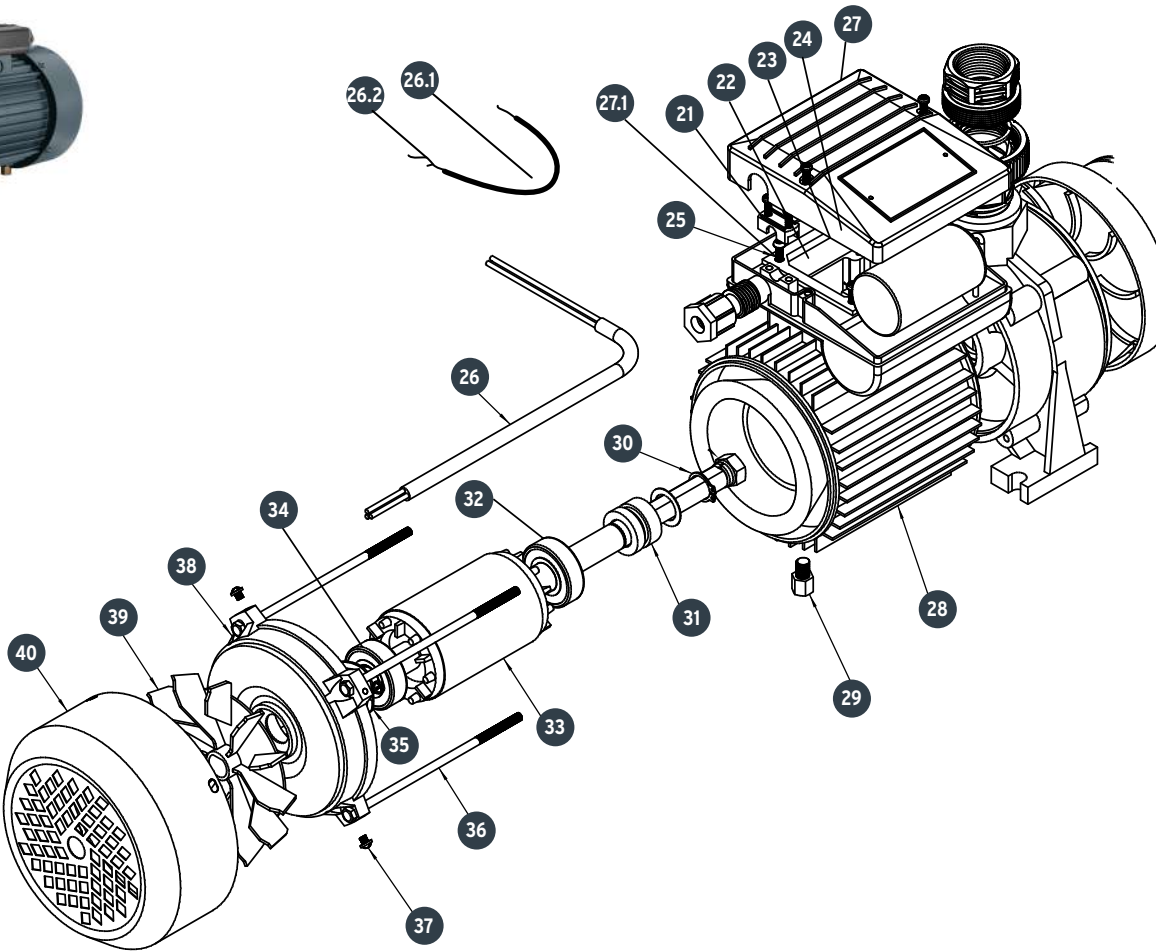

B