


A

No.	Código	Clave	Descripción
2	952517	R2-PREM-1	Adaptador para control aut.
5	952518	R5-PREM-1	Tornillo hex.M5.5x120
5.1	952519	R5.1-PREM-1	Arandela plana diam 6x12x1
5.2	952520	R5.2-PREM-1	Arandela de presión diam 6
6	952521	R6-PREM-1	Cuerpo de bomba
8	952522	R8-PREM-1	Sello de hule diam.120x130x5
9	952523	R9-PREM-1	Carcasa de bomba
10	952524	R10-PREM-1	Tapón M13x9
11	952525	R11-PREM-1	Sello de hule diam 10.5x2
12	952526	R12-PREM-1	Tuerca M10
13	952527	R13-PREM-1	Arandela plana diam 10x20x1.5
14	952528	R14-PREM-1	Base soporte
15	952529	R15-PREM-1	Impulsor
16	952530	R16-PREM-1	Difusor
17	952531	R17-PREM-1	Tapa de difusor
18	952532	R18-PREM-1	Soporte de bomba
19	952533	R19-PREM-1	Tornillo cbz. phillips St4x16
20	952534	R20-PREM-1	Capacitor 50uF

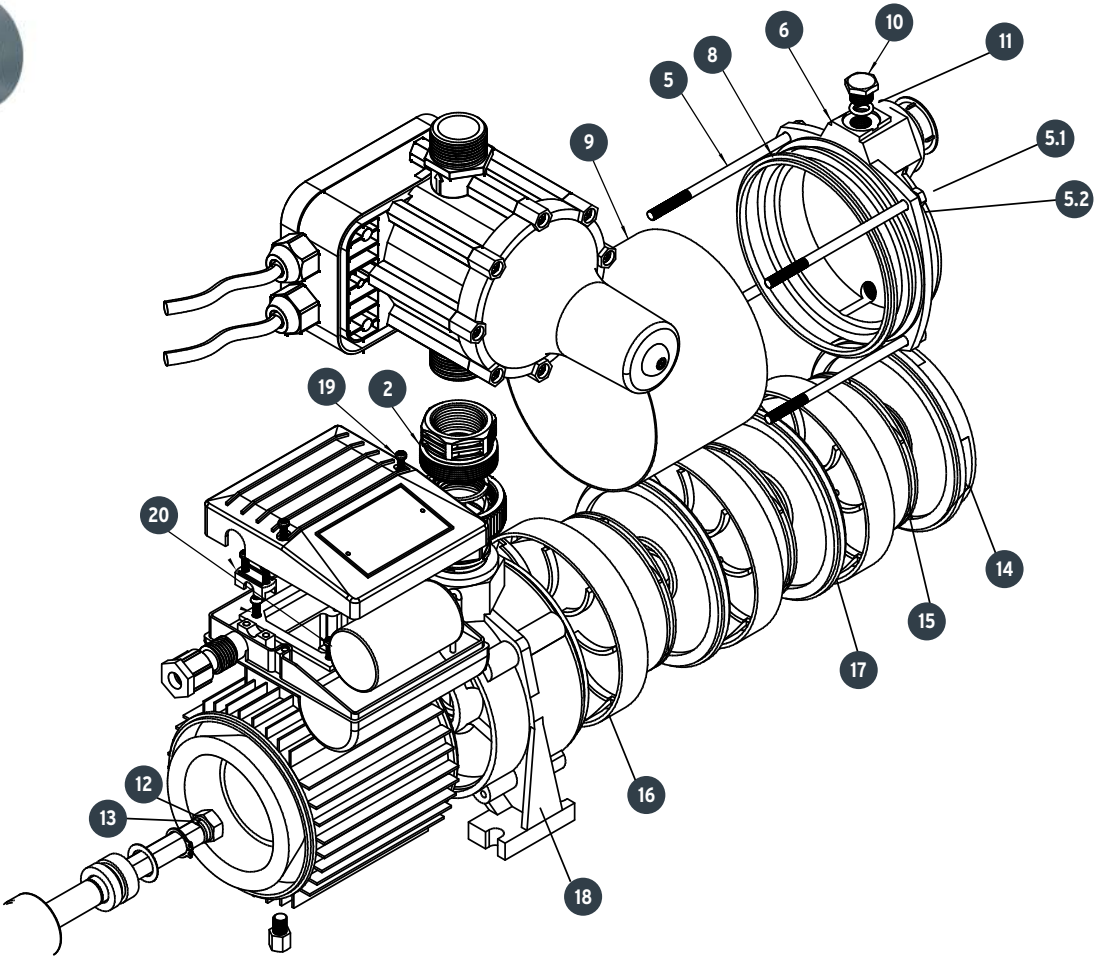


A



B

No.	Código	Clave	Descripción
21	952535	R21-PREM-1	Opresor
22	952536	R22-PREM-1	Tableta de conexiones
23	952537	R23-PREM-1	Tuerca M4
24	952538	R24-PREM-1	Arandela plana diam. 4x9x1
25	952539	R25-PREM-1	Tornillo M4x8
26.1	952540	R26.1-PREM-1	Cable para conexión electronico
27	952541	R27-PREM-1	Ensamble de caja
27.1	952542	R27.1-PREM-1	Tornillo cbz. phillips 4x10
28	952543	R28-PREM-1	Campo con carcasa
29	952544	R29-PREM-1	Pata M8x20
30	952545	R30-PREM-1	Seguro"C" diam. 15x19x1
31	952546	R31-PREM-1	Arandela plana diam. 16x22x1
32	952547	R32-PREM-1	Sello mecanico
33	952548	R33-PREM-1	Balero 6203
34	952549	R34-PREM-1	Rotor
35	952550	R35-PREM-1	Balero 6202
36	952551	R36-PREM-1	Arandela ondulada diam. 27x34x.3
37	952552	R37-PREM-1	Tornillo hex. M5x120
38	952553	R38-PREM-1	Tornillo cbz. phillips M4x4
39	952554	R39-PREM-1	Cubierta trasera
40	952555	R40-PREM-1	Ventilador
41	952556	R41-PREM-1	Cubierta de ventilador

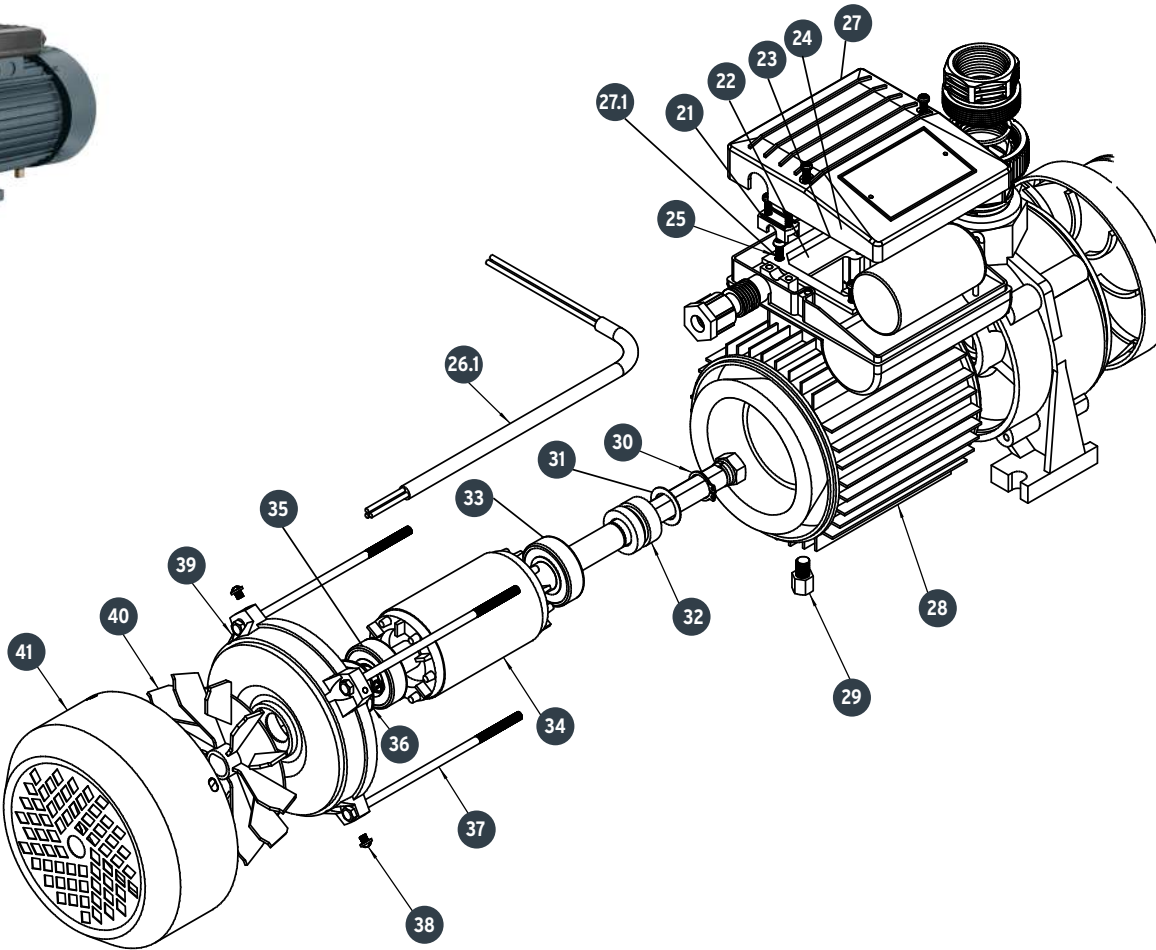

B

