


A

No.	Código	Clave	Descripción
2	952713	R2-PREM-1-1/3	Adaptador para control aut.
5	952714	R5-PREM-1-1/3	Tornillo hex.M5.5x145
5.1	952715	R5.1-PREM-1-1/3	Arandela plana diam 6x12x1
5.2	952716	R5.2-PREM-1-1/3	Arandela de presión diam 6
6	952717	R6-PREM-1-1/3	Cuerpo de bomba
8	952718	R8-PREM-1-1/3	Sello de hule diam.120x130x5
9	952719	R9-PREM-1-1/3	Carcasa de bomba
10	952720	R10-PREM-1-1/3	Tapón M13x9
11	952721	R11-PREM-1-1/3	Sello de hule diam 10.5x2
12	952722	R12-PREM-1-1/3	Tuerca M10
13	952723	R13-PREM-1-1/3	Arandela plana diam. 10x20x1.5
14	952724	R14-PREM-1-1/3	Base soporte
15	952725	R15-PREM-1-1/3	Impulsor
16	952726	R16-PREM-1-1/3	Difusor
17	952727	R17-PREM-1-1/3	Tapa de difusor
18	952728	R18-PREM-1-1/3	Soporte de bomba
19	952729	R19-PREM-1-1/3	Tornillo cbz. phillips St4x16
20	952730	R20-PREM-1-1/3	Capacitor 50uF




A

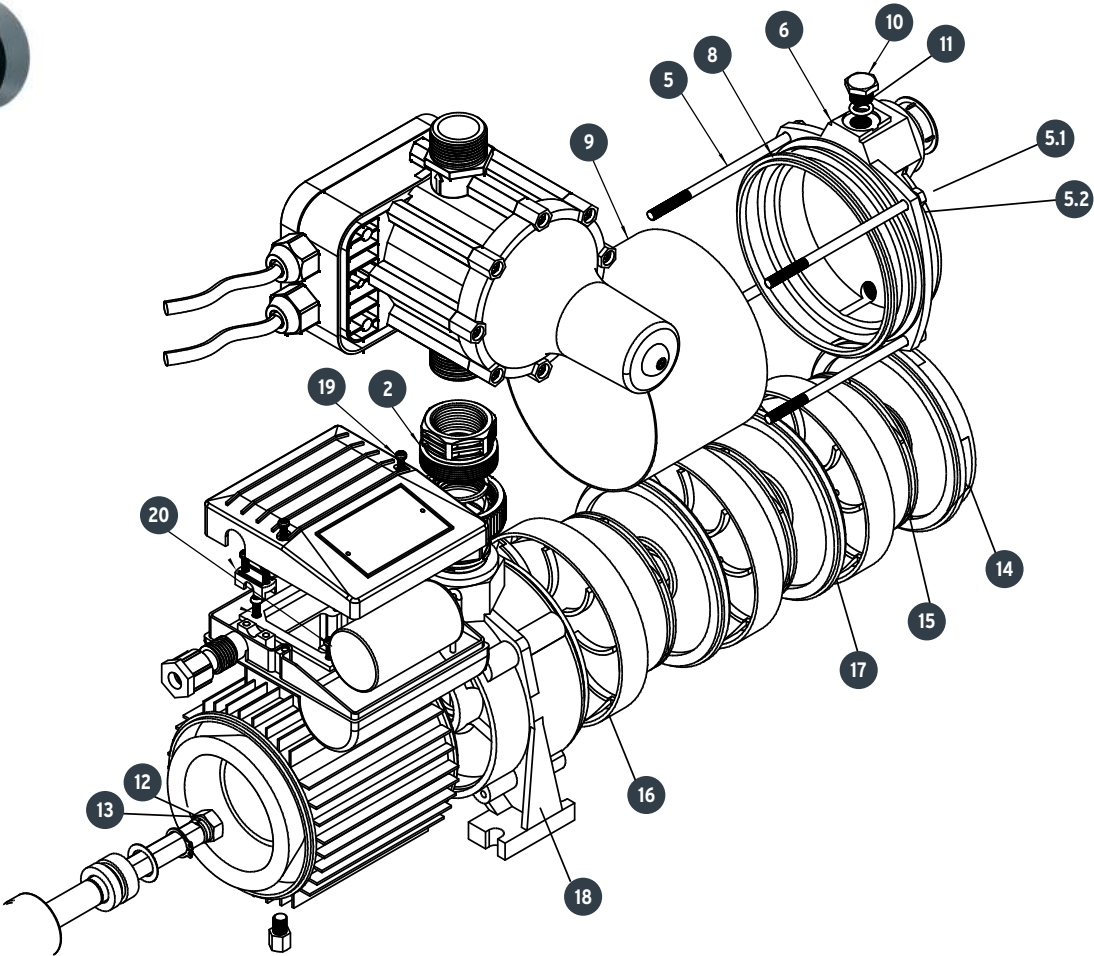

B

No.	Código	Clave	Descripción
21	952731	R21-PREM-1-1/3	Opresor
22	952732	R22-PREM-1-1/3	Tableta de conexiones
23	952733	R23-PREM-1-1/3	Tuerca M4
24	952734	R24-PREM-1-1/3	Arandela plana diam. 4x9x1
25	952735	R25-PREM-1-1/3	Tornillo M4x8
26	952736	R26-PREM-1-1/3	Cable de alimentación
26.1	952737	R26.1-PREM-1-1/3	Cable para conexión electronico
27	952738	R27-PREM-1-1/3	Ensamble de caja
27.1	952739	R27.1-PREM-1-1/3	Tornillo cbz. phillips 4x10
28	952740	R28-PREM-1-1/3	Campo
29	9527414	R29-PREM-1-1/3	Pata M8x20
30	952742	R30-PREM-1-1/3	Seguro"C" diam. 15x19x1
31	952743	R31-PREM-1-1/3	Arandela plana diam. 16x22x1
32	952744	R32-PREM-1-1/3	Sello mecanico
33	952745	R33-PREM-1-1/3	Balero 6203
34	952746	R34-PREM-1-1/3	Rotor
35	952747	R35-PREM-1-1/3	Balero 6202
36	952748	R36-PREM-1-1/3	Arandela ondulada diam. 27x34x.3
37	952749	R37-PREM-1-1/3	Tornillo hex. M5x138
38	952750	R38-PREM-1-1/3	Tornillo cbz. phillips M4x4
39	952751	R39-PREM-1-1/3	Cubierta trasera
40	952752	R40-PREM-1-1/3	Ventilador
41	952753	R41-PREM-1-1/3	Cubierta de ventilador

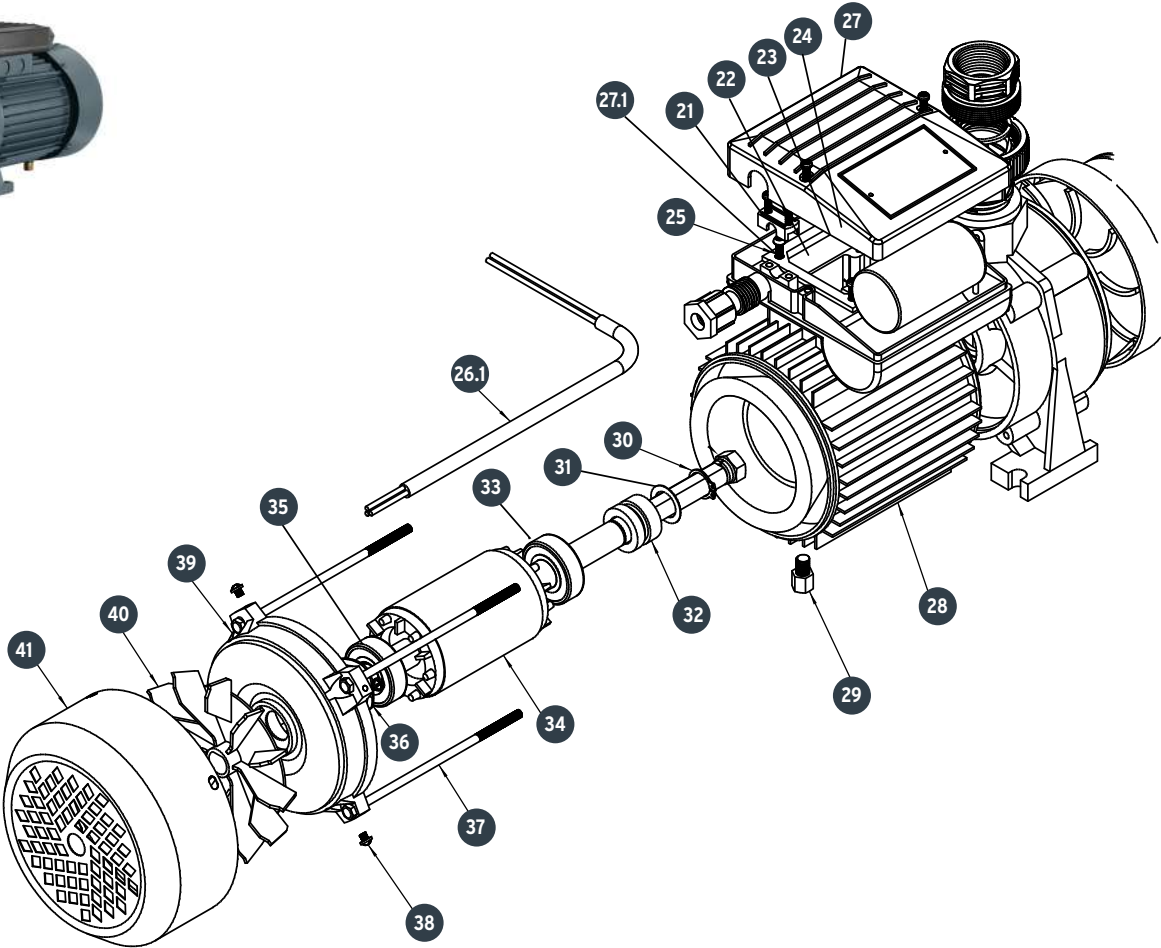

B

