


A

No.	Código	Clave	Descripción
1	950715	R1-MAX-40C	Tornillo cbz. torx 4x16
2	950716	R2-MAX-40C	Cubierta inferior del chasis
3	950717	R3-MAX-40C	Soporte
4	950718	R4-MAX-40C	Baja resistencia
5	950719	R5-MAX-40C	Resorte para el interruptor
6	950720	R6-MAX-40C	botón de dirección
7	950721	R7-MAX-40C	Manija del interruptor
8	950722	R8-MAX-40C	Resorte
9	950723	R9-MAX-40C	Varilla de empuje
10	9507724	R10-MAX-40C	Micro interruptor
11	950725	R11-MAX-40C	Cubierta inferior giratoria
12	950726	R12-MAX-40C	Almohadilla a prueba de golpes
13	950727	R13-MAX-40C	Pad enchufable
14	950728	R14-MAX-40C	Tornillo 3x10
15	950729	R15-MAX-40C	Manga del amortiguador
16	950730	R16-MAX-40C	Motor
17	950731	R17-MAX-40C	Inductor cuadrado
18	950732	R18-MAX-40C	Tornillo cuadrado 5x18
19	950733	R19-MAX-40C	Engrane tipo piñón
20	950734	R20-MAX-40C	Engrane de torre

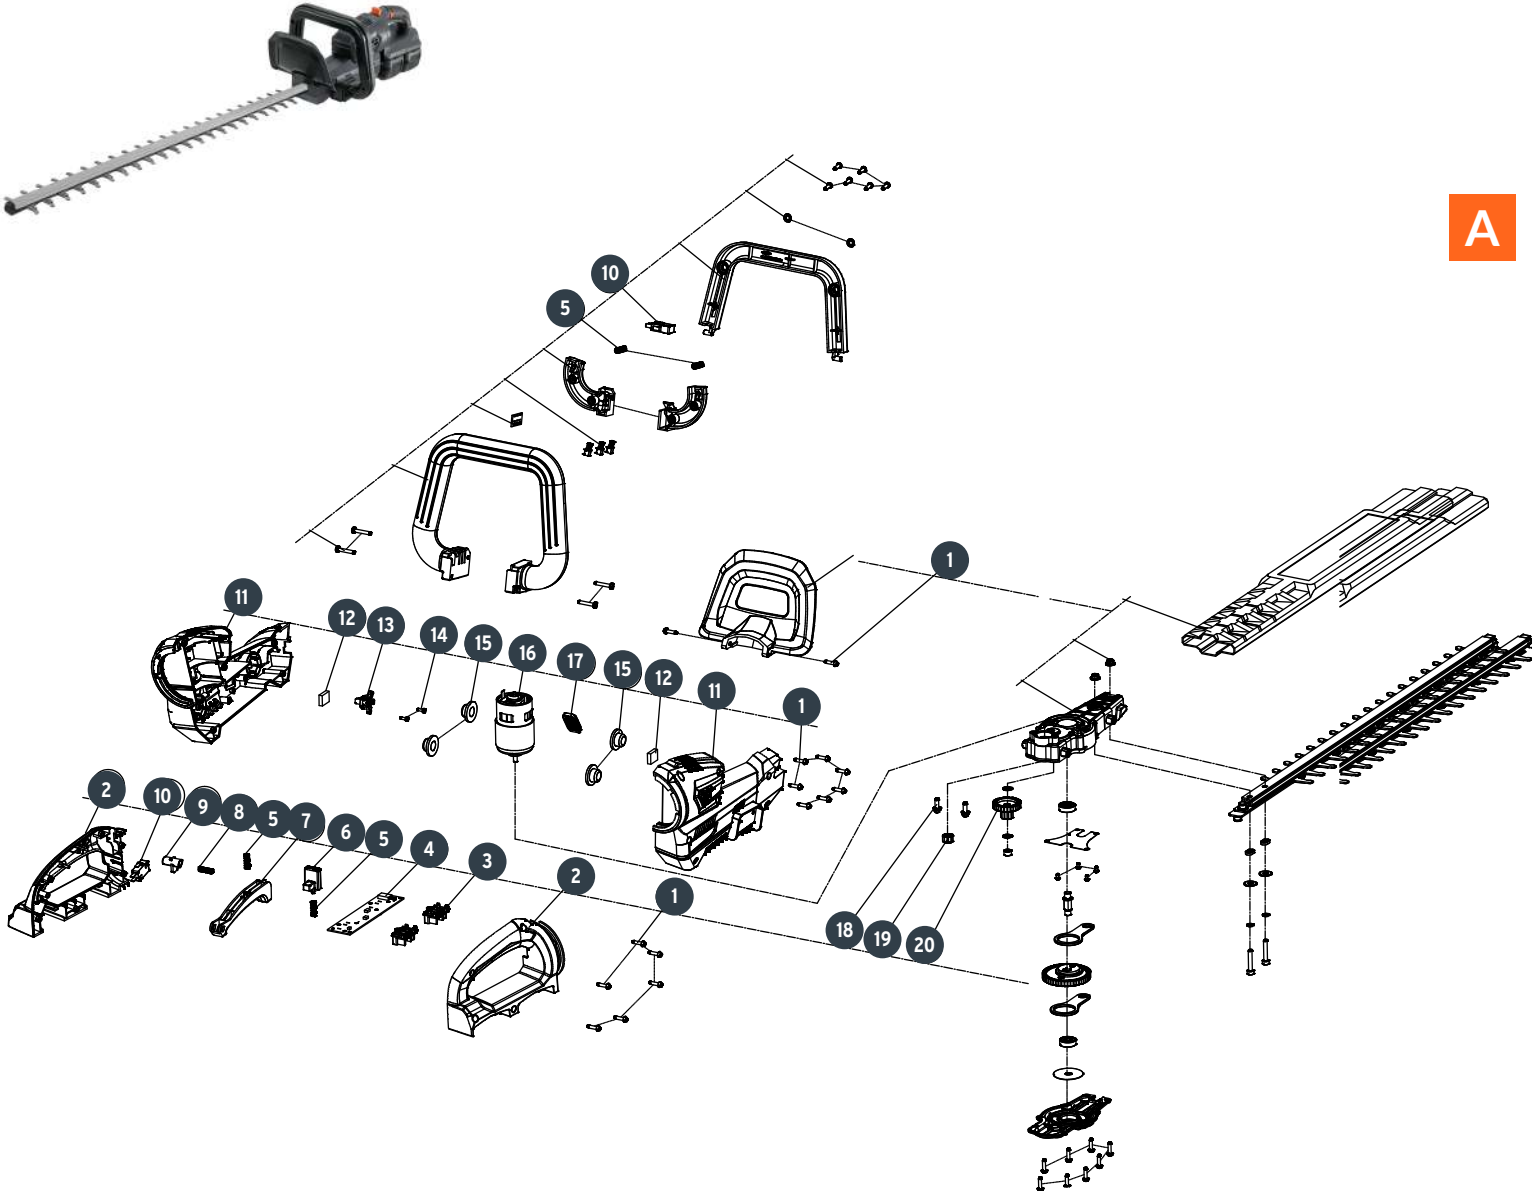


A



B

No.	Código	Clave	Descripción
21	950735	R21-MAX-40C	Arandela 6x11x.5
22	950736	R22-MAX-40C	Buje 6x10x6
23	950737	R23-MAX-40C	Arandela 6x14x1
24	950738	R24-MAX-40C	Balero 608
25	950739	R25-MAX-40C	Escudo delgado
26	950740	R26-MAX-40C	Tornillo 3x6
27	950741	R27-MAX-40C	Eje de transmisión
28	950742	R28-MAX-40C	Biela
29	950743	R29-MAX-40C	Engrane grande
30	950744	R30-MAX-40C	Arandela 8x40x.5
31	950745	R31-MAX-40C	Tapa de la caja de cambios
32	950746	R32-MAX-40C	Tornillo 3.5x16
33	950747	R33-MAX-40C	Tornillo hex. interno 5x30
34	950748	R34-MAX-40C	Arandela de presión Ø5
35	950749	R35-MAX-40C	Arandela 5x16x1.5
36	950750	R36-MAX-40C	Casquillo de la cuchilla
37	950751	R37-MAX-40C	Ensamble de cuchillas
38	950752	R38-MAX-40C	Manga del cortador
39	950753	R39-MAX-40C	Tuerca M5
41	950754	R41-MAX-40C	Freno
42	950755	R42-MAX-40C	Tornillo Torx 4x30
43	950756	R43-MAX-40C	Mango
44	950757	R44-MAX-40C	Tablero de conmutadores
45	950758	R45-MAX-40C	Prospecto de la batería
46	950759	R46-MAX-40C	Base de mango izq. y der.
47	950760	R47-MAX-40C	Botón de la manija
48	950761	R48-MAX-40C	Arandela 5x11x.5

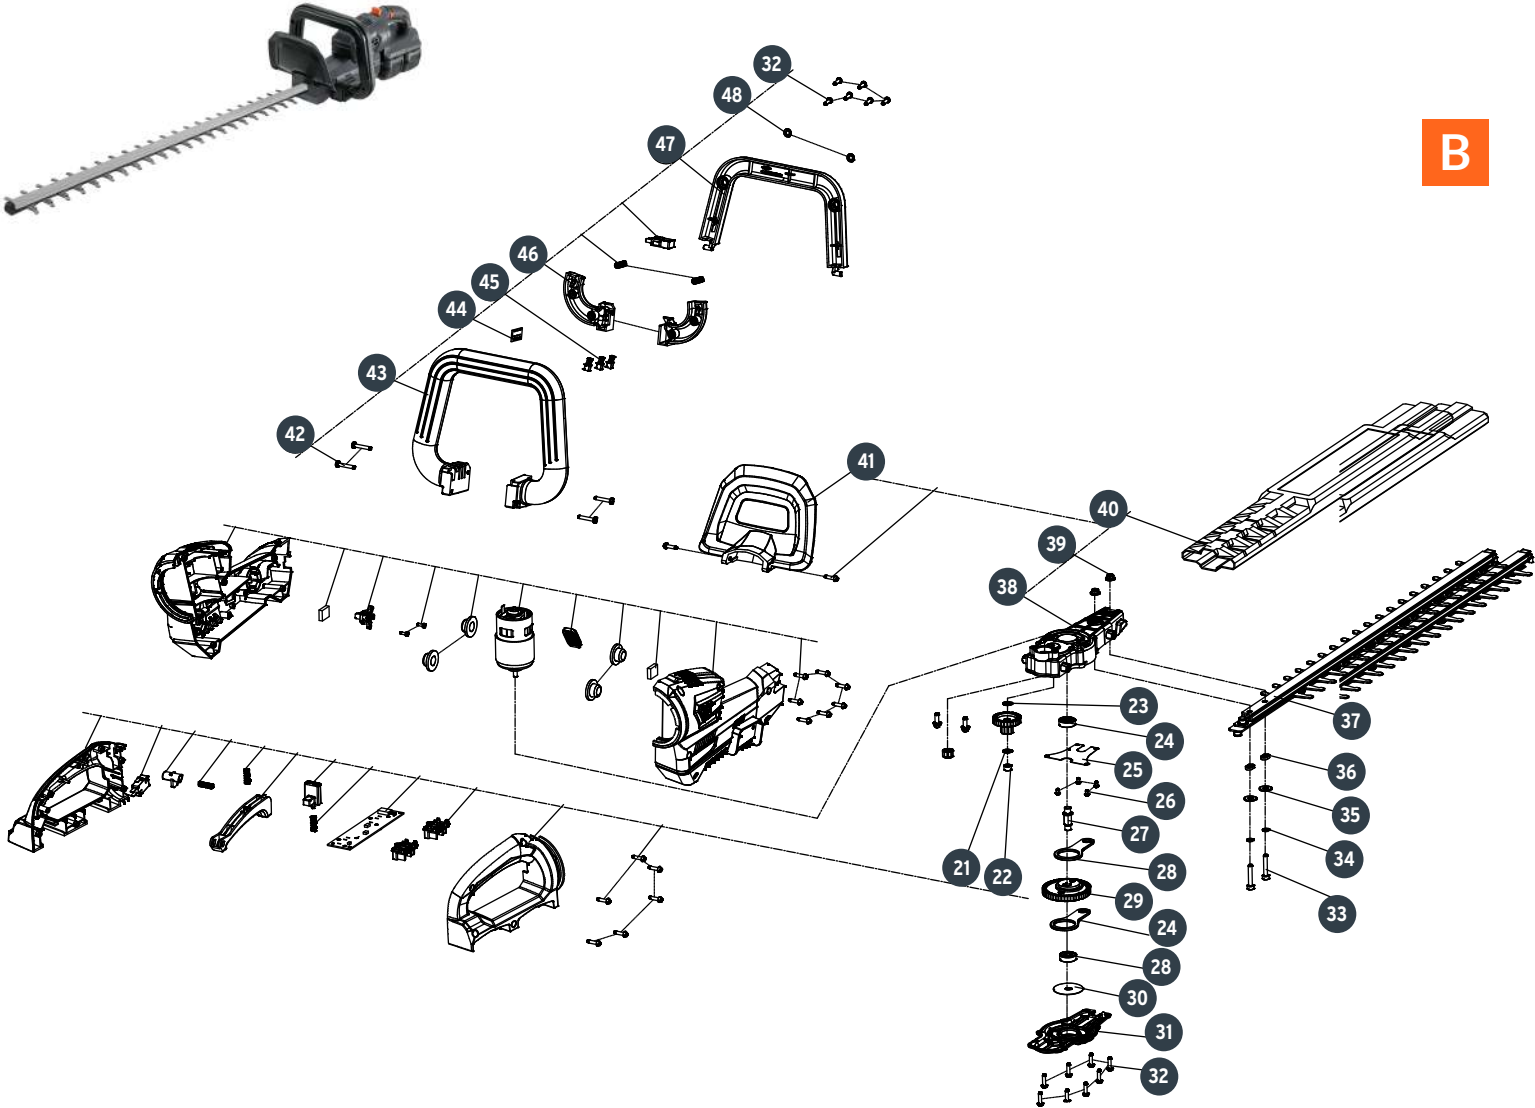

B

