

No.	Código	Clave	Descripción
1	962351	R1-BOAP-1/2A2C	Control de presión
2	962352	R2-BOAP-1/2A2C	Conjunto de conector
3	962353	R3-BOAP-1/2A2C	Tornillo de llenado (M10X8)
4	962354	R4-BOAP-1/2A2C	Sello (Ø7.5XØ13X2.8)
5	962355	R5-BOAP-1/2A2C	Tornillo hexagonal (M5X35)
6	962356	R6-BOAP-1/2A2C	Carcasa de bomba con soporte
8	962357	R8-BOAP-1/2A2C	Sello de cuerpo de bomba (Ø57XØ63X3)
9	962358	R9-BOAP-1/2A2C	Seguro C (Ø11.5xØ14x1)
10	962359	R10-BOAP-1/2A2C	Arandela plana (Ø12.5XØ20X1)
11	962360	R11-BOAP-1/2A2C	Sello mecánico
13	962361	R13-BOAP-1/2A2C	Tornillo hexagonal (M5X18)
15	962362	R15-BOAP-1/2A2C	Guarda de polvo
17	962363	R17-BOAP-1/2A2C	Conjunto de campo con carcasa
18	962364	R18-BOAP-1/2A2C	Balero de bolas 6201
19	962365	R19-BOAP-1/2A2C	Cuñero (Ø4X6)
20	962366	R20-BOAP-1/2A2C	Rotor
22	962367	R22-BOAP-1/2A2C	Tapa de motor
23	962368	R23-BOAP-1/2A2C	Ventilador
24	962369	R24-BOAP-1/2A2C	Tapa de ventilador
25	962370	R25-BOAP-1/2A2C	Tornillo hexagonal (M5X16)
26	962371	R26-BOAP-1/2A2C	Arandela ondulada (Ø24.5XØ31X0.5)
27	962372	R27-BOAP-1/2A2C	Seguro "E" (Ø11XØ22X1)
29	962373	R29-BOAP-1/2A2C	Protector de cable
30	962374	R30-BOAP-1/2A2C	Tornillo Phillips (M4x10)
31	962375	R31-BOAP-1/2A2C	Sello del capacitor (Ø31XØ37X3)
32	962376	R32-BOAP-1/2A2C	Tapa de conexiones
33	962377	R33-BOAP-1/2A2C	Opresor de cable
34	962378	R34-BOAP-1/2A2C	Capacitor 20µF
35	962379	R35-BOAP-1/2A2C	Tornillo Phillips (M4x32)



Todos los códigos los puedes adquirir en los Centros de Servicio Autorizado TRUPER o llamando al 800-018-7873

