


A

No.	Código	Clave	Descripción
1	924248	R1-IMP-1/2N	Caja de engrane
2	924249	R2-IMP-1/2N	Sello
3	924250	R3-IMP-1/2N	Buje de rodamiento
4	924251	R4-IMP-1/2N	Arandela
5			Balín
6	924252	R5-IMP-1/2N	Resorte
7			Ensamble yunque
8	924253	R8-IMP-1/2N	Impactador
9	924254	R9-IMP-1/2N	Balín Ø4.5
10	924255	R10-IMP-1/2N	Arandela
11	924256	R11-IMP-1/2N	Resorte
12	924257	R12-IMP-1/2N	Engrane
13	924258	R13-IMP-1/2N	Flecha
14	924259	R14-IMP-1/2N	Balín Ø7
15	924260	R15-IMP-1/2N	Sello
16	924261	R16-IMP-1/2N	Arandela
17	924262	R17-IMP-1/2N	Eje
18	924263	R18-IMP-1/2N	Cubierta de caja de engranes
19	924264	R19-IMP-1/2N	Empaque
20	924265	R20-IMP-1/2N	Engrane
20.1	924266	R20.1-IMP-1/2N	Balero de agujas
21	924267	R21-IMP-1/2N	Rodamiento Ø10
22	924268	R22-IMP-1/2N	Pija
22.10	924269	R22.10-IMP-1/2N	Arandela
23	924270	R23-IMP-1/2N	Balero de bolas 6001
24	924271	R24-IMP-1/2N	Armadura

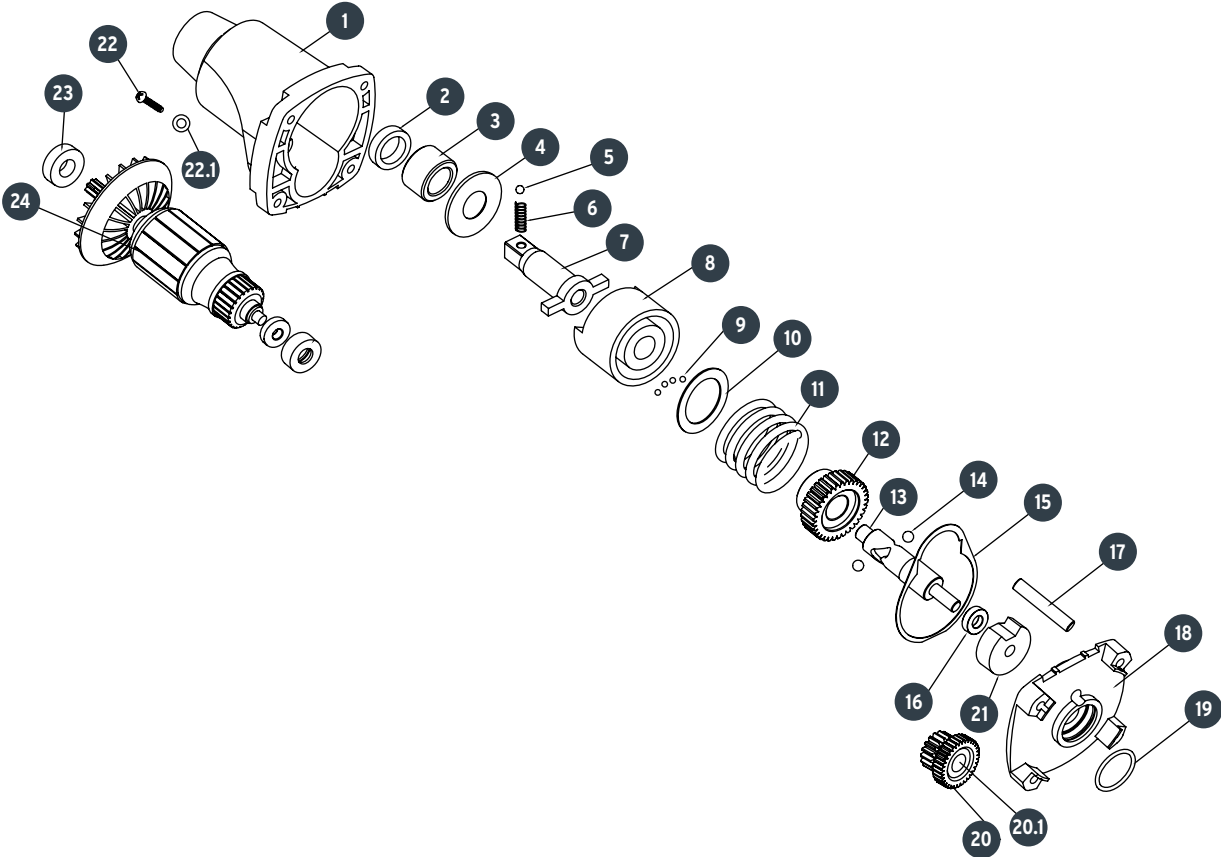


A



B

No.	Código	Clave	Descripción
29	924272	R29-IMP-1/2N	Arnés
30	924273	R30-IMP-1/2N	Balero de bolas
31	924274	R31-IMP-1/2N	Cubierta de balero
32	924275	R32-IMP-1/2N	Deflector
33	924276	R33-IMP-1/2N	Pija
34	924277	R34-IMP-1/2N	Terminal de ojillo
35	924278	R35-IMP-1/2N	Campo
36	924279	R36-IMP-1/2N	Botón de encendido
37	924280	R37-IMP-1/2N	Interruptor de encendido
38	924281	R38-IMP-1/2N	Carcasa
40	924282	R40-IMP-1/2N	Carcasa frontal
42	924283	R42-IMP-1/2N	Opresor de cable
43	924284	R43-IMP-1/2N	Pija
44	924285	R44-IMP-1/2N	Mango de goma
45	924286	R45-IMP-1/2N	Carcasa trasera
46	924287	R46-IMP-1/2N	Pija
47	924288	R47-IMP-1/2N	Protector de cable
48	924289	R48-IMP-1/2N	Cable de alimentación

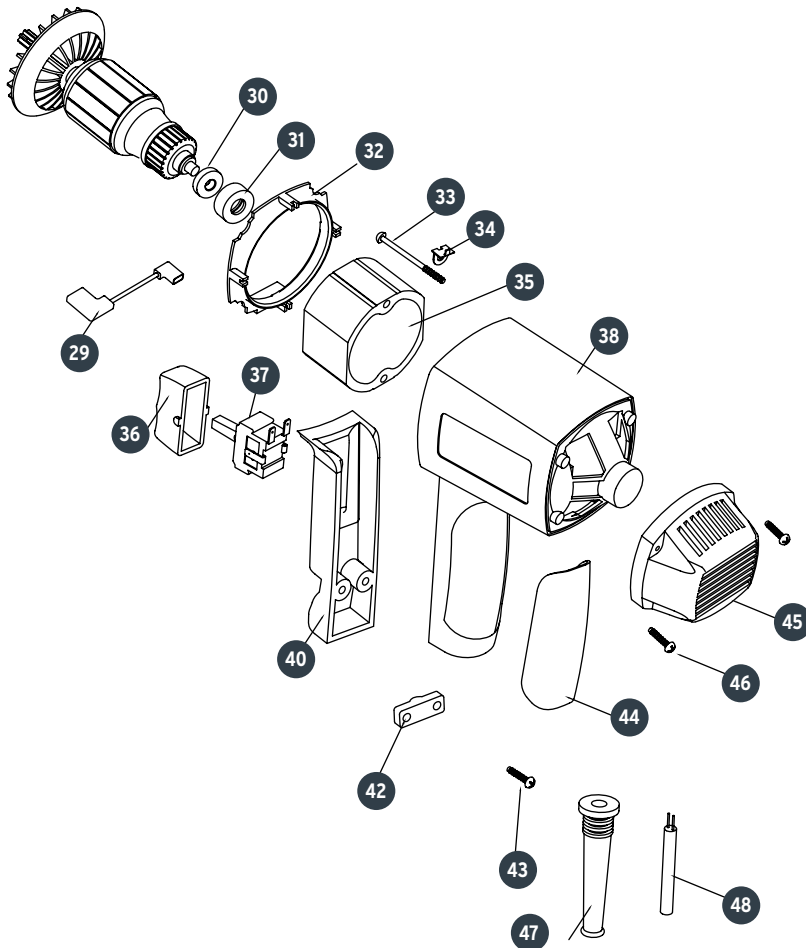

B

