

No.	Código	Clave	Descripción
1	943838	R1-BOAP-3/4A2	Tornillo M5*40 mm
2	943839	R2-BOAP-3/4A2	Carcasa de bomba
3	943840	R3-BOAP-3/4A2	Tornillo de Purga
4	943841	R4-BOAP-3/4A2	Sello 9.5x14.5
5	943842	R5-BOAP-3/4A2	Impulsor
6	943843	R6-BOAP-3/4A2	Seguro C Ø11.5
7	943844	R7-BOAP-3/4A2	Arandela Ø12.5x21
8	943845	R8-BOAP-3/4A2	Sello Mecánico
9	943846	R9-BOAP-3/4A2	Sello Ø66x71.5
10	943847	R10-BOAP-3/4A2	Tornillo M5*20 mm
11	943848	R11-BOAP-3/4A2	Cuerpo de Bomba
12	943849	R12-BOAP-3/4A2	Guarda de polvo
13	943850	R13-BOAP-3/4A2	Balero 6202
14	946501	R14-BOAP-3/4A2	Cuñero 6x4
15	946502	R15-BOAP-3/4A2	Rotor
17	943853	R17-BOAP-3/4A2	Tornillo M4*32 mm
18	943854	R18-BOAP-3/4A2	Tapa de Conexiones
19	946503	R19-BOAP-3/4A2	Capacitor 35µf"
20	946504	R20-BOAP-3/4A2	Capuchon
21	946505	R21-BOAP-3/4A2	Ensamble de campo con carcasa
22	943858	R22-BOAP-3/4A2	Tonillo M4x10
23	943859	R23-BOAP-3/4A2	Opresor de cable
24	943860	R24-BOAP-3/4A2	Protector de cable
25	946506	R25-BOAP-3/4A2	Tapa de motor
26	943862	R26-BOAP-3/4A2	Tornillo M5x20
27	943863	R27-BOAP-3/4A2	Aspas para Ventilador
28	946507	R28-BOAP-3/4A2	Tapa de Ventilador

