


A


A

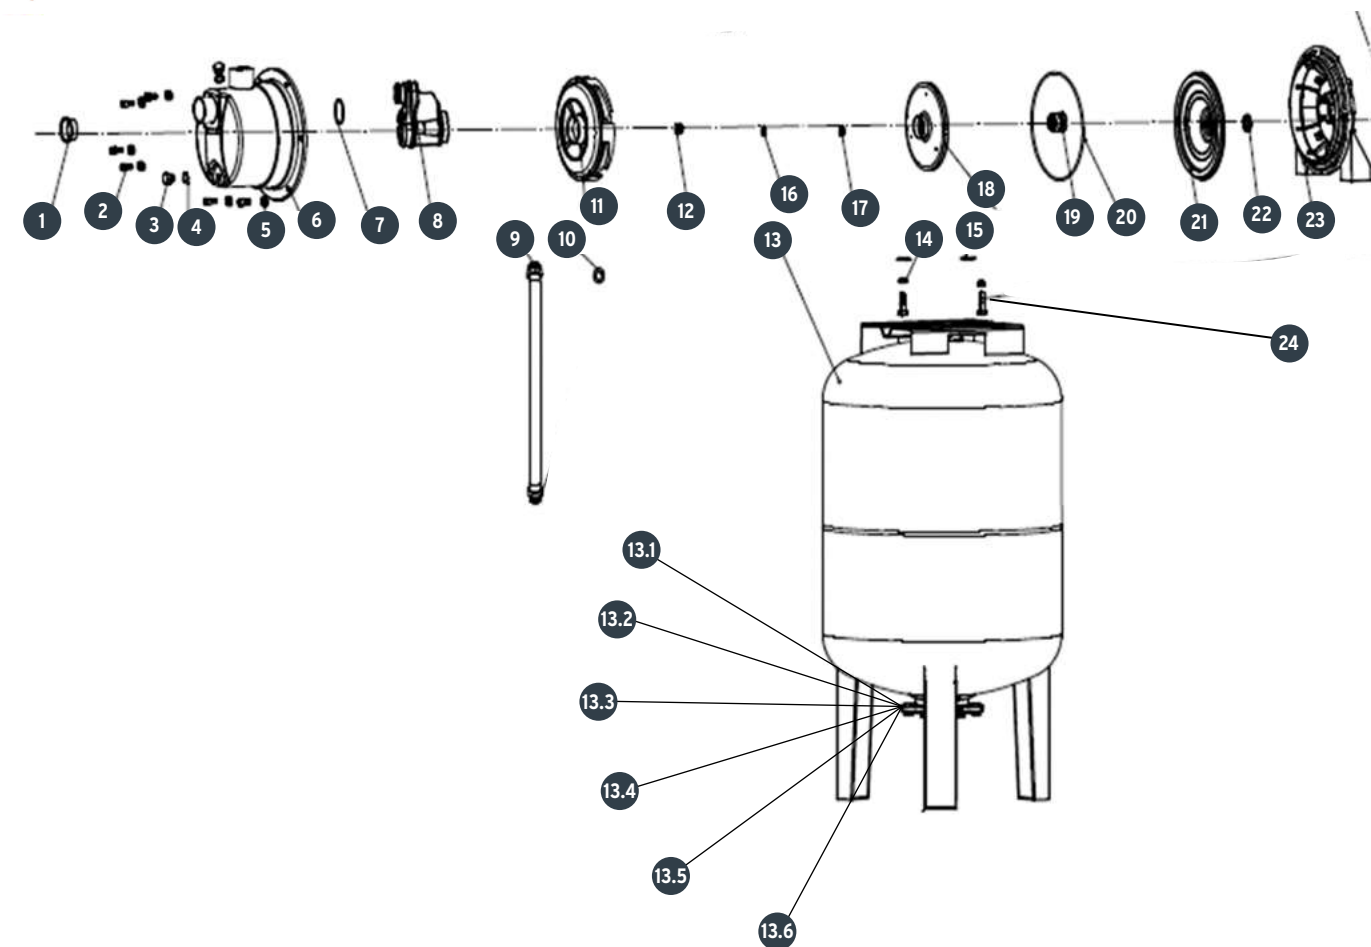

No.	Código	Clave	Descripción
1	942461	R19-BOAJ-1I	Tapón protección
2	942443	R1-BOAJ-1I	Tornillo M6x12
3	942445	R3-BOAJ-1I	Tornillo de drene M10x6
4	942446	R4-BOAJ-1I	Sello 8.2x1.9
5	942444	R2-BOAJ-1I	Arandela Ø6
6	942447	R5-BOAJ-1I	Cuerpo de bomba
7	942448	R6-BOAJ-1I	Sello 26.3x2.2
8	942449	R7-BOAJ-1I	Conexión de difusor
9	950047	R9-HIDR-1X100	Conductor flexible 800 mm
10	950048	R10-HIDR-1X100	Sello 32x21x2.5
11	942450	R8-BOAJ-1I	Difusor
12	942451	R9-BOAJ-1I	Tuerca M10
13	926607	R29-HIDR-1X100	Tanque 100L con soporte
13.1	926608	R29.1-HIDR-1X100	Tornillo cabeza hexagonal
13.2	926609	R29.2-HIDR-1X100	Arandela plana M8
13.3	926610	R29.3-HIDR-1X100	Tuerca M8
13.4	926611	R29.4-HIDR-1X100	Tapa de tanque
13.5	926612	R29.5-HIDR-1X100	Diafragma de 100L
13.6	926613	R29.6-HIDR-1X100	Válvula de llenado
14	942452	R10-BOAJ-1I	Arandela de presión Ø10
15	942453	R11-BOAJ-1I	Arandela plana Ø10
16	950049	R16-HIDR-1X100	Arandela de presión Ø8
17	950050	R17-HIDR-1X100	Arandela plana Ø8
18	942454	R12-BOAJ-1I	Impulsor
19	942455	R14-BOAJ-1I	Sello mecanico
20	942456	R13-BOAJ-1I	Sello 163x3.55
21	942457	R15-BOAJ-1I	Soporte de empaque
22	942458	R16-BOAJ-1I	Empaque Ø14
23	942459	R17-BOAJ-1I	Tapa soporte de bomba
24	950051	R24-HIDR-1X100	Tornillo hexagona M8x14

B

No.	Código	Clave	Descripción
25	942495	R52-BOAJ-1I	Tapa de ventilador
26	942493	R50-BOAJ-1I	Tornillo M5x138
27	942494	R51-BOAJ-1I	Aspas de ventilador
28	942492	R49-BOAJ-1I	Tapa de motor
29	942491	R48-BOAJ-1I	Arandela ondulada D35
30	950052	R30-HIDR-1X100	Termi contractil Ø4
31	950053	R31-HIDR-1X100	Cable de tierra
32	942487	R44-BOAJ-1I	Arnés de line
33	942460	R18-BOAJ-1I	Pata
34	942466	R24-BOAJ-1I	Campo
35	942467	R25-BOAJ-1I	Base de caja de conexión
36	942468	R26-BOAJ-1I	Tornillo M4x10
37	942490	R47-BOAJ-1I	Tuerca
38	942484	R41-BOAJ-1I	Arandela de fijación
39	942483	R40-BOAJ-1I	Arandela de presión Ø4
40	942482	R39-BOAJ-1I	Tornillo M4x6
41	942486	R43-BOAJ-1I	Opresor de cable
42	942485	R42-BOAJ-1I	Tornillo ST4.2x11F
43	942481	R38-BOAJ-1I	Abrazadera
44	942480	R37-BOAJ-1I	Sello 38x2.65
45	942479	R36-BOAJ-1I	Tornillo St4x16F
46	942478	R35-BOAJ-1I	Tapa de conexiones
47	942477	R34-BOAJ-1I	Empaque de caja de conexiones
48	942476	R33-BOAJ-1I	Capacitor 40F
49	942475	R32-BOAJ-1I	Tuerca M4
50	942474	R31-BOAJ-1I	Arandela de ojillo Ø4
51	942473	R30-BOAJ-1I	Arandela plana Ø4
52	942472	R29-BOAJ-1I	Tablero de conexiones M4

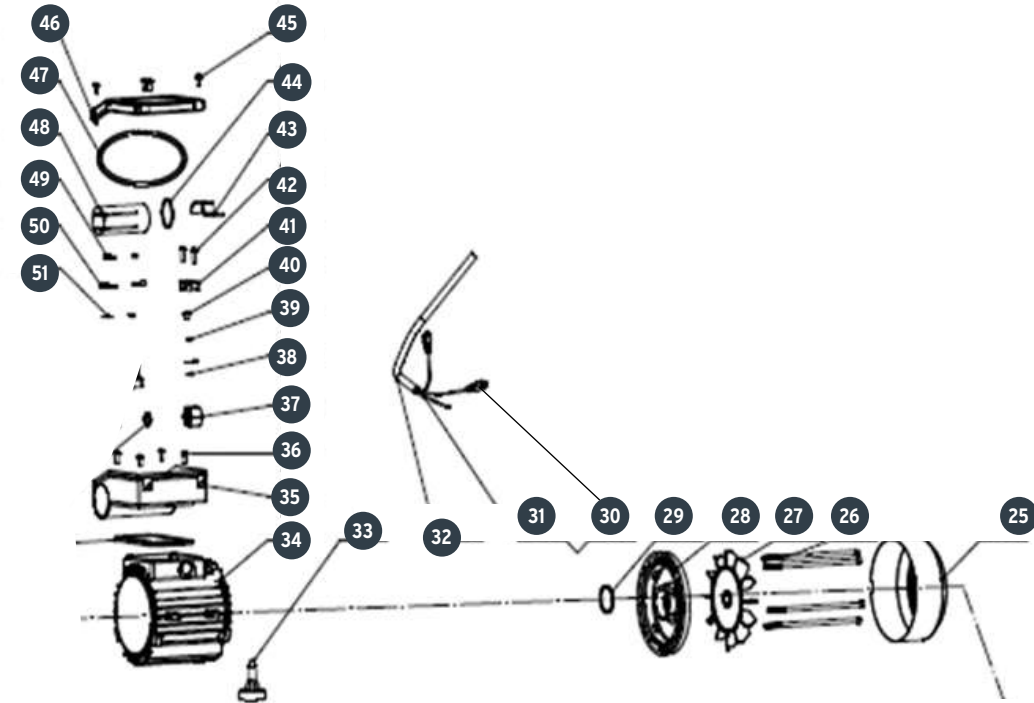

B



C

No.	Código	Clave	Descripción
53	942471	R28-BOAJ-1I	Arandela Ø4
54	942470	R27-BOAJ-1I	Tablero de conexiones
55	942488	R45-BOAJ-1I	Protector de cable
56	942489	R46-BOAJ-1I	Arandela
57	942496	R53-BOAJ-1I	Junta de conexiones
58	942462	R20-BOAJ-1I	Balero de bolas 6302
59	942464	R22-BOAJ-1I	Rotor
60	942463	R21-BOAJ-1I	Cuñero 4x4x10
61	942465	R23-BOAJ-1I	Balero de bolas 6202
62	926605	R27-HIDR-1X100	Manómetro
63	950054	R63-HIDR-1X100	Niple de 5 vías
64	950055	R64-HIDR-1X100	Presostato
65	950056	R65-HIDR-1X100	Caja de accesorios
66	926581	R3-HIDR-1X100	Codo a 90°
67	926580	R2-HIDR-1X100	Tubo 240 mm
68	926582	R4-HIDR-1X100	Tubo 350 mm
69	926579	R1-HIDR-1X100	Niple 3 vías
70	950057	R70-HIDR-1X100	Tapón
71	950058	R71-HIDR-1X100	Arnés eléctrico



C

