


A

No.	Código	Clave	Descripción
1	926202	R1-BOAJ-1	Tapón de drenado M10x1
2	926203	R2-BOAJ-1	Empaque 8.2x1.9
3	926204	R3-BOAJ-1	Cubierta de bomba
4	926205	R4-BOAJ-1	Empaque 26.3x2.2
5	926206	R5-BOAJ-1	Tapón de llenado G1/4
6	926207	R6-BOAJ-1	Empaque 26.3x2.2
7	926208	R7-BOAJ-1	Conexión difusor
8	926209	R8-BOAJ-1	Empaque 40x3.55
9	926210	R9-BOAJ-1	Difusor
10	926211	R10-BOAJ-1	Tuerca M10
11	926212	R11-BOAJ-1	Arandela de presión M10
12	926213	R12-BOAJ-1	Arandela plana M10
13	926214	R13-BOAJ-1	Impulsor
14	926215	R14-BOAJ-1	Sello mecánico CM301-14
15	926216	R15-BOAJ-1	Empaque 158.8x3.1
16	926217	R16-BOAJ-1	Soporte de empaque
17	926218	R17-BOAJ-1	Empaque para soporte
18	926219	R18-BOAJ-1	Tornillo M5x25
19	926220	R19-BOAJ-1	Soporte de bomba
20	926221	R20-BOAJ-1	Balero 6203.2RZ/Z3V3
21	926222	R21-BOAJ-1	Cuñero A4x10
22	926223	R22-BOAJ-1	Tornillo M8x22
23	926224	R23-BOAJ-1	Rotor
24	926225	R24-BOAJ-1	Balero 6202-2RZ/Z3V3
25	926226	R25-BOAJ-1	Arandela ondulada D35

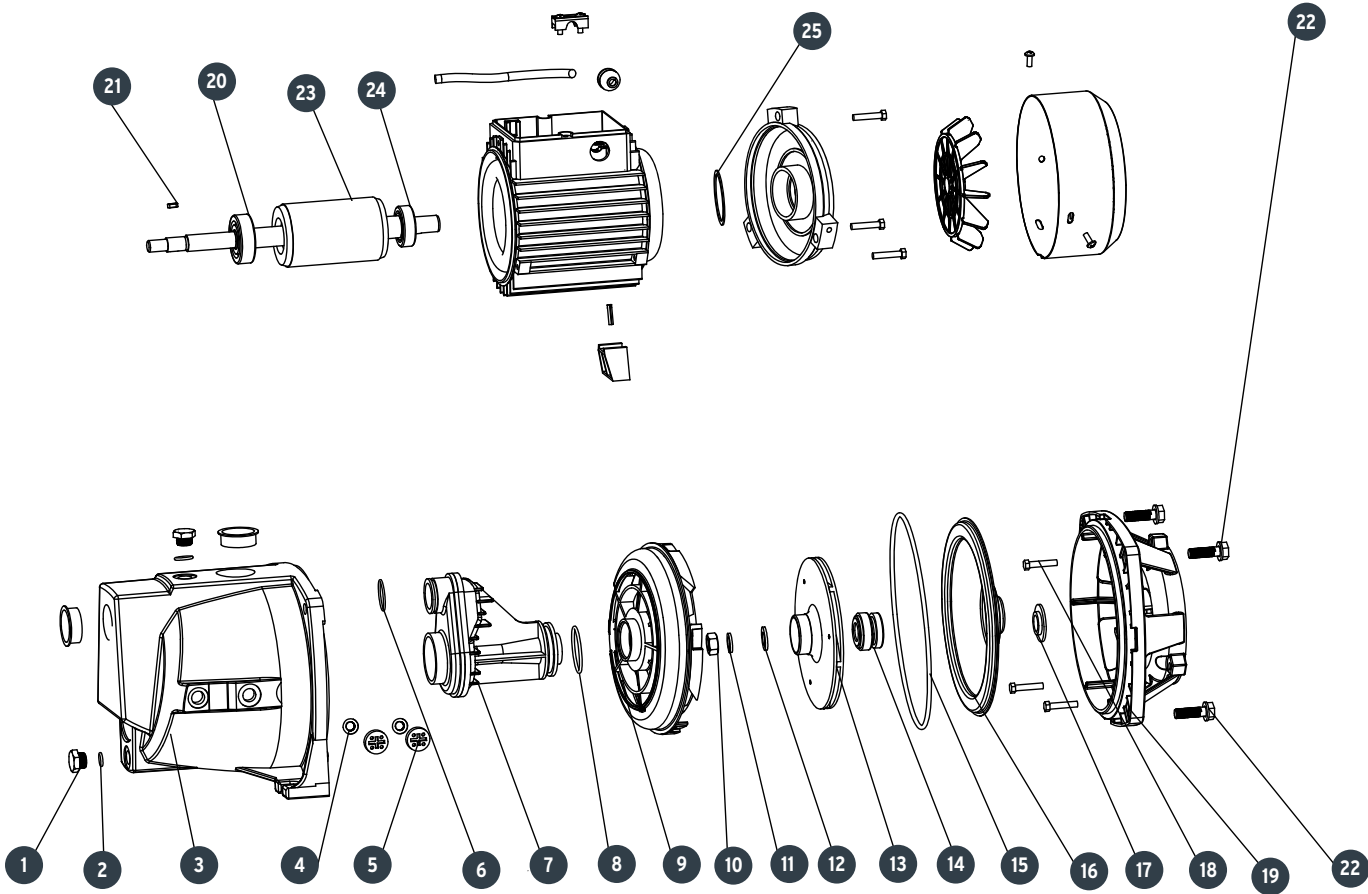


A



B

No.	Código	Clave	Descripción
26	926227	R26-BOAJ-1	Empaque 12x2
27	926228	R27-BOAJ-1	Tapón de llenado G1/4
28	926229	R28-BOAJ-1	Protector de cuerda
29	926230	R29-BOAJ-1	Campo
30	926231	R30-BOAJ-1	Perno
31	926232	R31-BOAJ-1	Pata
32	926233	R33-BOAJ-1	Protector de cable
33	926234	R34-BOAJ-1	Tapa trasera
34	926235	R35-BOAJ-1	Ventilador
35	926236	R36-BOAJ-1	Tapa de ventilador
36	926237	R37-BOAJ-1	Tornillo M5x22
37	926238	R38-BOAJ-1	Cable 30 cm
38	926239	R39-BOAJ-1	Opresor de cable
39	926240	R40-BOAJ-1	Tornillo M4x12
40	926242	R41-BOAJ-1	Arandela de estrella
41	926243	R42-BOAJ-1	Terminal de ojillo Ø4.2
42	926244	R43-BOAJ-1	Arandela de presión
43	926245	R44-BOAJ-1	Tornillo M4x6
44	926246	R45-BOAJ-1	Empaque 30x2.65
45	926247	R46-BOAJ-1	Capacitor 50 F /250 V
46	926248	R47-BOAJ-1	Tapa de conexiones
47	926249	R48-BOAJ-1	Tornillo M4x35
48	926250	R49-BOAJ-1	Arandela M4
49	926251	R48-BOAJ-1	Placa de conexiones

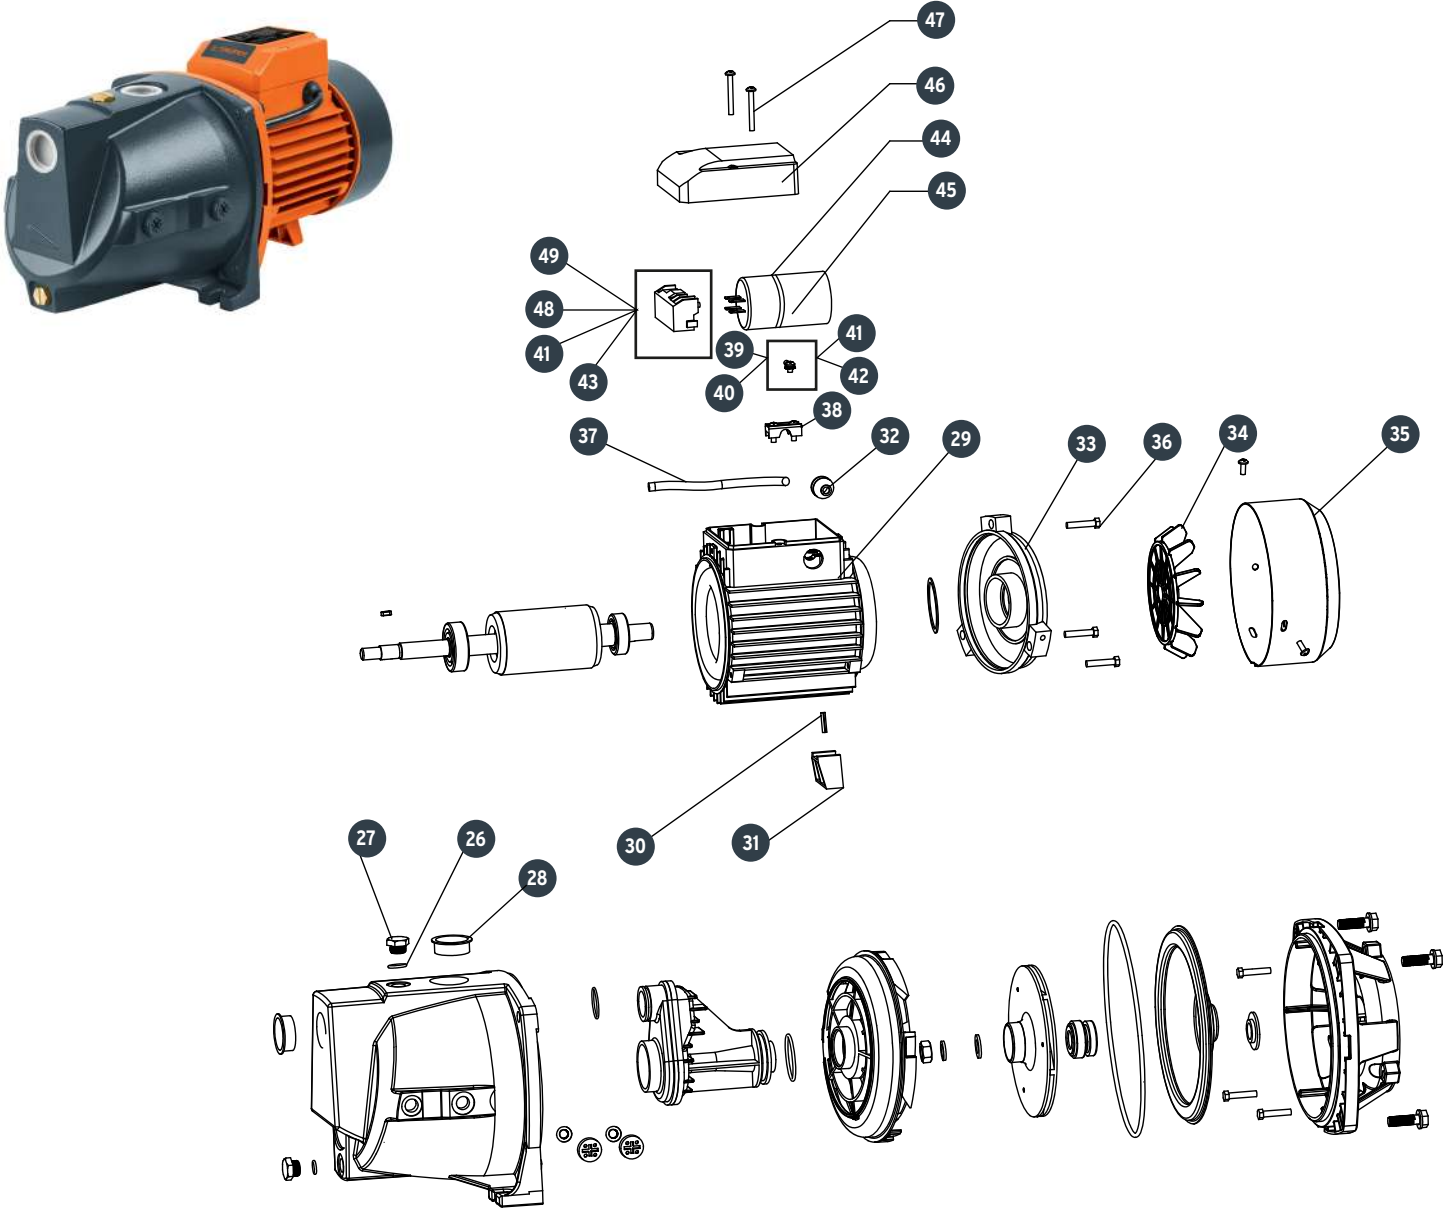

B