
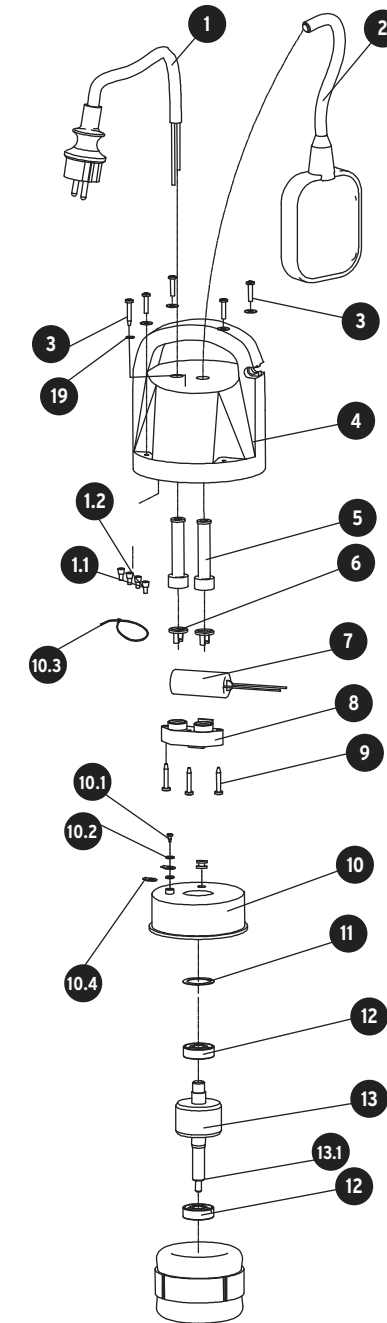


A

No.	Código	Clave	Descripción
1	911551	R1-BOS-3/4LP	Cable de alimentación
1.1	911552	R1.1-BOS-3/4LP	Conector grandes
1.2	911553	R1.2-BOS-3/4LP	Conector chico
2	911554	R2-BOS-3/4LP	Interruptor flotador
3	911555	R3-BOS-3/4LP	Tornillo St4.5x28mm
4	911556	R4-BOS-3/4LP	Carcasa superior
5	911557	R5-BOS-3/4LP	Protector de cable
6	911558	R6-BOS-3/4LP	Sujetador de cable
7	911559	R7-BOS-3/4LP	Capacitador 25 F
8	911560	R8-BOS-3/4LP	Opresor
9	911561	R9-BOS-3/4LP	Tornillo St3.9x30.5mm
10	911562	R10-BOS-3/4LP	Cubierta de motor
10.1	911563	R10.1-BOS-3/4LP	Tornillo M4x8mm
10.2	911564	R10.2-BOS-3/4LP	Rondana de presión Ø4
10.3	911565	R10.3-BOS-3/4LP	Cable conexión a tierra
10.4	911566	R10.4-BOS-3/4LP	Rondana estriada Ø4
11	911567	R11-BOS-3/4LP	Rondana ondulada Ø25
12	911568	R12-BOS-3/4LP	Balero de bolas 6201-2Z
13	911569	R13-BOS-3/4LP	Rotor
13.1	911570	R13.1-BOS-3/4LP	Anillo "C" Ø12

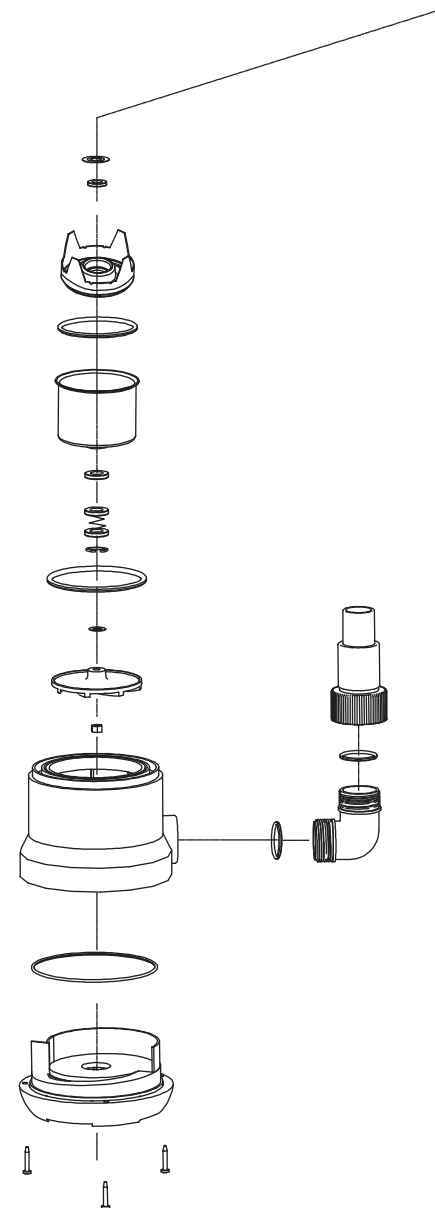


A

Si tienes dudas, llama a la
 Línea de Comunicación Directa
800-0187-873 Exclusivo
 para México

B

No.	Código	Clave	Descripción
14	911571	R14-BOS-3/4LP	Campo
15	911572	R15-BOS-3/4LP	Sello
17	911573	R17-BOS-3/4LP	Sello de hule Ø84.5
19	911574	R19-BOS-3/4LP	Rondana plana Ø4
21	911575	R21-BOS-3/4LP	Sello de hule Ø89.5
22	911576	R22-BOS-3/4LP	Rondana plana Ø8.5
23	911577	R23-BOS-3/4LP	Impulsor
24	911578	R24-BOS-3/4LP	Tuerca de seguridad M8
25	911579	R25-BOS-3/4LP	Carcasa
26	911580	R26-BOS-3/4LP	Balín de acero Ø6
27	911581	R27-BOS-3/4LP	Rondana especial Ø3.6
28	911582	R28-BOS-3/4LP	Tornillo St2.9x8.5mm
29	911583	R29-BOS-3/4LP	Sello de hule Ø129
30	911584	R30-BOS-3/4LP	Base
31	911585	R31-BOS-3/4LP	Tornillo St4.5x18mm
32	911586	R32-BOS-3/4LP	Adaptador
33	911587	R33-BOS-3/4LP	Sello de hule Ø37.5
34	911588	R34-BOS-3/4LP	Conector de salida
36	911589	R36-BOS-3/4LP	Sello mecánico

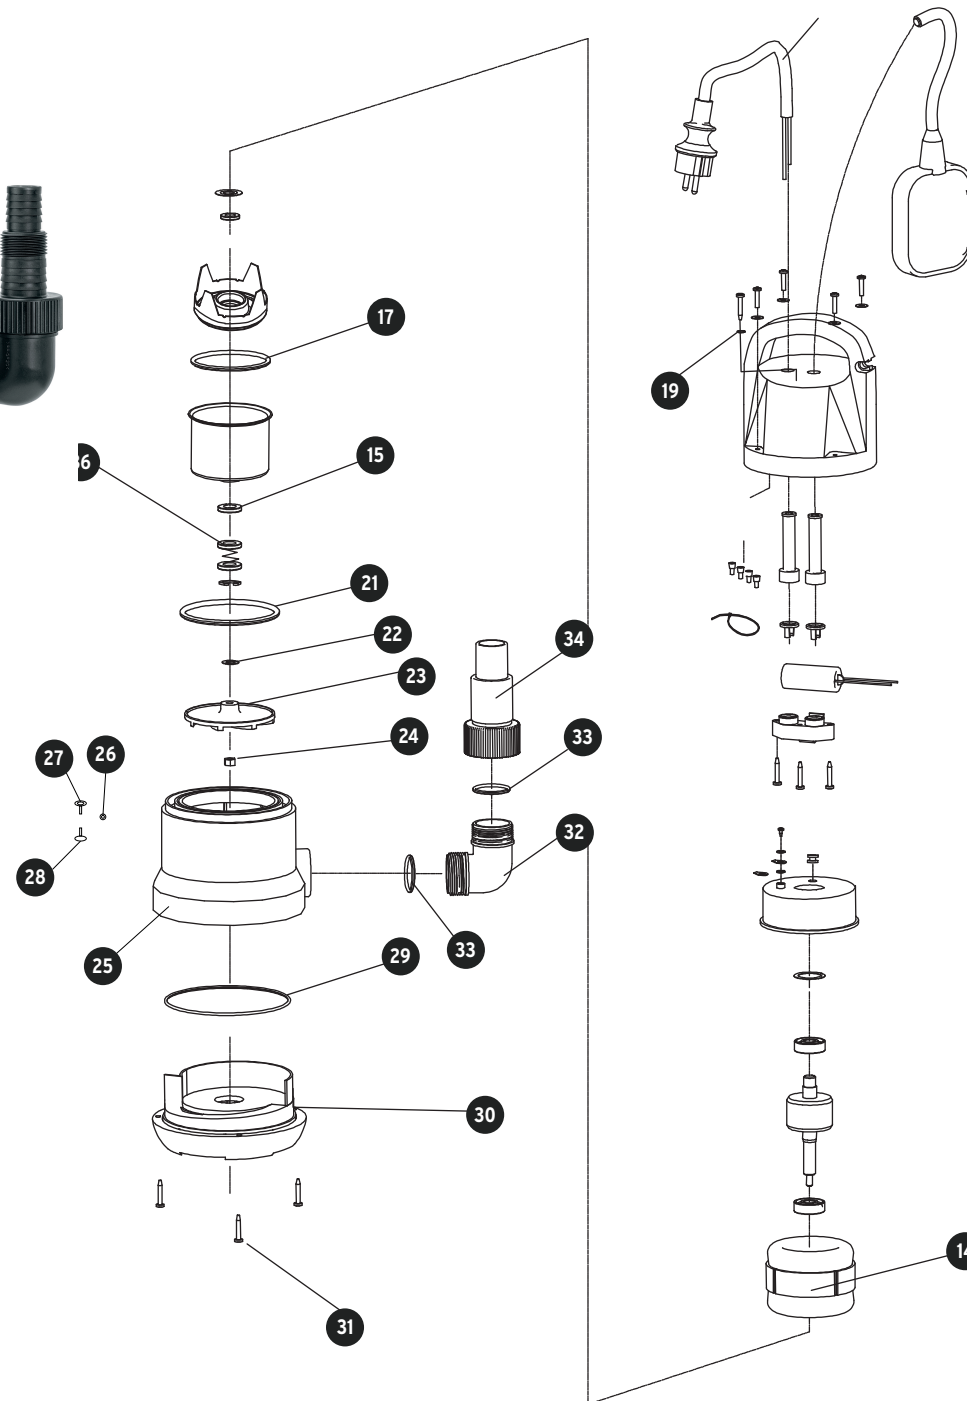

B

Si tienes dudas, llama a la
 Línea de Comunicación Directa
800-0187-873 Exclusivo
 para México