


A


No.	Código	Clave	Descripción
1	939957	R1-BOS-1LM2	Cubierta
2	939958	R2-BOS-1LM2	Junta
3	939959	R3-BOS-1LM2	Cubre polvo
4	939960	R4-BOS-1LM2	Tuerca
5	939961	R5-BOS-1LM2	Arandela de presión
6	939962	R6-BOS-1LM2	Tornillo sin fin
7	939963	R7-BOS-1LM2	Cubierta superior
8	939964	R8-BOS-1LM2	Retén
9	939965	R9-BOS-1LM2	Tornillo de llenado aceite
10	939966	R10-BOS-1LM2	Sello
11	939967	R11-BOS-1LM2	Tapa superior
12	939968	R12-BOS-1LM2	Tuerca de fijación
13	939969	R13-BOS-1LM2	Tornillo
14	939970	R14-BOS-1LM2	Sello mecanico
15	939971	R15-BOS-1LM2	Arandela plana
16	939972	R16-BOS-1LM2	Arandela plana
17	939973	R17-BOS-1LM2	Arandela ondulada
18	939974	R18-BOS-1LM2	Balero
19	939975	R19-BOS-1LM2	Ensamble de cable de alimen.
25	939976	R25-BOS-1LM2	Sello
26	939977	R26-BOS-1LM2	Rotor
27	939978	R27-BOS-1LM2	Cubierta superior
28	939979	R28-BOS-1LM2	Campo 2 HP
29	939980	R29-BOS-1LM2	Cubierta inferior
30	939981	R30-BOS-1LM2	Balero
32	939982	R31-BOS-1LM2	Tapa
33	939983	R33-BOS-1LM2	Tubo
34	939984	R34-BOS-1LM2	Termofit
35	939985	R35-BOS-1LM2	Protector térmico
36	939986	R36-BOS-1LM2	Soporte inferior
37	939987	R37-BOS-1LM2	Carcasa de motor
38	939988	R38-BOS-1LM2	Bolsa para aceite
39	939989	R39-BOS-1LM2	Tapa inferior
40	939990	R40-BOS-1LM2	Anillo de retención

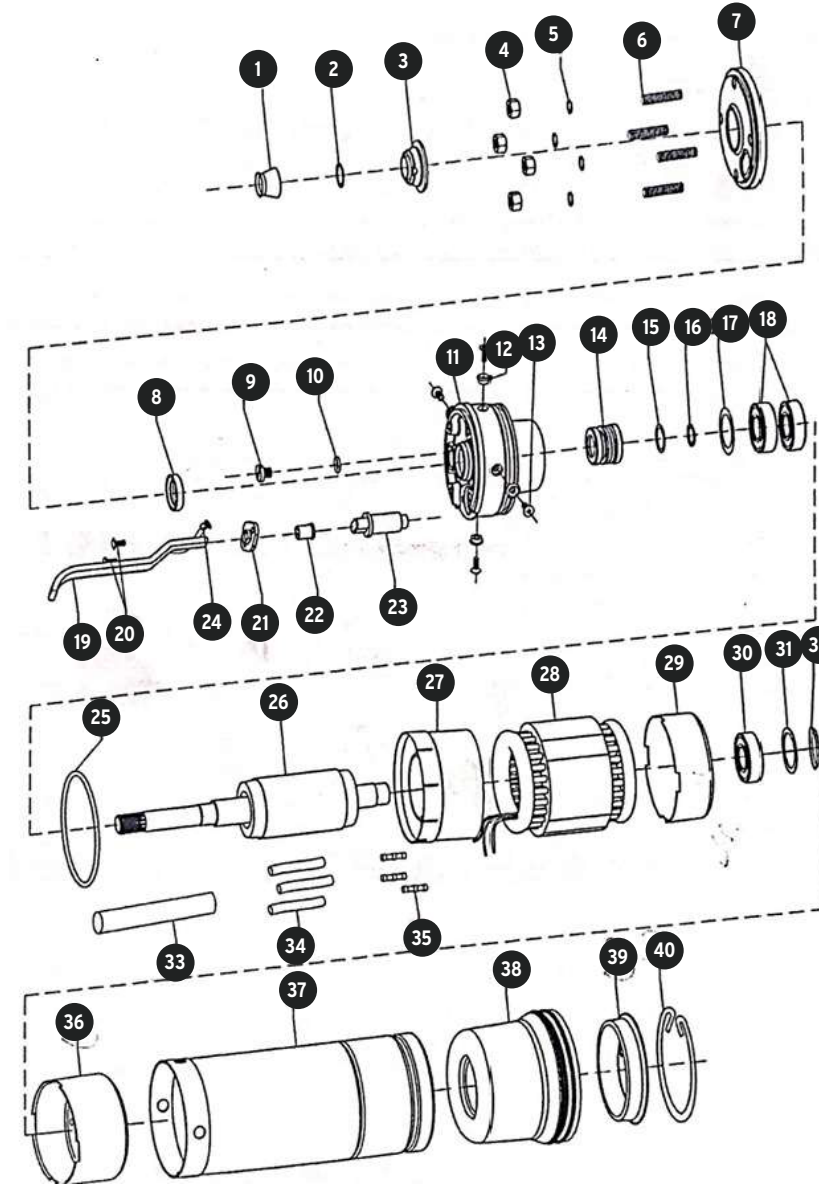

A

B


No.	Código	Clave	Descripción
1	939991	RB1-BOS-1LM2	Tapón protector
2	939992	RB2-BOS-1LM2	Tapa de salida
3	939993	RB3-BOS-1LM2	Tornillo M
4	939994	RB4-BOS-1LM2	Carcasa de bomba
5	939995	RB5-BOS-1LM2	Válvula de retención
6	939996	RB6-BOS-1LM2	Pasacable
7	939997	RB7-BOS-1LM2	Protector de cable
8	939998	RB8-BOS-1LM2	Base soporte
9	939999	RB9-BOS-1LM2	Soporte superior
10	940000	RB10-BOS-1LM2	Tornillo especial M
11	940001	RB11-BOS-1LM2	Manga de eje superior
12	940002	RB12-BOS-1LM2	Buje
13	940003	RB13-BOS-1LM2	Eje
14	940004	RB14-BOS-1LM2	Arandela
15	940005	RB15-BOS-1LM2	Difusor
16	940006	RB16-BOS-1LM2	Impulsor
17	940007	RB17-BOS-1LM2	Tapa de difusor
19	940008	RB19-BOS-1LM2	Acoplamiento
20	940009	RB20-BOS-1LM2	Arandela
21	940010	RB21-BOS-1LM2	Soporte inferior
22	940011	RB22-BOS-1LM2	Capuchon inferior
23	940012	RB23-BOS-1LM2	Acoplamiento del eje
24	940013	RB24-BOS-1LM2	Tornillo M
25	940014	RB25-BOS-1LM2	Regilla
26	940015	RB26-BOS-1LM2	Base conector

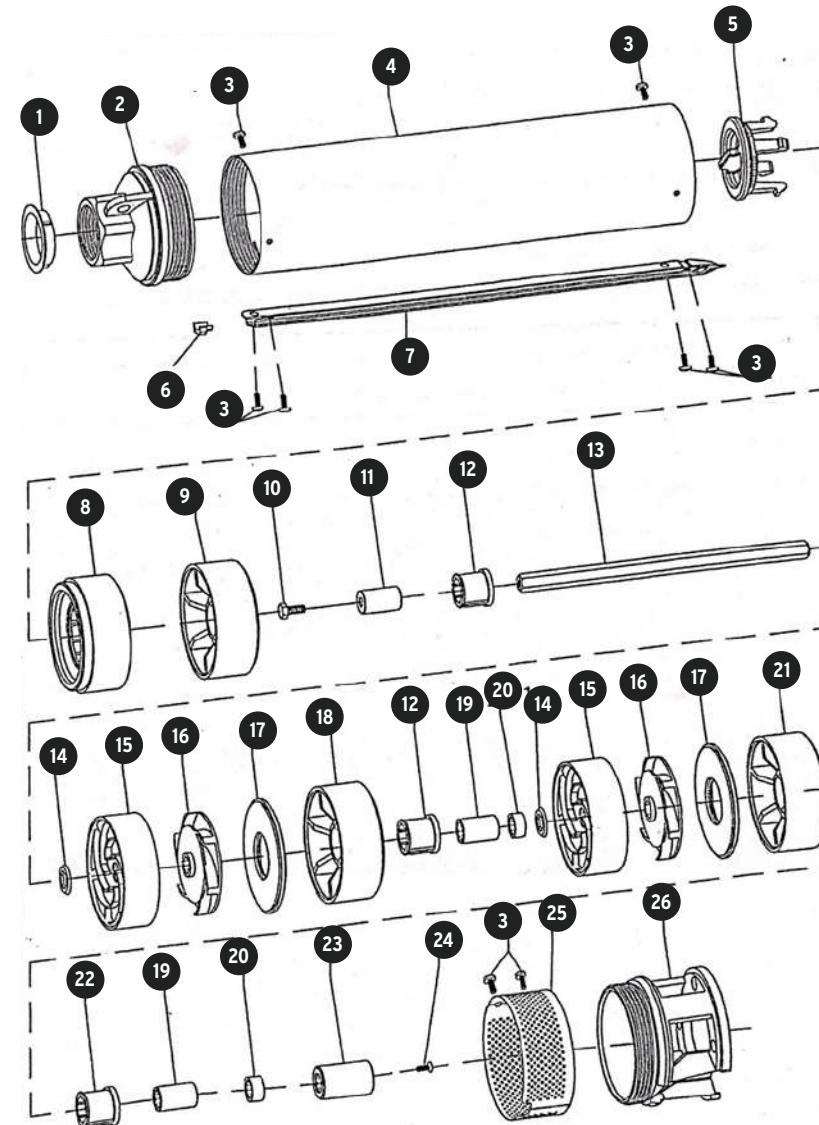

B

C

No.	Código	Clave	Descripción
1	940016	RC1-BOS-1LM2	Tornillo
2	940017	RC2-BOS-1LM2	Tapa de caja de control
3	940018	RC3-BOS-1LM2	Capacitor 135 uF +/- 5%
4	940019	RC4-BOS-1LM2	Interruptor 16 Amp
5	940020	RC5-BOS-1LM2	Protector térmico 8 Amp
6	940021	RC6-BOS-1LM2	Tabla de conexiones
7	940022	RC7-BOS-1LM2	Cable de alimentación
8	940023	RC8-BOS-1LM2	Opresor de cable
9	940024	RC9-BOS-1LM2	Tornillo
10	940025	RC10-BOS-1LM2	Caja de control
11	940026	RC11-BOS-1LM2	Aislante de terminales
12	940027	RC12-BOS-1LM2	Arnés con terminal
13	940028	RC13-BOS-1LM2	Arnés con terminal
14	940029	RC14-BOS-1LM2	Arnés con terminal

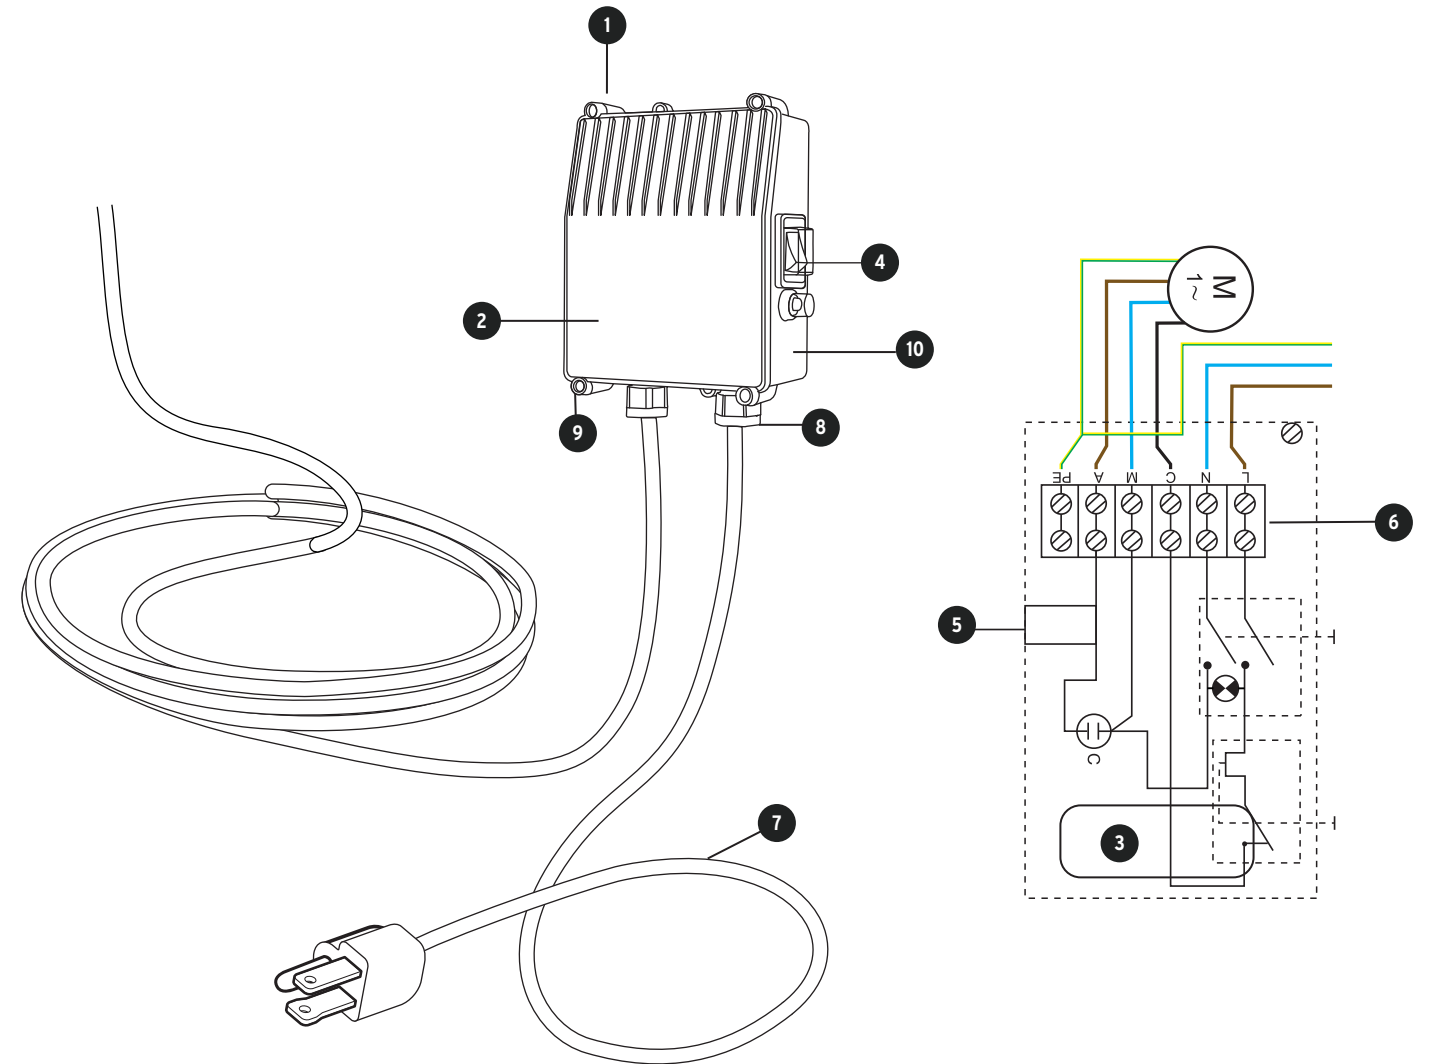

C