


A

No.	Código	Clave	Descripción
1	936812	R1-SOPLA-26T	Ensamble de ducto con manija
2	936813	R2-SOPLA-26T	Ensamble de motor
3	936814	R3-SOPLA-26T	Eje
4	936815	R4-SOPLA-26T	Camisa para eje
7	936816	R7-SOPLA-26T	Tubo ondulado
8	936817	R8-SOPLA-26T	Manija
9	936818	R9-SOPLA-26T	Tornillo M8x45
10	936819	R10-SOPLA-26T	Carcasa inferior de ventilador
11	936820	R11-SOPLA-26T	Jgo. de tornillo con arandela M5x24
12	936821	R12-SOPLA-26T	Arandela plana M10
13	936822	R13-SOPLA-26T	Ventilador
14	936823	R14-SOPLA-26T	Cuchilla
15	936824	R15-SOPLA-26T	Arandela M8
16	936825	R16-SOPLA-26T	Tuerca M8
17	936826	R17-SOPLA-26T	Carcasa superior de ventilador
18	936827	R18-SOPLA-26T	Tornillo ST4.8x18
19	936828	R19-SOPLA-26T	Tubo superior
20	936829	R20-SOPLA-26T	Tubo inferior
21	936830	R21-SOPLA-26T	Tubo curvo
22	936831	R22-SOPLA-26T	Boquilla de soplado
23	936832	R23-SOPLA-26T	Bolsa recolectora
30	936833	R30-SOPLA-26T	Carcasa izquierda
31	936834	R31-SOPLA-26T	Interruptor
32	936835	R32-SOPLA-26T	Resorte especial
33	936836	R33-SOPLA-26T	Gatillo
34	936837	R34-SOPLA-26T	Chicote de aceleración
35	936838	R35-SOPLA-26T	Arnes electrico
36	936839	R36-SOPLA-26T	Carcasa derecha
37	936840	R37-SOPLA-26T	Tornillo ST 4.2x16

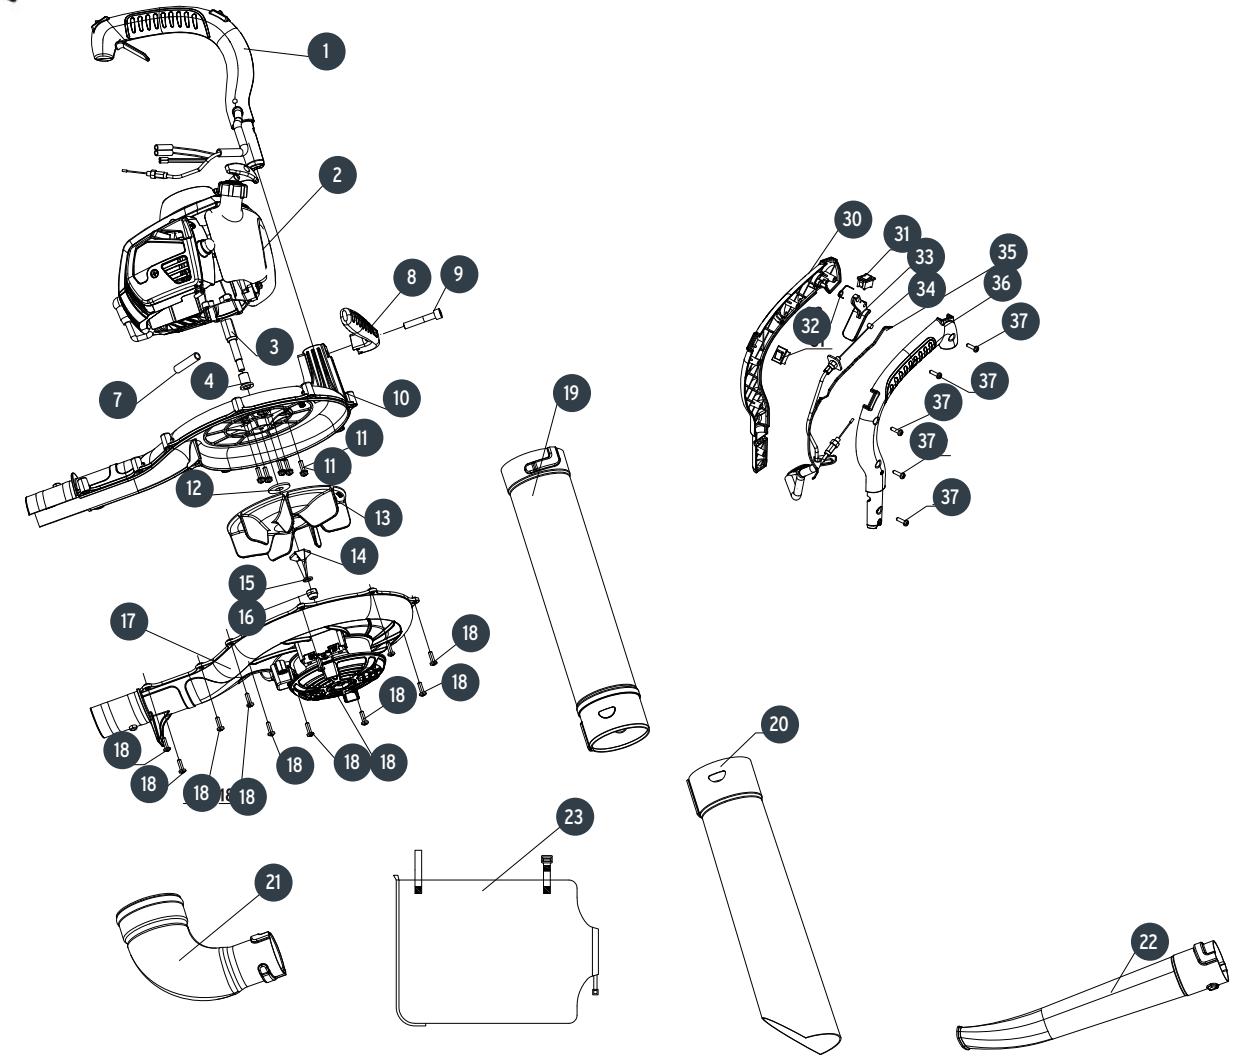


A



B

No.	Código	Clave	Descripción
38	936841	R38-SOPLA-26T	Tubo cirrugado
40	936842	R40-SOPLA-26T	Cubierta superior
41	936843	R41-SOPLA-26T	Tuerca M8
42	936844	R42-SOPLA-26T	Manga
43	936845	R43-SOPLA-26T	Arandela de retención
44	936846	R44-SOPLA-26T	Buje 13x10
50	936847	R50-SOPLA-26T	Cubierta inferior
51	936848	R51-SOPLA-26T	Arnes electrico
52	936849	R52-SOPLA-26T	Placa
53	936850	R53-SOPLA-26T	Tornillo ST3.5x15
54	936851	R54-SOPLA-26T	Eje
55	936852	R55-SOPLA-26T	Cubierta
56	936853	R56-SOPLA-26T	Tornillo M6x18
57	936854	R57-SOPLA-26T	Seguro C
58	936855	R58-SOPLA-26T	Resorte
59	936856	R59-SOPLA-26T	Tornillo ST 2.9x10
60	936857	R60-SOPLA-26T	Tapa inferior
61	936858	R61-SOPLA-26T	Micro interruptor
62	936859	R62-SOPLA-26T	Seguro
70	936860	R70-SOPLA-26T	Ensamble de sistema de arranque
71	936861	R71-SOPLA-26T	Carcasa sistema de arranque
72	936862	R72-SOPLA-26T	Resorte de arranque 1
73	936863	R73-SOPLA-26T	Polea de arranque 1
74	936864	R74-SOPLA-26T	Resorte de arranque 2
75	936865	R75-SOPLA-26T	Polea de arranque pulleys
76	936866	R76-SOPLA-26T	Arandela M5
77	936867	R77-SOPLA-26T	Tornillo ST5x25
78	936868	R78-SOPLA-26T	Piola
79	936869	R79t-SOPLA-26T	Manija de arranque

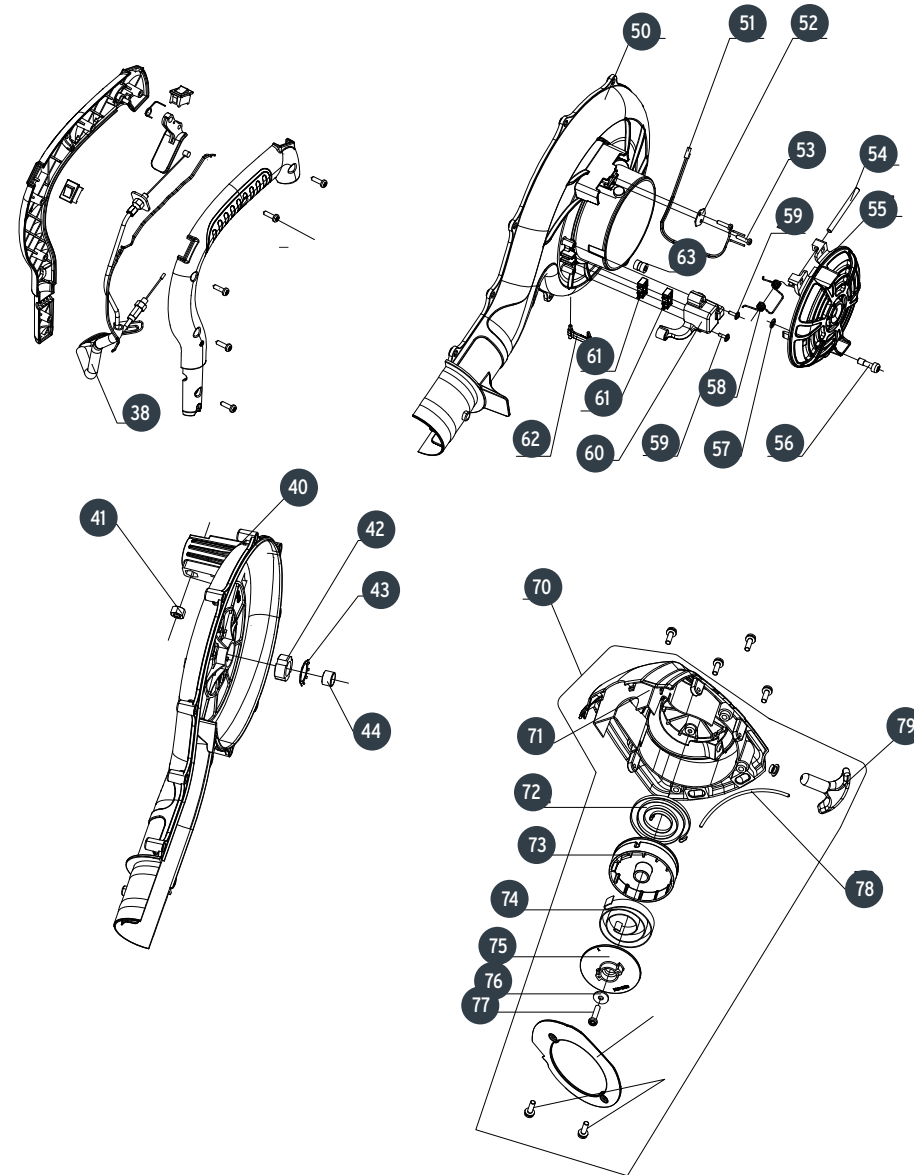


B



C

No.	Código	Clave	Descripción
80	936870	R80-SOPLA-26T	Buje
81	936871	R81-SOPLA-26T	Tornillo M5x18
82	936872	R82-SOPLA-26T	Tornillo ST4.5x16
83	936873	R83-SOPLA-26T	Carcasa de escape
84	936874	R84-SOPLA-26T	Tornillo M5x56
85	936875	R85-SOPLA-26T	Escape
86	936876	R86-SOPLA-26T	Clutch
87	936877	R87-SOPLA-26T	Rotor
88	936878	R88-SOPLA-26T	Cojinete
89	936879	R89-SOPLA-26T	Tornillo M5x28
90	936880	R90-SOPLA-26T	Ensamble cubierta de cárter
91	936881	R91-SOPLA-26T	Reten
92	936882	R92-SOPLA-26T	Cubierta de cárter
93	936883	R93-SOPLA-26T	Balero 6001
94	936884	R94-SOPLA-26T	Ensamble de cigüeñal
95	936885	R95-SOPLA-26T	Junta de cárter
96	936886	R96-SOPLA-26T	Juego de cárter
97	936887	R97-SOPLA-26T	Cárter
99	936888	R98-SOPLA-26T	Jgo. de tanque de gasolina
100	936889	R100-SOPLA-26T	Jgo. de manguera y filtro
101	936890	R101-SOPLA-26T	Manguera gasolina 1
102	936891	R102-SOPLA-26T	Manguera gasolina 2
103	936892	R103-SOPLA-26T	Resorte
104	936893	R104-SOPLA-26T	Tapón para manguera
105	936894	R105-SOPLA-26T	Filtro de gasolina
106	936895	R106-SOPLA-26T	Tanque de gasolina
107	936896	R107-SOPLA-26T	Buje 2 M5x5
108	936897	R108-SOPLA-26T	Arandela M5
110	936898	R110-SOPLA-26T	Ensamble tapón de gasolina

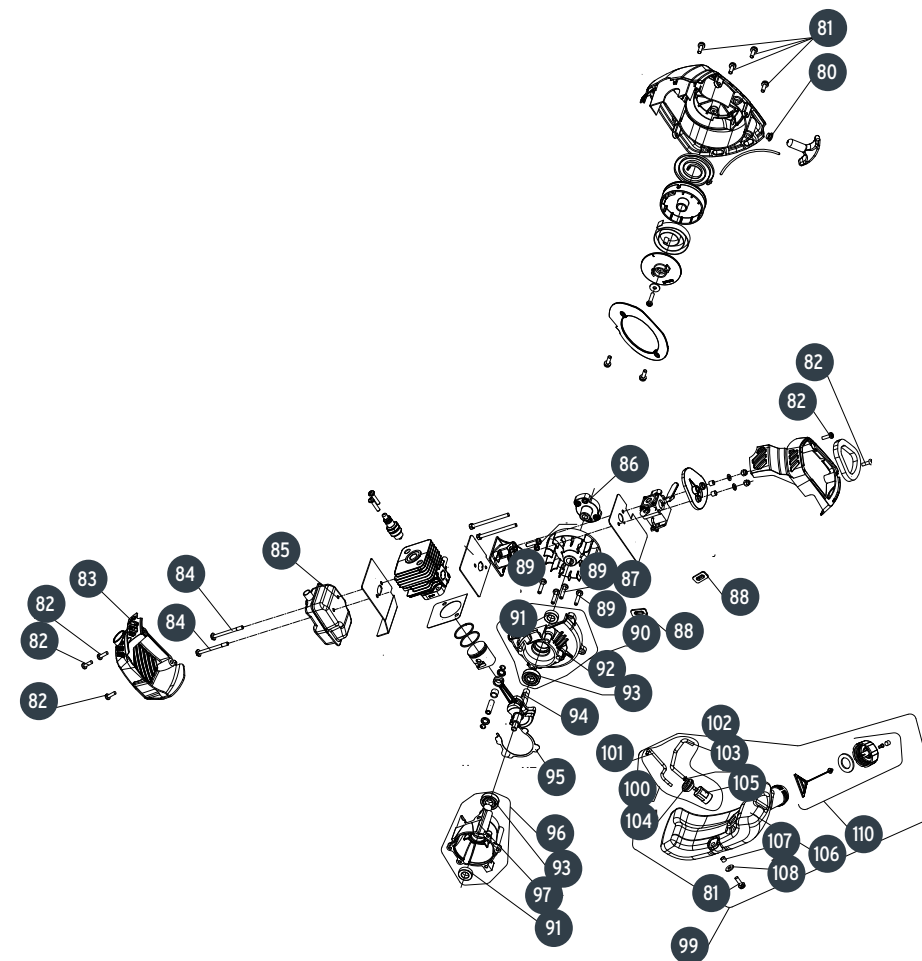


C



D

No.	Código	Clave	Descripción
111	936899	R111-SOPLA-26T	Seguro
112	936900	R112-SOPLA-26T	Empaque M18
113	936901	R113-SOPLA-26T	Tapón
114	936902	R114-SOPLA-26T	Válvula tapón
115	936903	R115-SOPLA-26T	Filtro
116	936904	R116-SOPLA-26T	Seguro de perno
117	936905	R117-SOPLA-26T	Arandela M8
118	936906	R118-SOPLA-26T	Perno de pistón
119	9369070	R119-SOPLA-26T	Balero de aujas 8X9
120	936908	R120-SOPLA-26T	Pistón
121	936909	R121-SOPLA-26T	Anillo
122	936910	R122-SOPLA-26T	Junta de cilindro
123	936911	R123-SOPLA-26T	Empaque de mofle
124	936912	R124-SOPLA-26T	Cilindro
128	936913	R128-SOPLA-26T	Arandela M5
129	936914	R129-SOPLA-26T	Arandela M4
130	936915	R130-SOPLA-26T	Bobina AIPU
131	936916	R131-SOPLA-26T	Arnés eléctrico
132	936917	R132-SOPLA-26T	Tornillos M4X23
133	936918	R133-SOPLA-26T	Junta de carburador
134	936919	R134-SOPLA-26T	Bujía
135	936921	R135-SOPLA-26T	Tornillo M5X23
136	936922	R138-SOPLA-26T	Base de carburador
138	936923	R139-SOPLA-26T	Tornillo M5X25
139	936924	R141-SOPLA-26T	Junto de carburador

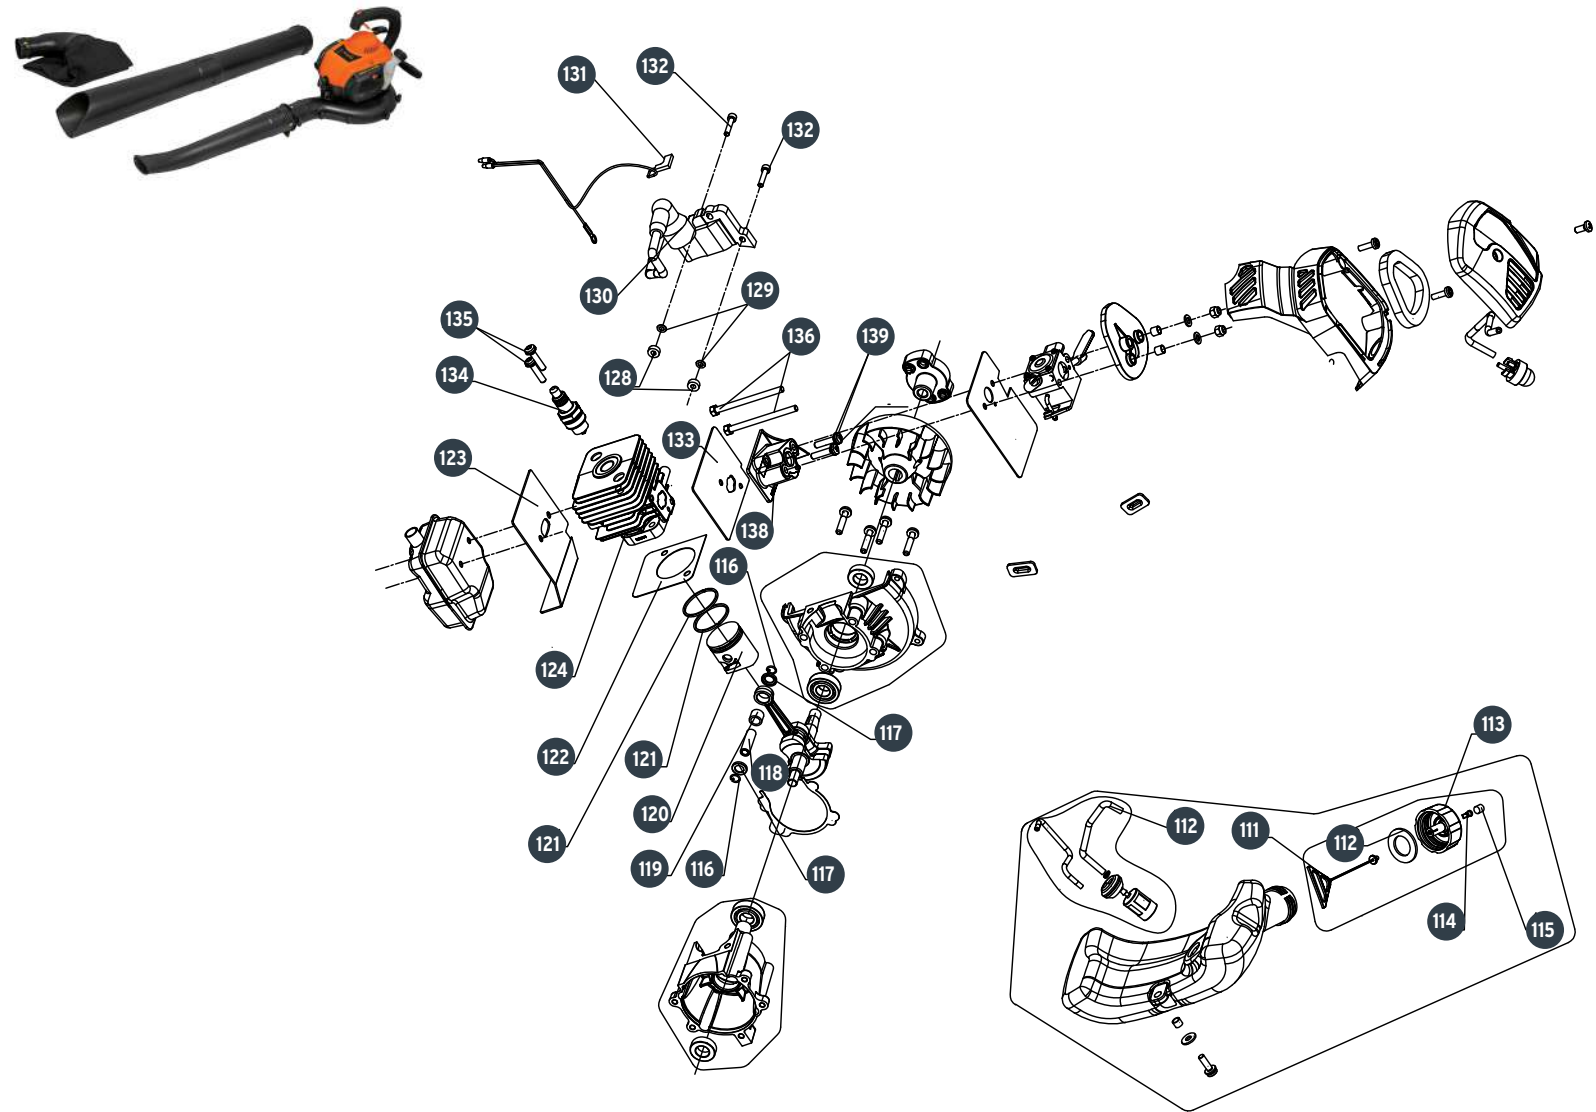

D



E

No.	Código	Clave	Descripción
141	936924	R141-SOPLA-26T	Junto de carburador
143	936925	R143-SOPLA-26T	Carburador
144	936926	R144-SOPLA-26T	Base de filtro de Aire
145	936927	R145-SOPLA-26T	Mangueras de gasolina
146	936928	R146-SOPLA-26T	Bulbo cebador
147	936929	R147-SOPLA-26T	Base de filtro de aire
148	936930	R148-SOPLA-26T	Buje 1
149	936931	R149-SOPLA-26T	Arandela Ø5
152	936932	R152-SOPLA-26T	Tuerca M5
153	936933	R153-SOPLA-26T	Filtro
154	936934	R154-SOPLA-26T	Cubierta de filtro de Aire
155	936935	R155-SOPLA-26T	Tornillo M5X14
156	ACC		Llave
157	ACC		Punta de Cruz
159	936936	R159-SOPLA-26T	Deflector
160	936937	R160-SOPLA-26T	Tornillo M4X12

E

