


A


No.	Código	Clave	Descripción
1	931363	R1-CLNE-18	Tornillo M4x14
2	931364	R2-CLNE-18	Buje de escape
3	931365	R3-CLNE-18	Escape de aire
4	931366	R4-CLNE-18	Tornillo M5x22
5	931367	R5-CLNE-18	Sello 7.8x1.9
6	931368	R6-CLNE-18	Tapa cilíndrica
7	931369	R7-CLNE-18	Calza
8	931370	R7-CLNE-18	Sello 13.6x2x4
9	931371	R8-CLNE-18	Junta de cilindro
10	931372	R10-CLNE-18	Resorte
11	931373	R11-CLNE-18	Pistón
12	931374	R12-CLNE-18	Sello 32.99x2.6
13	931375	R13-CLNE-18	Sello 27.3x3.55
14	931376	R14-CLNE-18	Sello 13.87x3.5
15	931377	R15-CLNE-18	Sello 40.3x2x5
16	931378	R16-CLNE-18	Collarín de soporte
17	931379	R17-CLNE-18	Sello 32.7x2.5
18	931380	R18-CLNE-18	Cilindro
19	931381	R19-CLNE-18	Sello 22x3
20	931382	R20-CLNE-18	Pistón guía
21	931383	R21-CLNE-18	Tope
22	931384	R22-CLNE-18	Mango
23	931385	R23-CLNE-18	Cuerpo
24	931386	R24-CLNE-18	Sello 35x3.9
25	931387	R25-CLNE-18	Tapa final

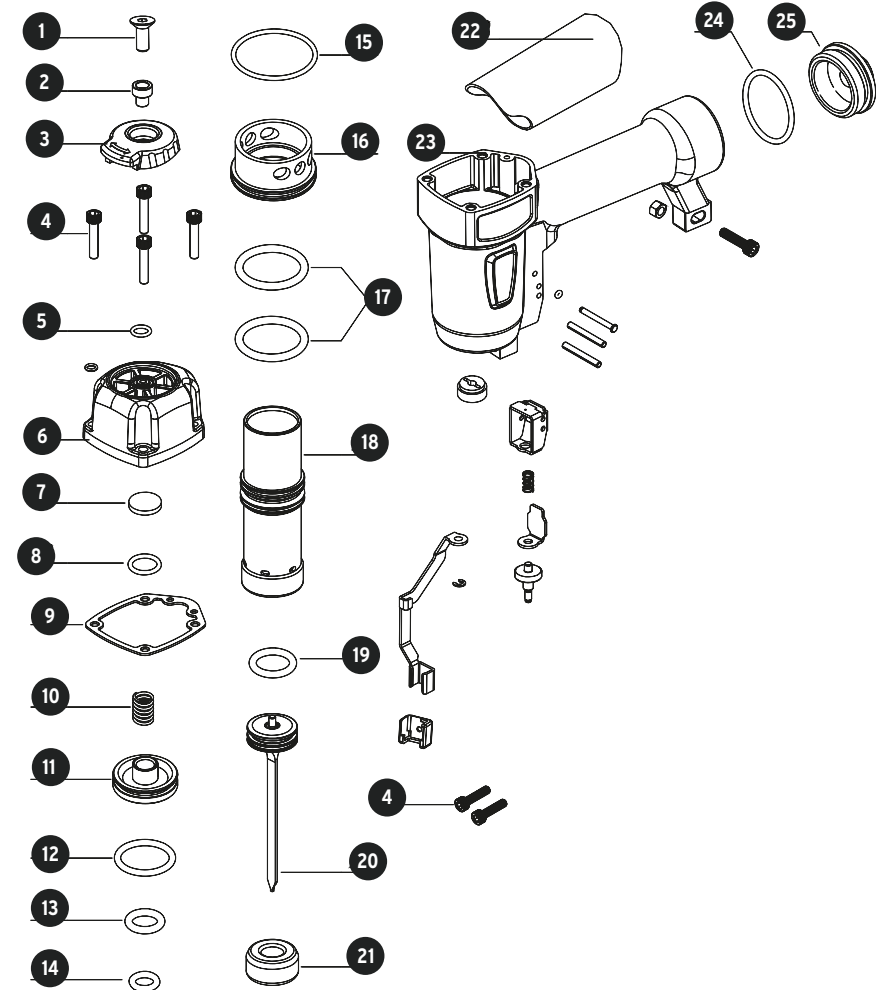

A

B

No.	Código	Clave	Descripción
26	931388	R26-CLNE-18	Conector de entrada de aire
27	931389	R27-CLNE-18	Boquilla
28	931390	R28-CLNE-18	Guía de seguridad
29	931391	R29-CLNE-18	Resorte
30	931392	R30-CLNE-18	Soporte de seguridad
31	931393	R31-CLNE-18	Biela de seguridad
32	931394	R32-CLNE-18	Seguro 2.5
33	931395	R33-CLNE-18	Impulsor
34	931396	R34-CLNE-18	Sello 1.2x1.9
35	931397	R35-CLNE-18	Perno 3x26
36	931398	R36-CLNE-18	Placa de gatillo
37	931399	R37-CLNE-18	Gatillo
38	931400	R38-CLNE-18	Perno 2x17
39	931401	R39-CLNE-18	Sello 12.5x8x1.5
40	931402	R40-CLNE-18	Válvula de gatillo
41	931403	R41-CLNE-18	Resorte
42	931404	R42-CLNE-18	Sello 2.2x1.5
43	931405	R43-CLNE-18	Vástago de válvula
44	931406	R44-CLNE-18	Guía de válvula
45	931407	R45-CLNE-18	Sello 11.2x1.9
46	931408	R46-CLNE-18	Tornillo M5x20
47	931409	R47-CLNE-18	Tuerca 5
48	931410	R48-CLNE-18	Tornillo M4x6
49	931411	R49-CLNE-18	Fijador
50	931412	R50-CLNE-18	Resorte

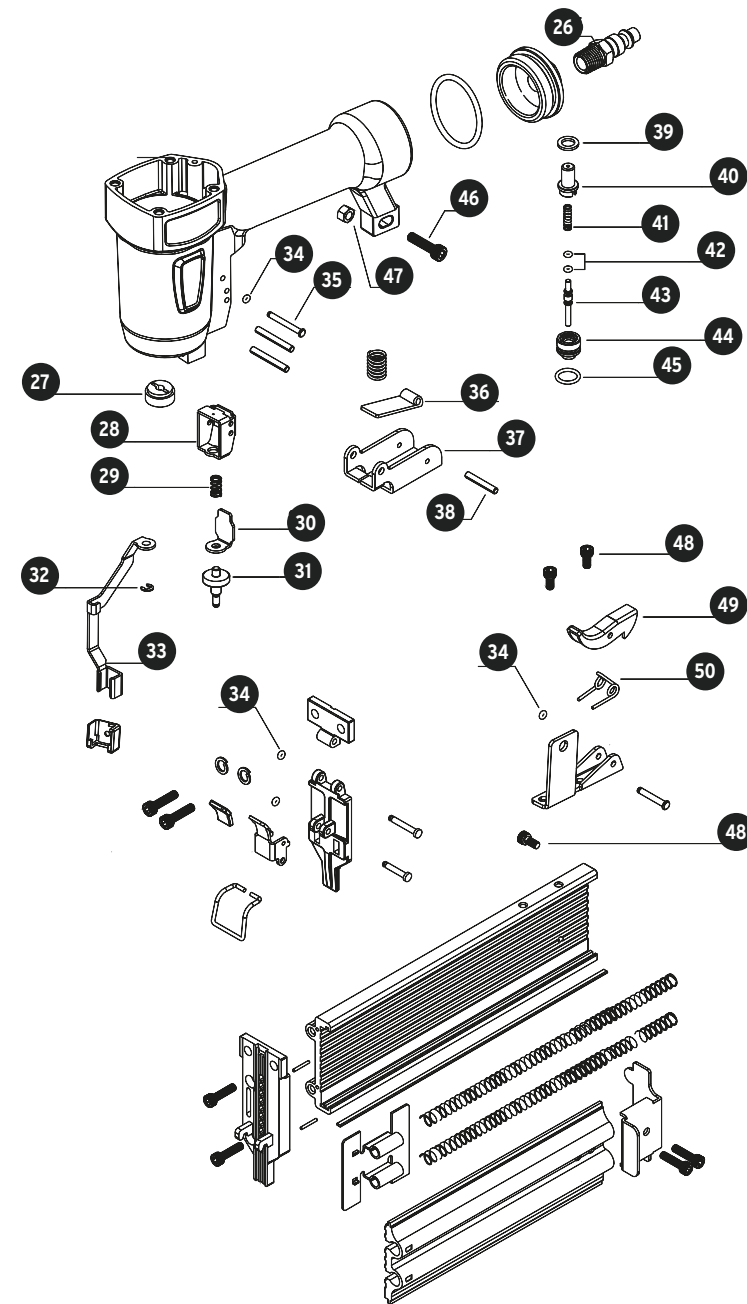


B

Si tienes dudas, llama a la
Línea de Comunicación Directa

800-0187-873 Exclusivo
para México

C

No.	Código	Clave	Descripción
51	931413	R51-CLNE-18	Soporte de cargador
52	931414	R52-CLNE-18	Perno 3x3.5
53	931415	R53-CLNE-18	Cargador fijo
54	931416	R54-CLNE-18	Tira
55	931417	R55-CLNE-18	Soporte trasero
56	931418	R56-CLNE-18	Cargador móvil
57	931419	R57-CLNE-18	Resorte
58	931420	R58-CLNE-18	Perno 2.5x12
59	931421	R59-CLNE-18	Unidad de empuje
60	931422	R60-CLNE-18	Perno 1.5x15
61	931423	R61-CLNE-18	Guía de controlador
62	931424	R62-CLNE-18	Espaciador
63	931425	R63-CLNE-18	Perno 3x18
64	931426	R64-CLNE-18	Perno 3x14.8
65	931427	R65-CLNE-18	Tapa guía
66	931428	R66-CLNE-18	Arandela de presión
67	931429	R67-CLNE-18	Pasador de liberación
68	931429	R68-CLNE-18	Arandela
69	931429	R69-CLNE-18	Muelle de torsión

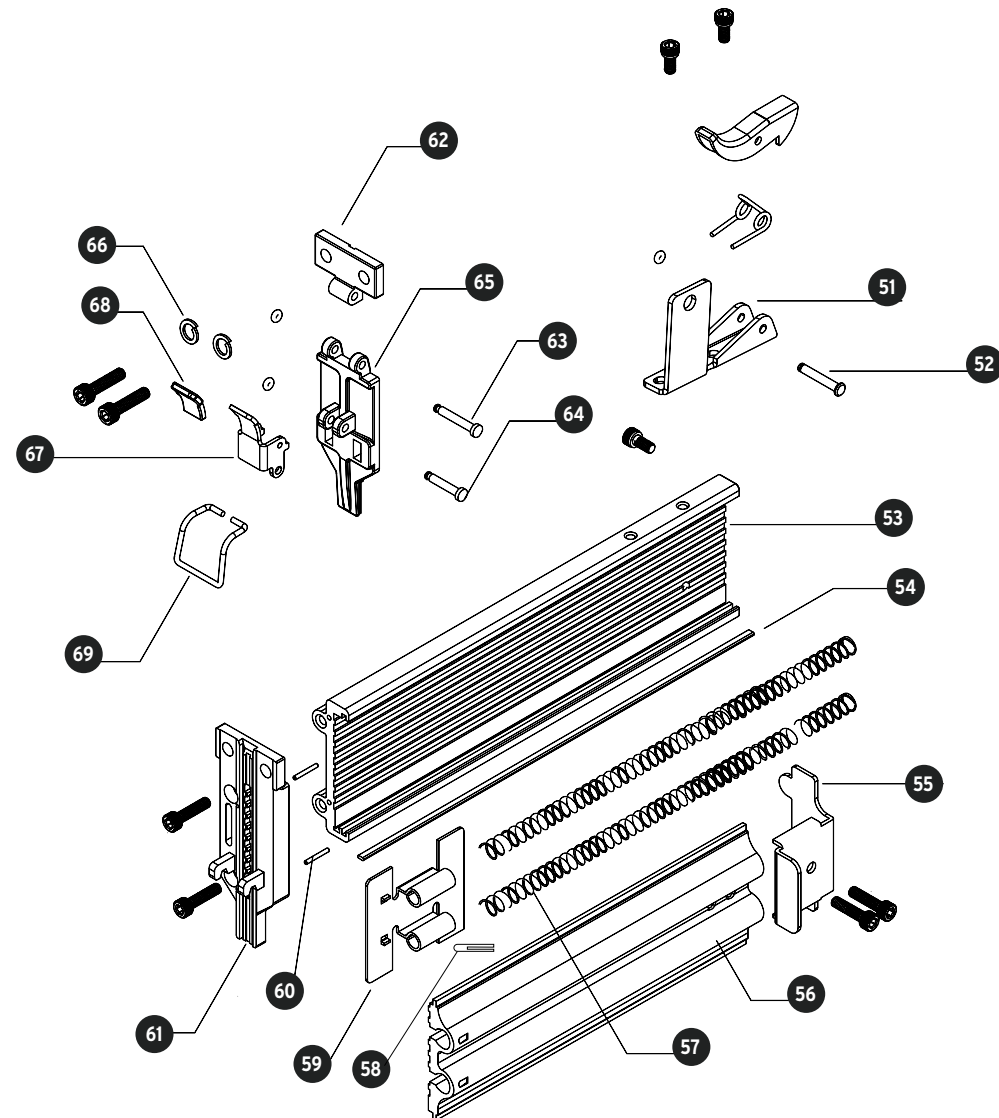

C