



A

No.	Código	Clave	Descripción
1	946856	R1-BOAJ-3/4I	Tornillo cabeza hex. M6x12
2	946857	R2-BOAJ-3/4I	Arandela M6
3	946858	R3-BOAJ-3/4I	Tornillo de drene
4	946859	R4-BOAJ-3/4I	Sello Ø8.2
5	946860	R5-BOAJ-3/4I	Cuerpo de bomba
6	946861	R6-BOAJ-3/4I	Sello empaque Ø26.3
7	946862	R7-BOAJ-3/4I	Conexión de difusor
8	946863	R8-BOAJ-3/4I	Tuerca hexagonal M10
9	946864	R9-BOAJ-3/4I	Difusor
10	946865	R10-BOAJ-3/4I	Arandela de presión M10
11	946866	R11-BOAJ-3/4I	Arandela plana M10
12	946867	R12-BOAJ-3/4I	Impulsor
13	946868	R13-BOAJ-3/4I	Sello de empaque Ø163
14	946869	R14-BOAJ-3/4I	Sello mecánico
15	946870	R15-BOAJ-3/4I	Soporte de empaque
16	946871	R16-BOAJ-3/4I	Empaque
17	946872	R17-BOAJ-3/4I	Tapa soporte de bomba </td
18	946873	R18-BOAJ-3/4I	Pata
19	946874	R19-BOAJ-3/4I	Tapón protector
20	946875	R20-BOAJ-3/4I	Balero de bolas 6302
21	946876	R21-BOAJ-3/4I	Cuñero
22	946877	R22-BOAJ-3/4I	Rotor
23	946878	R23-BOAJ-3/4I	Balero de bolas 6202
24	946879	R24-BOAJ-3/4I	Ensamble de campo
25	946880	R25-BOAJ-3/4I	Base de caja de conexiones
26	946881	R26-BOAJ-3/4I	Tornillo cabeza phillips M4x10

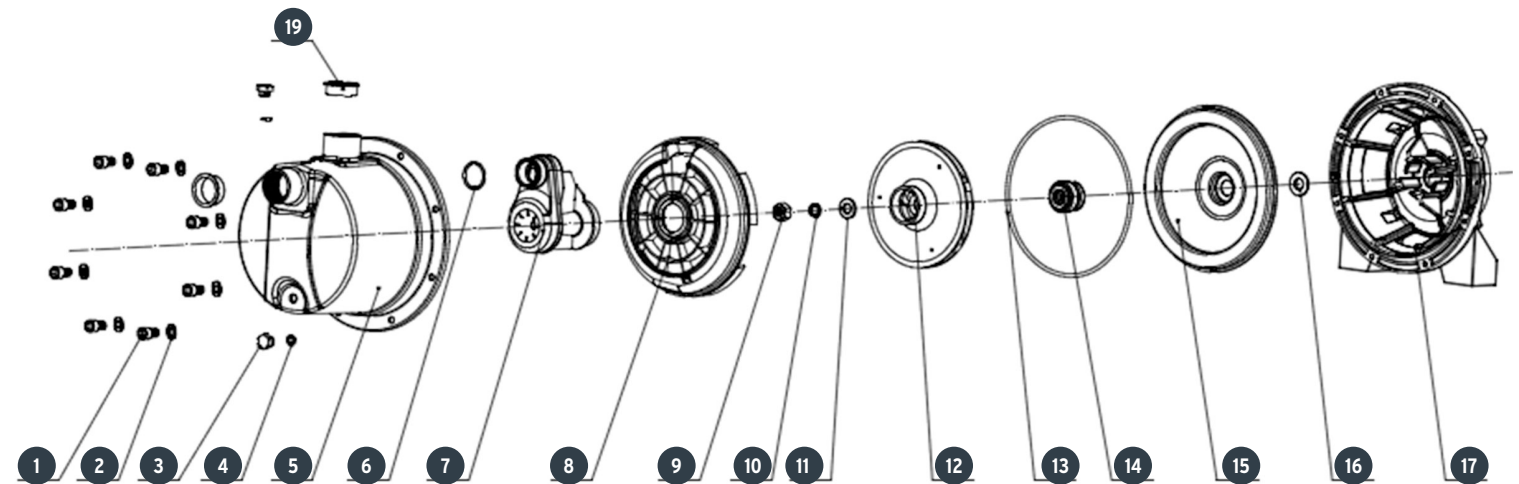


A

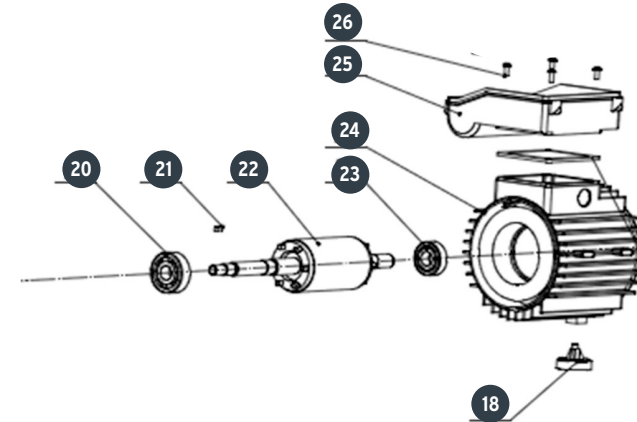

B

No.	Código	Clave	Descripción
27	946882	R27-BOAJ-3/4I	Tablero de conexiones
28	946883	R28-BOAJ-3/4I	Arandela plana M4
29	946884	R29-BOAJ-3/4I	Tornillo cabeza phillips M4x10
30	946885	R30-BOAJ-3/4I	Arandela plana para tablero M4
31	946886	R31-BOAJ-3/4I	Terminal de ojillo
32	946887	R32-BOAJ-3/4I	Tuerca hexagonal M4
33	946888	R33-BOAJ-3/4I	Capacidad 50F
34	946889	R34-BOAJ-3/4I	Empaque de caja de conexiones
35	946890	R35-BOAJ-3/4I	Tapa de caja de conexiones
36	946891	R36-BOAJ-3/4I	Tornillo cabeza phillips ST4x16
37	946892	R37-BOAJ-3/4I	Sello empaque
38	946893	R38-BOAJ-3/4I	Abrazadera
39	946894	R39-BOAJ-3/4I	Tornillo cabeza phillips M4x6
40	946895	R40-BOAJ-3/4I	Arandela de presión M4
41	946896	R41-BOAJ-3/4I	Arandela de seguridad M4
42	946897	R42-BOAJ-3/4I	Tornillo cabeza phillips ST4.2x11
43	946898	R43-BOAJ-3/4I	Opresor de cable
44	946899	R44-BOAJ-3/4I	Cable de alimentación
45	946900	R45-BOAJ-3/4I	Protector de cable
46	946901	R46-BOAJ-3/4I	Junta de tuerca
47	946902	R47-BOAJ-3/4I	Tuerca
48	946903	R48-BOAJ-3/4I	Arandela ondulada
49	946904	R49-BOAJ-3/4I	Tapa de motor
50	946905	R50-BOAJ-3/4I	Tornillo cabeza hexagonal M5x138
51	946906	R51-BOAJ-3/4I	Aspas de ventilador
52	946907	R52-BOAJ-3/4I	Tapa de ventilador
53	946909	R53-BOAJ-3/4I	Junta de caja de conexiones

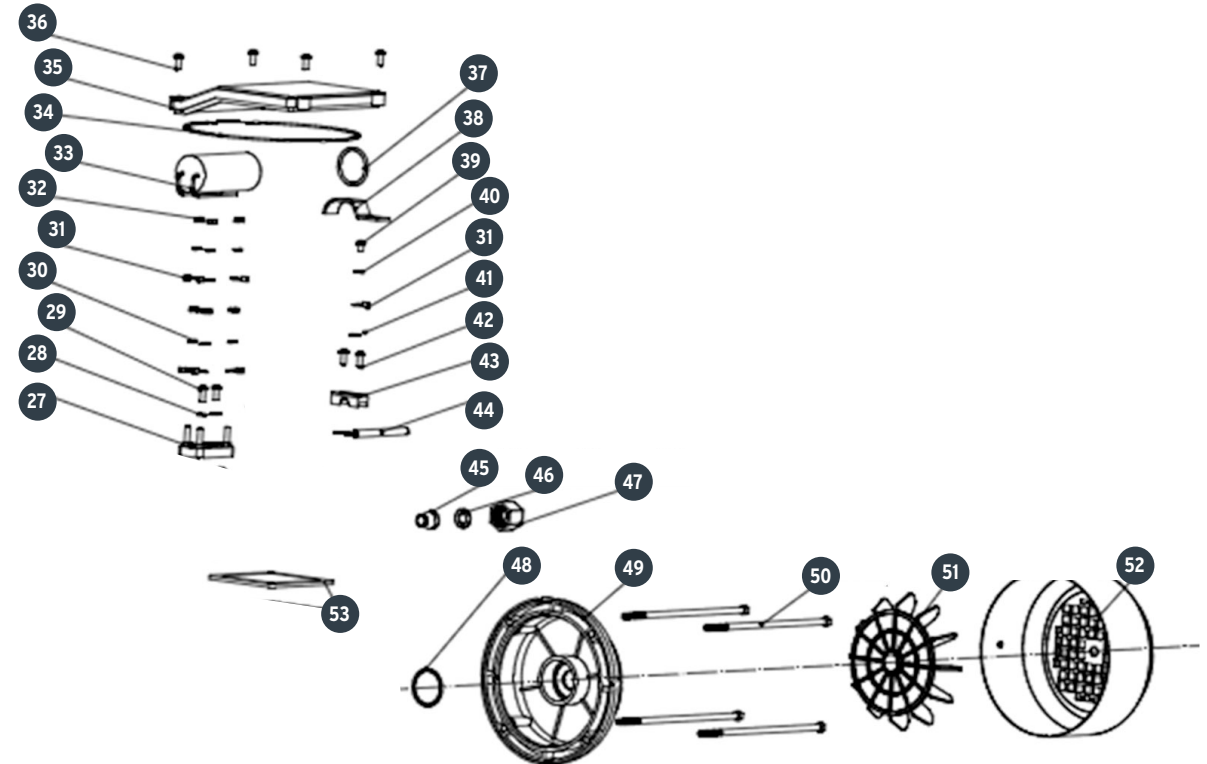

B

