


A

No.	Código	Clave	Descripción
1	905006	R1-SOT-300/250X	Cubierta
1.1	905007	R1.1-SOT-300/250X	Tornillo hexagonal 6x16
2	905008	R2-SOT-300/250X	Cuadro
2.4	905009	R2.4-SOT-300/250X	Sello de hule
3	903335	R3-SOT-300/250X	Ventilador
3.1	905010	R3.1-SOT-300/250X	Tornillo M5x25
3.2	905011	R3.2-SOT-300/250X	Rondana plana Ø5
3.3	905012	R3.3-SOT-300/250X	Rondana de nylon
3.4	905013	R3.4-SOT-300/250X	Protector de nylon
3.5	905014	R3.5-SOT-300/250X	Rondana de presión Ø5
3.6	905015	R3.6-SOT-300/250X	Tuerca M5
4	905016	R4-SOT-300/250X	Protector de ventilador
5	905017	R5-SOT-300/250X	Panel trasero
6	905018	R6-SOT-300/250X	Cubierta de tablero
6.1	905019	R6.1-SOT-300/250X	Tornillo St4.2x10
7	905020	R7-SOT-300/250X	Tablero de conexiones
8	903322	R8-SOT-300/250X	Reactor
8.1	905021	R8.1-SOT-300/250X	Tornillo hexagonal M8x25
8.2	905022	R8.2-SOT-300/250X	Rondana plana Ø8
8.3	905023	R8.3-SOT-300/250X	Rondana de presión Ø8
8.4	905024	R8.4-SOT-300/250X	Tuerca M8
9	905025	R9-SOT-300/250X	Larguero izquierdo
10	905026	R10-SOT-300/250X	Soporte derecho
11	905027	R11-SOT-300/250X	Cubierta lateral derecha
12	903334	R12-SOT-300/250X	Rueda trasera
12.1	905028	R12.1-SOT-300/250X	Tuerca M12
12.2	905029	R12.2-SOT-300/250X	Rondana plana Ø12
12.3	905030	R12.3-SOT-300/250X	Soporte de las ruedas
13	905031	R13-SOT-300/250X	Base
13.1	903333	R13.1-SOT-300/250X	Resorte
14	903332	R14-SOT-300/250X	Rueda delantera
14.1	905032	R14.1-SOT-300/250X	Tornillo hexagonal M6x16
14.2	905033	R14.2-SOT-300/250X	Rondana de presión Ø6
14.3	905034	R14.3-SOT-300/250X	Rondana plana Ø6
15	905035	R15-SOT-300/250X	Cubierta frontal
16	903328	R16-SOT-300/250X	Indicador luminoso
16.1	905036	R16.1-SOT-300/250X	Terminales
17	903331	R17-SOT-300/250X	Borne
17.2	905037	R17.2-SOT-300/250X	Tuerca M6
18	903329	R18-SOT-300/250X	Interruptor
18.1	905028	R18.1-SOT-300/250X	Tornillo M5x12
18.3	905039	R18.3-SOT-300/250X	Base de interruptor
19.1.1	903329	R19.1.1-SOT-300/250X	Bobina primaria 1
19.1.2	903140	R19.1.2-SOT-300/250X	Bobina primaria 2
19.1.3	903128	R19.1.3-SOT-300/250X	Bobina secundaria 1
19.1.4	903127	R19.1.4-SOT-300/250X	Bobina secundaria2
19.1.5	905040	R19.1.5-SOT-300/250X	Laminación del transformador

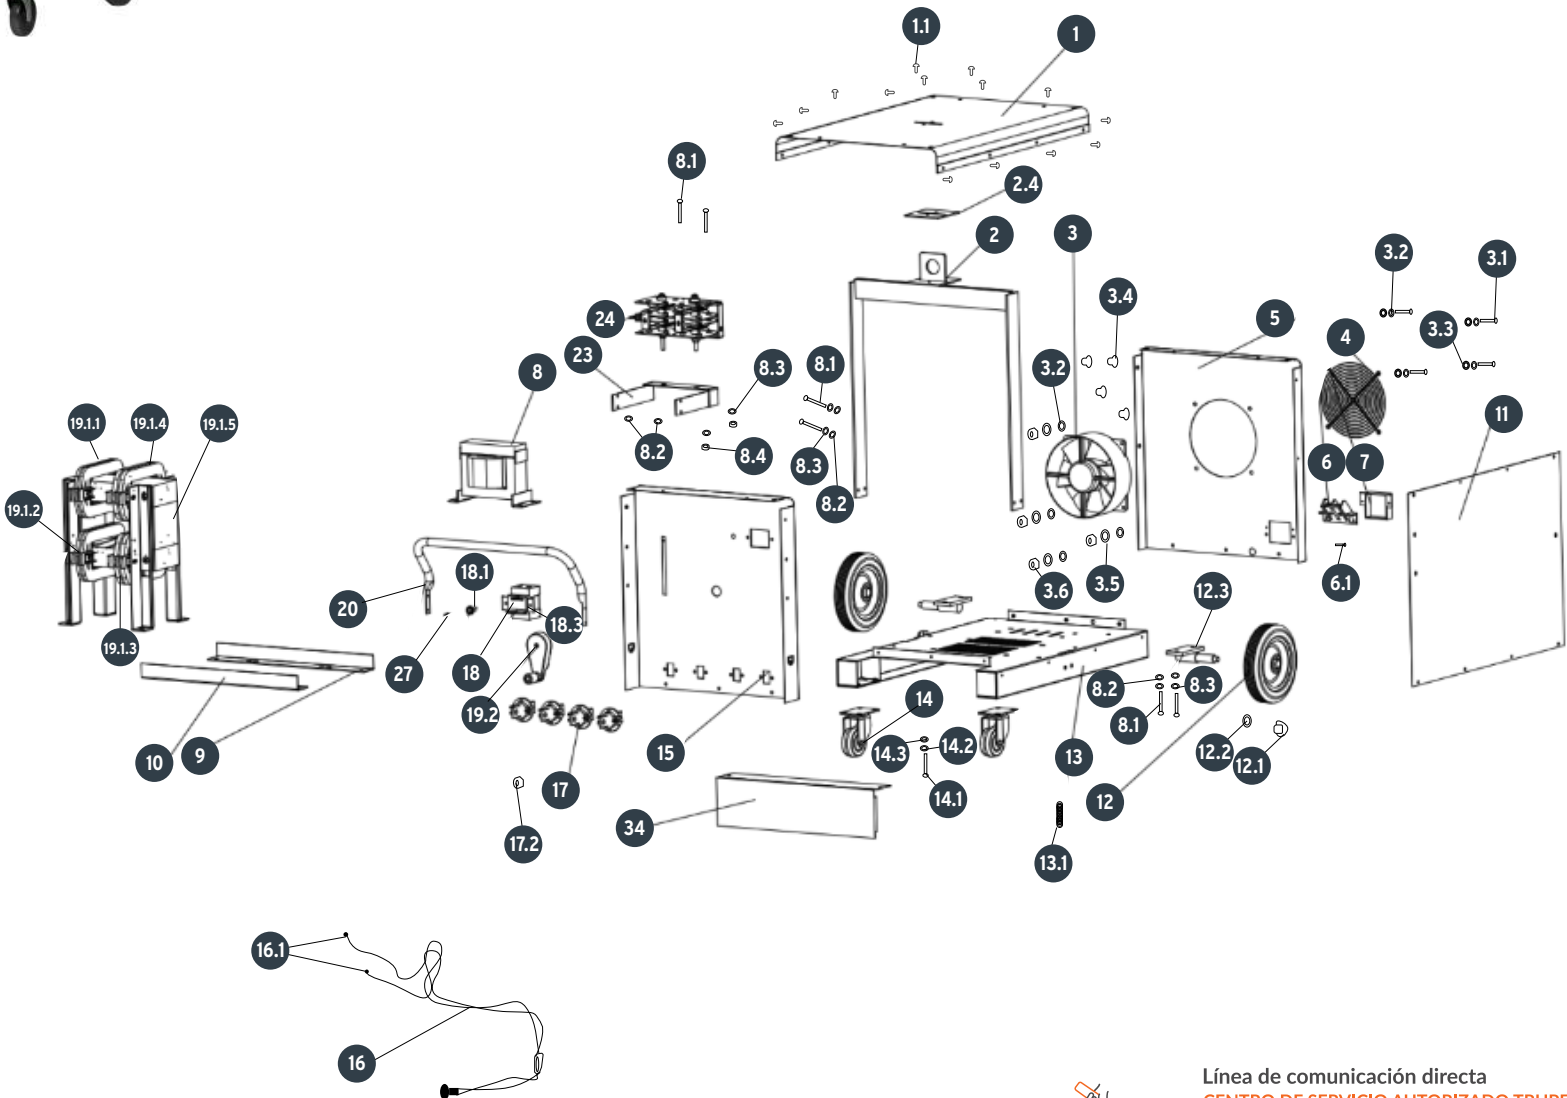

A



B	No.	Código	Clave	Descripción
	19.2	903324	R19.2-SOT-300/250X	Shunt
	19.2.1	905041	R19.2.1-SOT-300/250X	División de laminación del shunt
	19.2.2	905042	R19.2.2-SOT-300/250X	Aislante
	19.2.3	905043	R19.2.3-SOT-300/250X	Bloque guía
	19.2.4	905044	R19.2.4-SOT-300/250X	Cubierta de bloque de guía
	19.2.5	905045	R19.2.5-SOT-300/250X	Placa del guía
	19.2.6	90506	R19.2.6-SOT-300/250X	Tornillo hexagonal M8x65
	19.2.7	905047	R19.2.7-SOT-300/250X	Cuña
	19.2.8	905048	R19.2.8-SOT-300/250X	Fibra roja
	19.2.9	905049	R19.2.9-SOT-300/250X	Tornillo hexagonal M8x40
	19.2.10	905050	R19.2.10-SOT-300/250X	Rondana de fibra
	19.2.11	905051	R19.2.11-SOT-300/250X	Resorte
	19.2.12	905052	R19.2.12-SOT-300/250X	Laminación de shunt
	19.2.13	905053	R19.2.13-SOT-300/250X	División laminación shunt
	19.3	903325	R19.3-SOT-300/250X	Tornillo de ajuste
	19.3.1	905054	19.3.1-SOT-300/250X	Tornillo M10x25
	19.3.2	905055	R19.3.2-SOT-300/250X	Rondana de presión Ø10
	19.3.3	905056	R19.3.3-SOT-300/250X	Rondana plana Ø10
	19.3.4	905057	R19.3.4-SOT-300/250X	Tornillo M10x35
	19.4	903326	R19.4-SOT-300/250X	Guía del shunt
	19.5	905058	R19.5-SOT-300/250X	Cubierta aisladora
	19.5.1	905059	R19.5.1-SOT-300/250X	Tornillo M6x25
	19.6	905060	R19.6-SOT-300/250X	Panel de ajuste del shunt
	19.7	905061	R19.7-SOT-300/250X	Soporte del transformador "A"
	19.8	905062	R19.8-SOT-300/250X	Soporte del transformador "B"
	19.9	905063	R19.9-SOT-300/250X	Perno roscado
	19.10	905064	R19.10-SOT-300/250X	Rondana de fibra
	19.11	905065	R19.11-COMP-120LH	Rondana plana Ø10
	19.12	905066	R19.12-COMP-120LH	Tuerca M10
	19.13	905067	R19.13-SOT-300/250X	Placa soporte
	19.14	905068	R19.14-SOT-300/250X	Tornillo cabeza hexagonal M8x80
	19.15	905060	R19.15-SOT-300/250X	Tubo de fibra
	19.16	905070	R19.16-SOT-300/250X	Separador de fibra
	20	903330	R20-SOT-300/250X	Volante
	21	903327	R21-SOT-300/250X	Polea
	21.1	905071	R21.1-SOT-300/250X	Tornillo M5x16
	22	905072	R22-SOT-300/250X	Indicador de corriente
	22.1	905073	R22.1-SOT-300/250X	Cable de rectificador
	23	905074	R23-SOT-300/250X	Soporte de rectificador
	24	903321	R24-SOT-300/250X	Rectificador
	25	905075	R25-SOT-300/250X	Cubierta latera izquierda
	26	905076	R26-SOT-300/250X	Set terminales interruptor
	27	905077	R27-SOT-300/250X	Manubrio
	30	905080	R30-SOT-300/250X	Terminal A
	30.1	905081	R30.1-SOT-300/250X	Rondana plana M8
	31	905082	R31-SOT-300/250X	Terminal B
	32	905083	R32-SOT-300/250X	Terminal C
	33	905084	R33-SOT-300/250X	Terminal D
	34	905085	R34-SOT-300/250X	Tapa de bornes

