

No.	Código	Clave	Descripción
1	934316	R1-LIRO-5A	Carcasa derecha
2	934317	R2-LIRO-5A	Carcasa izquierda
3	934318	R3-LIRO-5A	Campo
4	934319	R4-LIRO-5A	Armadura
7	934320	R7-LIRO-5A	Balero de bolas 626
8	934321	R8-LIRO-5A	Porta carbón
9	934322	R9-LIRO-5A	Carbón
10	934323	R10-LIRO-5A	Opresor de cable
11	934324	R11-LIRO-5A	Tornillo
12	934325	R12-LIRO-5A	Protector de cable
13	934326	R13-LIRO-5A	Cable de alimentación
14	934327	R14-LIRO-5A	Protector de interruptor
15	934328	R15-LIRO-5A	Interruptor
16	934329	R16-LIRO-5A	Balero de bolas 629
17	934330	R17-LIRO-5A	Ventilador para polvo
18	934331	R18-LIRO-5A	Soporte de balero
19	934332	R19-LIRO-5A	Balero 6002
20	934333	R20-LIRO-5A	Anillo de freno
21	934334	R21-LIRO-5A	Arandela
22	934335	R22-LIRO-5A	Tornillo
23	934336	R23-LIRO-5A	Cojinete de base
26	934337	R26-LIRO-5A	Tornillo con arandela
27	934338	R27-LIRO-5A	Tornillo
28	934339	R28-LIRO-5A	Bolsa para polvo
29	934340	R29-LIRO-5A	Soporte para bolsa
30	934341	R30-LIRO-5A	Arnés 1
31	934342	R31-LIRO-5A	Arnés 2
32	934343	R32-LIRO-5A	Arnés 3

