



A

No.	Código	Clave	Descripción
1	940162	R1-COMP-180LV	Tornillo M6X45
2	940163	R2-COMP-180LV	Rondana de presión 6
3	940164	R3-COMP-180LV	Conector
4	940165	R4-COMP-180LV	Tapa de cilindro
5	940166	R5-COMP-180LV	Junta de tapa de cilindro
6	940167	R6-COMP-180LV	Placa de válvula
7	940168	R7-COMP-180LV	Hoja de válvula
8	940169	R8-COMP-180LV	Junta
9	940170	R9-COMP-180LV	Junta de válvula
10	940171	R10-COMP-180LV	Cilindro
11	940172	R11-COMP-180LV	Junta de cilindro
12	940173	R12-COMP-180LV	Anillo de pistón
13	940174	R13-COMP-180LV	Anillo de aceite
14	940175	R14-COMP-180LV	Pistón
15	940176	R15-COMP-180LV	Perno de pistón
16	940177	R16-COMP-180LV	Seguro C
17	940178	R17-COMP-180LV	Biela
18	940179	R18-COMP-180LV	Tapón de plástico
19	940180	R19-COMP-180LV	Cárter
19.1	940181	R19.1-COMP-180LV	Tapón de aceite
20	940182	R20-COMP-180LV	Conector
21	940183	R21-COMP-180LV	Nivel de aceite
22	940184	R22-COMP-180LV	Tornillo de drenado de aceite
23	940185	R23-COMP-180LV	Tuerca M8r
24	940186	R24-COMP-180LV	Rondana de presión 8
25	940187	R25-COMP-180LV	Perno M8X32
26	940188	R26-COMP-180LV	Balero 6204-2RS
27	940189	R27-COMP-180LV	Cigüeñal
28	940190	R28-COMP-180LV	Balero 6205-2RS
29	940191	R29-COMP-180LV	Sello de aceite
30	940192	R30-COMP-180LV	Soporte de guarda
31	940193	R31-COMP-180LV	Soporte balero
32	940194	R32-COMP-180LV	Tornillo M8X25
33	940195	R33-COMP-180LV	Motor
34	940196	R34-COMP-180LV	Capacitor de arranque

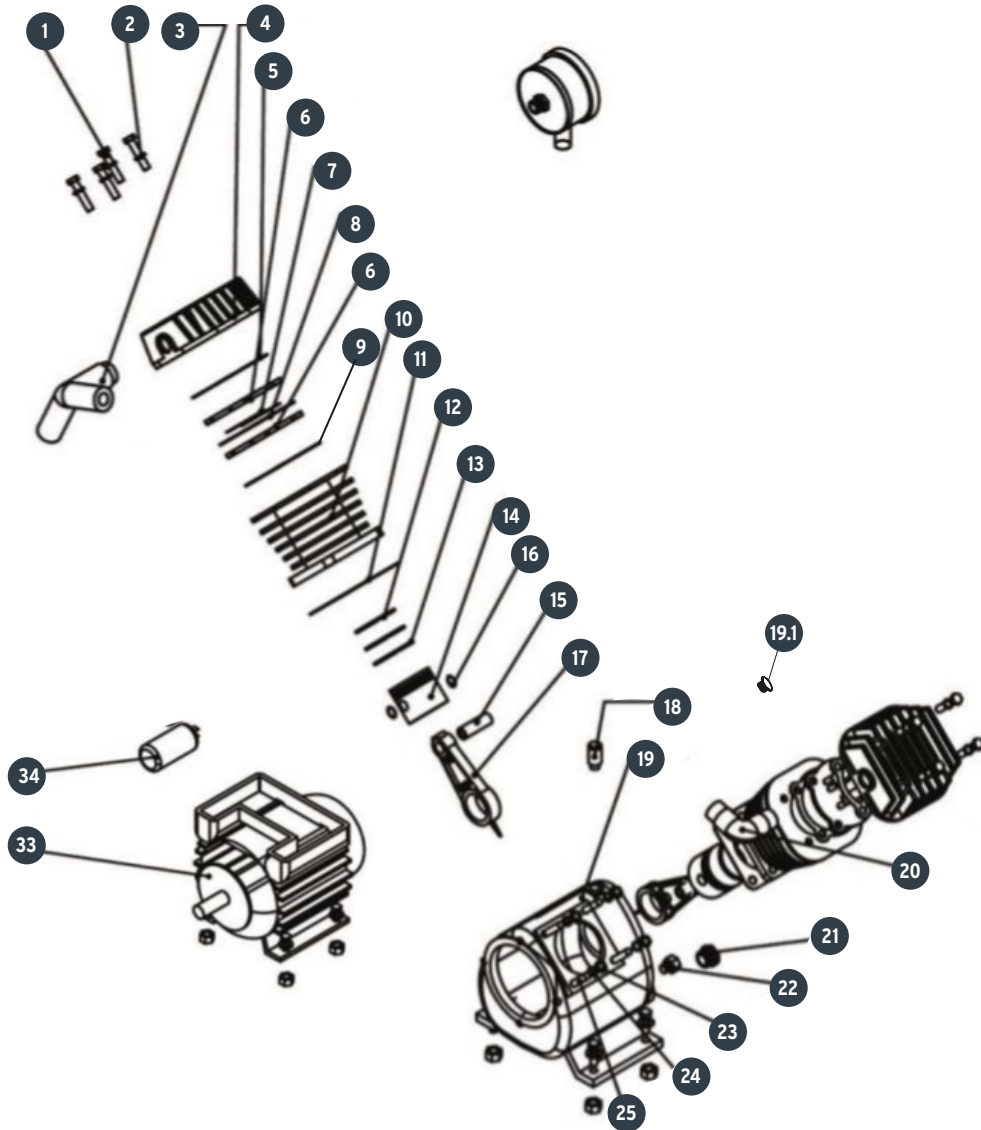

B	No.	Código	Clave	Descripción
	35	940197	R35-COMP-180LV	Capacitor de trabajo
	36	940198	R36-COMP-180LV	Cubierta de capacitor
	37	940199	R37-COMP-180LV	Tornillo ST3.9X16
	38	940200	R38-COMP-180LV	Interruptor de sobrecarga
	39	940201	R39-COMP-180LV	Tubo de descarga
	40	940202	R40-COMP-180LV	Valvula antiretorno
	41	940203	R41-COMP-180LV	Conector
	42	940204	R42-COMP-180LV	Tubo de alivio
	43	940205	R43-COMP-180LV	Tanque
	44	940206	R44-COMP-180LV	Polea de motor
	45	940207	R45-COMP-180LV	Arandela 8
	46	940208	R46-COMP-180LV	Tornillo M8X30
	47	940209	R47-COMP-180LV	Tornillo M5X35
	48	940210	R48-COMP-180LV	Arandela 5
	49	940211	R49-COMP-180LV	Soporte de plástico
	50	940212	R50-COMP-180LV	Guarda
	51	940213	R51-COMP-180LV	Banda
	52	940214	R52-COMP-180LV	Polea de compresor
	53	940215	R53-COMP-180LV	Drenaje de tanque
	57	940216	R57-COMP-180LV	Cable
	58	940217	R58-COMP-180LV	Tuerca
	59	940218	R59-COMP-180LV	Válvula reguladora
	60	940219	R60-COMP-180LV	Válvula de salida
	61	940220	R61-COMP-180LV	Válvula de seguridad
	62	940221	R62-COMP-180LV	Manómetro
	63	940222	R63-COMP-180LV	Presostato
	64	940223	R64-COMP-180LV	Filtro de aire
	65	940224	R65-COMP-180LV	Tubo conector
	66	940225	R66-COMP-180LV	Cable
	67	940226	R67-COMP-180LV	Salida 3/4
	68	940227	R68-COMP-180LV	Arandela Plana Ø 8.17 mm
	69	940228	R69-COMP-180LV	Tornillo Ø 8 x 35 mm
	70	940229	R70-COMP-180LV	Arandela Plana Ø 8 mm

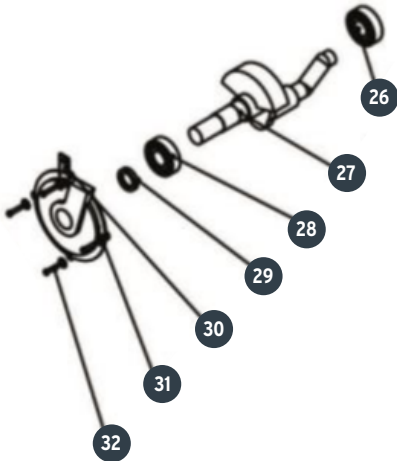