
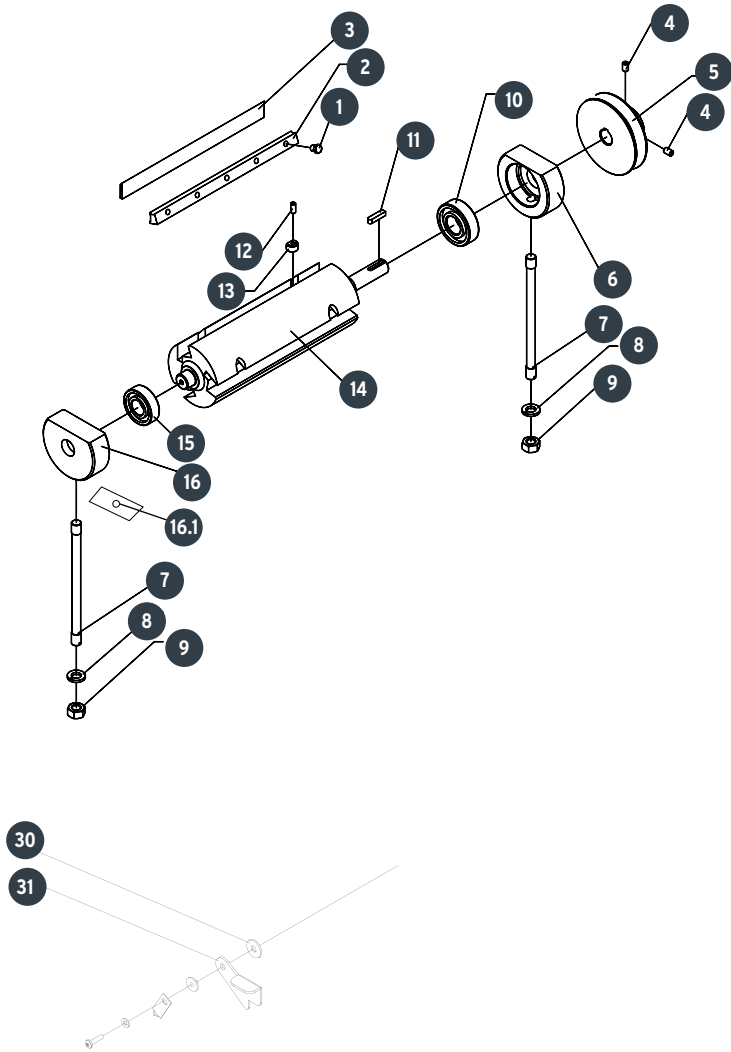
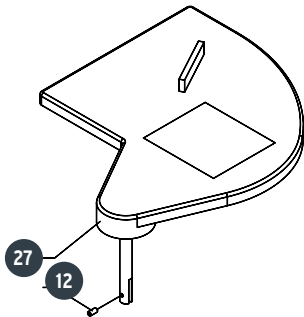



A

No.	Código	Clave	Descripción
1	903503	R1-CANT-8X	Tornillo hexagonal M6x7 mm
2	903504	R2-CANT-8X	Contracuchilla
3	16547	R3-CANT-8X	Cuchillas para CANT-8X
4	906523	R4-CANT-8X	Prisionero M6x10 mm
5	903505	R5-CANT-8X	Polea
6	906524	R6-CANT-8X	Cubierta de balero derecha
7	906525	R7-CANT-8X	Perno prisionero
8	906526	R8-CANT-8X	Rondana presión 10 mm
9	906627	R9-CANT-8X	Tuerca presión M10
10	903506	R10-CANT-8X	Balero de bolas 6204RZ
11	906528	R11-CANT-8X	Cuña 5x30
12	906529	R12-CANT-8X	Prisionero M5x12 mm
13	906530	R13-CANT-8X	Tuerca especial M5
14	906531	R14-CANT-8X	Cabeza de corte
15	903507	R15-CANT-8X	Balero de bolas 6203-2RZ
16	906532	R16-CANT-8X	Cubierta de balero izquierda
16.1	906533	R16.1-CANT-8X	Lamina
17	906534	R17-CANT-8X	Tornillo M6x12 mm
18	906535	R18-CANT-8X	Rondana plana 6 mm
19	906536	R19-CANT-8X	Perilla
20	906537	R20-CANT-8X	Prisionero 6x6 mm
21	906538	R21-CANT-8X	Buje
22	906539	R22-CANT-8X	Rondana plana 12 mm
23	906540	R23-CANT-8X	Rondana plana 11 mm
24	906541	R24-CANT-8X	Tornillo de ajuste
25	906542	R25-CANT-8X	Soporte
26	906543	R26-CANT-8X	Rondana de presión
27	906544	R27-CANT-8X	Tornillo allena 8x35 mm
30	906545	R30-CANT-8X	Guarda de cabeza
31	906076	R29-CANT-6X-1	Espaciador

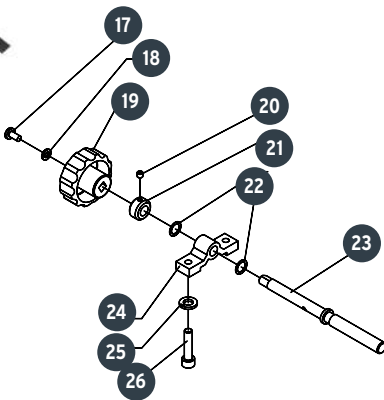

B

No.	Código	Clave	Descripción
32	906547	R32-CANT-8X	Espaciador
33	906548	R33-CANT-8X	Indicador
34	906549	R34-CANT-8X	Rondana plana 4 mm
35	90650	R35-CANT-8X	Tornillo 4x15 mm
36	90651	R36-CANT-8X	Tornillo allen 8x30 mm
38	90652	R38-CANT-8X	Perno prisionero 4x25 mm
39	906553	R39-CANT-8X	Perno prisionero 4x20 mm
40	906554	R40-CANT-8X	Escala
41	906555	R41-CANT-8X	Rondana de seguridad 5 mm
42	906556	R42-CANT-8X	Tornillo cbz cilíndrica M5x16
43	906557	R43-CANT-8X	Rondana retén
44	906558	R44-CANT-8X	Resorte de torsión
45	906559	R45-CANT-8X	Perilla de resorte
46	906560	R46-CANT-8X	Anillo retén
47	906561	R47-CANT-8X	Tornillo M5x18 mm
48	906562	R48-CANT-8X	Eje
49	906563	R49-CANT-8X	Ensamble de palanca de seguridad
50	906564	R50-CANT-8X	Barra de palanca
51	906565	R51-CANT-8X	Perilla
52	906566	R52-CANT-8X	Tuerca hex. M14
53	906567	R53-CANT-8X	Tornillo hex. especial M8x16 mm
54	906568	R54-CANT-8X	Barra
55	906569	R55-CANT-8X	Eje
55.1	906570	R55.1-CANT-8X	Tapón de hule
56	906571	R56-CANT-8X	Anillo retenedor 15 mm
57	906572	R57-CANT-8X	Bloque
58	906573	R58-CANT-8X	Unión
59	906574	R59-CANT-8X	Anillo retenedor 5 mm
60	906575	R60-CANT-8X	Soporte
63	906576	R63-CANT-8X	Eje

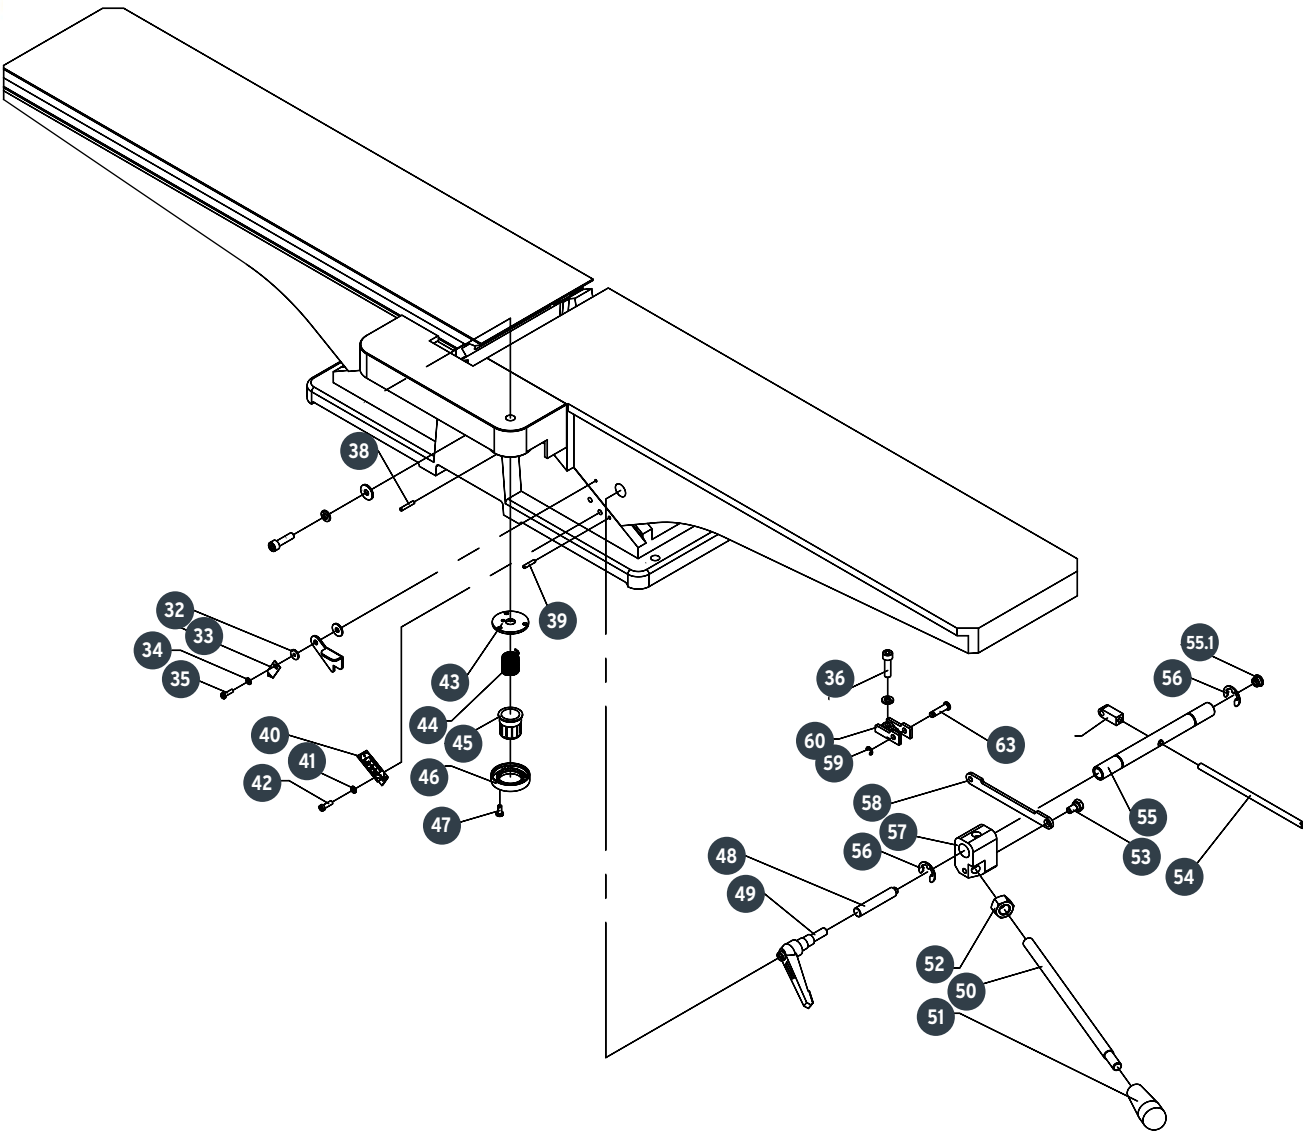


B



C

No.	Código	Clave	Descripción
64	906577	R64-CANT-8X	Conector
65A	906578	R65A-CANT-8X	Mesa de salida
65B	906579	R65B-CANT-8X	Mesa de alimentación
65C	906580	R65C-CANT-8X	Base
65D	906581	R65D-CANT-8X	Unión de la mesa
65.1	906582	R65.1-CANT-8X	Perno de presión 5x25 mm
66	906583	R66-CANT-8X	Chavetas
67	906584	R67-CANT-8X	Prisionero M6x25 mm
68	906585	R68-CANT-8X	Tuerca hexagonal M6
69	906586	R69-CANT-8X	Tornillo de manija
70	906587	R70-CANT-8X	Tornillo tope
71	906588	R71-CANT-8X	Tuerca hexagonal M8
72	906589	R72-CANT-8X	Bloque
74	906590	R74-CANT-8X	Prisionero M8x25 mm
76	906591	R76-CANT-8X	Ensamble de palanca de seguridad
77	906592	R77-CANT-8X	Bloque de empuje
265	906593	R84-CANT-8X	Soporte de interruptor
87	906594	R85-CANT-8X	Tornillo allen
86	906595	R86-CANT-8X	Rondana de presión
85	906596	R87-CANT-8X	Rondana plana 8 mm
90	906597	R88-CANT-8X	Anillo retenedor 5 mm
89	906598	R89-CANT-8X	Bloque calibrador de la cuchilla
88	906599	R90-CANT-8X	Barra calibrador de la cuchilla
101	906600	R101-CANT-8X	Ensamble de palanca
102	903508	R102-CANT-8X	Perilla
103	906601	R03-CANT-8X	Prisionero M6x8 mm
104	906602	R104-CANT-8X	Tornillo alle M8x20
107	906603	R107-CANT-8X	Soporte de la cubierta
109	906604	R107-CANT-6X-1	Tornillo allen M8xt35 mm

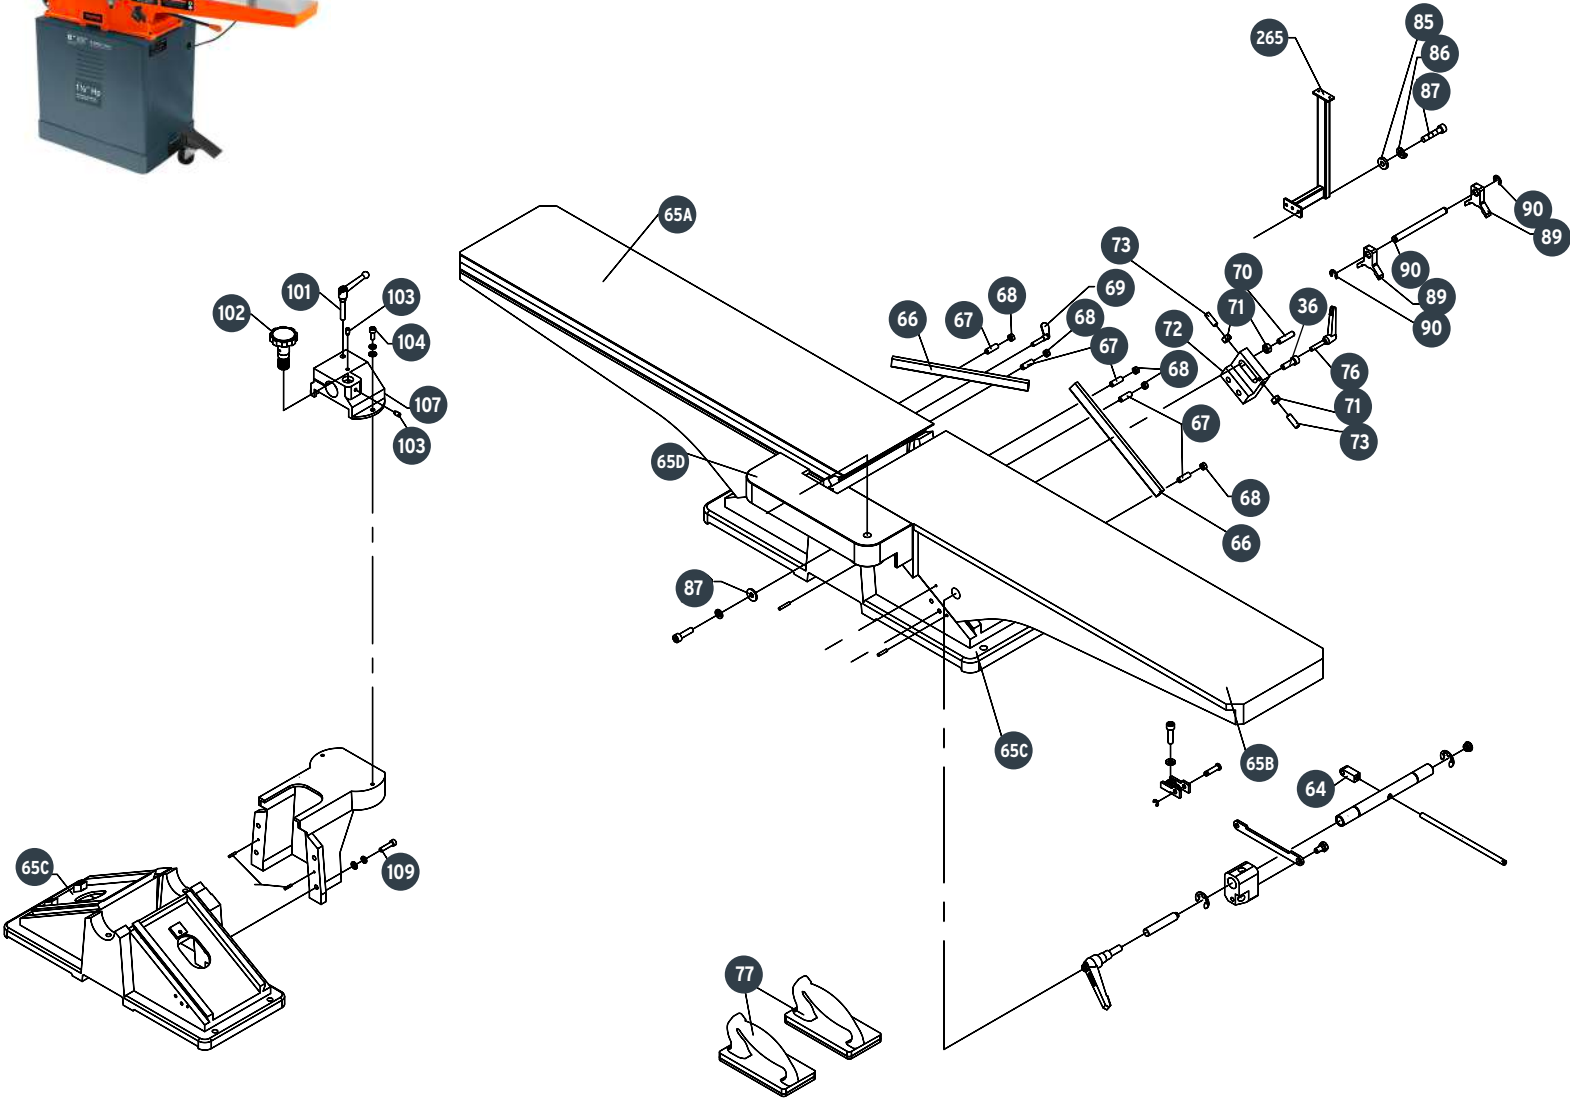


C



D

No.	Código	Clave	Descripción
112	906605	R112-CANT-8X	Soporte de guarda
112.1	906606	R112.1-CANT-8X	Perno presión 4x25 mm
113	906607	R113-CANT-8X	Vástago
114	906608	R114-CANT-8X	Tornillo allen M8x25 mm
117	906609	R117-CANT-8X	Guarda
118	906610	R118-CANT-8X	Rondana de presión 6 mm
119	906611	R119-CANT-8X	Tornillo 6x12 mm
120	906612	R120-CANT-8X	Rondana plana 10 mm
121	906613	R121-CANT-8X	Tuerca especial
122	906614	R122-CANT-8X	Empaque de hule M6
123	906615	R123-CANT-8X	Varilla de seguridad
124	906616	R124-CANT-8X	Tornillo hexagonal M8x25 mm
126	906617	R126-CANT-8X	Perno
127	906618	R127-CANT-8X	Soporte derecho
127.1	906619	R127.1-CANT-8X	Prisionero M6x16 mm
129	906620	R129-CANT-8X	Soporte de la guía
130	906621	R130-CANT-8X	Tope
131	906622	R131-CANT-8X	Rondana plana 10 mm
132	906623	R132-CANT-8X	Tornillo hexagonal M8x16 mm
135	906624	R135-CANT-8X	Soporte izquierdo
136	906625	R136-CANT-8X	Tornillo especial
137	906626	R137-CANT-8X	Tornillo allen M6x20 mm
138	906627	R138-CANT-8X	Abrazadera post.
141	906628	R141-CANT-8X	Soporte
142	906629	R142-CANT-8X	Perilla
143	906630	R143-CANT-8X	Barra de palanca
144	906631	R144-CANT-8X	Guía


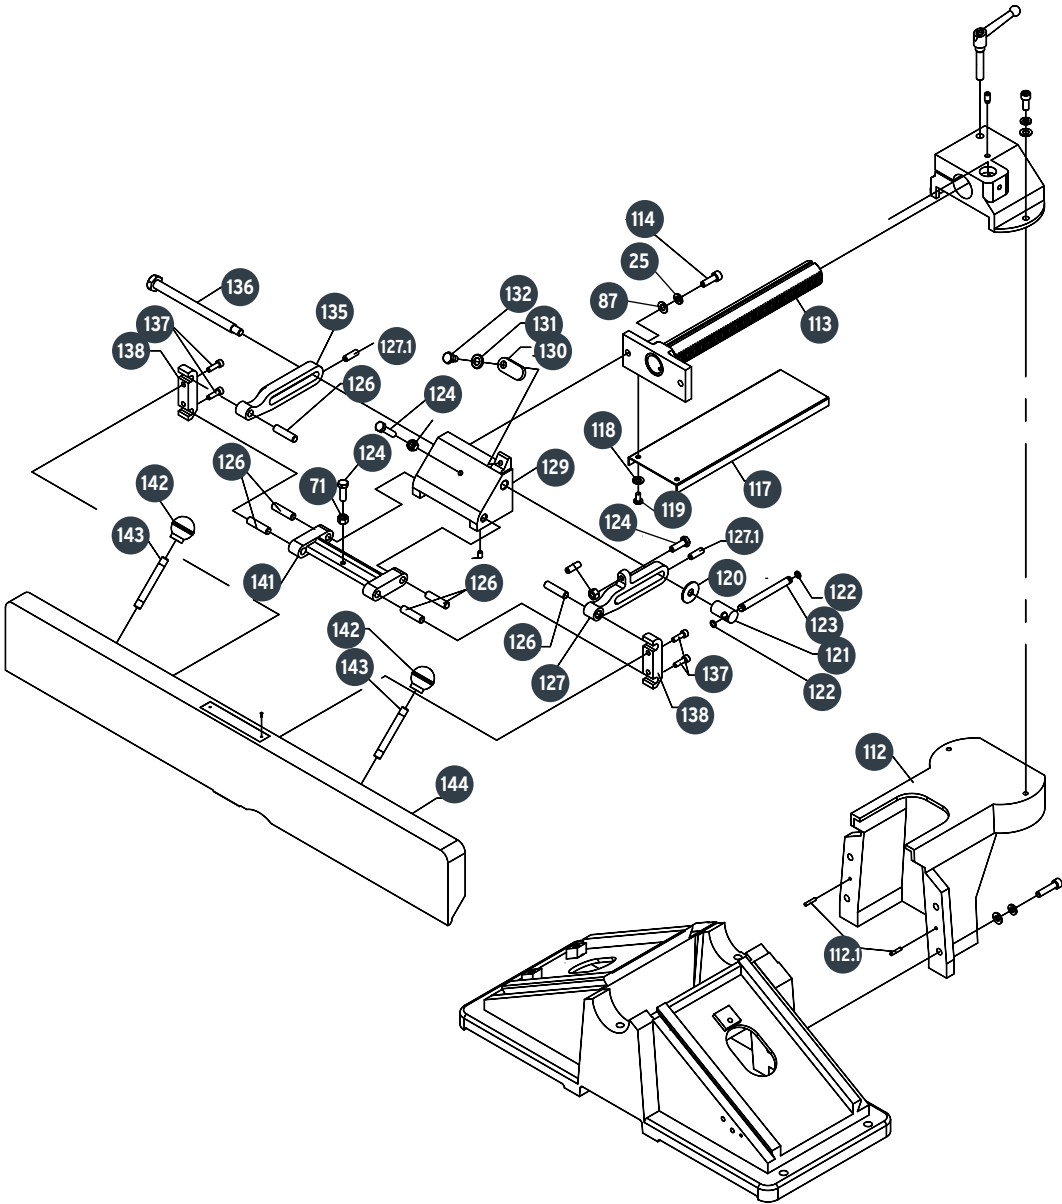


D



E

No.	Código	Clave	Descripción
201	906632	R201-CANT-8X	Gabinete
202	906633	R202-CANT-8X	Tuerca hex. seguridad M8
204	906634	R204-CANT-8X	Rueda
205	906635	R205-CANT-8X	Buje
206	906636	R206-CANT-8X	Tornillo hexagonal M8x65
207	906637	R207-CANT-8X	Rtenedor de cable
208	906638	R208-CANT-8X	Tuerca hex. M9.5
209	906639	R209-CANT-8X	Tornillo de ajuste
210	906640	R210-CANT-8X	Tuerca M8
211	906641	R211-CANT-8X	Rondana plana 9.5 mm
212	906642	R212-CANT-8X	Soporte de motor
213	906643	R213-CANT-8X	Coenctor de salida de aserrín
214	906644	R214-CANT-8X	Rondana plana 5 mm
215	906645	R215-CANT-8X	Tornillo 5x16 mm
218	906646	R218-CANT-8X	Cubierta trasera del gabinete
219	906647	R219-CANT-8X	Tornillo cabeza de gota M8x19
220	906648	R220-CANT-8X	Tuerca de presión M8
221	906649	R221-CANT-8X	Tornillo M8x34
225	906650	R225-CANT-8X	Tornillo allen M8x50 mm
226	903509	R226-CANT-8X	Motor 1 1/2 hp
226.1	903510	R226.1-CANT-8X	Capacitor
226.2	903511	R226.2-CANT-8X	Jgo de baleros 6204-2Z-6203-2Z 2pz
226.3	903512	R226.3-CANT-8X	Ventilador
226.4	906652	R226.4-CANT-8X	Buje de goma
226.5	906653	R226.5-CANT-8X	Tornillo M4x12 mm
226.6	906654	R226.6-CANT-8X	Tapa de capacitor
226.7	906655	R226.7-CANT-8X	Tapa de capacitor
226.8	906656	R226.8-CANT-8X	Rondana estrella Ø4
226.9	906657	R226.9-CANT-8X	Tornillo M5x10 mm
226.10	906522	R226.10-CANT-8X	Cable

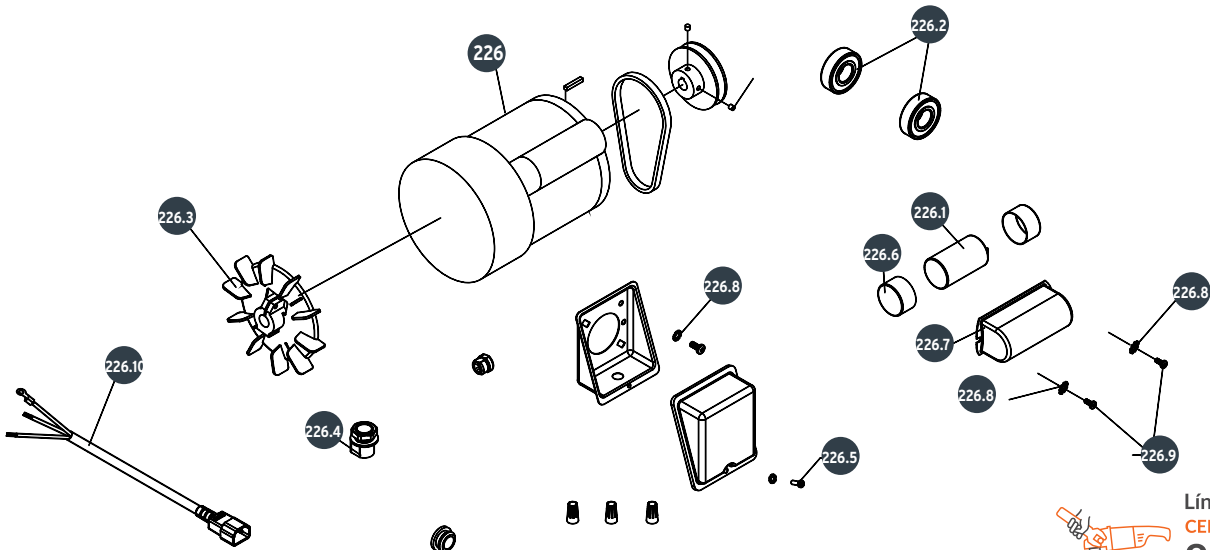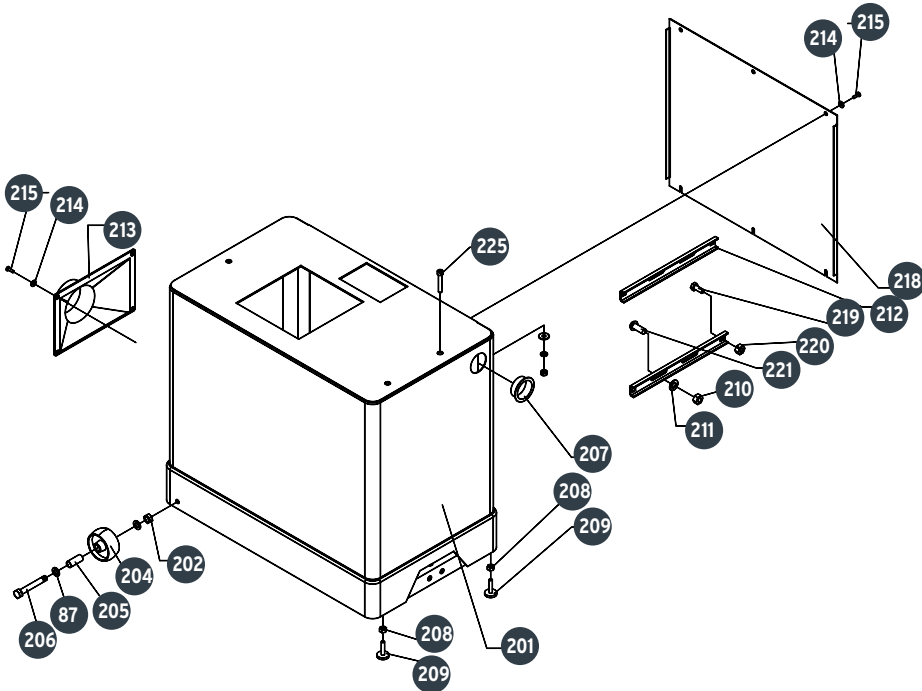


Línea de comunicación directa
CENTRO DE SERVICIO AUTORIZADO TRUPER
800-018-7873 En México

E


F

No.	Código	Clave	Descripción
226.11	906658	R226.1-CANT-8X	Buje de goma
226.12	906659	R226.12-CANT-8X	Caja de conexiones
226.13	906660	R226.13-CANT-8X	Tornillo M5x11.5 mm
226.14	906661	R226.14-CANT-8X	Rondana de estella Ø4
226.15	906662	R226.15-CANT-8X	Conector
226.16	906663	R226.16-CANT-8X	Tapa de conexiones
226.17	906664	R226.17-CANT-8X	Ahorcador de cable
227	906665	R227-CANT-8X	Cuña 5x5x30
228	903513	R228-CANT-8X	Banda en "V"
229	903514	R229-CANT-8X	Polea del motor
238	906666	R238-CANT-8X	Ahorcador de cable
239	906667	R239-CANT-8X	Tornillo de presión M6x12
240	906668	R240-CANT-8X	Caja del interruptor
243.5	906669	R243.5-CANT-8X	Tornillo M5x5.5
243.6	906670	R243.6-CANT-8X	Rondana estrella Ø5
243.8	906671	R243.8-CANT-8X	Tornillo M3.15x15
243.9	906672	R243.9-CANT-8X	Cable de alimentación
243.1	906673	R243.1-CANT-8X	Cable de conexión

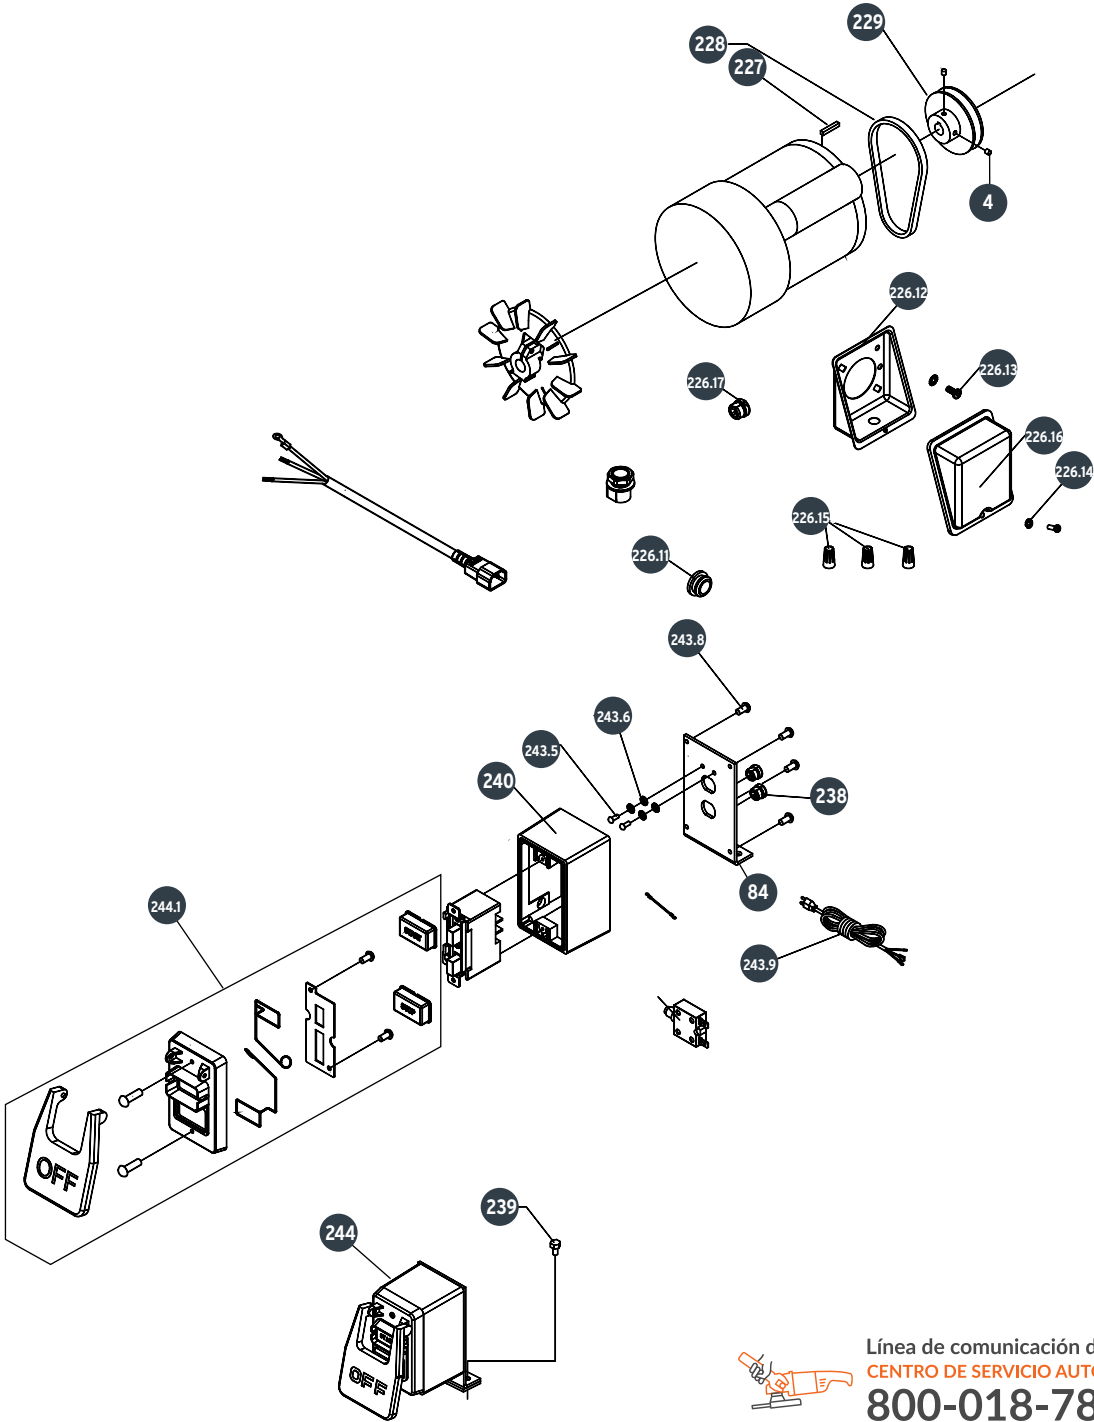

G

No.	Código	Clave	Descripción
243.11	906674	R243.11-CANT-8X	Interruptor de sobrecarga
243.12	906675	R243.12-CANT-8X	Terminal de conexión
244.1	906676	R244.1-CANT-8X	Panel de interruptor
244	905214	R244.2-CANT-8X	Interruptor
245	906676	R245-CANT-8X	Anillo retenedor externo 9 mm
246	906677	R246-CANT-8X	Rondana plana 13x30x3 mm
247	906678	R247-CANT-8X	Eje
248	906679	R248-CANT-8X	Tornillo hexagonal M8x50
253	906680	R253-CANT-8X	Tornillo-Perno hex. M8x100mm
255	906681	R255-CANT-8X	Perno especial
256	906682	R256-CANT-8X	Rueda de carretilla
257	906683	R257-CANT-8X	Camisa de perno
258	906684	R258-CANT-8X	Soporte de pedal
260	906685	R260-CANT-8X	Tuerca de seguridad M10
261	906686	R261-CANT-8X	Tornillo hex. M10x55
262	906687	R262-CANT-8X	Soporte de carretilla
263	906688	R263-CANT-8X	Pedal
265	906055	R265-CANT-8X	Soporte de interruptor

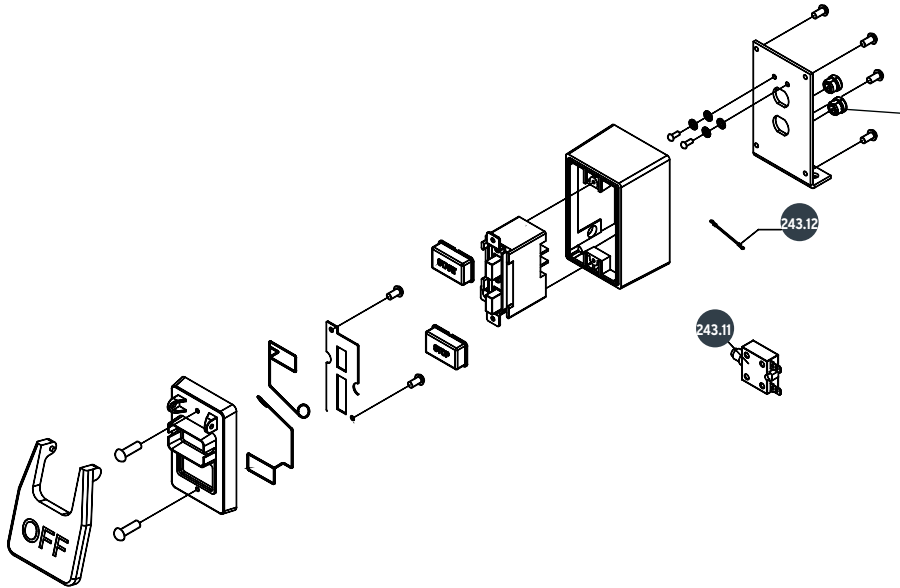

G

