


A

No.	Código	Clave	Descripción
1	940030	R1-BOS-3/4LM2	Cubierta
2	940031	R2-BOS-3/4LM2	Junta
3	940032	R3-BOS-3/4LM2	Cubre polvo
4	940033	R4-BOS-3/4LM2	Tuerca
5	940034	R5-BOS-3/4LM2	Arandela de presión
6	940035	R6-BOS-3/4LM2	Tornillo sin fin
7	940036	R7-BOS-3/4LM2	Cubierta superior
8	940037	R8-BOS-3/4LM2	Retén
9	940038	R9-BOS-3/4LM2	Tornillo de llenado aceite
10	940039	R10-BOS-3/4LM2	Sello
11	940040	R11-BOS-3/4LM2	Tapa superior
12	940041	R12-BOS-3/4LM2	Tuerca de fijación
13	940042	R13-BOS-3/4LM2	Tornillo
14	940043	R14-BOS-3/4LM2	Sello mecanico
15	940044	R15-BOS-3/4LM2	Arandela plana
16	940045	R16-BOS-3/4LM2	Arandela plana
17	940046	R17-BOS-3/4LM2	Arandela ondulada
18	940047	R18-BOS-3/4LM2	Balero
19	940048	R19-BOS-3/4LM2	Ensamble de cable de alimen.
25	940049	R25-BOS-3/4LM2	Sello
26	940050	R26-BOS-3/4LM2	Rotor
27	940051	R27-BOS-3/4LM2	Cubierta superior
28	940052	R28-BOS-3/4LM2	Campo 1 HP
29	940053	R29-BOS-3/4LM2	Cubierta inferior
30	940054	R30-BOS-3/4LM2	Balero
31	940055	R31-BOS-3/4LM2	Junta
32	940056	R32-BOS-3/4LM2	Tapa
33	940057	R33-BOS-3/4LM2	Tubo
34	940058	R34-BOS-3/4LM2	Termofit
35	940059	R35-BOS-3/4LM2	Protector térmico
36	940060	R36-BOS-3/4LM2	Soporte inferior
37	940061	R37-BOS-3/4LM2	Carcasa de motor
38	940062	R38-BOS-3/4LM2	Bolsa para aceite
39	940063	R39-BOS-3/4LM2	Tapa inferior
40	940064	R40-BOS-3/4LM2	Anillo de retención

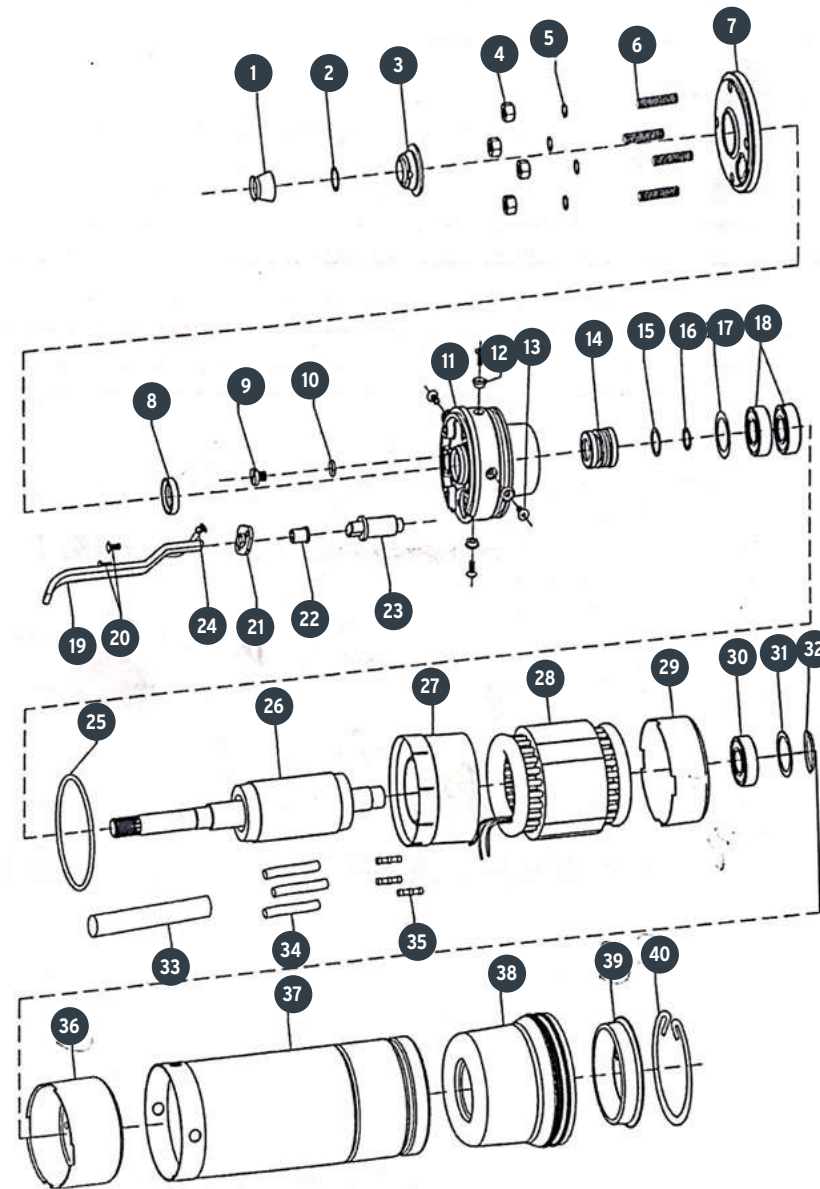


A



B


No.	Código	Clave	Descripción
1	940065	RB1-BOS-3/4LM2	Tapón protector
2	940066	RB2-BOS-3/4LM2	Tapa de salida
3	940067	RB3-BOS-3/4LM2	Tornillo M
4	940068	RB4-BOS-3/4LM2	Carcasa de bomba
5	940069	RB5-BOS-3/4LM2	Válvula de retención
6	940070	RB6-BOS-3/4LM2	Pasacable
7	940071	RB7-BOS-3/4LM2	Protector de cable
8	940072	RB8-BOS-3/4LM2	Base soporte
9	940073	RB9-BOS-3/4LM2	Soporte superior
10	940074	RB10-BOS-3/4LM2	Tornillo especial M
11	940075	RB11-BOS-3/4LM2	Manga de eje superior
12	940076	RB12-BOS-3/4LM2	Buje
13	940077	RB13-BOS-3/4LM2	Eje
14	940078	RB14-BOS-3/4LM2	Arandela
15	940079	RB15-BOS-3/4LM2	Difusor
16	940080	RB16-BOS-3/4LM2	Impulsor
17	940081	RB17-BOS-3/4LM2	Tapa de difusor
19	940082	RB19-BOS-3/4LM2	Acoplamiento
20	940083	RB20-BOS-3/4LM2	Arandela
21	940084	RB21-BOS-3/4LM2	Soporte inferior
22	940085	RB22-BOS-3/4LM2	Capuchon inferior
23	940086	RB23-BOS-3/4LM2	Acoplamiento del eje
24	940087	RB24-BOS-3/4LM2	Tornillo M
25	940088	RB25-BOS-3/4LM2	Regilla
26	940089	RB26-BOS-3/4LM2	Base conector

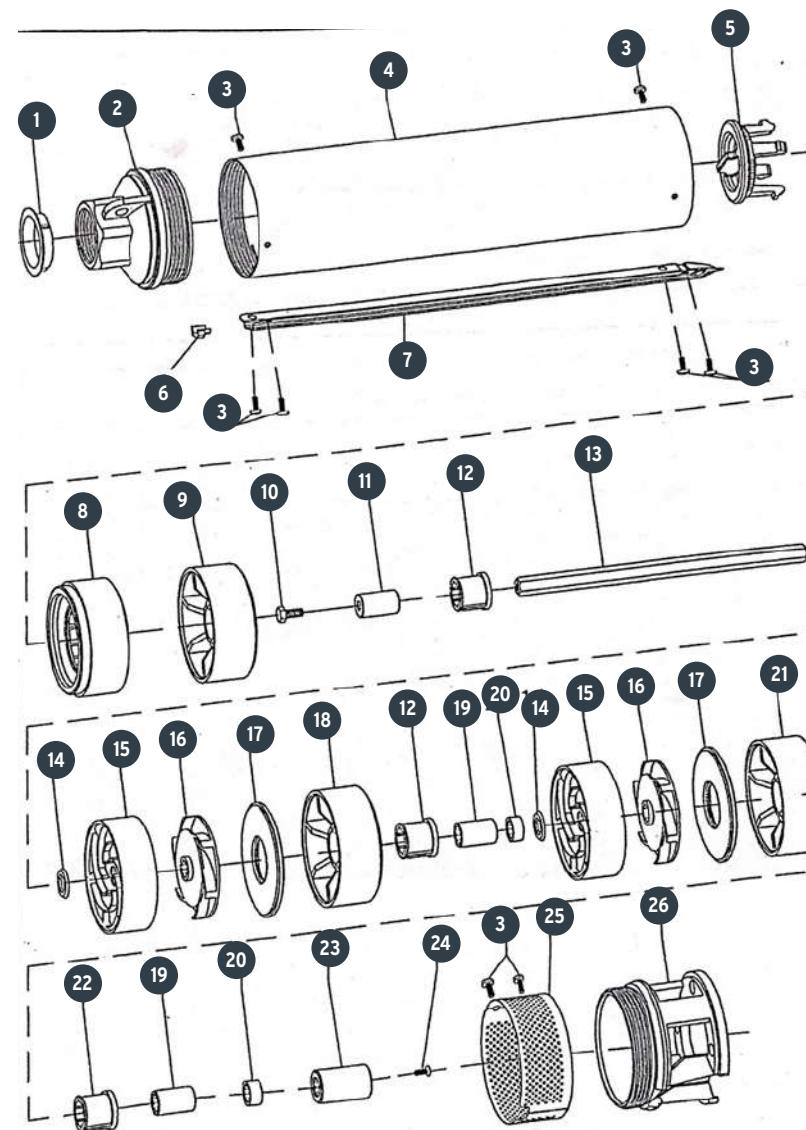

B

C

No.	Código	Clave	Descripción
1	940090	RC1-BOS-3/4LM2	Tornillo
2	940091	RC2-BOS-3/4LM2	Tapa de caja de control
3	940092	RC3-BOS-3/4LM2	Capacitor 135 uF +/- 5%
4	940093	RC4-BOS-3/4LM2	Interruptor 16 Amp
5	940094	RC5-BOS-3/4LM2	Protector térmico 8 Amp
6	940095	RC6-BOS-3/4LM2	Tabla de conexiones
7	940096	RC7-BOS-3/4LM2	Cable de alimentación
8	940097	RC8-BOS-3/4LM2	Opresor de cable
9	940098	RC9-BOS-3/4LM2	Tornillo
10	940099	RC10-BOS-3/4LM2	Caja de control
11	940100	RC11-BOS-3/4LM2	Aislante de terminales
12	940101	RC12-BOS-3/4LM2	Arnés con terminal
13	940102	RC13-BOS-3/4LM2	Arnés con terminal
14	940103	RC14-BOS-3/4LM2	Arnés con terminal

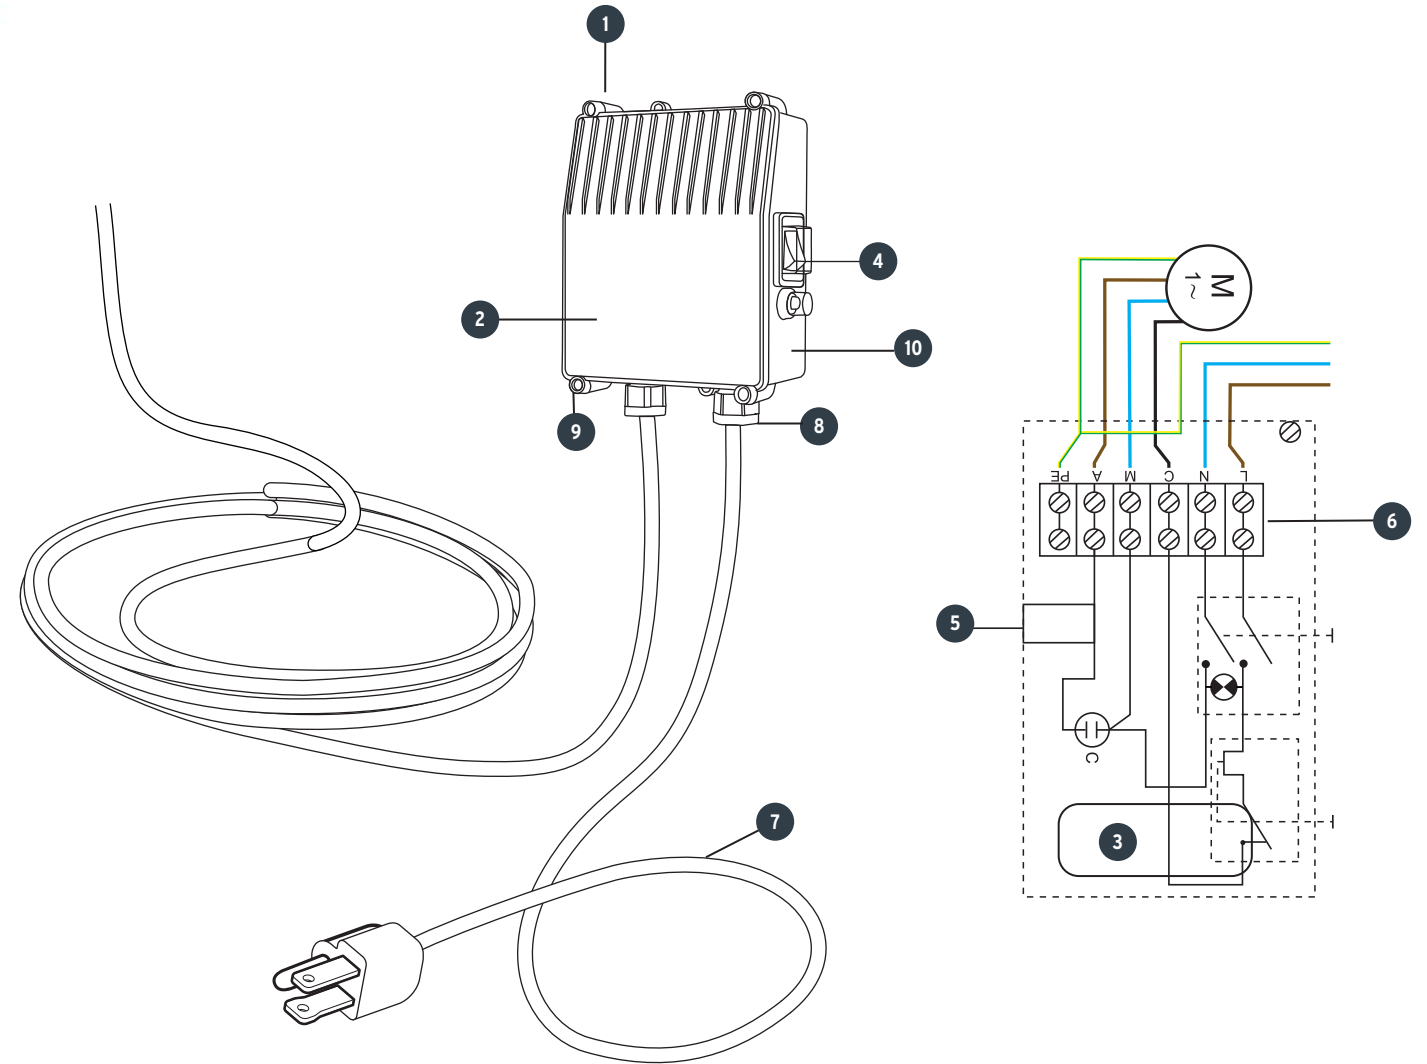

C