

A

No.	Código	Clave	Descripción
1	939584	R1-COPLA-40	Manija
1.1	939585	R1.1-COPLA-40	Tornillo 6x16
2	939586	R2-COPLA-40	Caja
3	939587	R3-COPLA-40	Conector para gas
4	939588	R4-COPLA-40	Placa de fijación de válvula
4.1	939589	R4.1-COPLA-40	Tornillo 4x50
4.2	939590	R4.2-COPLA-40	Arandela M4
4.3	939591	R4.3-COPLA-40	Tuerca M4
5	939592	R5-COPLA-40	Interruptor
6	939593	R6-COPLA-40	Cable de alimentación
7	939594	R7-COPLA-40	Marco trasero
7.1	939595	R7.1-COPLA-40	Tornillo 4x12
8	939596	R8-COPLA-40	Protector de cable
8.1	ACC		Opresor 8x12
10	939597	R10-COPLA-40	Ventilador
10.1	939598	R10.1-COPLA-40	Tornillo 5x10
11	939599	R11-COPLA-40	Tarjeta principal
11.1	939600	R11.1-COPLA-40	Tornillo 4x10
12	939601	R12-COPLA-40	Conector de gas
13	939602	R13-COPLA-40	Conector rápido
14	939603	R14-COPLA-40	Marco frontal
15	939604	R15-COPLA-40	Perilla de potenciómetro




A



B

No.	Código	Clave	Descripción
16	939605	R16-COPLA-40	Tapa frontal
17	939606	R17-COPLA-40	Tarjeta de panel
17.1	939607	R17.1-COPLA-40	Tuerca M3
17.2	939608	R17.2-COPLA-40	Arandela M3
17.3	939609	R17.3-COPLA-40	Separador
17.4	939610	R17.4-COPLA-40	Tornillo 3x20
17.5	939611	R17.5-COPLA-40	Arandela M3
18	939612	R18-COPLA-40	Medidor de presión 145 PSI
19	939613	R19-COPLA-40	Bobina de inductancia
20	939614	R20-COPLA-40	Válvula solenoide
21	939615	R21-COPLA-40	Conector para medir presión
22	939616	R22-COPLA-40	Interruptor de presión
23	939617	R23-COPLA-40	Conector de gas
24	939618	R24-COPLA-40	Regulador de presión
25	939619	R25-COPLA-40	Aislante
26	939620	R26-COPLA-40	Base
27	939621	R27-COPLA-40	Cable de alimentación
28	939622	R28-COPLA-40	Cable de tierra
29	939623	R29-COPLA-40	Guía de antorcha
30	939624	R30-COPLA-40	Boquilla
31	939625	R31-COPLA-40	Punta de electrodo
32	939626	R32-COPLA-40	Antorcha

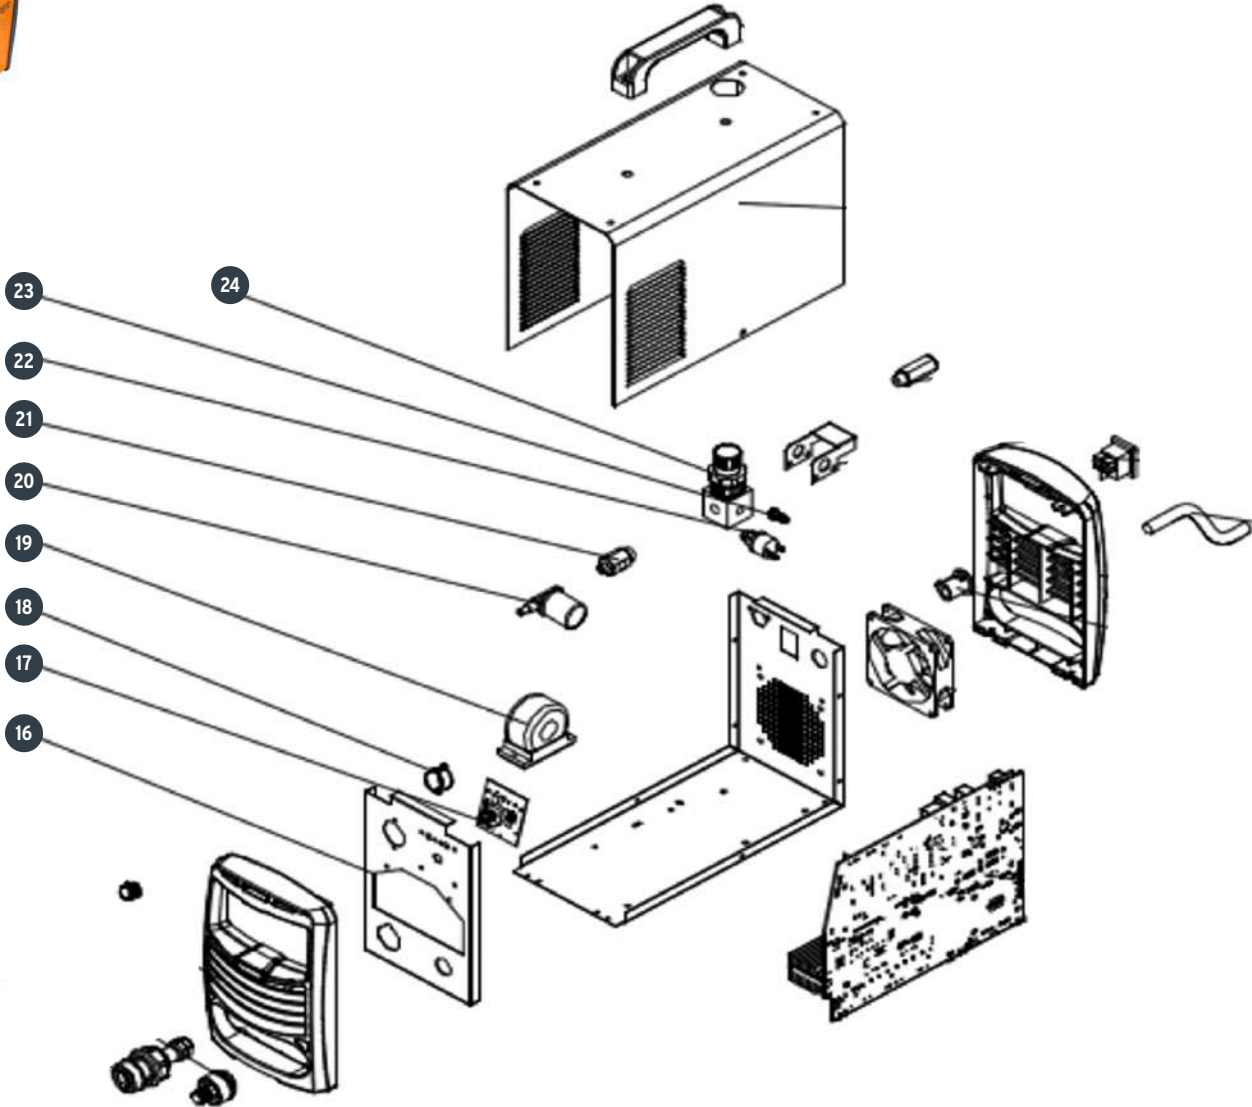

B

