


A

No.	Código	Clave	Descripción
1	921864	R1-COMP-240LV	Tornillo M6x45
2	921865	R2-COMP-240LV	Rondana de presión 6
3	921866	R3-COMP-240LV	Conector
4	921867	R4-COMP-240LV	Tapa de cilindro
5	921868	R5-COMP-240LV	Junta de tapa de cilindro
6	921869	R6-COMP-240LV	Placa de válvula
7	921870	R7-COMP-240LV	Hoja de válvula
8	921871	R8-COMP-240LV	Junta
9	921872	R9-COMP-240LV	Junta de válvula
10	921873	R10-COMP-240LV	Cilindro
11	921874	R11-COMP-240LV	Junta de cilindro
12	921875	R12-COMP-240LV	Anillo de pistón
13	921876	R13-COMP-240LV	Anillo de aceite
14	921877	R14-COMP-240LV	Pistón
15	921878	R15-COMP-240LV	Perno de pistón
16	921879	R16-COMP-240LV	Seguro "C"
17	921880	R17-COMP-240LV	Biela
18	921881	R18-COMP-240LV	Tapón
19	921882	R19-COMP-240LV	Carter
19.1	904933	R19.1-COMP-240LV	Tapón de llenado de aceite
20	921883	R20-COMP-240LV	Conector
21	921884	R21-COMP-240LV	Nivel de aceite
22	921885	R22-COMP-240LV	Tornillo de drenado de aceite
23	921886	R23-COMP-240LV	Tuerca M8
24	921887	R24-COMP-240LV	Rondana de presión 8
25	921888	R25-COMP-240LV	Perno M8x32
26	921889	R26-COMP-240LV	Balero 6204-2RS
27	921890	R27-COMP-240LV	Cigüeñal
28	921891	R28-COMP-240LV	Balero 6205-2RS
29	921892	R29-COMP-240LV	Sello de aceite
30	921893	R30-COMP-240LV	Soporte de guarda
31	921894	R31-COMP-240LV	Soporte de balero
32	921895	R32-COMP-240LV	Tornillo M8x25
33	921896	R33-COMP-240LV	Motor
34	921897	R34-COMP-240LV	Capacitor de arranque
35	921898	R35-COMP-240LV	Capacitor de trabajo
36	921899	R36-COMP-240LV	Cubierta de capacitor
37	921900	R37-COMP-240LV	Tornillo St 3.9x16
38	921901	R38-COMP-240LV	Interruptor de sobrecarga
39	921902	R39-COMP-240LV	Tubo de descarga </td




A

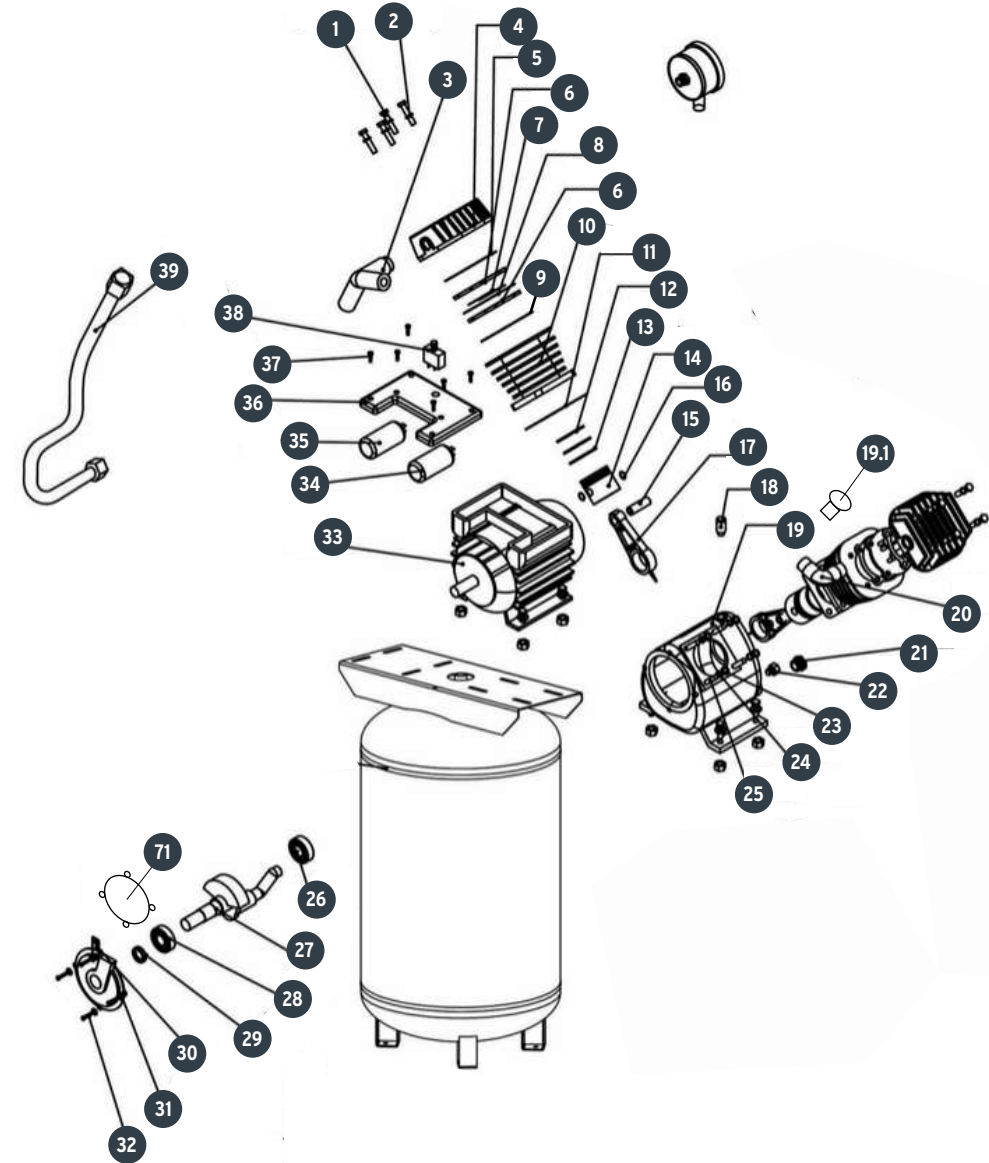

B

No.	Código	Clave	Descripción
40	921903	R40-COMP-240LV	Válvula antiretorno
41	921904	R41-COMP-240LV	Conector
42	921905	R42-COMP-240LV	Tubo de alivio
43	921906	R43-COMP-240LV	Tanque
44	921907	R44-COMP-240LV	Polea de motor
45	921908	R45-COMP-240LV	Arandela 8
46	921909	R46-COMP-240LV	Tornillo M8x30
47	921910	R47-COMP-240LV	Tornillo M5x35
47.1	921911	R47.1-COMP-240LV	Tuerca hexagonal 8
48	921912	R48-COMP-240LV	Arandela 5
49	921913	R49-COMP-240LV	SopORTE
50	921914	R50-COMP-240LV	Guarda
51	921915	R51-COMP-240LV	Banda
52	921916	R52-COMP-240LV	Polea de compresor
53	921917	R53-COMP-240LV	Tuerca M10
54	921918	R54-COMP-240LV	Rondana
55	921919	R55-COMP-240LV	Pata
55.1	921920	R55.1-COMP-240LV	Tornillo
55.2	921921	R55.2-COMP-240LV	Arandela
56	921922	R56-COMP-240LV	Drenaje de tanque
57	921923	R57-COMP-240LV	Cable
58	921924	R58-COMP-240LV	Tuerca
59	921925	R59-COMP-240LV	Válvula reguladora
60	921926	R60-COMP-240LV	Válvula de salida
61	921927	R61-COMP-240LV	Válvula de seguridad
62	921928	R62-COMP-240LV	Manómetro
63	921929	R63-COMP-240LV	Presostato
64	921930	R64-COMP-240V	Filtro de aire
65	921931	R65-COMP-240V	Tubo conector
66	921932	R66-COMP-240V	Cable
67	921933	R67-COMP-240V	Salida 3/4
69	921934	R69-COMP-240LV	Tornillo Ø8x35 mm
70	921935	R70-COMP-240LV	Arandela plana Ø8 mm
71	921936	R71-COMP-240LV	Junta

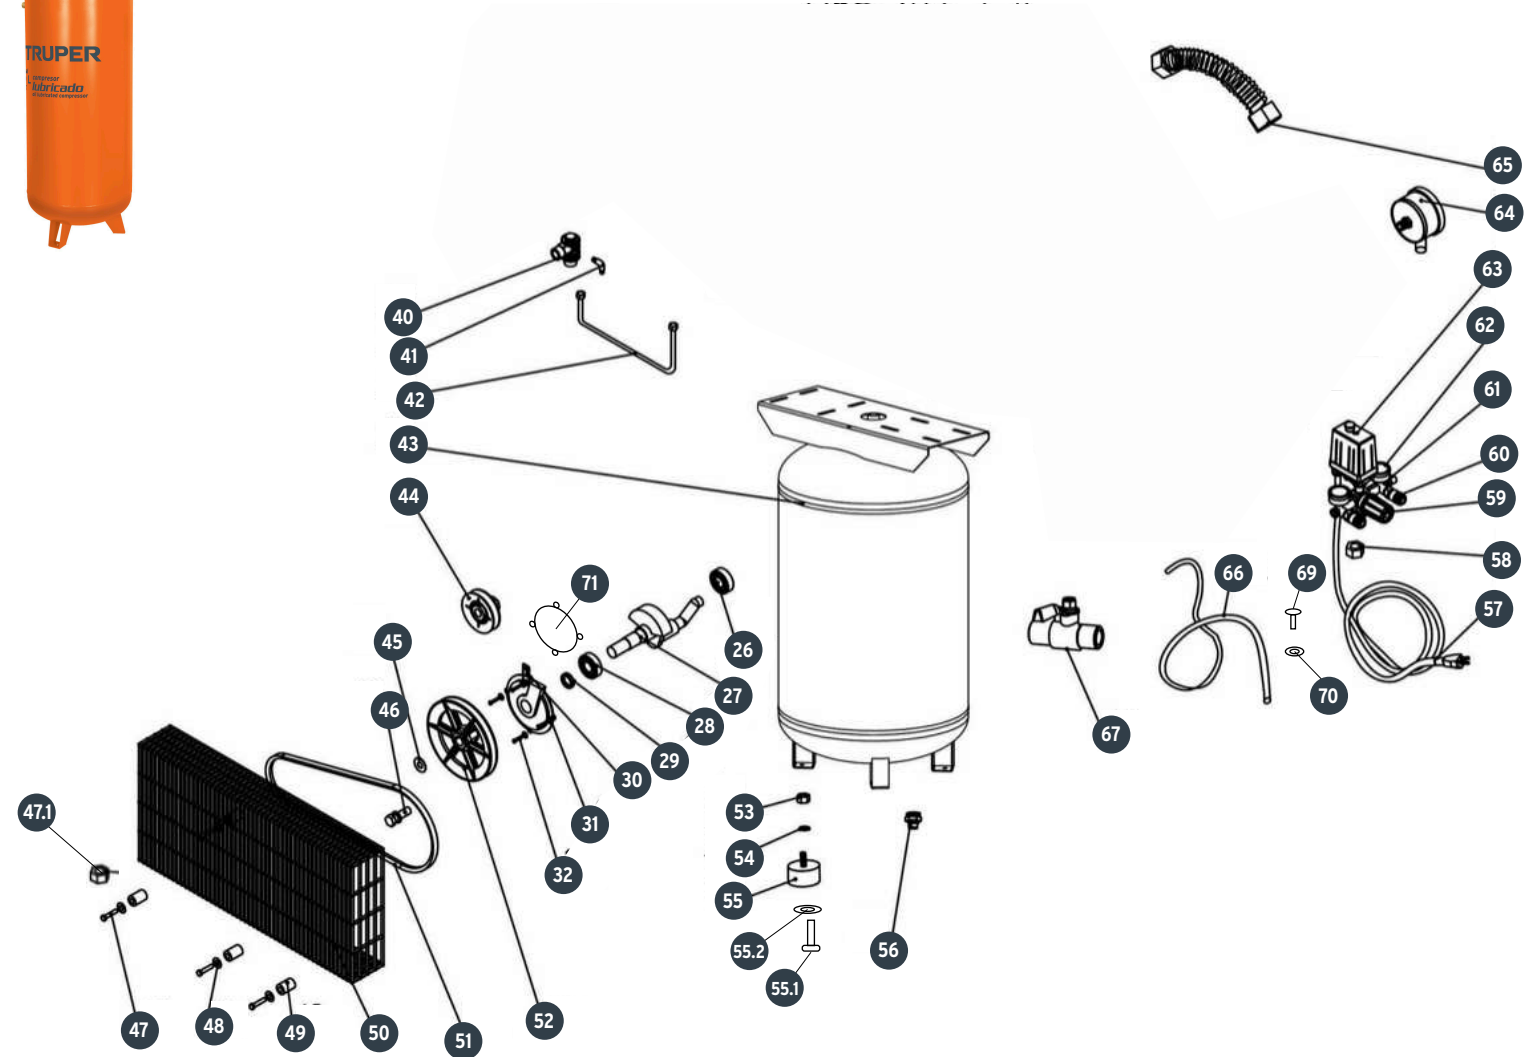

B