

No.	Código	Clave	Descripción
2	964913	R2N-BOAC-1P	Tapón de drenado (M10x8)
3	964914	R3N-BOAC-1P	Tapón de llenado (M10x8)
4	964915	R4N-BOAC-1P	Sello "O" (Ø8xØ12x2)
5	964916	R5N-BOAC-1P	Cubierta de bomba
6	964917	R6N-BOAC-1P	Sello "O" (Ø159xØ165x3)
7	964918	R7N-BOAC-1P	Tuerca (M10)
8	964919	R8N-BOAC-1P	Arandela de presión (Ø10.5xØ17x3)
9	964920	R9N-BOAC-1P	Impulsor (Ø11xØ120x6)
10	964921	R10N-BOAC-1P	Seguro "C" (Ø13xØ16x1)
11	964922	R11N-BOAC-1P	Arandela plana (Ø14.5xØ24x0.5)
12	964923	R12N-BOAC-1P	Sello mecánico
13	964924	R13N-BOAC-1P	Cubierta de soporte de bomba
14	964925	R14N-BOAC-1P	Soporte de bomba
15	964926	R15N-BOAC-1P	Tornillo hexagonal (M6x18)
16	964927	R16N-BOAC-1P	Ensamble de campo
17	964928	R17N-BOAC-1P	Tornillo hexagonal (M5x20)
19	964929	R19N-BOAC-1P	Pata de goma
20	964930	R20N-BOAC-1P	Protector de cable
21	964931	R21N-BOAC-1P	Cable de alimentación (305mm 18AWG)
22	964932	R22N-BOAC-1P	Anillo de goma (Ø14xØ33x4.5)
23	964933	R23N-BOAC-1P	Balero 6202
24	964934	R24N-BOAC-1P	Rotor
25	964935	R25N-BOAC-1P	Arandela ondulada (Ø27xØ33.5x0.5)
26	964936	R26N-BOAC-1P	Cubierta trasera
27	964937	R27N-BOAC-1P	Tornillo hexagonal (M5x18)
28	964938	R28N-BOAC-1P	Ventilador
29	964939	R29N-BOAC-1P	Cubierta de ventilador
30	964940	R30N-BOAC-1P	Cuña (4x4x8)
31	964941	R31N-BOAC-1P	Opresor de cable
32	964942	R32N-BOAC-1P	Tornillo Phillips (M4x12)
33	964943	R33N-BOAC-1P	Tornillo Phillips (M4x4.5)
34	964944	R34N-BOAC-1P	Tapa de conexiones
35	964945	R35N-BOAC-1P	Tornillo Phillips (M4x32)
36	964946	R36N-BOAC-1P	Sello "O" (Ø40xØ46x3)
37	964947	R37N-BOAC-1P	Capacitor 35µF
38	964948	R38N-BOAC-1P	Terminal de conexiones



Todos los códigos los puedes adquirir en los Centros de Servicio Autorizado TRUPER o llamando al 800-018-7873

