

No.	Código	Clave	Descripción
2	964802	R2-BOAC-1/2P	Tapón de drenado (M10x8)
3	964803	R3-BOAC-1/2P	Tapón de llenado (M10x8)
4	964804	R4-BOAC-1/2P	Sello "O" (Ø8xØ12x2)
5	964805	R5-BOAC-1/2P	Cubierta de bomba
6	964806	R6-BOAC-1/2P	Sello "O" (Ø133xØ139x3)
7	964807	R7-BOAC-1/2P	Tuerca (M8)
8	964808	R8-BOAC-1/2P	Arandela de presión (Ø8.5xØ13.5x2.5)
9	964809	R9-BOAC-1/2P	Impulsor (Ø11xØ97x6)
10	964810	R10-BOAC-1/2P	Seguro "C" (Ø11xØ14x1)
11	964811	R11-BOAC-1/2P	Arandela plana (Ø13xØ21x0.5)
12	964812	R12-BOAC-1/2P	Sello mecánico
13	964813	R13-BOAC-1/2P	Soporte de bomba
14	964814	R14-BOAC-1/2P	Tornillo hexagonal (M6x18)
15	964815	R15-BOAC-1/2P	Ensamble de campo
16	964816	R16-BOAC-1/2P	Tornillo hexagonal (M5x25)
16.1	964817	R16.1-BOAC-1/2P	Tornillo hexagonal (M5x22)
18	964818	R18-BOAC-1/2P	Pata de goma
19	964819	R19-BOAC-1/2P	Protector de cable
20	964820	R20-BOAC-1/2P	Cable de alimentación (310mm 18AWG)
21	964821	R21-BOAC-1/2P	Balero 6201
22	964822	R22-BOAC-1/2P	Rotor
23	964823	R23-BOAC-1/2P	Arandela ondulada (Ø25xØ31x0.5)
24	964824	R24-BOAC-1/2P	Cubierta trasera
25	964825	R25-BOAC-1/2P	Ventilador
26	964826	R26-BOAC-1/2P	Cubierta del ventilador
27	964827	R27-BOAC-1/2P	Tornillo hexagonal (M5x20)
27.1	964828	R27.1-BOAC-1/2P	Tornillo hexagonal (M5x16)
28	964829	R28-BOAC-1/2P	Anillo de goma (Ø12xØ30x3)
29	964830	R29-BOAC-1/2P	Cuña (4x4x8)
30	964831	R30-BOAC-1/2P	Opresor de cable
31	964832	R31-BOAC-1/2P	Tornillo Phillips (M4x12)
32	964833	R32-BOAC-1/2P	Tornillo Phillips (M4x4.5)
33	964834	R33-BOAC-1/2P	Tapa de conexiones
34	964835	R34-BOAC-1/2P	Tornillo Phillips (M4x25)
35	964836	R35-BOAC-1/2P	Sello "O" (Ø30xØ36x3)
36	964837	R36-BOAC-1/2P	Capacitor 22µF
37	964838	R37-BOAC-1/2P	Terminal de conexiones



Todos los códigos los puedes adquirir en los Centros de Servicio Autorizado TRUPER o llamando al 800-018-7873

