

No.	Código	Clave	Descripción
2	964839	R2-BOAC-3/4P	Tapón de drenado (M10X8)
3	964840	R3-BOAC-3/4P	Tapón de llenado (M10X8)
4	964841	R4-BOAC-3/4P	Sello "O" (Ø8xØ12x2)
5	964842	R5-BOAC-3/4P	Cubierta de bomba
6	964843	R6-BOAC-3/4P	Sello "O" (Ø159XØ165X3)
7	964844	R7-BOAC-3/4P	Tuerca (M10)
8	964845	R8-BOAC-3/4P	Arandela de presión (Ø10.5xØ17x3)
9	964846	R9-BOAC-3/4P	Impulsor (Ø11xØ110x6)
10	964847	R10-BOAC-3/4P	Seguro "C" (Ø13XØ16X1)
11	964848	R11-BOAC-3/4P	Arandela plana (Ø14.5XØ24X0.5)
12	964849	R12-BOAC-3/4P	Sello mecánico
13	964850	R13-BOAC-3/4P	Cubierta de soporte de la bomba
14	964851	R14-BOAC-3/4P	Soporte de la bomba
15	964852	R15-BOAC-3/4P	Tornillo hexagonal (M6X18)
17	964853	R17-BOAC-3/4P	Tornillo hexagonal (M5X20)
18	964854	R18-BOAC-3/4P	Ensamble de campo
19	964855	R19-BOAC-3/4P	Pata de goma
20	964856	R20-BOAC-3/4P	Protector de cable
21	964857	R21-BOAC-3/4P	Cable de alimentación (300mm 18AWG)
22	964858	R22-BOAC-3/4P	Anillo de goma (Ø14xØ33x4.5)
23	964859	R23-BOAC-3/4P	Balero 6202
24	964860	R24-BOAC-3/4P	Rotor
25	964861	R25-BOAC-3/4P	Arandela ondulada (Ø27xØ33.5x0.5)
26	964862	R26-BOAC-3/4P	Cubierta trasera
27	964863	R27-BOAC-3/4P	Tornillo hexagonal (M5X18)
28	964864	R28-BOAC-3/4P	Ventilador
29	964865	R29-BOAC-3/4P	Cubierta del ventilador
30	964866	R30-BOAC-3/4P	Cuña (4x4x8)
31	964867	R31-BOAC-3/4P	Opresor de cable
32	964868	R32-BOAC-3/4P	Tornillo Phillips (M4X12)
33	964869	R33-BOAC-3/4P	Tornillo Phillips (M4X4.5)
34	964870	R34-BOAC-3/4P	Tapa de conexiones
35	964871	R35-BOAC-3/4P	Tornillo Phillips (M4X32)
36	964872	R36-BOAC-3/4P	Sello "O" (Ø40XØ46X3)
37	964873	R37-BOAC-3/4P	Capacitor 30µF
38	964874	R38-BOAC-3/4P	Terminal de conexiones



Todos los códigos los puedes adquirir en los Centros de Servicio Autorizado TRUPER o llamando al 800-018-7873

