


A

No.	Código	Clave	Descripción
1	945576	RM1-P-316P	Tuerca con arandela M6
2	945577	RM2-P-316P	Sistema de arranque
3	945578	RM3-P-316P	Carcaza de ventilador
4	945579	RM4-P-316P	Ventilador
5	945580	RM5-P-316P	Perno M6X75
6	945581	RM6-P-316P	Tornillo hexagonal con arandela M6X25
7	945582	RM7-P-316P	Módulo de encendido
8	945583	RM8-P-316P	Tornillo hexagonal M6X14
9	945584	RM9-P-316P	Cubierta de respiración
10	945585	RM10-P-316P	Filtro de aceite
11	945586	RM11-P-316P	Válvula de respiración
12	945587	RM12-P-316P	Tuerca con arandela M14X1.5
13	945588	RM13-P-316P	Tornillo hexagonal con arandela M5
14	945589	RM14-P-316P	Arandela plana Ø10.4 x1x Ø20
15	945590	RM15-P-316P	Resorte de acelerador
16	945591	RM16-P-316P	Zapata de freno
17	945592	RM17-P-316P	Ensamble de freno
18	945593	RM18-P-316P	Perno M6X73
19	945594	RM19-P-316P	Resorte de válvula
20	945595	RM20-P-316P	Reten de aceite Ø20XØ42X7
21	945596	RM21-P-316P	Guarda de mofle
22	945597	RM22-P-316P	Mofle
23	945598	RM23-P-316P	Bujía
24	945599	RM24-P-316P	Cárter
25	945600	RM25-P-316P	Perno M6X59.5
26	945601	RM26-P-316P	Tornillos hexagonal M6X16
27	945602	RM27-P-316P	Elemento, filtro de aire
28	945603	RM28-P-316P	Ensamble de filtro de aire
29	945604	RM29-P-316P	Tapón de gasolina




A

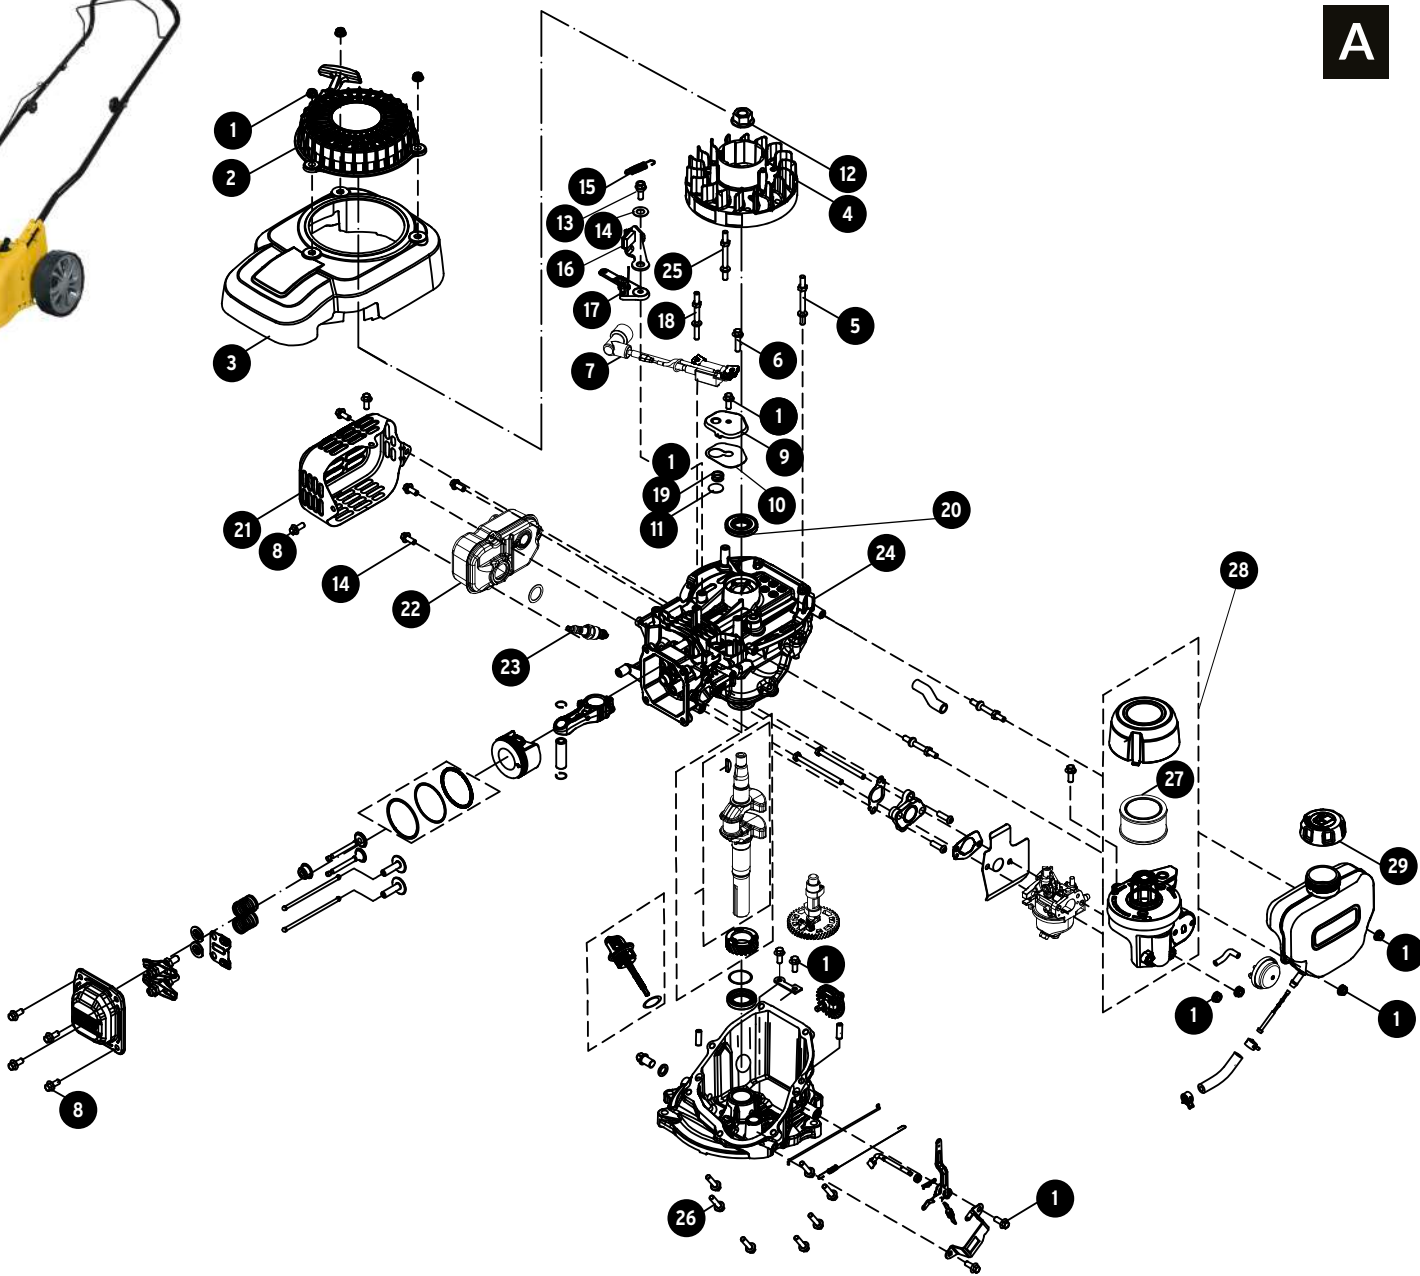

B

No.	Código	Clave	Descripción
30	945605	RM30-P-316P	Tanque de gasolina
31	945606	RM31-P-316P	Filtro de gasolina
32	945607	RM32-P-316P	Manguera Ø6.3xØ12.5x75
33	945608	RM33-P-316P	Abrazadera
34	945609	RM34-P-316P	Bulbo cebador
35	945610	RM35-P-316P	Manguera para gasolina
36	945611	RM36-P-316P	Carburador
37	945612	RM37-P-316P	Junta de Carburador
38	945613	RM38-P-316P	Junta de filtro de aire
39	945614	RM39-P-316P	Tornillo cabeza allen M6X20
40	945615	RM40-P-316P	Soporte de carburador
41	945616	RM41-P-316P	Junta de soporte de carburador
42	945617	RM42-P-316P	Tornillo M6X80
43	945618	RM43-P-316P	Manguera
44	945619	RM44-P-316P	Cigüeñal
45	945620	RM45-P-316P	Árbol de levas
46	945621	RM46-P-316P	Engrane de transmisión
47	945622	RM47-P-316P	Bayoneta
48	945623	RM48-P-316P	Arandela Ø25.4 x1x Ø34
49	945624	RM49-P-316P	Retén de aceite Ø25XØ38X7
50	945625	RM50-P-316P	Tapa de cárter
51	945626	RM51-P-316P	Arandela Ø10X1.5XØ16
52	945627	RM52-P-316P	Tornillo de drenado
53	945628	RM53-P-316P	Engrane de gobernador
54	945629	RM54-P-316P	Placa de montaje del engrane
55	945630	RM55-P-316P	Perno Ø7X20
56	945631	RM56-P-316P	Eje de engranaje
57	945632	RM57-P-316P	Retén Ø5XØ16X4
58	945633	RM58-P-316P	Pasador

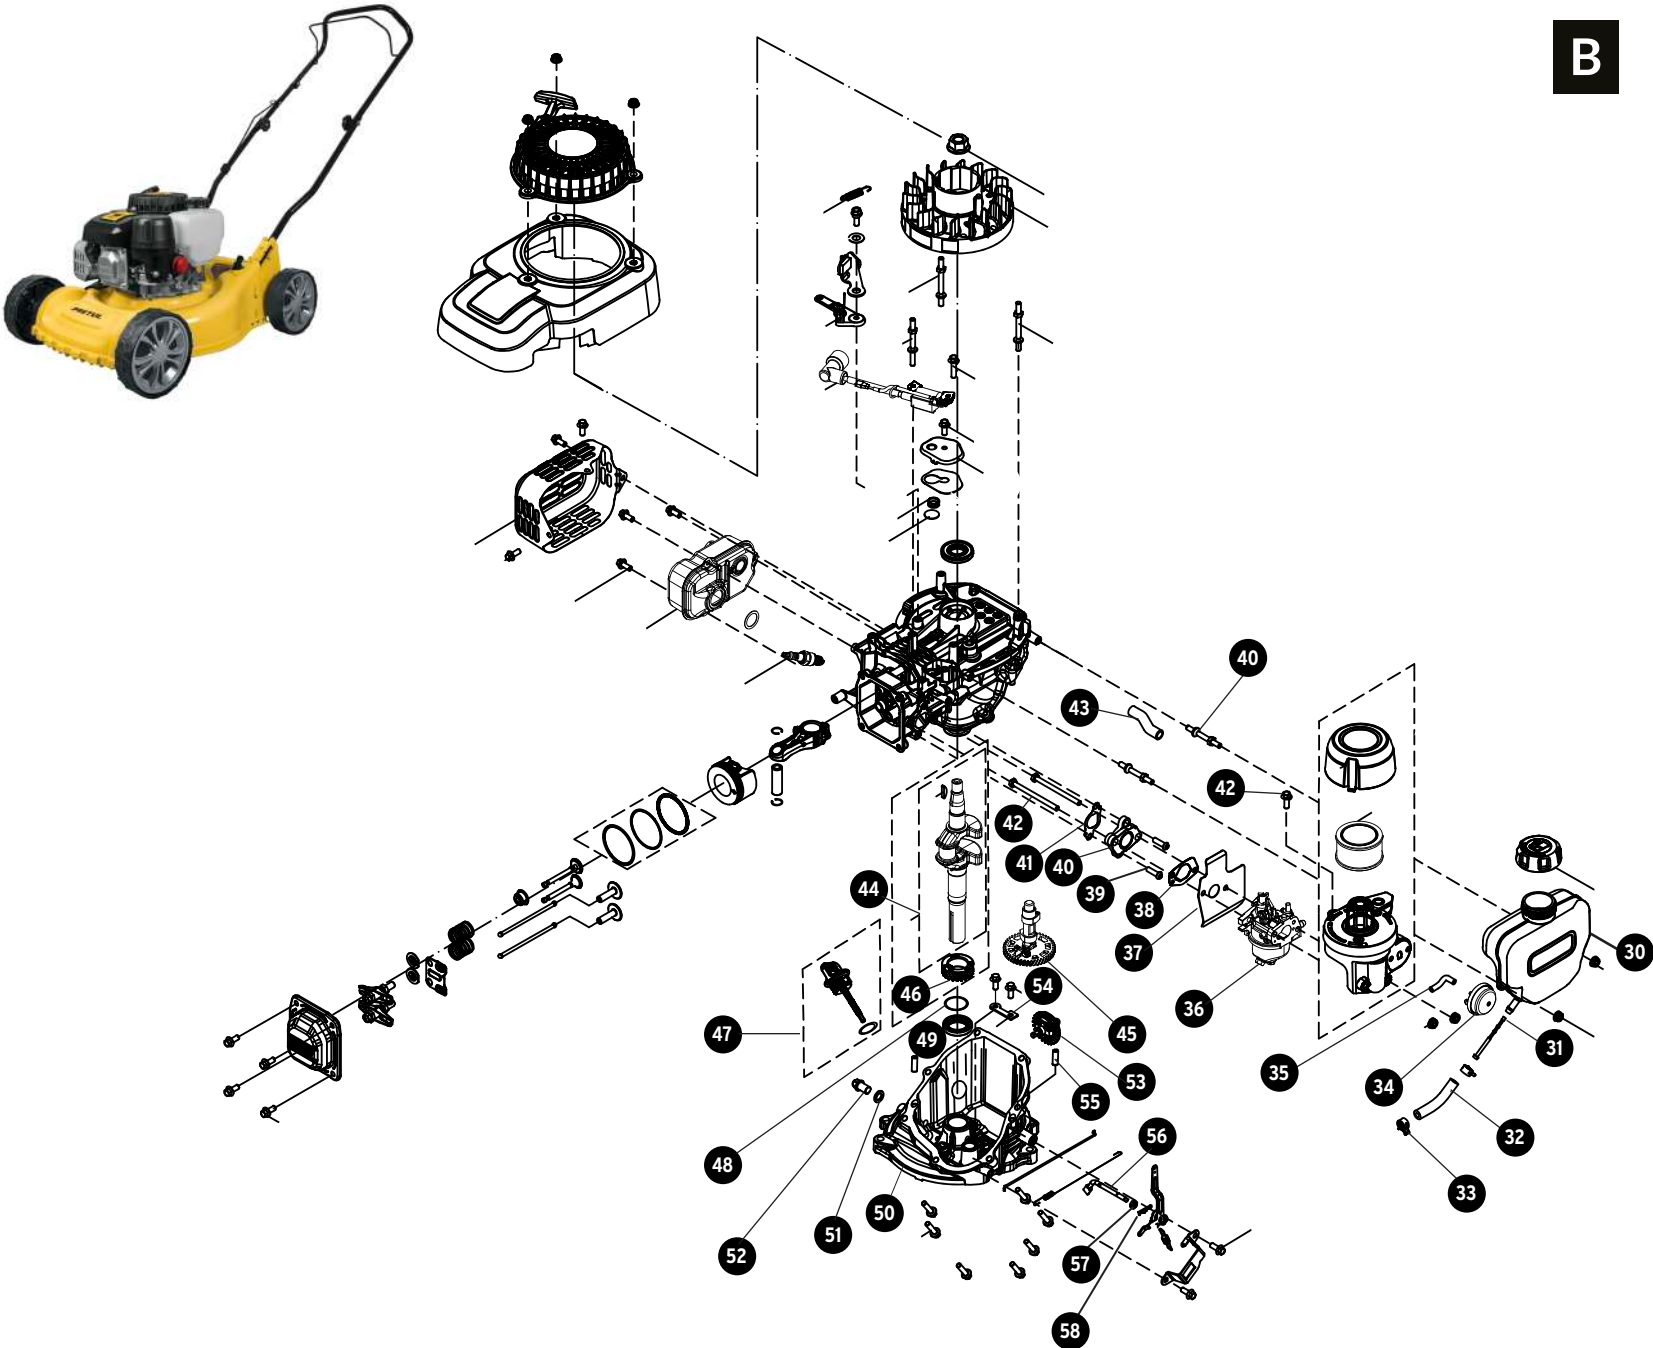


B




C

No.	Código	Clave	Descripción
59	945634	RM59-P-316P	Varilla de aceleración
60	945635	RM60-P-316P	Resorte de ahogador
61	945636	RM61-P-316P	Palanca de gobernador
62	945637	RM62-P-316P	Resorte de gobernador
63	945638	RM63-P-316P	Soporte de montaje
64	945639	RM64-P-316P	Seguro
65	945640	RM65-P-316P	Ensamble de biela
66	945641	RM66-P-316P	Perno de pistón
67	945642	RM67-P-316P	Pistón
68	945643	RM68-P-316P	Juego de Anillos
69	945644	RM69-P-316P	Válvula de admisión
70	945645	RM70-P-316P	Válvula de escape
71	945646	RM71-P-316P	Sello de válvula de admisión
72	945647	RM72-P-316P	Elevador de válvulas
73	945648	RM73-P-316P	Puntería
74	945649	RM74-P-316P	Resorte de válvulas
75	945650	RM75-P-316P	Base del brazo
76	945651	RM76-P-316P	Asiento de muelle
77	945652	RM77-P-316P	Ensamble de balancín
78	945653	RM78-P-316P	Tapa de válvulas

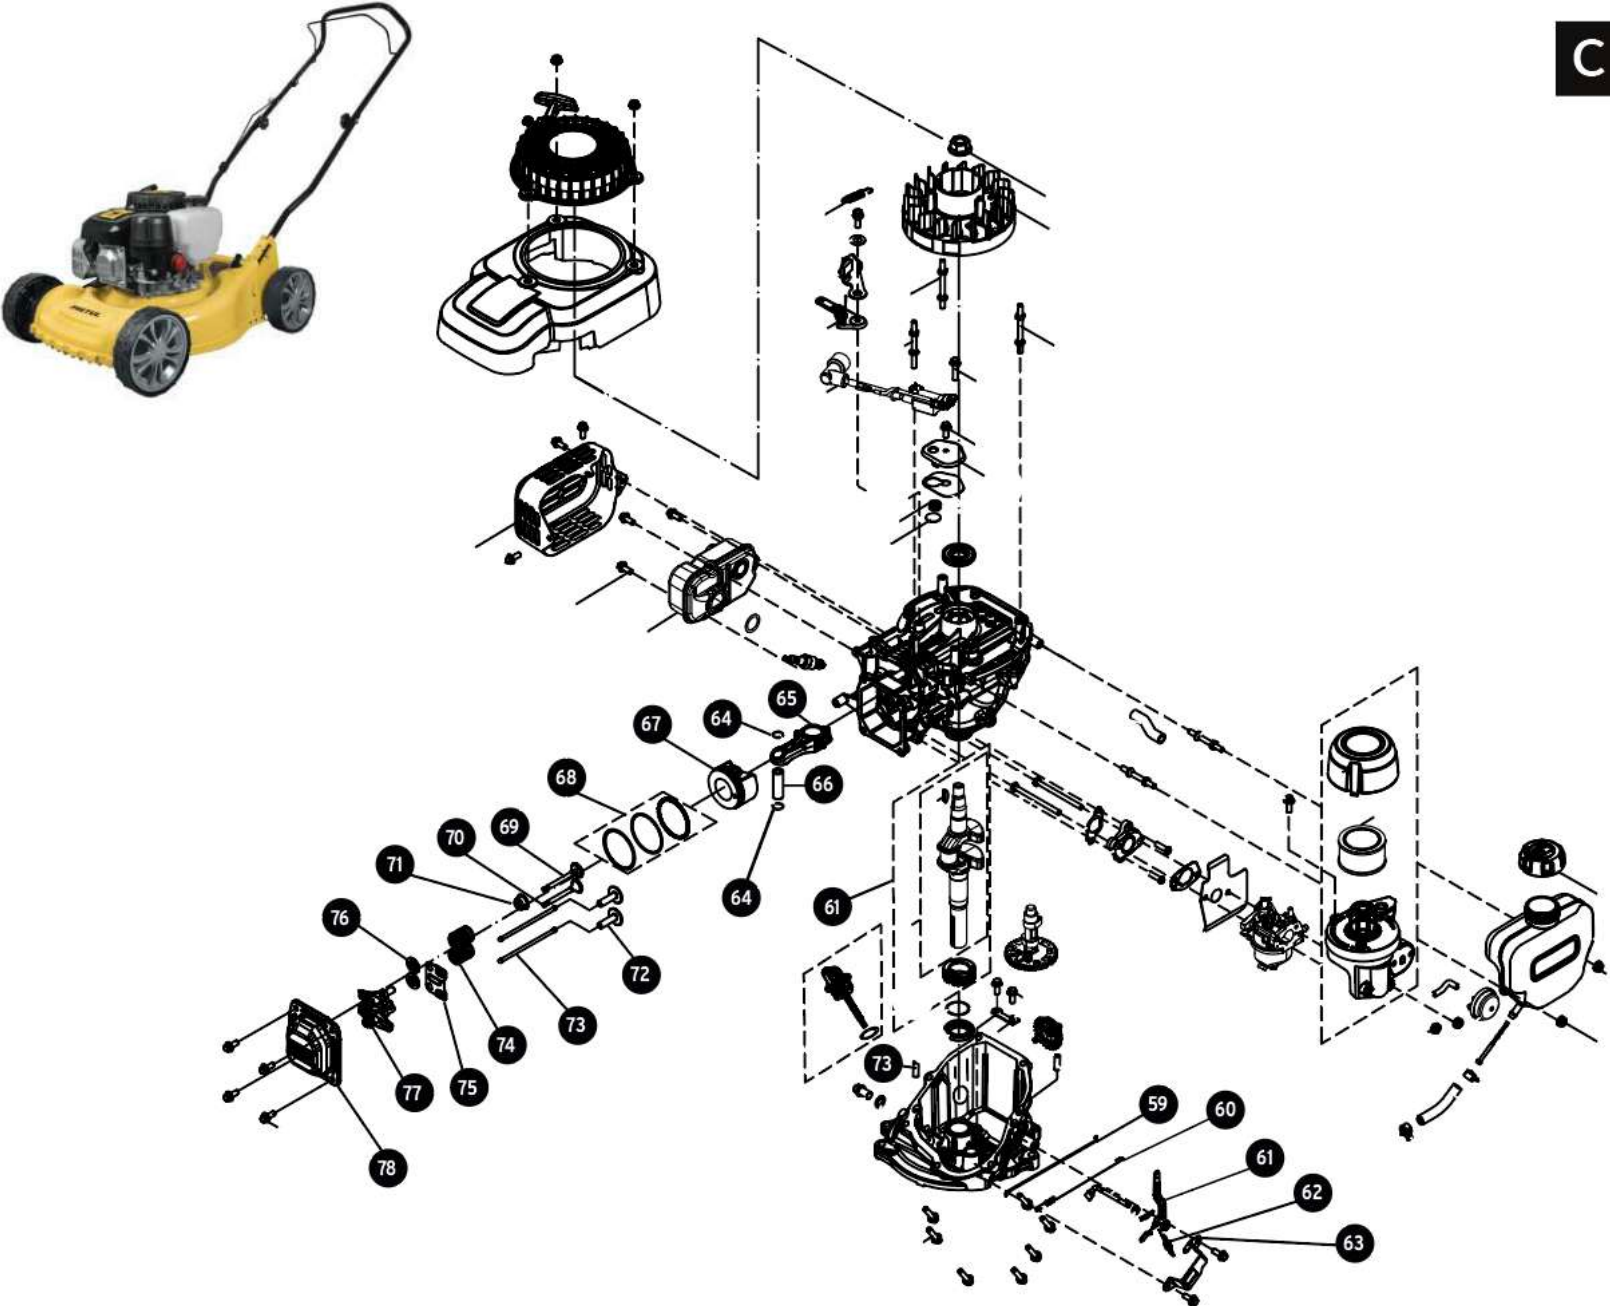

D

No.	Código	Clave	Descripción
1	937853	RM1-P-316P	Carcaza
2	937854	RM2-P-316P	Cubierta trasera
3	937855	RM3-P-316P	Cubierta frontal
4	937856	RM4-P-316P	Rueda 7"
5	937857	RM5-P-316P	Tapones
6	937858	RM6-P-316P	Balero de llanta
7	937859	RM7-P-316P	Manubrio
8	937860	RM8-P-316P	Tubular de manubrio
9	937861	RM9-P-316P	Abrazadera
10	937862	RM10-P-316P	Guía de chicote
11	937863	RM11-P-316P	Chicote para frenos
12	937864	RM12-P-316P	Palanca de freno
13	937865	RM13-P-316P	Tuerca plástica
16	937866	RM16-P-316P	Tuerca
17	937867	RM17-P-316P	Guía de chicote
18	937868	RM18-P-316P	Arandela plana
19	937869	RM9-P-316P	Eje perno para ruedas delanteras
20	937870	RM20-P-316P	Eje perno para ruedas traseras
21	937871	RM21-P-316P	Cuchilla
22	937872	RM22-P-316P	Adaptador de cuchilla
23	937873	RM23-P-316P	Adaptador de cuchilla
24	937874	RM24-P-316P	Soporte de llantas derecho
25	937875	RM25-P-316P	Tapa cubierta trasera
26	937876	RM26-P-316P	Perilla tuerca de cubierta lateral
27	937877	RM27-P-316P	Cubierta lateral
28	937878	RM28-P-316P	Resorte
29	937879	RM29-P-316P	Arandela plana para cuchilla
30	937880	RM30-P-316P	Ensamble de motor

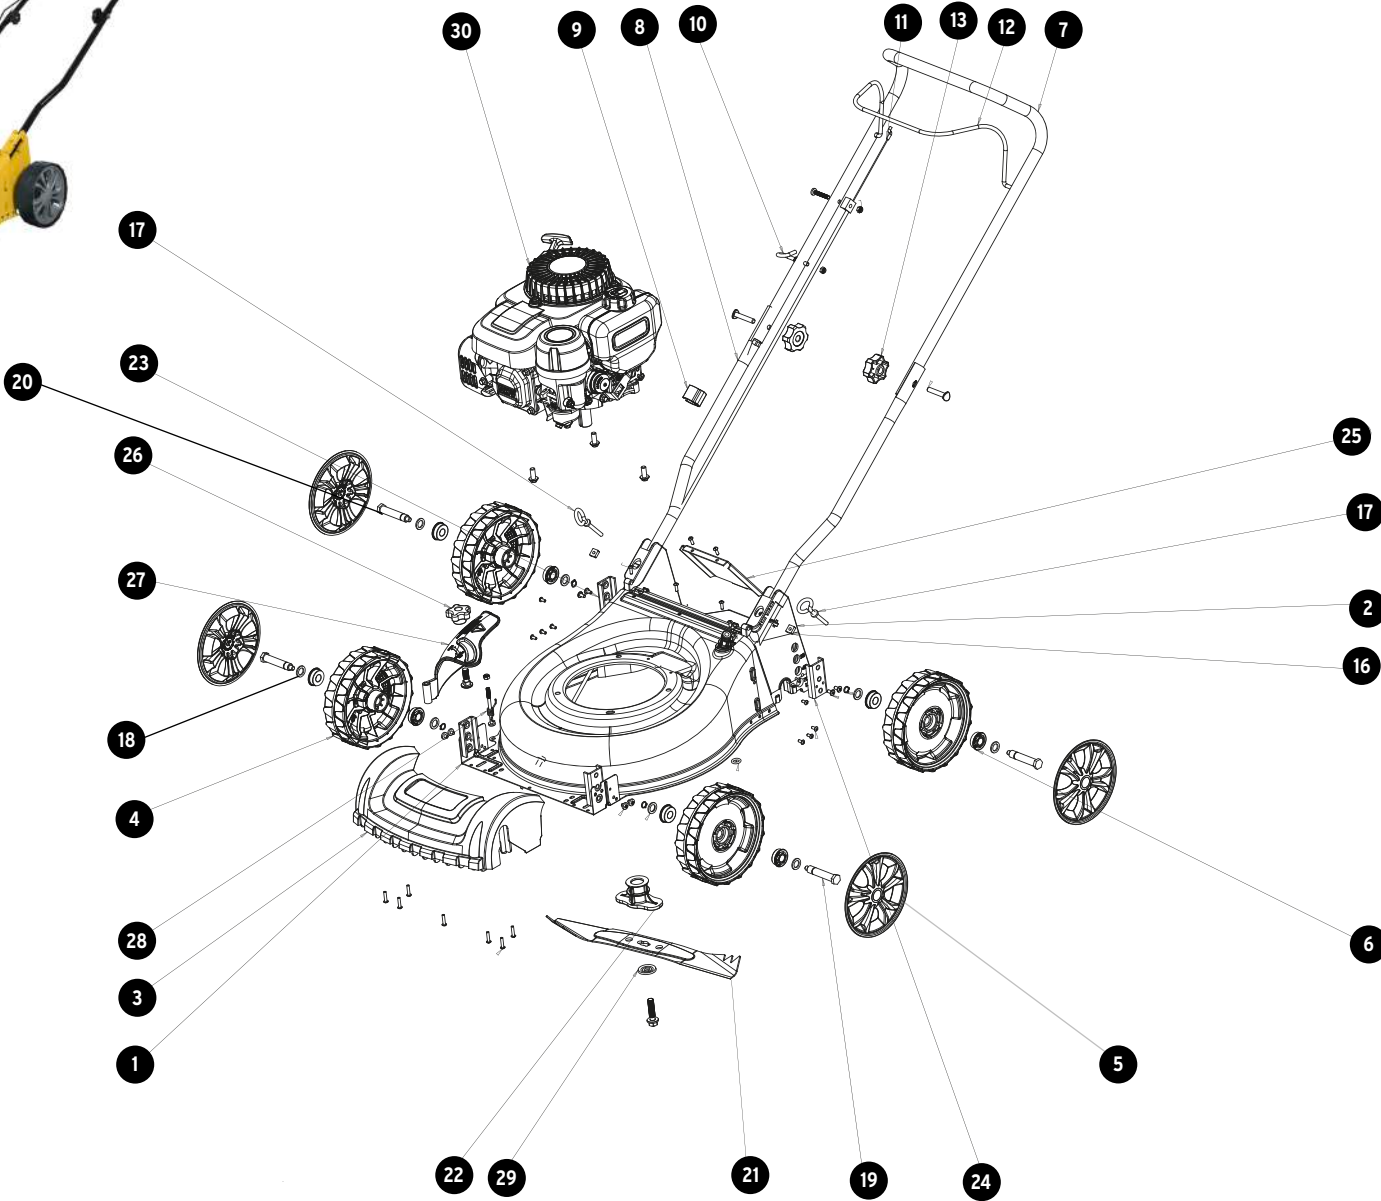

D

E

No.	Código	Clave	Descripción
31	937881	RM31-P-316P	Tornillo Ø 3.8
32	937882	RM32-P-316P	Tornillos ST 4.2x9.5
33	937883	RM33-P-316P	Tornillos ST 4.2x19
34	937884	RM34-P-316P	Tornillos ST 4.2x13
35	937885	RM35-P-316P	Aarandela plana
36	937886	RM36-P-316P	Seguro C
37	937887	RM37-P-316P	Tornillo M5x6
38	937888	RM38-P-316P	Tornillo M8x20
39	937889	RM39-P-316P	Tornillo M8x45
40	937890	RM40-P-316P	Tornillo M6x35
42	937891	RM42-P-316P	Tornillos M6x70
43	937892	RM43-P-316P	Tornillo M10x25

E

