


A

A

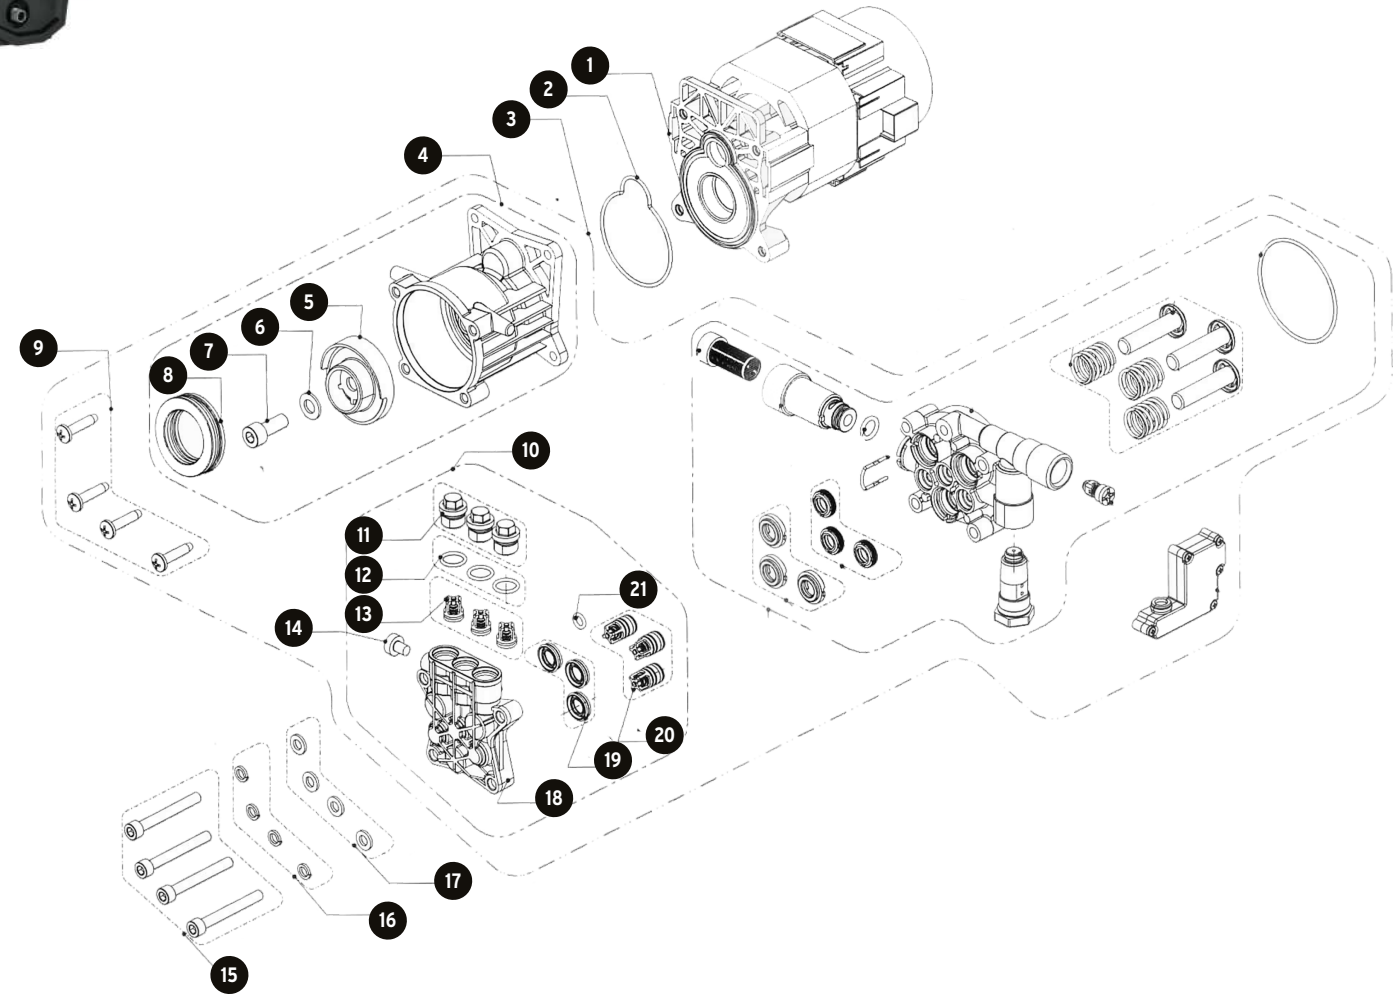


No.	Código	Clave	Descripción
1	942796	RB1-HILA-1800P-2	Motor
2	942797	RB2-HILA-1800P-2	Sello
3	942798	RB3-HILA-1800P-2	Ensamble de bomba
4	942799	RB4-HILA-1800P-2	Ensamble de caja de engranes
5	942800	RB5-HILA-1800P-2	Plato inclinado
6	942801	RB6-HILA-1800P-2	Arandela
7	942802	RB7-HILA-1800P-2	Tornillo esp M8x20
8	942803	RB8-HILA-1800P-2	Balero especial
9	942804	RB9-HILA-1800P-2	Tornillo
10	942805	RB10-HILA-1800P-2	Ensamble de bomba
11	942806	RB11-HILA-1800P-2	Tuerca de válvula
12	942807	RB12-HILA-1800P-2	Sello
13	942808	RB13-HILA-1800P-2	Ensamble válvula de salida
14	942809	RB14-HILA-1800P-2	Tornillo M6x8
15	942810	RB15-HILA-1800P-2	Tornillo M6x55
16	942811	RB16-HILA-1800P-2	Arandela de presión Ø 6
17	942812	RB17-HILA-1800P-2	Arandela Ø 6
18	942813	RB18-HILA-1800P-2	Cabeza de bomba
19	942814	RB19-HILA-1800P-2	Reten Ø 10
20	942815	RB20-HILA-1800P-2	Ensamble válvula de entrada
21	942816	RB21-HILA-1800P-2	Sello Ø 6.5

B

No.	Código	Clave	Descripción
22	942817	RB22-HILA-1800P-2	Ensamble cuerpo de pistón
23	942818	RB23-HILA-1800P-2	Base de sello
24	942819	RB24-HILA-1800P-2	Sello de pistón
25	942820	RB25-HILA-1800P-2	Válvula de paro
26	942821	RB26-HILA-1800P-2	Juego de válvula
27	942822	RB27-HILA-1800P-2	Sello Ø 62
28	942823	RB28-HILA-1800P-2	Ensamble de pistón
29	942824	RB29-HILA-1800P-2	Resorte
30	942825	RB30-HILA-1800P-2	Guía de pistón
31	942826	RB31-HILA-1800P-2	Seguro U
32	942827	RB32-HILA-1800P-2	Sello Ø 10
33	942828	RB33-HILA-1800P-2	Tubo de entrada
34	RB34-HILA-1800P-2	Filtro de entrada	
35	942829	RB35-HILA-1800P-2	Ensamble de micro interruptor




B

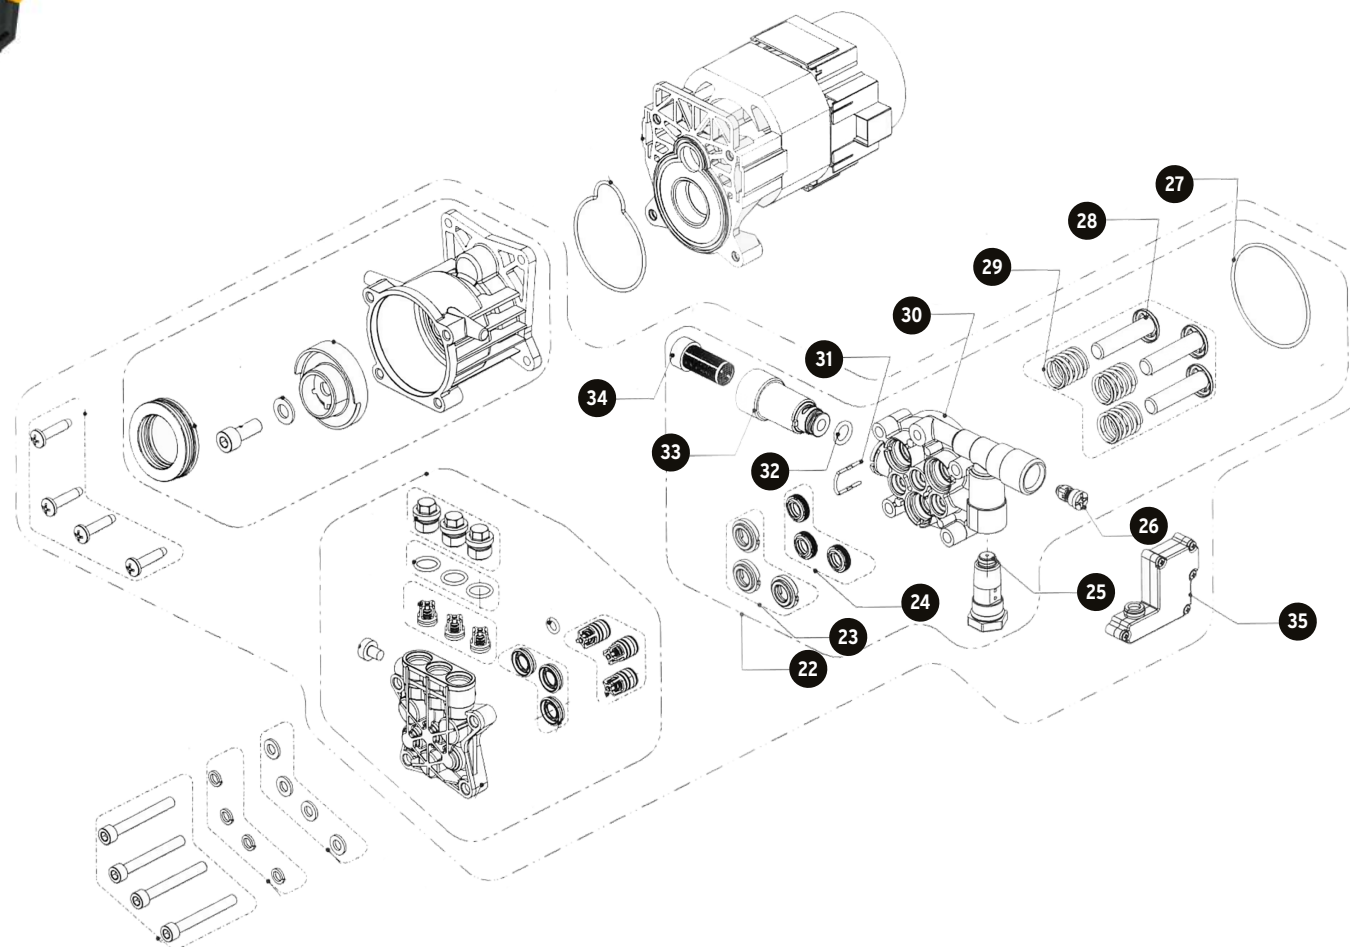

C


No.	Código	Clave	Descripción
1	942789	RM1-HILA-1800P-2	Tornillo ST3x12
2	942790	RM2-HILA-1800P-2	Tapa de motor
3	942791	RM3-HILA-1800P-2	Protectora de polvo
5	942792	RM5-HILA-1800P-2	Carcasa de motor
6	942793	RM6-HILA-1800P-2	Ensamble de motor con bomba
7	942794	RM7-HILA-1800P-2	Amortiguador
8	942795	RM8-HILA-1800P-2	Filtro de motor

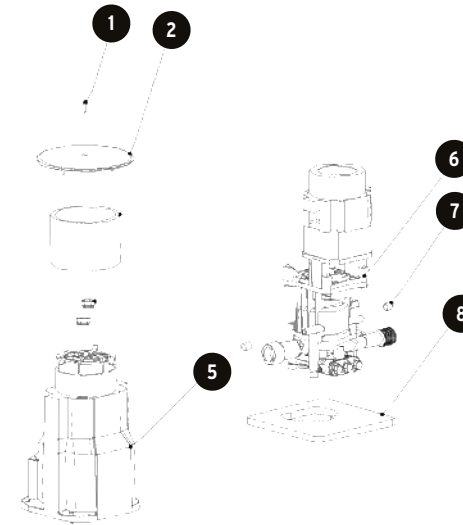

C

D

No.	Código	Clave	Descripción
1	942779	R1-HILA-1800P-2	Ensamble de carcasa frontal
2	942780	R2-HILA-1800P-2	Perilla de encendido
3	942781	R3-HILA-1800P-2	Ensamble de Interruptor
4	942782	R4-HILA-1800P-2	Ensamble de motor
5	942783	R5-HILA-1800P-2	Ensamble de cable de alimentación
6	942784	R6-HILA-1800P-2	Ruedas
7	942785	R7-HILA-1800P-2	Ensamble carcasa trasera
8	942786	R8-HILA-1800P-2	Manija larga
9	R9-HILA-1800P-2		Pistola
10	R10-HILA-1800P-2		Lanza
11	R11-HILA-1800P-2		Lanza media
12	942787	R12-HILA-1800P-2	Gancho
13	942788	R13-HILA-1800P-2	Soporte de gancho
14	942789	R14-HILA-1800P-2	Manguera de presión

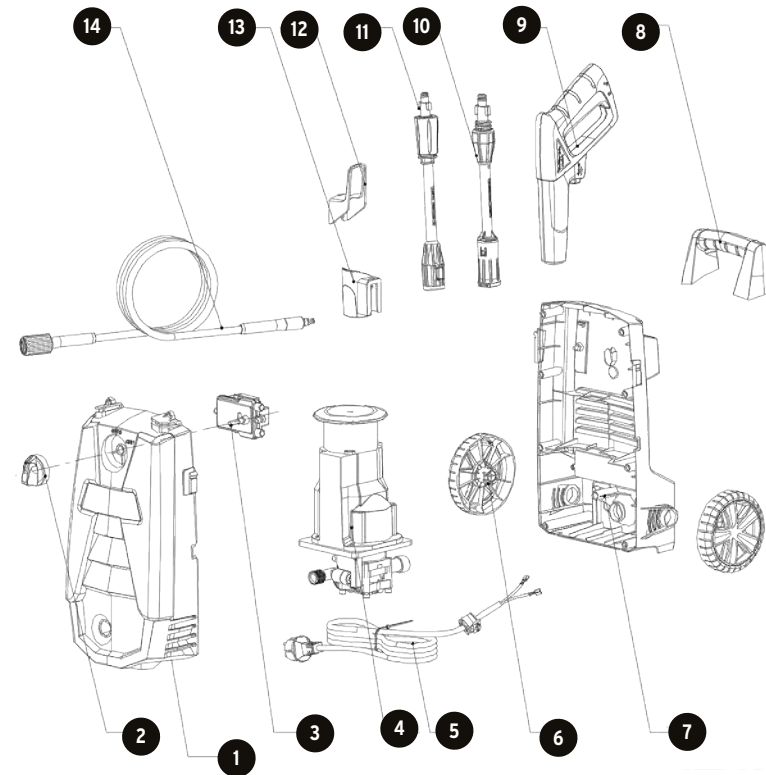

D

