

No.	Código	Clave	Descripción
1	940931	R1-BOAP-1/2P3	Tornillo M5*35 mm
2	940932	R2-BOAP-1/2P3	Ensamble de Bomba
3	940933	R3-BOAP-1/2P3	Ensamble tornillo de llenado
5	940934	R5-BOAP-1/2P3	Impulsor 58x4.5
6	940935	R6-BOAP-1/2P3	Seguro
7	940936	R7-BOAP-1/2P3	Arandela Plana
8	940937	R8-BOAP-1/2P3	Sello Mecanico Φ12
9	940938	R9-BOAP-1/2P3	Sello 60 mm
11	940939	R11-BOAP-1/2P3	Tornillo M5*22mm
12	940940	R12-BOAP-1/2P3	Empaque
13	940941	R13-BOAP-1/2P3	Cuñero Ø12
14	940942	R14-BOAP-1/2P3	Rotor con Seguro
15	940943	R15-BOAP-1/2P3	Balero 6201
16	940944	R16-BOAP-1/2P3	Ensamble de campo
18	940945	R18-BOAP-1/2P3	Capuchones
19	940946	R19-BOAP-1/2P3	Tapa de conecciones
20	940947	R20-BOAP-1/2P3	Tornillo 4x40
21	940948	R21-BOAP-1/2P3	Tornillo M4x6 mm
22	940949	R22-BOAP-1/2P3	Capacitor 16µF
23	940950	R23-BOAP-1/2P3	Opresor
24	940951	R24-BOAP-1/2P3	Protector de Cable
26	940952	R26-BOAP-1/2P3	Cubierta de motor
27	940953	R27-BOAP-1/2P3	Tornillo 5x18
28	940954	R28-BOAP-1/2P3	Ventilador
29	940955	R29-BOAP-1/2P3	Tapa de ventilador
30	940956	R30-BOAP-1/2P3	Cable de Alimentación 3x0.5mm <sup>2</sup> x30 cm
31	940957	R31-BOAP-1/2P3	Indicador de Tierra

