

No.	Código	Clave	Descripción
1	954412	R1-BASE-30P	Plato
2	954413	R2-BASE-30P	Patas de carga
3	954414	R3-BASE-30P	Carcasa superior
4	954415	R4-BASE-30P	Panel de visualización frontal
5	954416	R5-BASE-30P	Pantalla frontal y trasera con arnes
5.1	954417	R5.1-BASE-30P	Tornillo (3x8)
6	954418	R6-BASE-30P	Panel de teclado
7	954419	R7-BASE-30P	Teclado con arnes
7.1	954420	R7.1-BASE-30P	Tornillo (3x6)
8	954421	R8-BASE-30P	Panel de visualización trasero
10	954422	R10-BASE-30P	Soporte de plato
10.1	954423	R10.1-BASE-30P	Tornillo allen (M6x20)
10.2	954424	R10.2-BASE-30P	Placa de soporte
11	954425	R11-BASE-30P	Celda de carga
11.1	954426	R11.1-BASE-30P	Tornillo allen (M6x16)
12	954427	R12-BASE-30P	Batería de ácido sólido
12.1	954428	R12.1-BASE-30P	Cables para batería
13	954429	R13-BASE-30P	Soporte para celda de carga
13.1	954430	R13.1-BASE-30P	Tornillo (4x12)
14	954431	R14-BASE-30P	Tarjeta principal
14.1	954432	R14.1-BASE-30P	Juego de cables
15	954433	R15-BASE-30P	Base inferior
15.1	954434	R15.1-BASE-30P	Cubierta de la batería
15.2	954435	R15.2-BASE-30P	Tornillo (4x8)
16	954436	R16-BASE-30P	Conector de cargador
17	954437	R17-BASE-30P	Patas de base
18	954438	R18-BASE-30P	Interruptor
19	954439	R19-BASE-30P	Cargador de batería

