

No.	Código	Clave	Descripción
1N	951801	R1N-BASE-40P	Ensamble de plato con grapas
2N	951802	R2N-BASE-40P	Tornillo St(4x12)
3N	951803	R3N-BASE-40P	Base con ensamble de burbuja de nivel, placas para batería
4N	951804	R4N-BASE-40P	Carcasa superior
5N	951805	R5N-BASE-40P	Pantalla fontal y trasera con arnés
6N	951806	R6N-BASE-40P	Tornillo cabeza Phillips St3x8
7N	951807	R7N-BASE-40P	Tornillo (3x8)
8N	951808	R8N-BASE-40P	Tapa de la caja de engranes
9N	951809	R9N-BASE-40P	Tornillo cabeza Phillips St3X5
10N	951810	R10N-BASE-40P	Batería 4 V/ 4 Ah
11N	951811	R11N-BASE-40P	Soporte de batería
12N	951812	R12N-BASE-40P	Tornillo cabeza Phillips St4x12
13N	951813	R13N-BASE-40P	Tarjeta principal
14N	951814	R14N-BASE-40P	Cables para batería
15N	951815	R15N-BASE-40P	Tornillo cabeza Allen M6x16
16N	951816	R16N-BASE-40P	Soporte de plato
17N	951817	R17N-BASE-40P	Celda de carga
18N	951818	R18N-BASE-40P	Placa de soporte
19N	951819	R19N-BASE-40P	Tornillo cabeza de gota Phillips St4x12
20N	951820	R20N-BASE-40P	Juego de cables
21N	951821	R21N-BASE-40P	Interruptor
22N	951822	R22N-BASE-40P	Conector de cargador
23N	951823	R23N-BASE-40P	Tapa de baterías
24N	951824	R24N-BASE-40P	Patas de base
25N	951825	R25N-BASE-40P	Cargador de batería

