

No.	Código	Clave	Descripción
1	939185	R1-BOAP-1/2F	Tornillo M5*35 mm
2	939186	R2-BOAP-1/2F	Ensamble de Bomba
3	939187	R3-BOAP-1/2F	Ensamble tornillo de llenado
5	939188	R5-BOAP-1/2F	Impulsor 58x4.5
6	939189	R6-BOAP-1/2F	Seguro
7	939190	R7-BOAP-1/2F	Arandela Plana
8	939191	R8-BOAP-1/2F	Sello Mecanico Φ12
9	939192	R9-BOAP-1/2F	Sello 60 mm
11	939193	R11-BOAP-1/2F	Tornillo M5*22mm
12	939194	R12-BOAP-1/2F	Empaque
13	939195	R13-BOAP-1/2F	Cuñero Ø12
14	939196	R14-BOAP-1/2F	Rotor con Seguro
15	939197	R15-BOAP-1/2F	Balero 6201
16	939198	R16-BOAP-1/2F	Ensamble de campo
18	939199	R18-BOAP-1/2F	Capuchones
19	939200	R19-BOAP-1/2F	Tapa de conecciones
20	939201	R20-BOAP-1/2F	Tornillo 4x40
21	939202	R21-BOAP-1/2F	Tornillo M4x6 mm
22	939203	R22-BOAP-1/2F	Capacitor 16µF
23	939204	R23-BOAP-1/2F	Opresor
24	939205	R24-BOAP-1/2F	Protector de Cable
25	ACC		Arandela Ondulada
26	939206	R26-BOAP-1/2F	Cubierta de motor
27	939207	R27-BOAP-1/2F	Tornillo 5x18
28	939208	R28-BOAP-1/2F	Ventilador
29	939209	R29-BOAP-1/2F	Tapa de ventilador
30	939210	R30-BOAP-1/2F	Cable de Alimentación 3×0.5mm ² ×30 cm
31	939211	R31-BOAP-1/2F	Indicador de Tierra

