


ENGLISH
ESPAÑOL

TRUPER
expert

SDS Plus Hammer Drill

6 Joules
Impact energy

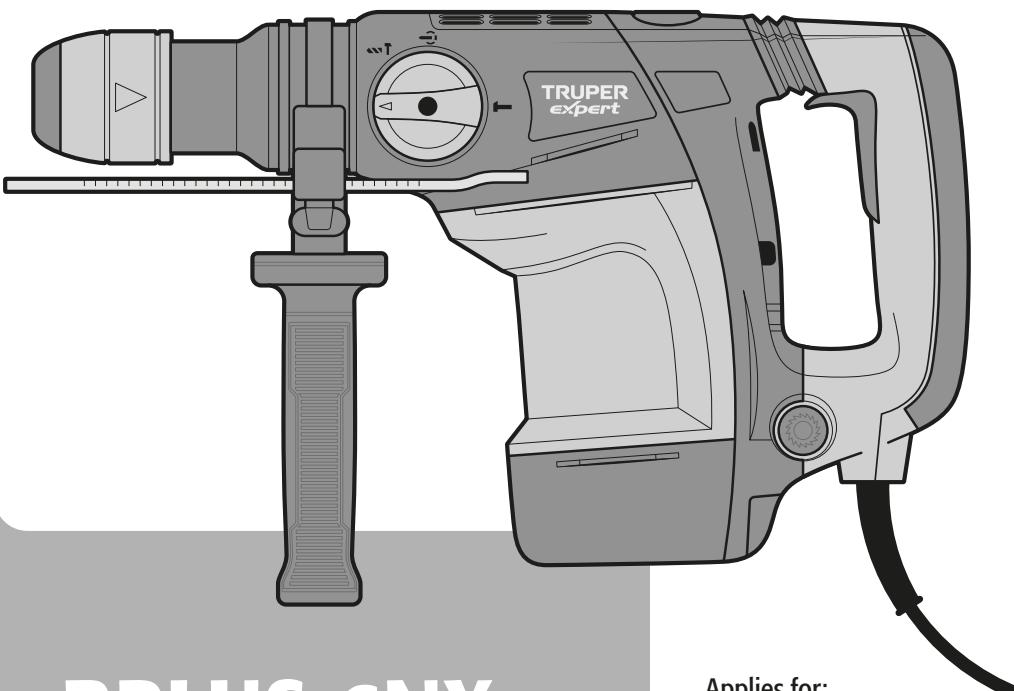

RPLUS-6NX

Applies for:

Code

Model

101221

RPLUS-6NX

! CAUTION



Read this manual thoroughly
before using the tool.




Technical Data.....	3
Power requirements.....	3
 General power tool safety warnings.....	4
 Safety warnings for the use of hammer drills.....	5
Parts.....	6
Mounting and adjustments.....	6
Start up.....	8
Maintenance.....	9
Notes.....	10
Authorized Service Centers.....	11
Warranty Policy.....	12

CAUTION

To gain the best performance of the tool, prolong the duty life, make the Warranty valid if necessary, and to avoid hazards of fatal injuries please read and understand this Manual before using the tool.

Keep this manual for future references.

The illustrations in this manual are for reference only. They might be different from the real tool.

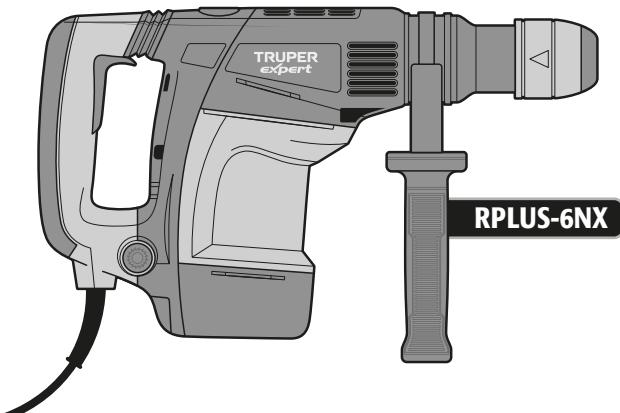

RPLUS-6NX

Code	•	101221
Description	•	Hammer Drill SDS Plus
Chuck	•	SDS Plus
Voltage	•	127 V~
Frequency	•	60 Hz
Current	•	10 A
Power	• 1 100 W	Impact energy • 6 Joules
Weight	•	13.2 lb
Speed	•	Rotation: 300 RPM - 760 RPM Impact: 1900 strokes/min - 4800 strokes/min
Work cycle	•	50 minutes work per 20 min rest. Maximum 6 hours daily
Conductors	•	16 AWG x 2C with an insulation temperature of 221 °F
Insulation	• Class II	IP Grade • IP20

Power Cord Grips used is: Type "Y".
Tool Build Quality: Reinforced insulation
Thermal insulation on motor winding: Class F


⚠ WARNING Avoid the risk of electric shock or severe injury. When the power cable gets damaged it should only be replaced by the manufacturer or at a **TRUPER** Authorized Service Center. The build quality of the electric insulation is altered if spills or liquid gets into the tool while in use. Do not expose to rain, liquids and/or dampness.

⚠ WARNING Before gaining access to the terminals all power sources should be disconnected.



Power Requirements

⚠ WARNING Tools with double insulation and reinforced insulation are equipped with a polarized plug (one prong is wider than the other). This plug will only fit in the right way into a polarized outlet. If the plug cannot be introduced into the outlet, reverse the plug. If it still doesn't fit, call a qualified electrician to install for you a polarized outlet. Do not alter the plug in any way. Both insulation types eliminate the need of both a grounded third power cord with three prongs or a grounded power connection.

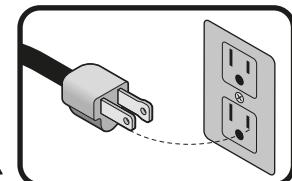

⚠ WARNING When using an extension cable, verify the gauge is enough for the power that your product needs. A lower gauge cable will cause voltage drop in the line, resulting in power loss and overheating. The following table shows the right size to use depending on cable's length and the ampere capability shown in the tool's nameplate. When in doubt use the next higher gauge.

Ampere Capacity	Number of Conductors	Extension gauge from 6' to 49'	higher than 49'
from 0 A and up to 10 A		18 AWG(*)	16 AWG
from 10 A and up to 13 A		16 AWG	14 AWG
from 13 A and up to 15 A		14 AWG	12 AWG
from 15 A and up to 20 A	3 (one grounded)	8 AWG	6 AWG

* It is safe to use only if the extensions have a built-in artifact for over current protection.

AWG = American Wire Gauge. Reference: NMX-J-195-ANCE

⚠ WARNING When operating power tools outdoors, use a **VOLTECK** grounded extension cable labeled "For Outdoors Use". These extensions are especially designed for operating outdoors and reduce the risk of electric shock.



⚠ WARNING! Read carefully all safety warnings and instructions listed below. Failure to comply with any of these warnings may result in electric shock, fire and / or severe damage. **Save all warnings and instructions for future references.**

Work area

Keep your work area clean, and well lit.

Cluttered and dark areas may cause accidents.



Never use the tool in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.

Sparks generated by power tools may ignite the flammable material.



Keep children and bystanders at a safe distance while operating the tool.

Distractions may cause loss of control.



Electrical Safety

The tool plug must match the power outlet. Never modify the plug in any way. Do not use any adapter plugs with grounded power tools.



Modified plugs and different power outlets increase the risk of electric shock.

Avoid body contact with grounded surfaces, such as pipes, radiators, electric ranges and refrigerators.

The risk of electric shock increases if your body is grounded.

Do not expose the tool to rain or wet conditions.

Water entering into the tool increases the risk of electric shock.

Do not force the cord. Never use the cord to carry, lift or unplug the tool. Keep the cord away from heat, oil, sharp edges or moving parts.

Damaged or entangled cords increase the risk of electric shock.

When operating a tool outdoors, use an extension cord suitable for outdoor use.

Using an adequate outdoor extension cord reduces the risk of electric shock.

If operating the tool in a damp location cannot be avoided, use a ground fault circuit interrupter (GFCI) protected supply.

Using a GFCI reduces the risk of electric shock.

Personal safety

Stay alert, watch what you are doing and use common sense when operating a tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.

A moment of distraction while operating the tool may result in personal injury.

Use personal protective equipment. Always wear eye protection.

Protective equipment such as safety glasses, anti-dust mask, non-skid shoes, hard hats and hearing protection used in the right conditions significantly reduce personal injury.



Prevent unintentional starting up. Ensure the switch is in the "OFF" position before connecting into the power source and / or battery as well as when carrying the tool.

Transporting power tools with the finger on the switch or connecting power tools with the switch in the "ON" position may cause accidents.

General power tool safety warnings



General power tool safety warnings



Remove any wrench or vice before turning the power tool on.

Wrenches or vices left attached to rotating parts of the tool may result in personal injury.

Do not overreach. Keep proper footing and balance at all times. This enables a better control on the tool during unexpected situations.

Dress properly. Do not wear loose clothing or jewelry. Keep hair, clothes and gloves away from the moving parts.

Loose clothes or long hair may get caught in moving parts.



If you have dust extraction and collection devices connected onto the tool, inspect their connections and use them correctly.

Using these devices reduce dust-related risks.

Power Tools Use and Care

Do not force the tool. Use the adequate tool for your application.



The correct tool delivers a better and safer job at the rate for which it was designed.

Do not use the tool if the switch is not working properly.

Any power tool that cannot be turned ON or OFF is dangerous and should be repaired before operating.

Disconnect the tool from the power source and / or battery before making any adjustments, changing accessories or storing.

These measures reduce the risk of accidentally starting the tool.

Store tools out of the reach of children. Do not allow persons that are not familiar with the tool or its instructions to operate the tool.



Power tools are dangerous in the hands of untrained users.

Service the tool. Check the mobile parts are not misaligned or stuck. There should not be broken parts or other conditions that may affect its operation. Repair any damage before using the tool.



Most accidents are caused due to poor maintenance to the tools.

Keep the cutting accessories sharp and clean.

Cutting accessories in good working conditions are less likely to bind and are easier to control.

Use the tool, components and accessories in accordance with these instructions and the projected way to use it for the type of tool when in adequate working conditions.

Using the tool for applications different from those it was designed for, could result in a hazardous situation.

Service

Repair the tool in a TRUPER® Authorized Service Center using only identical spare parts.

This will ensure that the safety of the power tool is maintained.



This tool is in compliance with
the Official Mexican Standard
(NOM - Norma Oficial Mexicana).

Safety warnings for the use of Hammer Drills

TRUPER
expert

Choose the appropriate drill or attachment

- ⚠ CAUTION** • The tool is designed to work with bits or accessories with SDS-Plus shanks. Choose the appropriate one for the material to be worked on, this reduces the risk of serious injury and speeds up the work.
- Use well-sharpened and well-conditioned drill bits/accessories to optimize the work.

Before operating the hammer drill

- Take your time to evaluate the work to be done and make sure you have followed all the necessary precautions before starting to drill.

- ⚠ WARNING** • Fit the accessory correctly to the chuck, otherwise it can be thrown out at high speed and cause serious injury.

- ⚠ DANGER** • Before hitting a wall, floor or ceiling, make sure there are no embedded objects, such as wires or electrical conduits or pipes.

- ⚠ DANGER** • Make sure the switch is off (page 7 ON and OFF) before connecting the tool, otherwise it will start working unexpectedly, which can cause serious injury.

- ⚠ CAUTION** • Turn off and disconnect the tool before installing or replacing an accessory.

- ⚠ WARNING** • This electric tool produces an electromagnetic field during its operation that could interfere with medical implants. To reduce the risk of serious or fatal injury, it is recommended that people with medical implants consult their physician and the manufacturer of the implant before operating the tool.

While operating the hammer drill

- ⚠ CAUTION** • Hold the tool by its handle and by the auxiliary handle. Remember that loss of control can cause personal injury.

- Hold the tool by its insulating surfaces, especially when performing work where the cutting portion of the drill may contact hidden wiring or the tool's own power cord. Contact with a live wire also makes the metal parts of the tool live and can cause an electric shock to the operator.

- Do not subject the tool to excessive stress.

- ⚠ CAUTION** • If the drill bit gets stuck in the workpiece, turn off the demolition hammer immediately. Then remove the drill bit from the workpiece. Do not attempt to remove jammed bits by turning the tool on and off.

- Do not put too much pressure on the tool to speed up the drilling. Otherwise, the drill bit will be damaged and the efficiency of the tool will decrease as well as its life span.

- ⚠ WARNING** • The larger the chisel area, the greater the reactive force, which can lead to a loss of control of the tool. To avoid this possibility, hold the tool firmly with both hands and maintain a balanced position on both feet while drilling at 90°.

- Be careful and ready to relax the force as soon as the drill bit penetrates the material. Sudden movements can cause accidents.

- ⚠ CAUTION** • Do not touch the chisel or drill holes immediately after drilling. Wait for them to cool down before handling them. Do not try to cool them with water or oil.


- Avoid placing the tool in a place with particles and/or dust immediately after use, these can be absorbed into the tool mechanism and thus damage it.


- Use headset protectors, when running services that make noise above 85 dB. Exposure to noise can cause hearing loss.

- Use a dust mask and dust extraction equipment if necessary. Remember that working with materials such as asbestos, lead paint, additives, some types of wood, metals, or minerals is highly toxic.

- Wear safety goggles.

Correct way to hold the hammer drill

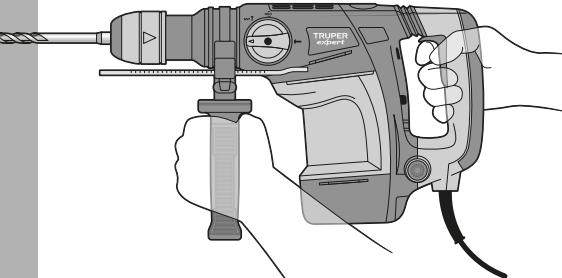


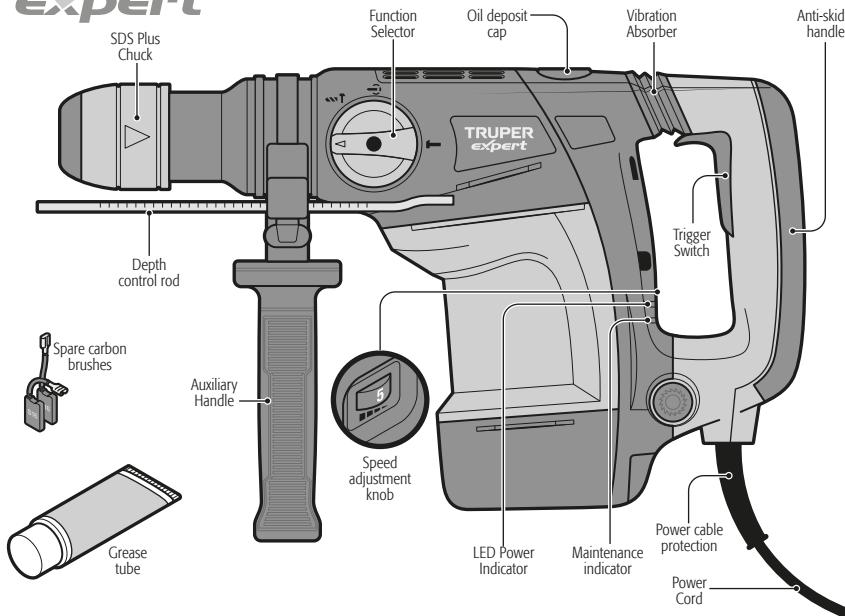

Mounting and Adjustments

Auxiliary Handle

- CAUTION** Operate the power tool only with the auxiliary handle installed.
- The auxiliary handle can be rotated to any position for a secure, low-fatigue posture.
 - Rotate the auxiliary handle grip (**A**) counterclockwise to loosen the mount (**B**) and swing the auxiliary handle to the desired position.
 - Then, retighten the auxiliary handle grip by turning clockwise.
 - Make sure the mount band is positioned in the proper section of the housing.

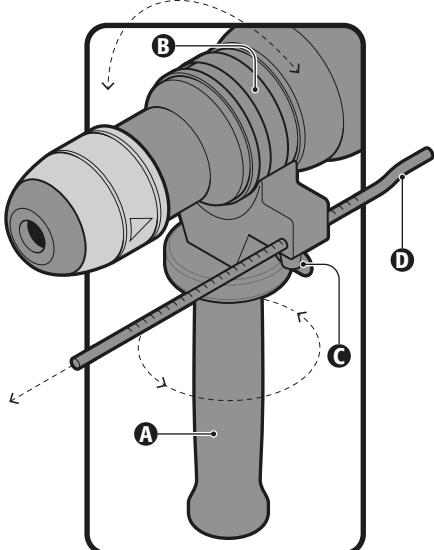

Depth Control Rod

- Loosen the butterfly nut (**C**) and insert the rod (**D**) into the mounting hole on the side of the handle.
- Adjust the position of the rod according to the depth of the hole and tighten the butterfly nut.

Mounting and Adjustments




TRUPER
expert

Mounting bits and accessories

CAUTION To prevent accidents, confirm that the switch is turned off and disconnect the plug from the power supply.

WARNING Always wear gloves when changing accessories. They can become extremely hot during operation.

- Clean the drill bit shank (**A**) and apply grease before inserting it
- Insert the drill bit into the tool. Turn the drill bit slowly to feel for the point where it engages. At this point, pull the collar (**B**) in the direction of the arrow mark and push it in.
- Pull the drill bit to confirm that it is fully secured.
- To remove the drill bit, pull the collar completely in the direction of the arrow and pull out the drill bit.

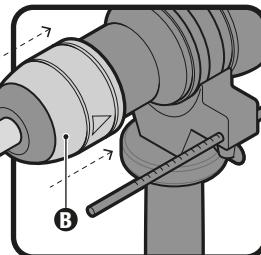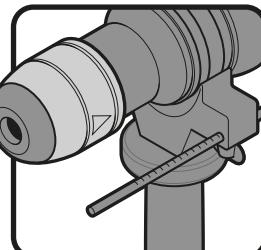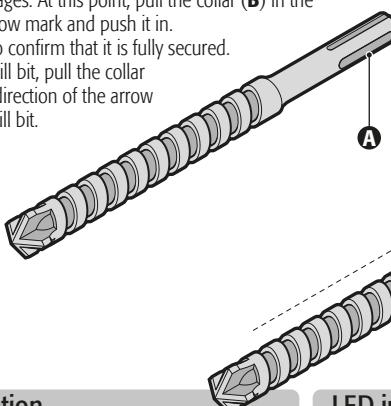


Speed regulation

- The equipment has a built-in electronic control circuit to adjust and regulate the number of rotations and impacts depending on the material to be processed.
- Level '1' of the adjustment knob (**C**) is for up to 300 rotations per minute and 1 950 strokes per minute.
- Level '6' is for up to 760 rotations per minute and 4 860 strokes per minute.


CAUTION

Do not adjust the knob during operation. This could injure the operator as the rotary hammer must always be held with both hands.

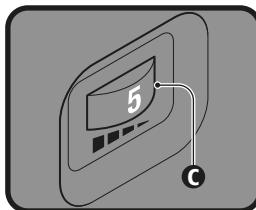


LED indicators (**D**)

- The green power LED indicator lights up when the tool is switched on. If the indicator LED does not light, the power cord or controller may be defective.
- The red service indicator LED lights up when the carbons are worn to indicate that the tool needs service.

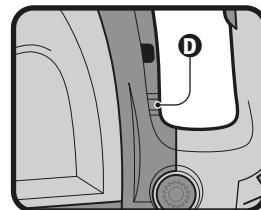

ON and OFF

- To turn the hammer drill ON, press the trigger switch (**E**).
- To turn OFF the equipment release the trigger switch (**F**).

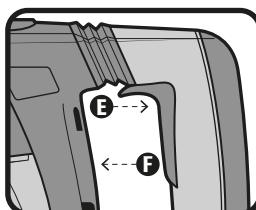

Function Selector

- Be sure to use the function selector (**A**) only when the motor is completely stopped.

⚠️ WARNING On no reason try to adjust the function selector with the motor running, the tool could rotate abruptly, causing unexpected accidents.

IMPACT - ROTATION (↘ T)

⚠️ WARNING This function is intended for working ONLY with drill bits and NOT with chisels or punches, as the hammer could get stuck in the material and rotate abruptly.






- Turn the function selector until the arrow points to the drill/hammer figure (**B**).
- Mount the drill bit as shown on page 7.
- Hold the hammer drill firmly in both hands by the main handle and the auxiliary handle, rest the tip of the bit on the material to be worked and press the switch to start the operation.

⚠️ CAUTION • It is not necessary to push hard on the hammer drill when working, applying light pressure is sufficient.

⚠️ WARNING • Although the hammer drill is equipped with a safety clutch, if the bit were to become jammed in the material and is not properly clamped with both hands as instructed, it could rotate abruptly and strike the operator.

IMPACT (↙)

- Turn the function selector until the arrow points to the hammer figure (**C**).
- Mount the attachment as shown on page 7.
- If you need to modify the chisel shaft:
 - Turn the function selector until the arrow points to the figure ↗ as shown in the diagram (**D**).
 - Manually turn the chisel to the desired position (**F**).
 - Return the selector switch to the impact function (↙).
- Hold the rotary hammer firmly in both hands by the main handle and the auxiliary handle, rest the chisel tip on the material to be worked and press the switch to start the operation.

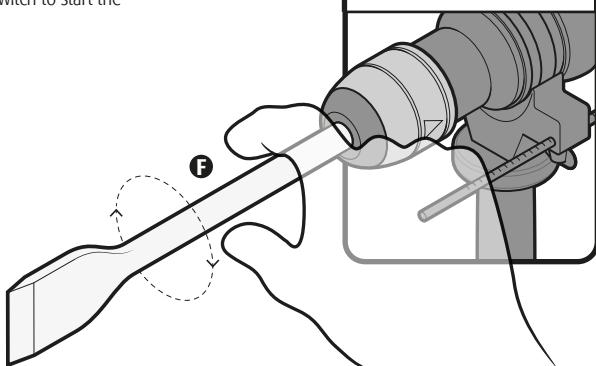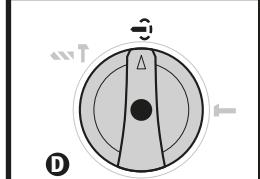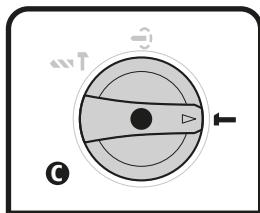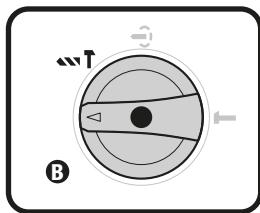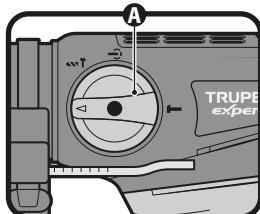

Safety Clutch

The tool has a safety clutch, which interrupts spindle power (causing a rattling noise), if the accessory jams. Should this possibility occur:

- Turn the tool off immediately.
- Remove the jammed accessory.
- Turn the tool back on.

Additional Information

- SDS-Plus accessories require freedom to move within the bit, which causes eccentricity when the tool is unloaded. However, the accessory automatically centers itself during operation, without affecting drilling accuracy.
- When new, the tool requires a 5-hour working time to reach maximum efficiency.

Maintenance

Cleaning and Care

- Clean the machine with a soft cloth, dampened with soap and water, preferably after each use.
- Always keep the vents clean and free of obstructions to ensure proper cooling of the motor.
- Regularly inspect all mounting screws and make sure they are tightened properly. If any of the screws are loose, tighten them immediately.

Lubrication


- The hammer drill crankshaft is lubricated with low viscosity grease so that it can be used for a long period of time without the need to replace the grease.
 - Contact a **TRUPER** Authorized Service Center to replace the grease in case of leaks.
- WARNING** Applying non recommended grease will cause the machine to clog, reducing its service life.

Carbon Brush Replacement

- The carbons should be checked periodically, and always be replaced by a **TRUPER** Authorized Service Center when they have worn out.
- After they have been replaced, ask to inspect if the new carbons can move freely in the carbon holder and request that the tool be turned on for 5 minutes to match the contact of the carbons and commutator.
- Only use **TRUPER** original replacement carbons, specifically designed with the hardness and electrical resistance for each type of motor. Out of specification carbons can damage the motor.
- When changing the carbon brushes, always replace both carbons.
- In case you have to replace the carbons yourself, please follow this order:
 1. Loosen the two fixing screws and remove the fan cover.
 2. Remove the coil spring and the carbons.
 3. After replacing the carbons, install the coil spring and fan cover, tightening the set screws securely.

Service

- Service to the tools shall only be carried out in a **TRUPER** Authorized Service center. Service and maintenance carried out by unqualified persons can be dangerous and may result in personal injury and invalidate the product warranty.

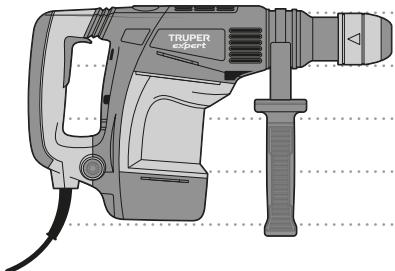

Authorized Service Centers

TRUPER
expert

In the event of any problem contacting a **TRUPER**® Authorized Service Center, please see our webpage www.truper.com to get an updated list, or call our toll-free numbers **800 690-6990** or **800 0187-8737** to get information about the nearest Service Center.

AGUASCALIENTES	DE TODO PARA LA CONSTRUCCIÓN GRAL. BARRAGÁN #1201, COL. GREMIAL, C.P. 20030, AGUASCALIENTES, AGS. TEL: 449 994 0537	MORELOS	FIX FERRETERÍAS CAPITÁN ANZURES #95, ESQ. JOSÉ PERDIZ, COL. CENTRO, C.P. 62740, CUAUTLA, MOR. TEL.: 735 352 8931
BAJA CALIFORNIA	SUCURSAL TIJUANA AV. LA ENCANTADA, LOTE #5, PARQUE INDUSTRIAL EL FLORIDO II, C.P. 22244, TIJUANA, B.C. TEL.: 664 969 5100	NAYARIT	HERRAMIENTAS DE TEPIC MAZATLÁN #117, COL. CENTRO, C.P. 63000, TEPIC, NAY. TEL.: 311 258 0540
BAJA CALIFORNIA SUR	FIX FERRETERÍAS FELIPE ÁNGELES ESQ., RUIZ CORTÍNEZ S/N, COL. PUEBLO NUEVO, C.P. 23670, CD. CONSTITUCIÓN, B.C.S. TEL.: 613 132 1115	NUEVO LEÓN	SUCURSAL MONTERREY CARRETERA LAREDO #500, 1B MONTERREY PARKS, COLONIA PUERTA DE ANÁHUAZ, C.P. 66052, ESCOBEDO, NUEVO LEÓN, TEL.: 81 8352 8791 / 81 8352 8790
CAMPECHE	TORNILLERÍA Y FERRETERÍA AAA AV. ALVARO OBREGÓN #524, COL. ESPERANZA C.P. 24080 CAMPECHE, CAMP. TEL.: 981 815 2808	OAXACA	FIX FERRETERÍAS AV. 20 DE NOVIEMBRE #910, COL. CENTRO, C.P. 68300, TUXTEPEC, OAC. TEL.: 287 106 3092
CHIAPAS	FIX FERRETERÍAS AV. CENTRAL SUR #27, COL. CENTRO, C.P. 30700, TAPACHULA, CHIS. TEL.: 962 118 4083	PUEBLA	SUCURSAL PUEBLA AV. PERIFÉRICO #2-A, SAN LORENZO ALMECATLA, C.P. 72710, CUAUTLACINGO, PUE. TEL.: 222 282 8282 / 84 / 85 / 86
CHIHUAHUA	SUCURSAL CHIHUAHUA AV. SILVESTRE TERRAZAS #128-11, PARQUE INDUSTRIAL BAFAR, CARRETERA MÉXICO CUAUHTEMOC, C.P. 31415, CHIHUAHUA, CHIH. TEL.: 614 434 0052	QUERÉTARO	ARU HERRAMIENTAS S.A. DE C.V. AV. PUERTO DE VERACRUZ #110, COL. RANCHO DE ENMEDIO, C.P. 76842, SAN JUAN DEL RÍO, QRO. TEL.: 427 268 4544
MEXICO CITY	FIX FERRETERÍAS EL MONSTRUO DE CORREGIDORA, CORREGIDORA # 22, COL. CENTRO, C.P. 06060, CUAUHTEMOC, CDMX. TEL: 55 5522 5031 / 5522 4861	QUINTANA ROO	FIX FERRETERÍAS CARRETERA FEDERAL MZ. 46 LT. 3 LOCAL 2, COL EJIDAL, C.P. 77710 PLAVA DEL CARMEN, Q.R. TEL.: 984 267 3140
COAHUILA	SUCURSAL TORREÓN CALLE METAL MECÁNICA #280, PARQUE INDUSTRIAL ORIENTE, C.P. 27278, TORREÓN, COAH. TEL.: 871 209 68 23	SAN LUIS POTOSÍ	FIX FERRETERÍAS AV. UNIVERSIDAD #1850, COL. EL PASEO, C.P. 78320, SAN LUIS POTOSÍ, S.L.P. TEL: 444 822 4341
COLIMA	BOMBAS Y MOTORES BYMTESA DE MANZANILLO BLVD. MIGUEL DE LA MADRID #190, COL. 16 DE SEPTIEMBRE, C.P. 28239, MANZANILLO, COL. TEL.: 314 332 1986 / 332 8013	SINALOA	SUCURSAL CULIACÁN AV. JESÚS KUMATE SUR #4301, COL. HACIENDA DE LA MORA, C.P. 80143, CULIACÁN, SIN. TEL.: 661 173 9139 / 173 8400
DURANGO	TORNILLOS ÁGUILA, S.A. DE C.V. MAZURIÓ #200, COL. RUIZ ECHEVERRÍA, DURANGO, DGO.TEL.: 618 817 1946 / 618 818 2844	SONORA	FIX FERRETERÍAS CALLE 5 DE FEBRERO #517, SUR LT. 25 MZ. 10, COL. CENTRO, C.P. 85000, CD. OBREGÓN, SON. TEL.: 644 413 2392
ESTADO DE MÉXICO	SUCURSAL CENTRO JILOTEPEC AV. PARQUE INDUSTRIAL #1-A, C.P. 54240, JILOTEPEC, EDO. DE MÉX. TEL: 761 782 9101 EXT. 5728 Y 5102	TABASCO	SUCURSAL VILLAHERMOSA CALLE HELIO LOTES 1, 2 Y 3 MZ. #1, COL. INDUSTRIAL, 2A ETAPA, C.P. 86010, VILLAHERMOSA, TAB. TEL.: 993 553 7244
GUANAJUATO	CÍA. FERRETERA NUEVO MUNDO S.A. DE C.V. AV. MÉXICO - JAPÓN #225, CD. INDUSTRIAL, C.P. 38010, CELAYA, GTO. TEL: 461 617 7578 / 79 / 80 / 88	TAMAULIPAS	VM ORINGS Y REFACCIONES CALLE ROSITA #527 ENTRE 20 DE NOVIEMBRE Y GRAL. RODRÍGUEZ, FRACC. REYNOSA, C.P. 88780, REYNOSA, TAMS. TEL.: 899 926 7552
GUERRERO	CENTRO DE SERVICIO ECLIPSE CALLE PRINCIPAL MZ.1 LT. 1, COL. SANTA FE, C.P. 39010, CHILPANCINGO, GRO. TEL: 747 478 5793	TLAXCALA	SERVICIOS Y HERRAMIENTAS INDUSTRIALES PABLO SIDAR #152, COL . BARRIO DE SAN BARTOLOMÉ, C.P. 90970, SAN PABLO DEL MONTE, TLAX. TEL.: 222 271 7502
HIDALGO	FERREPRECIOS S.A. DE C.V. LIBERTAD ORIENTE #304 LOCAL 30, INTERIOR DE PASAJE ROBLEDO, COL. CENTRO, C.P. 43600, TULANCINGO, HGO. TEL.: 775 753 6615 / 775 753 6616	VERACRUZ	LA CASA DISTRIBUIDORA TRUPER BLVD. PRIMAVERA. ESQ. HORTENSIA S/N, COL. PRIMAVERA C.P. 93508, POZA RICA, VER. TEL.: 781 823 8100 / 826 8484
JALISCO	SUCURSAL GUADALAJARA AV. ADOLFO B. HORN # 6800, COL: SANTA CRUZ DEL VALLE, C.P.: 45655, TLAJOMULCO DE ZÚÑIGA, JAL. TEL.: 33 3606 5285 AL 90	YUCATÁN	SUCURSAL MÉRIDA CALLE 33 #600 Y 602, LOCALIDAD ITZINCAZ Y MULSAY, MPIO. UMÁN, C.P. 97390, MÉRIDA, YUC. TEL.: 999 912 2451
MICHOACÁN	FIX FERRETERÍAS AV. PASEO DE LA REPÚBLICA #3140-A, COL. EX-HACIENDA DE LA HUERTA, C.P. 58050, MORELIA, MICH. TEL.: 443 334 6838		

Code

101221

Model

RPLUS-6NX

Brand **TRUPER®**

Warranty. Duration: 3 years. Coverage: parts, components and workmanship against manufacturing or operating defects, except if used under conditions other than normal; when it was not operated in accordance with the instructive; was altered or repaired by personnel not authorized by TRUPER®. To make the warranty valid, only present the product in the establishment where you bought it or in Corregidora 35, Centro, Cuauhtémoc, CDMX, 06060, where you can also purchase parts, components, consumables and accessories. The costs of transportation of the product that derive from its fulfillment of its service network are included. Truper will not require any proof of purchase to make the warranty effective. Phone number 800-018-7873. Made in China. Imported by TRUPER, S.A. de C.V. Parque Industrial 1, Parque Industrial Jilotepec, Jilotepec, Edo. de Méx. C.P. 54257, Phone number 761 782 9100.

**3**
YEARS

Stamp of the business. Date of purchase:

**Poliza de
Garantía**

TRUPER
expert



Sello del establecimiento comercial. Fecho de compra:

Garantía. Duración: 3 años. Cobertura: piezas, componentes y mano de obra contra defectos de fabricación o funcionalamiento, excepto si se usó en condiciones distintas a las normales; cuando no fue operado conforme instrucción, fue alterado o reparado por personal no autorizado por TRUPER®. Para hacer efectiva la garantía, trae el producto al establecimiento donde lo compró o en Corregidora 35, Centro, Querétaro, Qro., 06060, donde también podrá adquirir partes, componentes, consumibles y accesorios. Cuauhtémoc, DMX, 06060, donde también podrá adquirir partes, componentes, consumibles y accesorios. Ed. de Mex. C.P. 54257, Tel. 761 782 9100. En Héchito en Lima importador TRUPER, S.A. de C.V. Parque Industrial 1, Parque industrial Jilotepéc, Jilotepéc, no solicitará ningún tipo de comprobante de pago para hacer efectiva la garantía. Tel. 800-018-7873. Made in/Héchito en Lima importador TRUPER, S.A. de C.V. Parque Industrial 1, Parque industrial Jilotepéc, Jilotepéc, no solicitará ningún tipo de comprobante de pago para hacer efectiva la garantía. Tel. 800-018-7873. Made in/Héchito en Lima importador TRUPER, S.A. de C.V. Parque Industrial 1, Parque industrial Jilotepéc, Jilotepéc, incluye los gastos de transporte del producto que deviene de su cumplimiento de su red de servicio. Truper incluye los gastos de transporte del producto que deviene de su cumplimiento de su red de servicio.

Código	Modelo	Marca	RPLUS-GNX	TRUPER®	101221
--------	--------	-------	-----------	---------	--------

TRUPER


Centros de Servicio Autorizados

En caso de tener algún problema para contactar un Centro de Servicio Autorizado **TRUPER**, consulte nuestra página www.truper.com donde le informarán cuál es el Centro de Servicio más cercano.

AGUASCALIENTES	DE TODO PARA LA CONSTRUCCIÓN	ACUASCALIENTES, AGS, TEL.: 499 994 0537	CALLE 10 DE ABRIL #1201, CUL. GRIMMIA, CP 20030,	BAJA SUCURSAL TIJUANA	TEL.: 664 969 5100
MORELOS	FÍX FERRETERIAS	CAMPANAS AUTORIZADAS #65, ESO. JOSÉ PEREZ, COL.	CENTRO, CP 62240, CUAUTLA, MOR.	CALLE 10 DE ABRIL #1201, CUL. GRIMMIA, CP 20030,	CALIFORNIA SUR
NAVARA	HERMOSILLAS DE TIPI	MEXICO, TEL.: 311 258 0540	PUEBLA SUCURSAL PUEBLA	AV. CENTRAL SUR #72, COL. SEPEFNAZA	CHIAPAS
NUEVO LEÓN	SUCURSAL MONTERREY	NEUVO LEÓN, TEL.: 18 352 7391 / 18 352 9371	TUXTEPEC, OAX, TEL.: 287 106 5092	AV. ALVARO OBREGÓN #40, CDMX, TEL.: 981 15 2808	CAMPECHE
COAHUILA	SUCURSAL TORREÓN	TEL.: 22 472 6544	AV. PURITO DE CEREAZAS #110, CDMX, TEL.: 984 27 106 5420	AV. ALBERTO BRUMFITT #280, PARRAQUE INDUSTRIAL	CDO. DE MEXICO
QUINTANA ROO	FÍX FERRETERIAS	TEL.: 984 267 3140	CP 77101, CUMBRES DEL CARMEN, Q.R.	BLV. MIGUEL DE LA MADRID #190, COL. 16 DE SEPTIEMBRE, CP 28239, MANIZALES, CDMX	GUANAJAUTO
SAN LUIS POTOSÍ	FÍX FERRETERIAS	TEL.: 664 44 32 2329	CP 78000, COL. 16 DE SEPTIEMBRE, CP 28239, MANIZALES, CDMX	EDO. DE MEXICO INDUSTRIAL #1-A, CPO. 5420, IJLTOPEC	ESTADO DE MEXICO
SONORA	SUCURSAL VILLAHOMOSA	TEL.: 664 44 32 2329	CP 83000, COL. 16 DE SEPTIEMBRE, CP 28239, MANIZALES, CDMX	CELMAR, GTO, TEL.: 461 617 75/78 / 79 / 80 / 88	GUERRERO
TABASCO	SUCURSAL VILLAHOMOSA	TEL.: 993 353 7244	CP 86100, VILLAHERMOZA TAB.	CENTRO DE SERVICIO ECCLIPSE	CHIAPAS
TAMAULIPAS	SERVICIOS Y HERMOSILLAS INDUSTRIALES	TEL.: 889 706 5755	CP 88880, RIVIERA NAY.	CALLE PRINCIPAL MZ. 1, COL. SANTÍA FE, CP 39010,	HIDALGO
TJALCALA	SERVICIOS Y HERMOSILLAS INDUSTRIALES	TEL.: 22 27 7520	CP 90070, SAN PEDRO DEL MONTE, TJA.	CALLE PRINCIPAL MZ. 1, COL. SANTÍA FE, CP 39010,	MICHOACÁN
VERACRUZ	LA CASA DISTRIBUIDORA TRUPER	TEL.: 782 823 0100 / 826 8484	CP 93308, HOTEL SINA, COL.	CALLE PRINCIPAL MZ. 1, COL. SANTÍA FE, CP 39010,	JALISCO
YUCATÁN	SUCURSAL MEDEIDA	TEL.: 999 912 2451	CP 73390, MERIDA, YUC.	CALLE PRINCIPAL MZ. 1, COL. SANTÍA FE, CP 39010,	MICHOCÁN

800 690-6990 o 800 0187-8737 donde le informarán cuál es el Centro de Servicio más cercano. En caso de tener algún problema para contactar un Centro de Servicio Autorizado **TRUPER**, consulte nuestra página www.truper.com donde obtendrá un listado actualizado, o llame al:

800 690-6990 o 800 0187-8737 donde le informarán cuál es el Centro de Servicio más cercano.

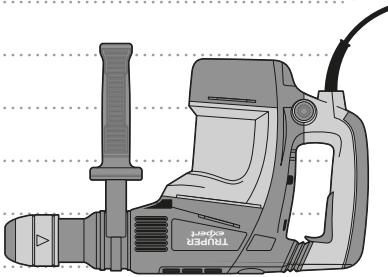

Notas

TRUPER
EXPERT

TRUPEER EXPERT

Puesta en marcha

Embrague de seguridad

- Aparece la herramienta de Immediatio
- La herramienta cuenta con un emparejamiento de segundas posibilidades
- que interrumpe la función del efecto (cuestionando una idea de acuerdo a su contexto)
- que aparece en la herramienta de accesoario se basa en el efecto (cuestionando una idea de acuerdo a su contexto)

- Reñirle el acceso al trascadero.
 - Vuelva a encender la herramienta.

- Los accesorios SDS Plus requieren de liberar el para moverse dentro del boquero, lo cual causa excentridad cuando se le remueve esta si se cae. Sin embargo el acceso se centra automáticamente durante la operación sin alejar la precisión del taladro.
- Claudio esas si se aleja, la herramienta requerire de un lento de 5 horas de trabajo para alcanzar su máxima eficiencia.

Información adicional

Cambio de carbones

- Inspección regularmente todos los tornillos de montaje y asegúrese de que están apretados correctamente. En caso de que alguno de los tornillos esté suelto, apriételo inmediatamente.

- E ciò che ha di romanzesco è la libertà con grasa de bala viscosa desiderata per utilizzarla durante un largo periodo sin necessid de remplazher la grasa.
 - Aunque un Cerrito de Servicio Autonizado
 - C TRUPER para reemplazar la grasa en caso de fuga.
 - A ADVERTENCIA Aplicar grasa no recomendada que le madiuna se atasque, reducienda su vida útil.

Lubricación


Mantenimiento

- Vuelva a encender la herramienta.
- Retire el accesorio albacaca.
- Apague la herramienta de inmediato.

Posiblemente:

que interrumpe la fuerza del eje (causando un ruido de taudleo), si el accesorio se atasca. De presentarse esta


- Los accesorios SDS PLUS requieren de libertad para moverse dentro del bocadillo, lo cual causa eventualmente daños en el bocadillo.
 - Claudio es la única persona que ha logrado moverse dentro del bocadillo sin causar daños.
 - Si se pierde la llave de liberación, se debe sacar la parte de liberación de la parte de la máquina que se quiera proteger.

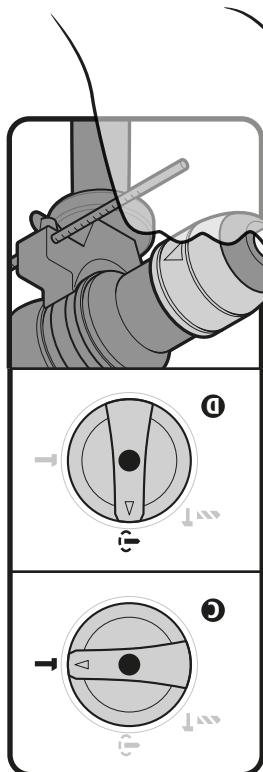

- Figura del impacto (C) → Gire el selector de función hasta que la flecha apunte a la letra C.
- Moverse de accesoario como se indica en la página 7.
- Si necesita modificar el eje del cuadro:
 - Gire el selector de función hasta que la flecha apunte a la figura → C como se indica en el gráfico (D).
 - Gire manualmente el cuadro hasta la posición deseada (F).
- Gire manualmente el cuadro hasta la posición deseada (E).
- Regrese el selector a la función de impago (→).
- Sosiego de rotación con fuerza en ambos mandos por el mando principal y el mando auxiliar, apoye la punta del cuadro en el material a trazar y optima el interruptor para comenzar la operación.

podría girar abrumadamente y golpear al operador.
debidamente sujetó con ambas manos como se indica,
legarla a través de la madera y no está
equipado con un mecanismo de seguridad, si la broca
sustituye.

ATENCIÓN • No es necesario empujar con fuerza el rotamotor al trabajar, aplicar una presión ligera es

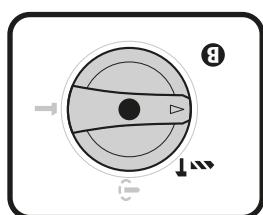


IMAGCT - ROTACION (SNT) Esta unión es la más grande para traspasar UNICAMENTE con socios Y NO con clientes o proveedores, ya que el rotamotor solo podrá quedar instalado en el mercado y sin desplazamiento.

ADVERTENCIA Está unión es la más grande para traspasar UNICAMENTE con socios Y NO con clientes o proveedores, ya que el rotamotor solo podrá quedar instalado en el mercado y sin desplazamiento.

• Móviles la broca como se indica en la página 7.

• Señales de rotación con flecha en ambas manos.


• Si gira la broca hasta que se aprieta a la

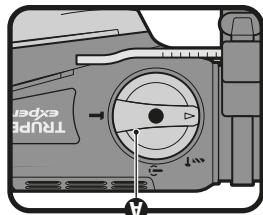

• Asegúrese de utilizar el selector de función (A) unicamente cuando el motor esté completamente detenido.
• Por ningún motivo intente ajustar el selector de función con el motor en marcha, la herramienta girará abruptamente y provocando accidentes inesperados.


Selectores de función

Puesta en marcha

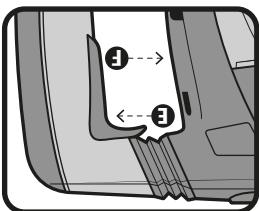


- Para apagar el equipo libere el gatillo interruptor (F).
- Para encender el rotomartillo presione el gatillo interruptor (E).

Encendido y apagado

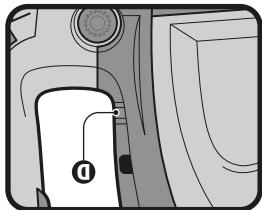




- El indicador LED verde de encendido se enciende cuando la herramienta está conectada. Si el LED indica rojo se enciende cuando los controles están defectuosos.
- El indicador LED verde de encendido se enciende cuando la herramienta necesita servicio.

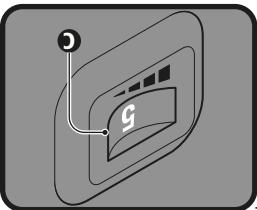

- El nivel, el para hasta 360 rotaciones por minuto y 480 golpes por minuto.
- El nivel, 1, de la perilla de ajuste (C) es para hasta 300 rotaciones por minuto y 1950 golpes por minuto.
- La perilla de la velocidad (C) es para ajustar el número de rotaciones en impactos dependiendo del material a tratar.
- El equipo cuenta con un circuito electrónico de control que se enciende al girar la perilla y se apaga al dejarla.


LEDs indicadores (D)

Regulación de velocidad

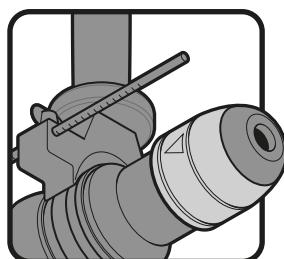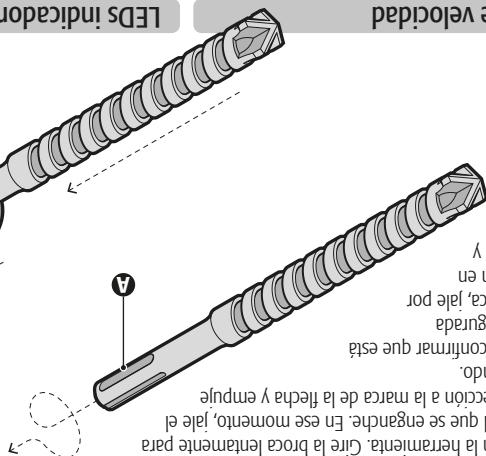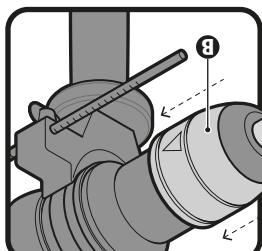

- Inserte la broca en la herramienta. Gire la broca lentamente para centrar el punto en el que se aplica la fuerza.
- Limpie el zanco (A) de la broca y aplique grasa antisíntesis de inserción.
- Apriete y desconecte la clavija del suministro eléctrico.



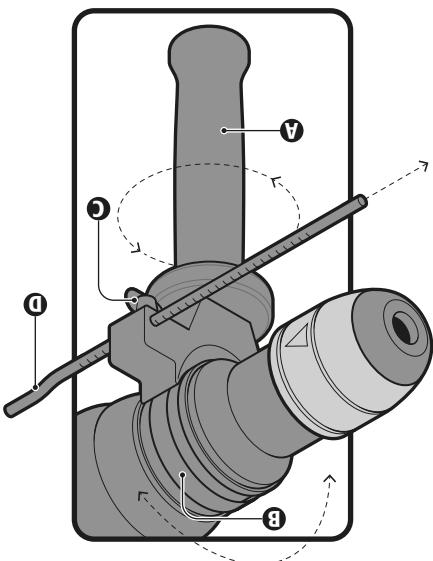

- Profundidad del orificio y apriete la tuerca de mariposa.
- Ajuste la posición de la varilla de acero a la profundidad del orificio y apriete la tuerca de mariposa.
- Afloje la tuerca de mariposa (C) e inserte la varilla (D).


Varilla de control de profundidad

- Sección adecuada de la carcasa.
- Asegúrese que la banda de montura esté colocada en el orificio de la carcasa.
- Ajustar girando en dirección a las manecillas del reloj.
- En función, vuelva a apretar la empunadura del mango (B) y balancee el mango auxiliar a la posición deseada.
- Girar la empunadura del mango auxiliar (A) en dirección contraria a las manecillas del reloj para aflojar la montura y sacarla de la carcasa.
- El mango auxiliar se puede rotar hasta casi 90°.
- El mango auxiliar con mango auxiliar instalado solamente se usa para lograr una postura segura y de bajo riesgo.

A ATENCIÓN Operé la herramienta eléctrica

Mango auxiliar

Montaje y ajustes

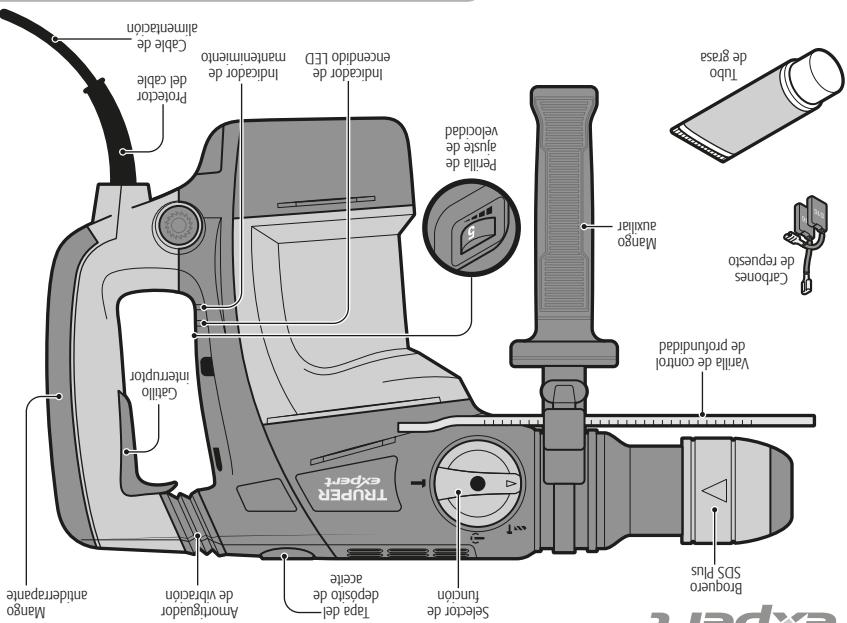

Partes

TRUPEER EXPERT



especiales para el uso en exteriores y reducen el riesgo de sufrir una descarga eléctrica.

ADVERTENCIA Al operar herramientas eléctricas en exteriores, marca **VOLTECK**. Estas extensiones son

* Se permite utilizarlo siempre que las extensiones mismas estén en un ambiente se protección contra sobreexperiencia.


AWC = Calibre de alambre estándar industrial (American Wire Gauge). Referencia: NMX-J-195-ANCE

de 0 A hasta 10 A	18 AWG(*)	3 (uno a tierra)	16 AWG	14 AWG	16 AWG	14 AWG	12 AWG	8 AWG	6 AWG	de 13 A hasta 15 A	de 15 A hasta 20 A
-------------------	-----------	------------------	--------	--------	--------	--------	--------	-------	-------	--------------------	--------------------

Capacidad en
Número de
conductores
Calibre de extensión
de 1,8 m a 15 m |
mayor de 15 m

duelas use el siguiente calibre más alto.
dependediendo de la longitud del cable y de la capacidad de amperes indicada en la placa de datos de la herramienta. Si tiene
prioridad de potencia y sobrecalentamiento del motor. La siguiente tabla muestra la tensión en la medida como resultado
consumiría si herramienta. Un cable de menor calibre inferior ocasionalmente causará daños en la herramienta, teniendo en cuenta que

ADVERTENCIA Al usar un cable de extensión, asegúrese de usar el calibre suficiente para transportar la corriente que

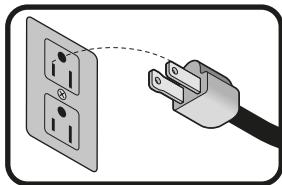

partes con conexión a tierra o de un sistema de corriente eléctrica con conexión a tierra. El doble aislamiento elimina la necesidad de un cable de conexión de tres al igual. La conexión de tres es más segura porque forma un circuito galificado que incluye un dispositivo polarizado. No altere la clavija en clavijas con la clavija no cuadrada "volteo". Si aún no lo hace, póngase en contacto con la empresa que lo fabricó o consulte un electricista. Solo se mantiene la seguridad de una persona. Si el cable de alimentación es de tipo polarizado (una pata es más ancha que la otra), este equipo se adapta a cualquier enchufe polarizado que solo tiene una pata más ancha que la otra. Esta

ADVERTENCIA Las herramientas de doble aislamiento y sellamiento reforzado
desramamiento de líquido durante su operación. No la exponga a la lluvia, líquidos y/o humedad.

ADVERTENCIA Automatizado **CUTTRUPPER**, con el fin de evitar algún riesgo de desgarro o accidente considerable.

ADVERTENCIA Si el cable de alimentación se daña, éste debe ser reemplazado por el fabricante o Centro de Servicio

La clase de aislamiento térmico de los devanados del motor: Clase F
La construcción de aislamiento térmico de la herramienta es de acuerdo a la especificación referida.


El cable de alimentación tiene sujetacables tipo Y

- Aislamiento • Clase II • IP20
- Conductores • 16 AWG x 2C con temperatura de aislamiento de 105 °C
- Ciclo de trabajo • 50 min de trabajo por 20 min de descansos. Máximo 6 horas diarias.
- Velocidad • Rotación: 300 r/min - 760 r/min (RPM) Impulsos: 1 300 golpes/min - 4 800 golpes/min (BPM)
- Peso • 6 kg
- Potencia • 1100 W Energiá de impacto • 6 joules
- Corriente • 10 A
- Frecuencia • 60 Hz
- Tensión • 127 V ~
- Brodureo • SDS Plus
- Descripción • Rotomartillo SDS Plus
- Código • 101221

RPLS-6NX

Especificaciones técnicas

TRUPER
EXPERT

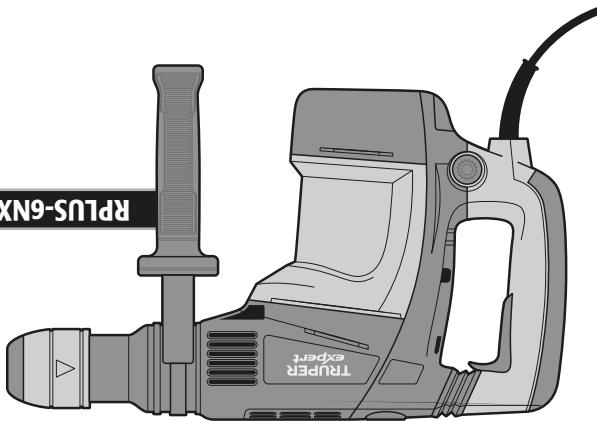

Para poder sacar el máximo provecho de la herramienta, proverá su vida útil, hacer válida la garantía en caso de ser necesario gravarla, es fundamental leer este instructivo por lesiones graves, es fundamental leer este instructivo por las referencias de la herramienta.

- 12 Poliza de Garantía.
- 11 Centros de Servicio Autorizados.
- 10 Notas.
- 9 Mantenimiento.
- 8 Puesta en marcha.
- 7 Montaje y ajustes.
- 6 Partes.
- 5 Advertencias de Seguridad para uso de rotomartillo.
- 4 Advertencias generales de seguridad para herramientas eléctricas.
- 3 Reduir riesgos eléctricos.
- 3 Especificaciones técnicas.

A ATENCIÓN

Indice

TRUPER **EXPERT**



Lea este instructivo por completo
antes de usar la herramienta.




ATENCION

101221 RPLUS-6NX

Código Modello

Este instructivo es para:

RPLUS-6NX

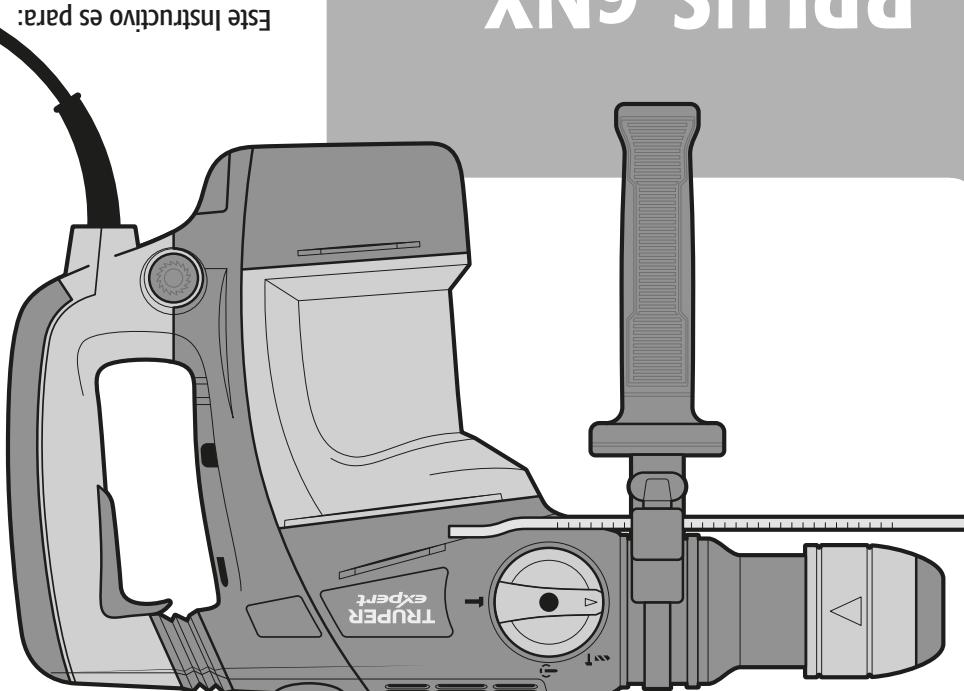

de impacto
energía

6 Joules

Rotomartillo SDS Plus

TRUPER
expert

ESPAÑOL
ENGLISH