

ENGLISH  
ESPAÑOL


TRUPER®  
max

Manual

# Cordless Hand Vacuum

500 ml

Capacity

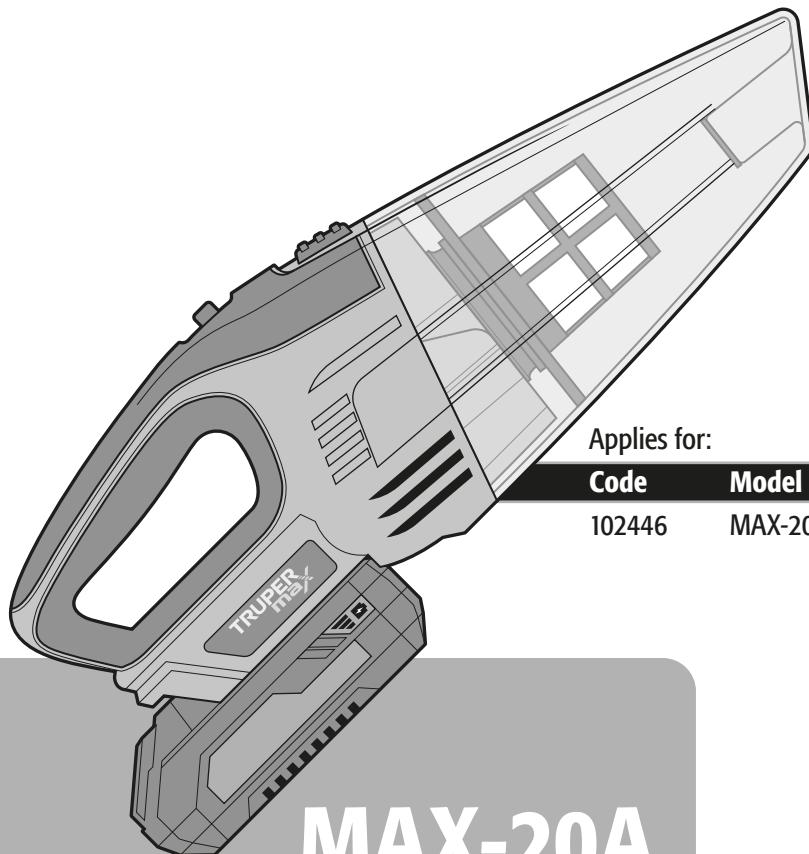

**CAUTION**



Read this manual thoroughly  
before using the tool.



Technical data .....	<b>3</b>
Power requirements .....	<b>3</b>
 General power tool safety warnings .....	<b>4</b>
 Safety warnings for the use of vacuum cleaners .....	<b>5</b>
Parts .....	<b>6</b>
Assembly .....	<b>6</b>
Preparation .....	<b>7</b>
Start up .....	<b>8</b>
Maintenance .....	<b>9</b>
Troubleshooting .....	<b>10</b>
Authorized Servicer Centers .....	<b>11</b>
Warranty policy .....	<b>12</b>

**! CAUTION**

To gain the best performance of the tool, prolong the duty life, make the Warranty valid if necessary, and to avoid hazards of fatal injuries please read and understand this Manual before using the tool.

Keep this manual for future references.

The illustrations in this manual are for reference only. They might be different from the real tool.

**MAX-20A**

## MAX-20A

Code	•	102446
Description	•	Cordless hand vacuum
Voltage	•	20 V ==
Autonomy	•	20 minutes approximately
Deposit capacity	•	500 ml
Battery	•	Ion-lithium 20 V == 2 Ah   Charging time 60 minutes approximately
Charger	•	Input: Tension: 127 V ~ Frequency: 60 Hz Current: 1.1 A Output: 21.5 V == 3.5 A
IP Grade	•	IP20

The power cable has cable clamps type: Y  
 The construction class of the tool is: Class III  
 Charger construction class is: Reinforced Insulation


**⚠ WARNING** Avoid the risk of electric shock or severe injury. When the power cable gets damaged it should only be replaced by the manufacturer or at a  TRUPER® Authorized Service Center. The build quality of the electric insulation is altered if spills or liquid gets into the tool while in use. Do not expose to rain, liquids and/or dampness.

**⚠ WARNING** Before gaining access to the terminals all power sources should be disconnected.



## Power Requirements

**⚠ WARNING** Tools with double insulation are equipped with a polarized plug (one prong is wider than the other). This plug will only fit in the right way into a polarized outlet. If the plug cannot be introduced into the outlet, reverse the plug. If it still doesn't fit, call a qualified electrician to install for you a polarized outlet. Do not alter the plug in any way. Double insulation eliminates the need of both a grounded third power cord with three prongs or a grounded power connection.

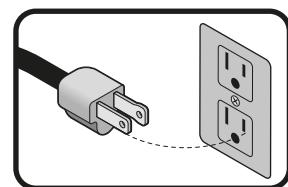

**⚠ WARNING** When using an extension cable, verify the gauge is enough for the power that your product needs. A lower gauge cable will cause voltage drop in the line, resulting in power loss and overheating. The following table shows the right size to use depending on cable's length and the ampere capability shown in the tool's nameplate. When in doubt use the next higher gauge.

Amperes Capacity	Number of Conductors	Extension gauge from 6 ft to 49 ft	higher than 49 ft
from 0 A and up to 10 A		18 AWG(*)	16 AWG
from 10 A and up to 13 A		16 AWG	14 AWG
from 13 A and up to 15 A		14 AWG	12 AWG
from 15 A and up to 20 A	3 (one grounded)	8 AWG	6 AWG

\* It is safe to use only if the extensions have a built-in artifact for over current protection.

AWG = American Wire Gauge. Reference: NMX-J-195-ANCE

**⚠ WARNING** When operating power tools outdoors, use a  VOLTECK grounded extension cable labeled "For Outdoors Use". These extensions are especially designed for operating outdoors and reduce the risk of electric shock.





**⚠️ WARNING! Read carefully all safety warnings and instruction listed below.** Failure to comply with any of these warnings may result in electric shock, fire and / or severe damage. **Save all warnings and instructions for future references.**

#### Work area

Keep your work area clean, and well lit.

Cluttered and dark areas may cause accidents.



Never use the tool in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.

Sparks generated by power tools may ignite the flammable material.



Keep children and bystanders at a safe distance while operating the tool.

Distractions may cause loss of control.



#### Electrical Safety

The tool plug must match the power outlet. Never modify the plug in any way. Do not use any adapter plugs with grounded power tools.



Modified plugs and different power outlets increase the risk of electric shock.

Avoid body contact with grounded surfaces, such as pipes, radiators, electric ranges and refrigerators.

The risk of electric shock increases if your body is grounded.

Do not expose the tool to rain or wet conditions.

Water entering into the tool increases the risk of electric shock.

Do not force the cord. Never use the cord to carry, lift or unplug the tool. Keep the cord away from heat, oil, sharp edges or moving parts.

Damaged or entangled cords increase the risk of electric shock.

When operating a tool outdoors, use an extension cord suitable for outdoor use.

Using an adequate outdoor extension cord reduces the risk of electric shock.

If operating the tool in a damp location cannot be avoided, use a ground fault circuit interrupter (GFCI) protected supply.

Using a GFCI reduces the risk of electric shock.

#### Personal safety

Stay alert, watch what you are doing and use common sense when operating a tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.

A moment of distraction while operating the tool may result in personal injury.

Use personal protective equipment. Always wear eye protection.

Protective equipment such as safety glasses, anti-dust mask, non-slip shoes, hard hats and hearing protection used in the right conditions significantly reduce personal injury.



Prevent unintentional starting up. Ensure the switch is in the "OFF" position before connecting into the power source and / or battery as well as when carrying the tool.

Transporting power tools with the finger on the switch or connecting power tools with the switch in the "ON" position may cause accidents.

Remove any wrench or vice before turning the power tool on.

Wrenches or vices left attached to rotating parts of the tool may result in personal injury.

Do not overreach. Keep proper footing and balance at all times.

This enables a better control on the tool during unexpected situations.

Dress properly. Do not wear loose clothing or jewelry. Keep hair, clothes and gloves away from the moving parts.



Loose clothes or long hair may get caught in moving parts.

If you have dust extraction and recollection devices connected onto the tool, inspect their connections and use them correctly. Using these devices reduce dust-related risks.

#### Power Tools Use and Care

Do not force the tool. Use the adequate tool for your application.



The correct tool delivers a better and safer job at the rate for which it was designed.

#### Do not use the tool if the switch is not working properly.

Any power tool that cannot be turned ON or OFF is dangerous and should be repaired before operating.

Disconnect the tool from the power source and / or battery before making any adjustments, changing accessories or storing.

These measures reduce the risk of accidentally starting the tool.



Store tools out of the reach of children. Do not allow persons that are not familiar with the tool or its instructions to operate the tool.

Power tools are dangerous in the hands of untrained users.

Service the tool. Check the mobile parts are not misaligned or stuck. There should not be broken parts or other conditions that may affect its operation. Repair any damage before using the tool.

Most accidents are caused due to poor maintenance to the tools.



#### Keep the cutting accessories sharp and clean.

Cutting accessories in good working conditions are less likely to bind and are easier to control.

Use the tool, components and accessories in accordance with these instructions and the projected way to use it for the type of tool when in adequate working conditions.

Using the tool for applications different from those it was designed for, could result in a hazardous situation.

#### Use and care of the battery-operated tool

Recharge only with the charger specified by TRUPER®.

A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.

#### Use power tools only with specifically designated battery packs.

Use of any other battery packs may create a risk of injury and fire.

When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws, or other small metal objects, that can make a connection from one terminal to another.

Shorting the battery terminals together may cause burns or a fire.

Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.

Liquid ejected from the battery may cause irritation or burns.

#### Service

Repair the tool in a TRUPER® Authorized Service Center using only identical spare parts.

This will ensure that the safety of the power tool is maintained.

# Safety warnings for the use of vacuum cleaners

**TRUPER®  
max**

## Dangerous materials

**WARNING** • Do not vacuum or use the vacuum cleaner near flammable liquids, explosive gases or vapors such as gasoline or other fuels, lighter fluid, hot liquids, cleaners, oil-based paints, natural gas, hydrogen or explosive dusts such as coal dust, magnesium powder, grain dust or gunpowder. Sparks inside the engine can ignite flammable vapors or dusts.

**WARNING** • Do not vacuum anything that is burning or producing smoke, such as cigarettes, matches or hot ashes.

**CAUTION** • To reduce the risk of health hazards, do not vacuum toxic materials.

• Do not vacuum masonry dust or soot from the chimney, as it is a very fine dust and will not be trapped by the filter, which may cause damage to the motor. When vacuuming fine dust use a special dust filter (sold separately).

## While operating the hand vacuum

**CAUTION** • Keep away from openings and moving parts; hair, loose clothing, fingers and any other body parts.

- Do not use or store near hazardous materials.
- Do not leave the vacuum cleaner running unattended.
- Do not leave vacuum cleaner unattended when plugged into power source.
- Do not place any objects over the ventilation openings.
- Do not operate the vacuum cleaner with the vents blocked; keep them free of dust, lint, hair, or anything that reduces air flow.

**CAUTION** • Do not use the vacuum cleaner to vacuum liquids.

- Do not use the vacuum cleaner with a broken filter or without the filter installed.
- To reduce the risk of falls, use extreme caution when cleaning stairs.
- If the vacuum cleaner is not working properly; is missing parts, has been dropped or damaged, left outdoors, or dropped into water, take it to a  **TRUPER®** Authorized Service Center.
- Turn the vacuum cleaner off before removing the battery.
- Remove the battery when not in use or before servicing.
- Do not allow it to be used as a toy. Particular care should be taken when used by or near children.
- Do not expose vacuum cleaner to rain. Store indoors.
- Use ear protectors when performing services that make noises above 85 dB.



## Batteries and charger

**DANGER** • Use only Truper Max chargers to charge the tool battery. Using any other charger may result in fire or risk of injury.

**DANGER** • Use only batteries specifically designed for the tool. Other batteries may create a risk of injury or fire.

• Connect the charger to an alternating current (AC) supply only.

**DANGER** • Do not use the charger outdoors.

- Respect the "+/-" polarity when charging.
- Never recharge a leaking battery.
- Do not use batteries or the charger for purposes other than those for which they were designed.
- Do not modify the battery or charger contacts.
- Never expose the batteries to temperatures higher than 122 °F.


**DANGER** • Never expose batteries to fire, they could explode.

**CAUTION** • Batteries should be kept away from any metallic object such as paper clips, coins, keys, nails, screws or any other object that could cause the terminals to make contact; coins, keys, nails, screws or any other object that could make the terminals make contact; because it would cause a short circuit that could cause burns or fires.


**CAUTION** • Under extreme conditions, battery fluid may leak. If so, avoid any contact. If accidental contact occurs, wash with abundant water, rinse with lemon juice and vinegar. If the liquid enters in contact with the eyes, wash with abundant water during several minutes and look for medical help immediately. Liquid ejected from the batteries could cause irradiation or burns.

**CAUTION** • To maximize battery life, fully discharge the battery at least once a month. Do not leave the battery uncharged for more than three months. Always charge the battery to its maximum capacity. Before using the machine for the first time, charge the battery for a minimum of 6 hours.

• Avoid stopping constantly while vacuuming to prevent damage to the battery.

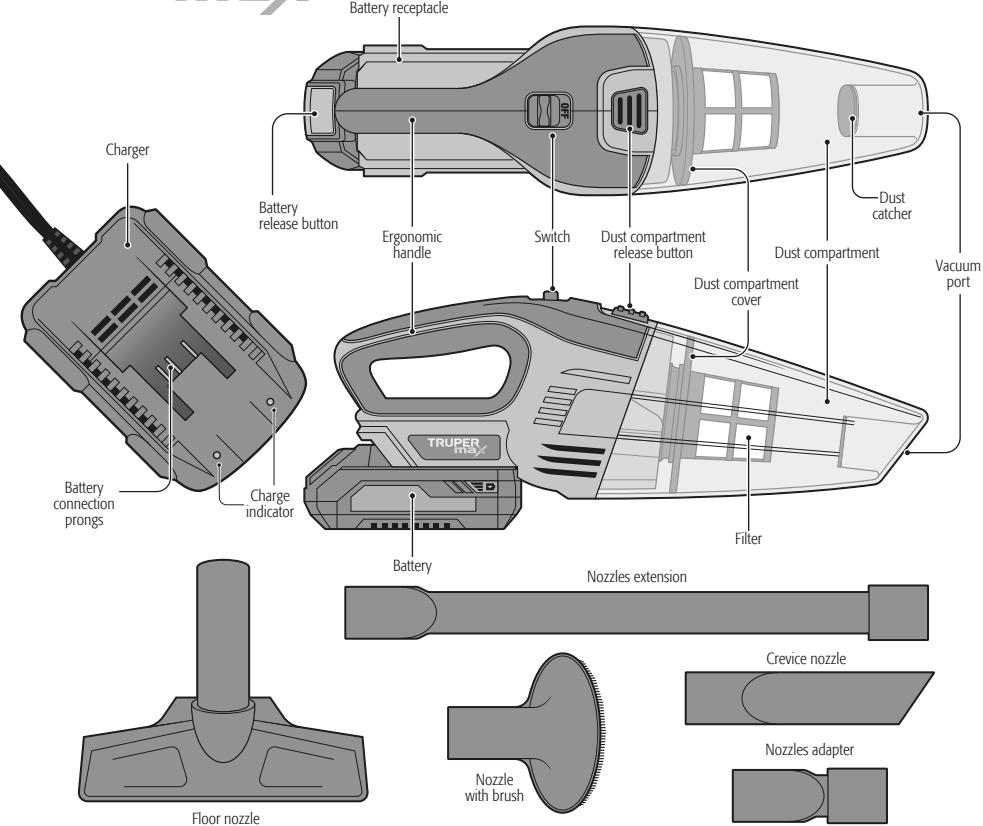

**Assembly**

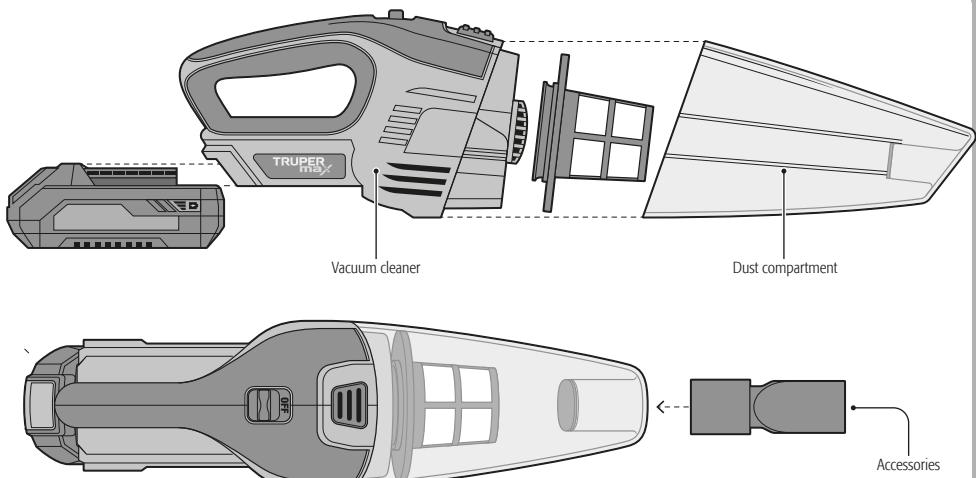


# Assembly

**TRUPER®**  
**max**

## Filter


- Place the fabric filter (A) inside the screen (B).
- In order for the filter to cover the inner surface of the screen, place the filter frame (C) inside the fabric filter.
- Make sure that the cloth filter is not folded between the screen and the frame.
- With its components assembled, place the screen into the dust compartment cover (D).
- Turn the screen counterclockwise until its notches fit into the slots in the dust compartment lid.

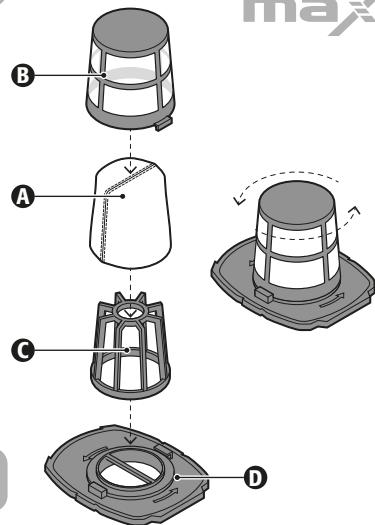

# Preparation

## Charging the battery

1. Plug the charger plug into a 127 V~ socket.
2. Insert the battery into the charger by sliding it into the charger as shown in the picture. The red light should come on, indicating that charging has started.
  - When the battery is fully charged, the green light will turn on and the red light will turn off.
  - Disconnect the charger from the power supply when charging is complete.
  - If the red-light flashes, the battery is defective, replace it with a new one.
  - If the green light flashes, the battery temperature is below 32 °F or above 113 °F. Wait until the battery temperature is in the correct range before charging.

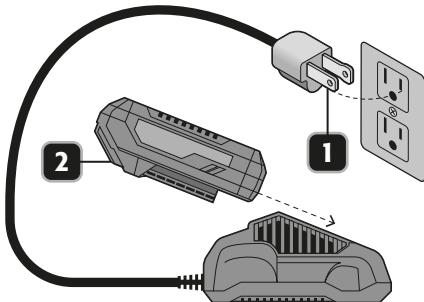


## Considerations for battery use

The battery comes DISCHARGED from the factory. It will need to be charged for approximately 1 hour before use. The normal charging temperature is 32 °F to 113 °F. Outside this range, charging is automatically suspended until it reaches the correct temperature. The normal discharge / working temperature is 32 °F to 167 °F. If 167 °F is exceeded, the electronic control shuts off the power to the tool until the temperature reaches the optimum temperature range again. When the battery is below normal voltage during work, the tool stops working.


Between each charge, give the charger 15 minutes rest. In a hot environment or after prolonged use, the battery may become too hot to be recharged. Allow the battery to cool before attempting to recharge.

## Battery installation

- Once the battery is charged, insert it into the receptacle on the back of the vacuum housing.
- Slide the battery into the receptacle until you hear a click to make sure it is securely in place.
- To remove the battery, press the latch (A) and slide the battery out.
- To make sure the battery is charged, press the indicator button (B). The color of the light indicates the charge level.

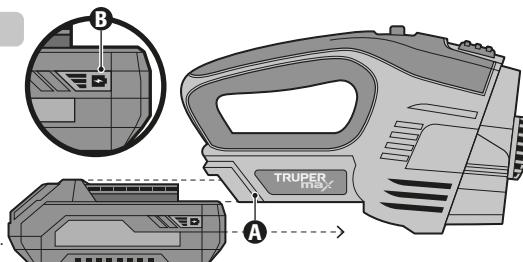

### Remaining battery capacity

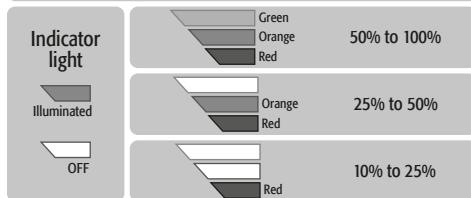


NOTE: Depending on the conditions of use and ambient temperature, the indication may differ slightly from the actual capacity.

### Stat up

#### Switching on and off

- Turn the switch (A) to the ON position (**ON**).
  - To turn the vacuum cleaner off, turn the switch to the **OFF** position, and disconnect the battery from the receptacle.
- CAUTION** • Always verify that the switch is in the OFF position before starting the vacuum cleaner.  
Always check that the switch is in the OFF position before inserting the battery.  
The autonomy of the machine is about 20 minutes. To double this value, use a 4 Ah, MAX-BA4 battery (not included).  
• Always keep the filter clean for best performance.

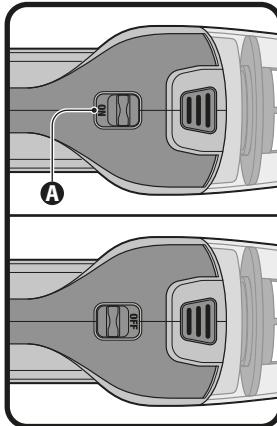

## Cleaning


- Remove the battery before any cleaning operation.
- Clean the vacuum cleaner with a damp cloth impregnated with a few drops of detergent and dry it afterwards.
- Do not use solvents, products containing chlorine or abrasive products to clean the appliance.
- Do not immerse the vacuum cleaner in water or any other liquid, nor put it under the tap.

## Emptying of dust compartment

- Empty the dust compartment (**C**) when residues are visible through its transparent walls, when it is full or when the unit is not operating at full power.
- Press the compartment opening button (**D**) and turn the compartment downwards to release it.
- Remove the dust compartment cover (**E**).
- Place the debris in a suitable container.
- Remove any remaining debris from the filters, the lid and the inside of the compartment.
- To assemble the compartment, follow the above steps in reverse order.

## Filter cleaning

- Remove the dust compartment cover (**E**).
- Disassemble the filter components.
- Hand wash the filters with a mild detergent or dishwashing soap. Make sure that the fabric filter is thoroughly dry before replacing it.
- To assemble the filter components, follow the instructions on page 7.

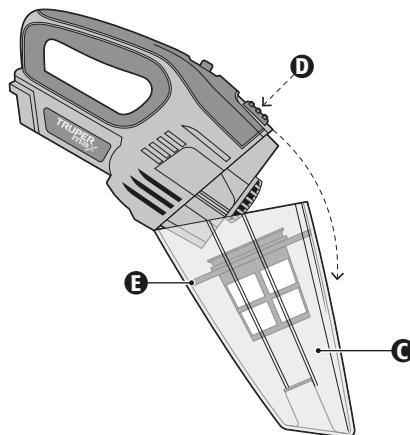

Problem	Cause	Solution
Vacuum cleaner does not work	<ul style="list-style-type: none"><li>• Low battery.</li><li>• The battery has overheated.</li><li>• Switch is in the off position.</li><li>• Battery not inserted correctly.</li></ul>	<ul style="list-style-type: none"><li>• Check that the battery has an adequate charge level, otherwise charge it.</li><li>• Let the machine rest for a few minutes and try again.</li><li>• Turn the switch to on, in case the machine does not start take it to a  TRUPER® Authorized Service Center.</li><li>• Remove the battery and make sure it is inserted correctly by inserting it into the vacuum cleaner's receptacle until it clicks.</li></ul>
Dust comes out of the engine vents	<ul style="list-style-type: none"><li>• Filter is not installed or is damaged.</li><li>• The filter was not installed properly.</li><li>• The lip seal of the dust compartment lid was damaged.</li></ul>	<ul style="list-style-type: none"><li>• Install or replace the filter.</li><li>• Assemble the filter according to the assembly section on page 7.</li><li>• Take the machine to a  TRUPER® Authorized Service Center.</li></ul>
Reduced machine efficiency (motor vibration, low motor suction)	<ul style="list-style-type: none"><li>• The filter is dirty or wet.</li><li>• There is a blockage in any of the nozzles, adapter or extension.</li></ul>	<ul style="list-style-type: none"><li>• Remove the filter and clean it as described in the filter cleaning section on page 7. Do not install the filter until it is completely dry.</li><li>• Replace the filter with a new one.</li><li>• Check the accessories, if any object obstructs the air flow, remove it.</li></ul>
The dust is scapes from the dust container	<ul style="list-style-type: none"><li>• It is normal for some dust to escape through the dust trap depending on how the machine is transported.</li><li>• Damaged or punctured dust trap.</li></ul>	<ul style="list-style-type: none"><li>• Transport the machine horizontally after cleaning to avoid dust leakage.</li><li>• Take the machine to a  TRUPER® Authorized Service Center.</li></ul>
Battery is leaking	<ul style="list-style-type: none"><li>• Tiny drips may occur in extreme temperatures or after heavy use. This is normal.</li><li>• Damaged battery.</li></ul>	<ul style="list-style-type: none"><li>• Immediately clean liquid from skin and/or clothing with soap and water.</li><li>• Replace battery.</li></ul>
Battery does not charge and charge level indicator light does not turn on	<ul style="list-style-type: none"><li>• Charger connection incorrectly installed on the battery.</li><li>• Charger incorrectly connected to the socket.</li><li>• Damaged battery.</li></ul>	<ul style="list-style-type: none"><li>• Insert the battery correctly into the charger.</li><li>• Check that the charger plug is properly connected to the socket.</li><li>• Replace the battery with a new one.</li></ul>

If problems persist despite performing the recommended corrective actions, contact a  TRUPER® Authorized Service Center.

# Authorized Service Centers

**TRUPER®  
max**

In the event of any problem contacting a **TRUPER®** Authorized Service Center, please see our webpage [www.truper.com](http://www.truper.com) to get an updated list, or call our toll-free numbers **800 690-6990** or **800 018-7873** to get information about the nearest Service Center.

AGUASCALIENTES	<b>DE TODO PARA LA CONSTRUCCIÓN</b> GRAL. BARRAGÁN #1201, COL. GREMIAL, C.P. 20030, AGUASCALIENTES, AGS. TEL.: 449 994 0537	MORELOS	<b>FIX FERRETERÍAS</b> CAPITÁN ANZURES #95, ESQ. JOSÉ PERDIZ, COL. CENTRO, C.P. 62740, CUAUTLA, MOR. TEL.: 735 352 8931
BAJA CALIFORNIA	<b>SUCURSAL TIJUANA</b> AV. LA ENCANTADA, LOTE #5, PARQUE INDUSTRIAL EL FLORIDO II, C.P. 22244, TIJUANA, B.C. TEL.: 664 969 5100	NAYARIT	<b>HERRAMIENTAS DE TEPIC</b> MAZATLÁN #117, COL. CENTRO, C.P. 63000, TEPIC, NAY. TEL.: 311 258 0540
BAJA CALIFORNIA SUR	<b>FIX FERRETERÍAS</b> FELIPE ANGELES ESQ. RUIZ CORTÍNEZ S/N, COL. PUEBLO NUEVO, C.P. 23670, CD. CONSTITUCIÓN, B.C.S. TEL.: 613 132 1115	NUEVO LEÓN	<b>SUCURSAL MONTERREY</b> CARRETERA LAREDO #500, 1B MONTERREY PARKS, COLONIA PUERTA DE ANÁHUAC, C.P. 66052, ESCOBEDO, NUEVO LEÓN, TEL.: 81 8352 8791 / 81 8352 8790
CAMPECHE	<b>TORNILLERÍA Y FERRETERÍA AAA</b> AV. ÁLVARO OBREGÓN #524, COL. ESPERANZA C.P. 24080 CAMPECHE, CAMP. TEL.: 981 815 2808	OAXACA	<b>FIX FERRETERÍAS</b> AV. 20 DE NOVIEMBRE #910, COL. CENTRO, C.P. 68300, TUXTEPEC, OAX. TEL.: 287 106 3092
CHIAPAS	<b>FIX FERRETERÍAS</b> AV. CENTRAL SUR #27, COL. CENTRO, C.P. 30700, TAPACHULA, CHIS. TEL.: 962 118 4083	PUEBLA	<b>SUCURSAL PUEBLA</b> AV. PERIFÉRICO #2-A, SAN LORENZO ALMECATLA, C.P. 72710, CUAUTLACINGO, PUE. TEL.: 222 282 8282 / 84 / 85 / 86
CHIHUAHUA	<b>SUCURSAL CHIHUAHUA</b> AV. SILVESTRE TERRAZAS #128-11, PARQUE INDUSTRIAL BAFAR, CARRETERA MÉXICO CUAUHTÉMOC, C.P. 31415, CHIHUAHUA, CHIH. TEL.: 614 434 0052	QUERÉTARO	<b>ARU HERRAMIENTAS S.A. DE C.V.</b> AV. PUERTO DE VERACRUZ #110, COL. RANCHO DE ENMEDIO, C.P. 76842, SAN JUAN DEL RÍO, QRO. TEL.: 427 268 4544
MEXICO CITY	<b>FIX FERRETERÍAS</b> EL MONSTRUO DE CORREGIDORA, CORREGIDORA # 22, COL. CENTRO, C.P. 06060, CUAUHTÉMOC, CDMX. TEL: 55 5522 5031 / 5522 4861	QUINTANA ROO	<b>FIX FERRETERÍAS</b> CARRETERA FEDERAL MZ. 46 LT. 3 LOCAL 2, COL. EJIDAL, C.P. 77110 PLAYA DEL CARMEN, Q.R. TEL.: 984 267 5140
COAHUILA	<b>SUCURSAL TORREÓN</b> CALLE METAL MECÁNICA #280, PARQUE INDUSTRIAL ORIENTE, C.P. 27278, TORREÓN, COAH. TEL.: 871 209 68 23	SAN LUIS POTOSÍ	<b>FIX FERRETERÍAS</b> AV. UNIVERSIDAD #1850, COL. EL PASEO, C.P. 78320, SAN LUIS POTOSÍ, S.L.P. TEL.: 444 822 4341
COLIMA	<b>BOMBAS Y MOTORES BYMTESA DE MANZANILLO</b> BLVD. MIGUEL DE LA MADRID #190, COL. 16 DE SEPTIEMBRE, C.P. 28239, MANZANILLO, COL. TEL.: 314 332 1986 / 332 8013	SINALOA	<b>SUCURSAL CULIACÁN</b> AV. JESÚS KUMATE SUR #4301, COL. HACIENDA DE LA MORA, C.P. 80143, CULIACÁN, SIN. TEL.: 667 173 9139 / 173 8400
DURANGO	<b>TORNILLOS ÁGUILA, S.A. DE C.V.</b> MAZURIJO #200, COL. LUIS ECHEVERRÍA, DURANGO, DGO.TEL.: 618 817 1946 / 618 818 2844	SONORA	<b>FIX FERRETERÍAS</b> CALLE 5 DE FEBRERO #517, SUR LT. 25 MZ. 10, COL. CENTRO, C.P. 85000, CD. OBREGÓN, SON. TEL.: 644 415 2392
ESTADO DE MÉXICO	<b>SUCURSAL CENTRO JILOTEPEC</b> PARQUE INDUSTRIAL # 1, COL. PARQUE INDUSTRIAL JILOTEPEC, JILOTEPEC, EDO. DE MÉX. C.P. 54257 TEL: 761 782 9101 EXT. 5728 Y 5102	TABASCO	<b>SUCURSAL VILLAHERMOSA</b> CALLE HELIO LOTES 1, 2 Y 3 MZ. #1, COL. INDUSTRIAL, 2A ETAPA, C.P. 86010, VILLAHERMOSA, TAB. TEL.: 993 353 7244
GUANAJUATO	<b>CIA. FERRETERA NUEVO MUNDO S.A. DE C.V.</b> AV. MÉXICO - JAPÓN #225, CD. INDUSTRIAL, C.P. 38010, CELAYA, GTO. TEL.: 461 617 7578 / 79 / 80 / 88	TAMAULIPAS	<b>VM ORINGS Y REFACCIONES</b> CALLE ROSITA #527 ENTRE 20 DE NOVIEMBRE Y GRAL. RODRÍGUEZ, FRACC. REYNOSA, C.P. 88780, REYNOSA, TAMS. TEL.: 899 926 7552
GUERRERO	<b>CENTRO DE SERVICIO ECLIPSE</b> CALLE PRINCIPAL MZ.1 LT. 1, COL. SANTA FE, C.P. 39010, CHILPANCINGO, GRO. TEL.: 747 478 5793	TLAXCALA	<b>SERVICIOS Y HERRAMIENTAS INDUSTRIALES</b> PABLO SIDAR #152, COL . BARRIO DE SAN BARTOLOMÉ, C.P. 90970, SAN PABLO DEL MONTE, TLAX. TEL.: 222 271 7502
HIDALGO	<b>FERREPRECIOS S.A. DE C.V.</b> LIBERTAD ORIENTE #304 LOCAL 30, INTERIOR DE PASAJE ROBLEDO, COL. CENTRO, C.P. 45600, TULANCINGO, HGO. TEL.: 775 753 6615 / 775 753 6616	VERACRUZ	<b>LA CASA DISTRIBUIDORA TRUPER</b> BLVD. PRIMAVERA, ESQ. HORTENSIA S/N, COL. PRIMAVERA C.P. 93308, POZA RICA, VER. TEL.: 782 823 8100 / 826 8484
JALISCO	<b>SUCURSAL GUADALAJARA</b> AV. ADOLFO B. HORN # 6800, COL. SANTA CRUZ DEL VALLE, C.P.: 45655, TLAJOMULCO DE ZUÑIGA, JAL. TEL.: 33 3606 5285 AL 90	YUCATÁN	<b>SUCURSAL MÉRIDA</b> CALLE 33 #600 Y 602, LOCALIDAD ITZINCAB Y MULSAY, MPIO. UMÁN, C.P. 97390, MÉRIDA, YUC. TEL.: 999 912 2451
MICHOACÁN	<b>FIX FERRETERÍAS</b> AV. PASEO DE LA REPÚBLICA #3140-A, COL. EX-HACIENDA DE LA HUERTA, C.P. 58050, MORELIA, MICH. TEL.: 443 334 6858		

**Code**

102426

**Model**

MAX-20A

**Brand****TRUPER®**  
**max**

**Warranty.** Duration: 3 years. Coverage: parts, components and workmanship against manufacturing or operating defects, except if used under conditions other than normal; when it was not operated in accordance with the instructive; was altered or repaired by personnel not authorized by **TRUPER®**. To make the warranty valid, present the product, stamped policy or invoice or receipt or voucher, in the establishment where you bought it or in Corregidora 22, Centro, Cuauhtémoc, CDMX, 06060, where you can also purchase parts, components, consumables and accessories. It includes the costs of transportation of the product that derive from its fulfillment of its service network. Phone number 800-018-7873. Made in China. Imported by Truper, S.A. de C.V. Parque Industrial 1, Parque Industrial Jilotepec, Jilotepec, Edo. de Méx. C.P. 54257, Phone number 761 782 9100.



Stamp of the business. Delivery date:

Sello del establecimiento comercial. Fecho de entrega:



**3**  
AÑOS

Garantía. Duración: 3 años. Cobertura: Piezas, componentes y mano de obra contra defectos de fabricación o funcionalamiento, excepto si se usó en condiciones distintas a las normales; cuando no fue operado conforme a las instrucciones, fue alterado o reparado por personal no autorizado por Truper®. Para hacer efectiva la garantía presentar el producto, poliza sellada o factura o recibo o comprobante que demuestre lo comprado de su red de servicios. Tel. 800-018-7873. Made in Hecho en China. Importador Truper, S.A. de C.V. Puede consumibles y accesorios, incluye los gastos de transportación del producto que deviven de su cumplimiento industrial, Parque industrial Jiutepec, Jiutepec, Ed. de Mex. C.P. 54257, Tel. 761 782 9100.

**MAX**  
**TRUPER®**

Marca

102426 MAX-20A  
Modelo

**Poliza de Garantía**

**TRUPER®**  
**MAX**



## Solución de Problemas

SEARCH | REGISTER | HELP | LOG IN

- La batería se ha sobre cargado.
- Debe descanzar la máquina por unos minutos e intentar de nuevo.

Digitized by srujanika@gmail.com

- El filtro se encuentra sucio o húmedo.
- Retire el filtro y límpielo como se indica en la sección de Recaudación de eficiencia de la tabla.

- Es normal que un poco de polvo escape por el retén de polvo dependiendo de como se transporta la máquina.
- Transporte la máquina horizontalmente después de limpiar para evitar escape de polvo.
- Retén el polvo de Centro de Servicio Autorizado de acuerdo a las normas de manejo de polvo.
- Retén el polvo de Centro de Servicio Autorizado de acuerdo a las normas de manejo de polvo.

Sí los problemas persisten a pesar de realizar las acciones correctivas recomendadas, contacte a un Centro de Servicio Autorizado  TRUPER.

## Solución

esne

no funciona

que se escucha un "click".  
te insertarán la memoria en el reproductor de la aspiradora hasta

- Elisto no fue instalado adecuadamente.
- Ensamble el filtro de acuerdo con la sección ensamblé de la página 7.
- Lleve la manguera a un centro de Servicio Autorizado de dazu.
- Se daño el sellado de la tapa del compartimento de polvo.

- Es normal que un poco de polvo se acumule en la máquina hasta cierto punto.
- Revise los accesorios, en caso de que algún objeto quede atrapado en la máquina.
- Remplace el filtro por uno nuevo.
- Reemplace el filtro por uno nuevo.
- Revise los accesorios, en caso de que algún objeto quede atrapado en la máquina.
- Es normal que un poco de polvo se acumule en la máquina hasta cierto punto.

- La batería gotea
- Corteo diminuto podría presentarse en la pieza de immedio con agua y jabón el líquido de en un uso pesado, esto es normal.
- Limpie la batería rápidamente con agua y jabón el líquido de la pieza y/o ropa.
- Reemplace la batería.
- Batería dañada.

- Batería dañada.
- Reemplazar la batería por una nueva.


Si los problemas persisten a pesar de realizar las acciones correctivas recomendadas, contacte a un Centro de Servicio Autorizado  TRUPER.

- Llegaré mal conectado al tema
- Kiesse que la Clavija del Legadador se encuentre bien conectada al tema
- encienda corriente.

- Conexión del cargador mal instalada en la batería.
- Usar el cargador que viene con la llave indicadora de carga no se en la llave indicadora de carga no se

- Batería dañada.
- Reemplazar la batería.

- La Dártara Golpea
- Gócteo diminuto Podrá presentarse en temperaturas extremas o después de un uso pesado, esto es normal.
- Limpie de inmediato con agua y jabon el liquido de la piel y/o ropa.

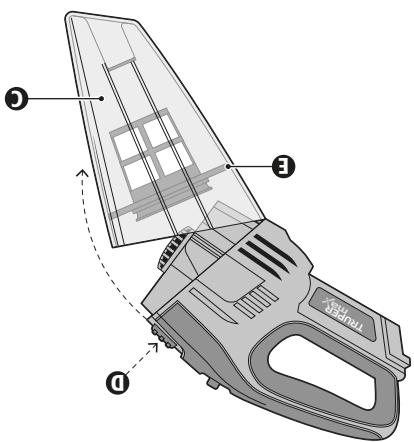

Vaciado de compartimento de polvo

- Retire la batidora antes de realizar cualquier operación de limpieza.
  - Limpiar la batidora con un paño húmedo impregnado con agua y jabón de detergente y séquelo después.
  - No utilice desinfectantes, productos con cloro, o productos abrasivos, para limpiar el aparato.
  - No sumerja la aspiradora en agua u otro líquido, ni la ponga bajo el grifo.
  - Vale el comparamiento de polvo (C) cuando los residuos sean visibles a través de sus paredes transparentes, cuando esté lleno o cuando el equipo no funcione con bocanadas sueltas de polvo.
  - Pulse el botón de apertura del compartimiento (D) y gire el comparámetro hacia abajo para liberarlo.
  - Extraiga la tapa del compartimento (E).
  - Coloque los restos en un contenedor propiamente titos, la tapa se debe quedar abierta.
  - Retire la mitad del compartimiento que se encuentra en los pasos anteriores.


### Limpieza del filtro

- Extraña la tapa del compartimiento de polvo (E).
  - Desarme los componentes del filtro.
  - Quite a mano los filtros con una degenerante suave o jabón para lavarlos. Asegúrese de que el filtro de tela este bien seco antes de volver a colocarlo.
  - Para limpiar los componentes del filtro de la pagoda Z.

## Limpieza

**TRUPPER**® **max**

## Mantenimiento

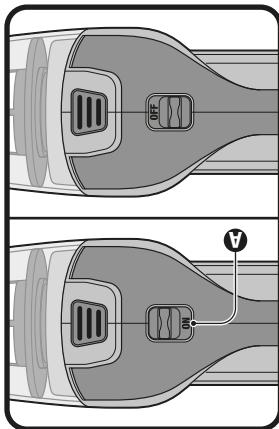


- Mantenga siempre limpio el filtro para obtener un mejor flujo de aire.
- Utilice una batería MAX-BA4 (no incluida) de 4 Ah.
- Para duplicar este valor, utilice una batería MAX-BA4 (no incluida) de 4 Ah.
- La autonomía de la máquina es de aproximadamente 20 minutos.
- La autonomía de la máquina es de aproximadamente 20 minutos.
- A ATENCIÓN** • Siempre verifique que el interruptor se encuentre en la posición de apagado antes de insertar la batería.
- Coloque el interruptor (A) en la posición de encendido (ON).
- Coloque el interruptor (A) en la posición de apagado (OFF), y desconecte la batería del dispositivo.
- Para apagar la aspiradora coloque el interruptor en la posición de apagado (OFF), y desconecte la batería del dispositivo.

Encendido y apagado

## Puesta en marcha


**NOTA:** Según las condiciones de uso, la temperatura ambiente de indicación puede diferir ligeramente de la capacidad real.

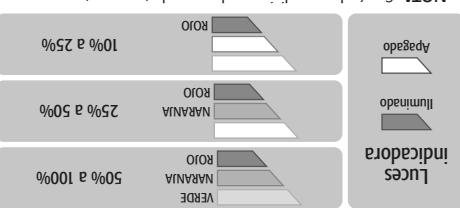

Capacidad restante de la batería

## Preparación

**TRUPER®**

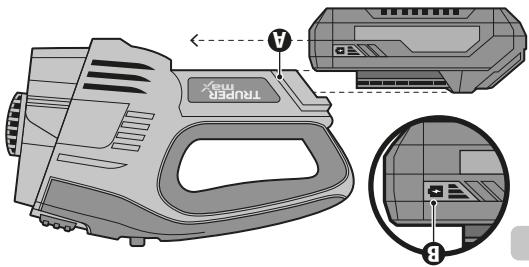

- Una vez cargada la batería, insértela en el recetáculo de la parte posterior de la carcasa de la aspiradora.
  - Deslice la batería en su receptáculo hasta escuchar un clic para asegurarse de que esté bien colocada.
  - Deslice la batería la base de la carcasa de la aspiradora.
  - Para retirar la batería presione el seguro (A) y deslice la batería hacia afuera.
  - Para asegurarse de que las baterías estén cargadas al nivel de carga (B), Elija color de la luz indicadora de acuerdo con la tabla.

#### Instalación de la batería

La baterra viene DESCARGADA de fondo. Sólo necesitado que la cargar por aproximadamente 1 hora antes de poder usarla. La temperatura normal de descarga es de 0 °C a 45 °C. Freira de este modo se suspende la caída automática hasta que alcanza la temperatura normal de descarga a 75 °C. Si los 75 °C se exceden, el control electrónico apaga la energía de la herramienta hasta que la temperatura desciende a 75 °C. Los 75 °C se exceden, el temporizador se activa hasta que la herramienta alcance un nuevo nivel de rango óptimo de temperatura. Una vez que la herramienta alcanza el nuevo nivel de temperatura, la herramienta se activa de nuevo para trabajar.


Consideraciones para el uso de la batería

1. Conecte la clavija del cargador en un tomacorriente de 127 V~.

2. Inserte la batería en el cargador deslizándola como se muestra en la imagen. La rota debiera quedar deslizándose dentro de la batería.

  - Cuando la batería se encuentre completamente cargada, la luz verde se encenderá y la rota desaparecerá.
  - Desconecte el cargador de la corriente una vez concluida la carga.
  - Si la luz roja permanece es señal de que la batería está defectuosa, reemplázela por una nueva.
  - Si la luz verde permanece es señal de que la batería tiene temperatura alta.


Temperatura de la batería se encuentre en el rango adecuado para poder cargarla.

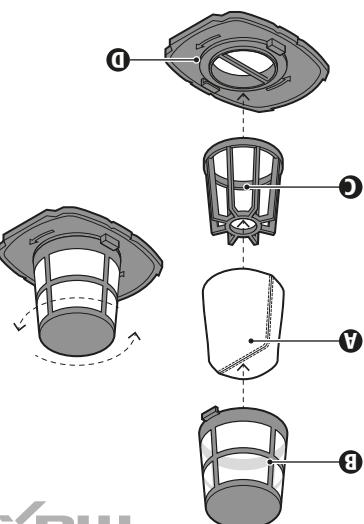


- Coloque el filtro de tela (A) dentro de la malla.
  - Para que el filtro cubra la superficie interna de la malla coloque el filtro dentro del filtro (C) dentro del filtro de tela.
  - Asegúrese de que el filtro de tela no quede doblado entre la malla y el marco.
  - Con sus componentes ensamblados, coloque la malla en la tapa del compartimento de polvo (D).
  - Gire la malla en sentido antihorario hasta que sus muescas engullen en las ranuras de la tapa del compartimiento de polvo.

# Preparation

# Ensemble

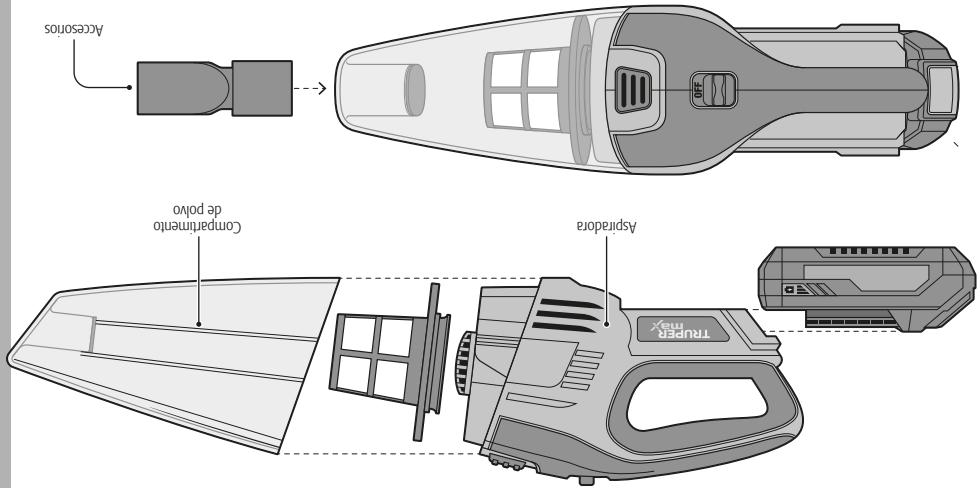

## Ensamble

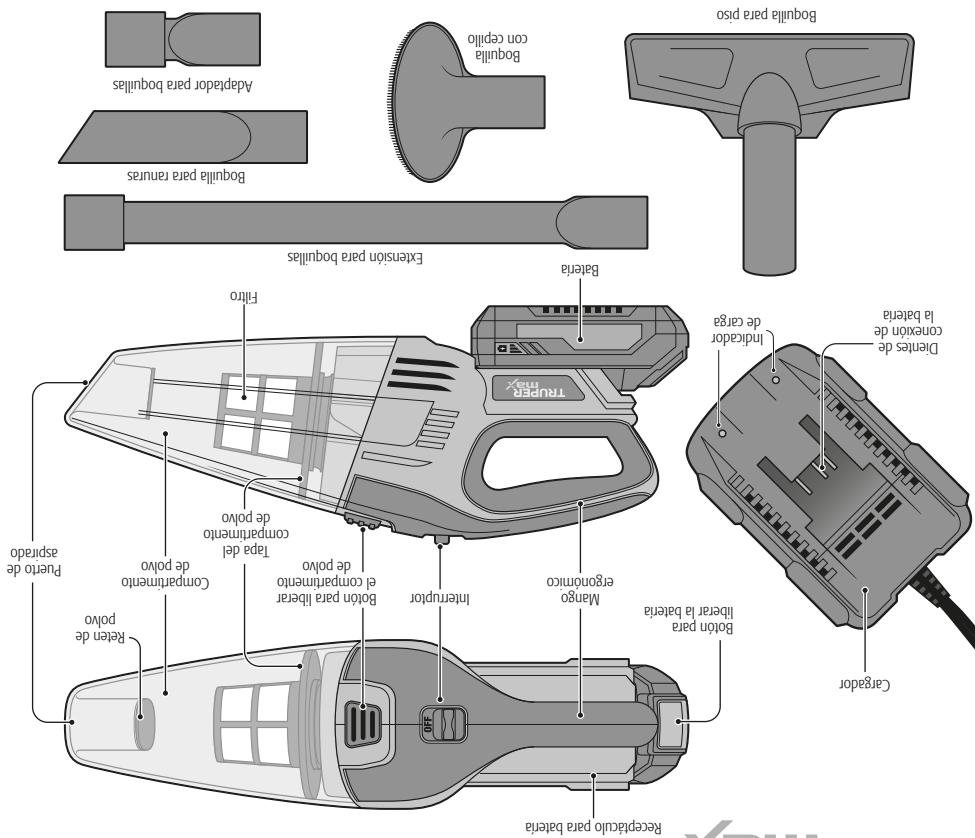

## Partes

**TRUPER® MAX**





especiales para el uso en exteriores y reducen el riesgo de sufrir una descarga eléctrica.



**ADVERTENCIA** Al operar herramientas eléctricas en exteriores, utilice una extensión afterizada marcada como "USO EXTERIOR" marca **VOLTEC**. Estas extensiones son


\* Se permite utilizarla siempre cuando las extensiones mismas estén conectadas con un artefacto de protección contra sobrecorriente.

AWG = Calibre de alambre estándar norteamericano (American Wire Gauge). Referencia: NMX-J-195-ANCE

de 0 A hasta 10 A	18 AWG(*)	16 AWG	14 AWG	12 AWG	10 AWG	8 AWG	6 AWG
de 10 A hasta 13 A	3 (uno a tierra)	16 AWG	14 AWG	12 AWG	10 AWG	8 AWG	6 AWG
de 13 A hasta 20 A	3 (uno a tierra)	16 AWG	14 AWG	12 AWG	10 AWG	8 AWG	6 AWG
de 15 A hasta 20 A	3 (uno a tierra)	16 AWG	14 AWG	12 AWG	10 AWG	8 AWG	6 AWG
de 18 m a 15 m							
mayor de 15 m							

dudas use el siguiente calíbrage más alto.  
dpendiendo de la longitud del cable y de la capacidad de amperes indicada en la placa de datos de la herramienta. Si tiene perdida de potencia y sobrecalentamiento del motor. La siguiente tabla muestra el tamaño correcto que debe usarase consumido su herramienta. Un cable de un calibre inferior ocasionaría caídas de tensión en la linea, teniendo como resultado una avería.

**ADVERTENCIA** Al usar un cable de extensión, asegúrese de usar un calibre suficiente para transportar la corriente que electrica con conexión a tierra.

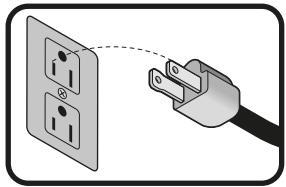

cable de corriente de tres partes con conexión a tierra o de un sistema de conexión en forma de figura. Ambos tipos de sistemas tienen la necesidad de un cable de conexión en forma polarizada. No obstante, es necesario conectar con un electrodoméstico o enchufe un enchufe polarizado. Si así no cabe, pongase una forma. Si la clavija no cabe en el enchufe, volteelo. Si así no cabe, retire la clavija y colóquela y solo quite la parte de conexión de la otra. Esta clavija cabe en cualquier enchufe polarizado (una parte es más ancha que la otra). Las herramientas de doble aislamiento y aislamiento de rediseñadas están equipadas con una clavija polarizada (una parte es más ancha que la otra) y la conexión del aislamiento se daña, este debe ser reemplazado por el fabricante o Centro de Servicio autorizado.

**ADVERTENCIA** Antes de obtener acceso a las terminales, todos los circuitos de alimentación deben ser desconectados.



La construcción del aislamiento eléctrico de esta herramienta es alterada por soldaduras o deformación de líquidos durante su operación. No la exponga a la lluvia, líquidos y/o humedad.

**ADVERTENCIA** Si el cable de alimentación se daña, este debe ser reemplazado por el fabricante o Centro de Servicio autorizado.

## Redondereimientos eléctricos


La clase de construcción del cargador es: Aislamiento referizado  
El cable de alimentación del cargador tiene sujetacables tipo Y.

Código	Descripción	Tensión	Capacidad del depósito	Entrada	Clase IP
102446	Aspiradora inalámbrica	20 V=	500 ml	Ion-litio 20 V= 2 Ah   Tiempo de carga: 60 min aproximadamente	Carregador
102447	Autonomía	20 minutos aproximadamente		Entrada: Tensión: 12V ~ Salida: 21.5 V= 3.5 A	Batería
102448	Descripción			Frecuencia: 60 Hz	
102449				Corriente: 1.1 A	

MAX-20A

Especificaciones técnicas

**TRUPER®**

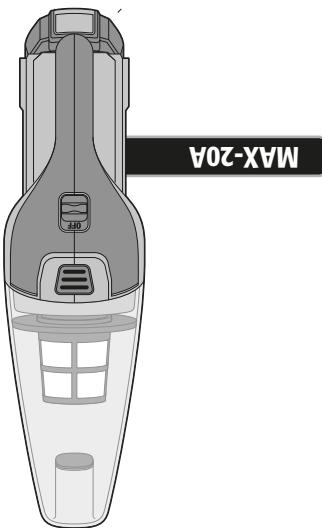

- Índice**
- 12 Poliza de Garantía
  - 11 Centros de Servicio Autorizados
  - 10 Solución de problemas
  - 9 Mantenimiento
  - 8 Puesta en marcha
  - 7 Preparación
  - 6 Ensamble
  - 5 Partes
  - 4 Advertencias de Seguridad
  - 3 Advertencias generales de Seguridad para herramientas eléctricas
  - 3 Recuérdele a su cliente que las herramientas eléctricas
  - 2 Especificaciones técnicas
- ATTENCIÓN**
- Para poder sacar el máximo provecho de la herramienta, alargar su vida útil, hacer válida la garantía en caso de ser necesario y evitar riesgos o lesiones graves, es fundamental leer este instructivo por completo antes de usar la herramienta.
- Guarde este instructivo para futuras referencias.
- Los gráficos de este instructivo son para referencia, pueden variar del aspecto real de la herramienta.



Lea este instructivo por completo  
antes de usar la herramienta.

**ATENCION**



# MAX-20A

102446 MAX-20A

Código de modelo

Este instructivo es para:

CARPINTERIA

TRUPER

Capacidad

500 ml

Aspiradora inalámbrica

Instructivo de

**TRUPER®**

ESPAÑOL  
ENGLISH