


Manual

Compound miter saw

2½ Hp

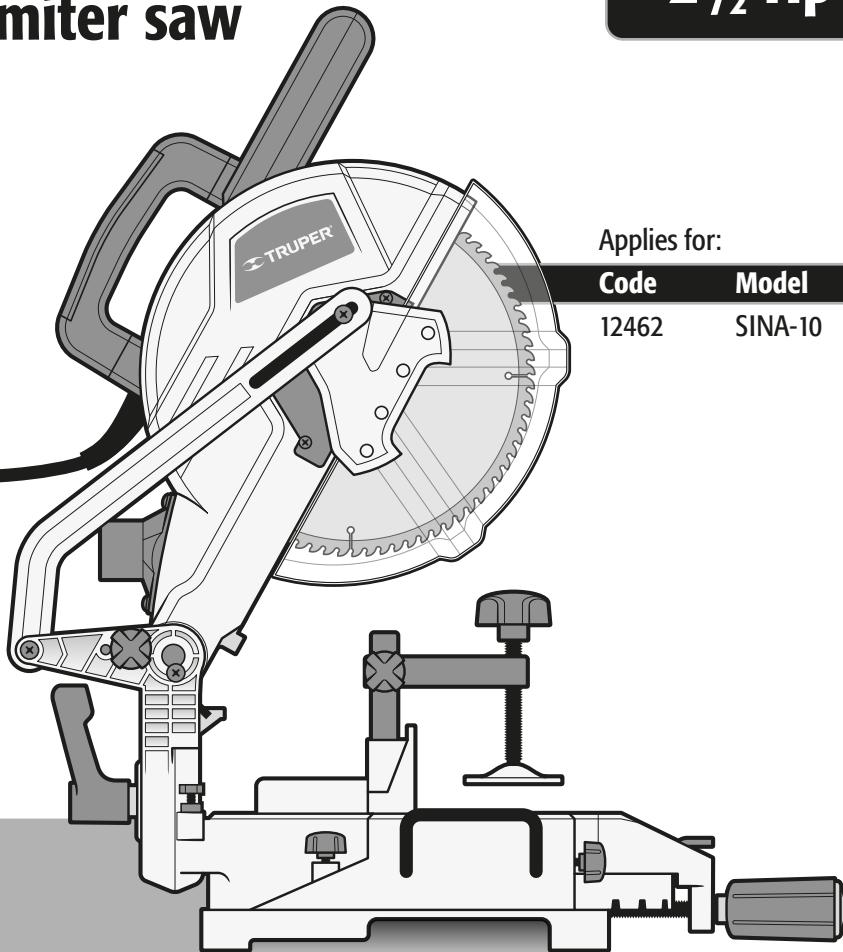

Applies for:

Code
12462

Model
SINA-10

SINA-10

CAUTION



Read the user's manual thoroughly
before operating this tool.




Technical Data	3
Power Requirements	3
 General power tool safety warnings	4
 Safety warnings for stationary saws	5
Parts	6
Unpacking and Assembly	7
Assembly	8
Tightening Up	10
Operation	12
Troubleshooting	13
Maintenance	13
Notes	14
Authorized Service Centers	15
Warranty Policy	16

CAUTION

To gain the best performance of the tool, prolong the duty life, make the Warranty valid if necessary, and to avoid hazards of fatal injuries please read and understand this Manual before using the tool.

Keep this manual for future references.

The illustrations in this manual are for reference only. They might be different from the real tool.

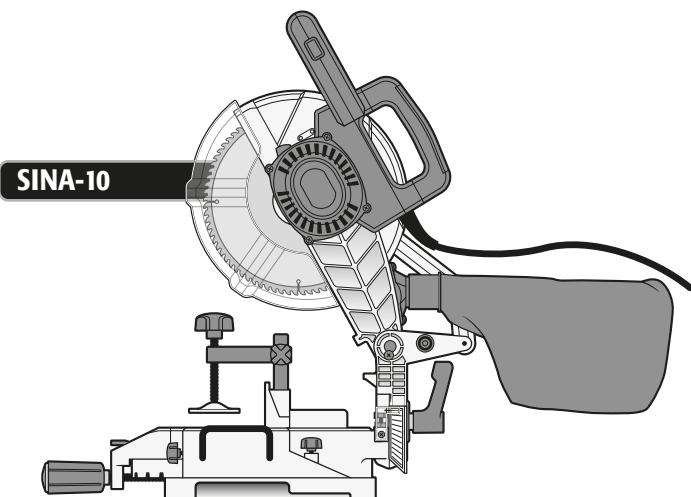

SINA-10

Code	•	12462
Description	•	Compound miter saw
Discs	•	10" with 40 teeth and 10" with 80 teeth
Shaft diameter	•	5/8"
Voltage	•	127 V~
Frequency	•	60 Hz
Current	•	15 A
Power	•	2 1/2 Hp
Speed	•	5 500 RPM
Duty cycle	•	50 minutes work and 20 minutes idle. Maximum 6 hours per day.
Conductors	•	14 AWG x 3C with insulating temperature of 221°F
Insulating	•	Class I
IP grade	•	IP20
Table angles	•	From 0° to ±45°
Cutter head angles	•	From 0° to 45°

Power cord grips used in this product: Type "Y"

Build quality: Basic insulation

Thermal insulation on motor winding: Class F

WARNING To prevent power discharge or serious accident if the power cable gets damaged make it replaced by the manufacturer or in a TRUPER® Authorized Service Center.

Power insulation in this tool is affected by liquid spills or splashing while operating.

Do not expose to rain, liquids and / or humidity.



WARNING Before gaining access to terminals, all power circuits should be disconnected.

Power Requirements


WARNING The tool shall be grounded while in use to prevent an electric shock.

• Connect the plug into a correctly grounded power outlet, as shown in Figure A.

Not all the power outlets are correctly grounded. If you do not know for sure verify with a qualified electrician.

• If the plug destined for the tool is a two-prong (two orifices), FOR NOT REASON AT ALL REMOVE OR ALTER THE GROUND CONDUCTOR SET IN THE PLUG. Use a temporary adapter as shown in Figure B and always connect the ground ring as indicated.

CAUTION When using an extension cable, verify the gauge is enough for the power that your product needs. A lower gauge cable will cause voltage drop in the line, resulting in power loss and overheating. The following table shows the right size to use depending on cable's length and the ampere capability shown in the tool's nameplate. When in doubt use the next higher gauge.

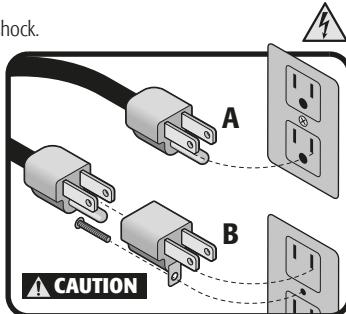

Ampere Capacity

from 0 A and up to 10 A
from 10 A and up to 13 A
from 13 A and up to 15 A
from 15 A and up to 20 A

Number of Conductors

3 (one grounded)

Extension gauge

from 5.9' to 49.2'		higher than 49.2'
18 AWG(*)		16 AWG
16 AWG		14 AWG
14 AWG		12 AWG
8 AWG		6 AWG

* It is safe to use only if the extensions have a built-in artifact for over current protection.

AWG = American Wire Gauge. Reference: NMX-J-195-ANCE

WARNING When operating power tools outdoors, use a VOLTECK grounded extension cable labeled "For Outdoors Use". These extensions are specially designed for operating outdoors and reduce the risk of electric shock.



ENGLISH

⚠ WARNING! Read carefully all safety warnings and instruction listed below. Failure to comply with any of these warnings may result in electric shock, fire and / or severe damage. **Save all warnings and instructions for future references.**

Work area

Keep your work area clean, and well lit.

Cluttered and dark areas may cause accidents.



Never use the tool in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.

Sparks generated by power tools may ignite the flammable material.



Keep children and bystanders at a safe distance while operating the tool.

Distractions may cause loss of control.



Electrical Safety

The tool plug must match the power outlet. Never modify the plug in any way. Do not use any adapter plugs with grounded power tools.



Modified plugs and different power outlets increase the risk of electric shock.

Avoid body contact with grounded surfaces, such as pipes, radiators, electric ranges and refrigerators.

The risk of electric shock increases if your body is grounded.

Do not expose the tool to rain or wet conditions.

Water entering into the tool increases the risk of electric shock.

Do not force the cord. Never use the cord to carry, lift or unplug the tool. Keep the cord away from heat, oil, sharp edges or moving parts.

Damaged or entangled cords increase the risk of electric shock.

When operating a tool outdoors, use an extension cord suitable for outdoor use.

Using an adequate outdoor extension cord reduces the risk of electric shock.

If operating the tool in a damp location cannot be avoided, use a ground fault circuit interrupter (GFCI) protected supply.

Using a GFCI reduces the risk of electric shock.

Personal safety

Stay alert, watch what you are doing and use common sense when operating a tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.

A moment of distraction while operating the tool may result in personal injury.

Use personal protective equipment. Always wear eye protection.

Protective equipment such as safety glasses, anti-dust mask, non-skid shoes, hard hats and hearing protection used in the right conditions significantly reduce personal injury.



Prevent unintentional starting up. Ensure the switch is in the "OFF" position before connecting into the power source and / or battery as well as when carrying the tool.

Transporting power tools with the finger on the switch or connecting power tools with the switch in the "ON" position may cause accidents.



This tool is in compliance with the Official Mexican Standard (NOM - Norma Oficial Mexicana).

Remove any wrench or vice before turning the power tool on.

Wrenches or vices left attached to rotating parts of the tool may result in personal injury.

Do not overreach. Keep proper footing and balance at all times. This enables a better control on the tool during unexpected situations.

Dress properly. Do not wear loose clothing or jewelry. Keep hair, clothes and gloves away from the moving parts.

Loose clothes or long hair may get caught in moving parts.



If you have dust extraction and collection devices connected onto the tool, inspect their connections and use them correctly.

Using these devices reduce dust-related risks.

Power Tools Use and Care

Do not force the tool. Use the adequate tool for your application.



The correct tool delivers a better and safer job at the rate for which it was designed.

Do not use the tool if the switch is not working properly.

Any power tool that cannot be turned ON or OFF is dangerous and should be repaired before operating.

Disconnect the tool from the power source and / or battery before making any adjustments, changing accessories or storing.

These measures reduce the risk of accidentally starting the tool.

Store tools out of the reach of children. Do not allow persons that are not familiar with the tool or its instructions to operate the tool.



Power tools are dangerous in the hands of untrained users.

Service the tool. Check the mobile parts are not misaligned or stuck. There should not be broken parts or other conditions that may affect its operation. Repair any damage before using the tool.



Most accidents are caused due to poor maintenance to the tools.

Keep the cutting accessories sharp and clean.

Cutting accessories in good working conditions are less likely to bind and are easier to control.

Use the tool, components and accessories in accordance with these instructions and the projected way to use it for the type of tool when in adequate working conditions.

Using the tool for applications different from those it was designed for, could result in a hazardous situation.

Service

Repair the tool in a C TRUPER® Authorized Service Center using only identical spare parts.

This will ensure that the safety of the power tool is maintained.

Children or people with reduced physical; sensory or mental capabilities shall not operate the tool, neither inexperienced people or without knowledge in the use of the tool, unless supervised by a person responsible of their safety or if receiving previous instructions about the tool operation.

Children shall be kept under supervision to double-check they will not play with the tool. Tight supervision shall be used with children or disabled persons to prevent from using or being close to any household tool.



Safety warnings for stationary saws



General

- Do not use the saw to cut ferrous metals, masonry or concrete.
- Do not use worn, damaged or dull cutting discs.
- Do not use high-speed steel cutting discs.
- NEVER use a disc with a larger diameter than indicated for this tool.
- Wear gloves when handling the cutting discs.

Before operating the saw

⚠ CAUTION • Hold the disc correctly. Prevent from contacting your body. Do not bend it or loose control of the tool or the work piece.

⚠ CAUTION • Double-check before each use the retractable guard is working correctly. Should it not move freely or close instantaneously, service before operating the tool.

- Fix the saw in a perfectly level surface. There should be enough space around it to handle and support correctly the work piece.
- Circular-shaped work pieces should be fastened with vices to prevent rotation.
- Before starting to saw verify the cutter head column and the rotating table are blocked in the desired position.
- Inspect the work piece to verify it has no nails or screws.
- Double-check the disc is correctly fixed.

When operating the saw

⚠ WARNING • Put away hands or any part of the body from the cutting area and the cutting disc. When operating the tool hold firmly the cutter head handle to prevent loosing control and accidentally get injured.

⚠ DANGER • Accidental contact with a rotating cutting disc may cause severe personal injury.

- Feed the material in a direction opposite to the disc rotation.

⚠ CAUTION • Do not try removing debris when the disc is rotating.

⚠ WARNING • Keep in mind the guards do not protect you underneath the work piece from the moving disc. Never put your hand below the work piece when the tool is running.

⚠ WARNING • ALWAYS keep the power cable away from the cutting area. When cutting, the power cable should NEVER hang on top of the work piece.

- Double-check the disc has completely stopped before replacing, fastening a work piece o changing the cutting angle.

- Before setting new cutting discs make sure they are not banged or damaged. If necessary, replace immediately.
- When working with the saw stand aside the disc, never in front.

⚠ CAUTION • Never remove accumulated sawdust or shavings by hand. Use a brush.


⚠ CAUTION • Turn off and disconnect the tool if trying to liberate a stuck disc.

⚠ CAUTION • Do not stop the rotating disc using a piece of wood or the shaft lock. Allow the disc to freely stop after shutting off the saw.

⚠ CAUTION • Hold the saw by the insulated parts. In the event of accidentally cutting the power cable shut off and disconnect the tool. Otherwise, the metallic parts will send and electric discharge to the user.

After operating the saw

- Double-check frequently all screws and nuts are correctly tight.

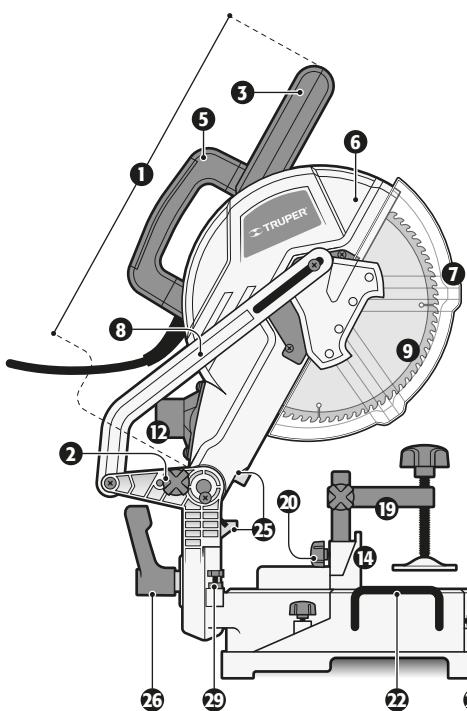**1. Cutter head.**

2. Cutter head release knob.
3. Handle.
4. Switch.
5. Carrying handle.
6. Disc upper guard.
7. Retractable guard.
8. Guard retracting arm.
9. 10" Tungsten carbide cutting disc with 80 teeth.
10. Shaft lock.
11. Motor.
12. Dust collecting chute.


13. Cutting table.


14. Cutting guide.
15. Miter cut rotating table.
16. Miter scale.
17. Table control knob.
18. Miter bracing lock.
19. Press.
20. Press lock.
21. Orifices to assemble the press.
22. Side extension arms.
23. Extension arms locks.

24. Cutter head column.

25. Cutter head stop.
26. Bevel cut knob.
27. Bevel cut scale.
28. Stop screw for 0° bevel cuts.
29. Stop Screw for 45° bevel adjust.

30. Hex wrench.
31. Power cable.
32. Dust collecting pouch.
33. Padlock for switch with 2 keys.

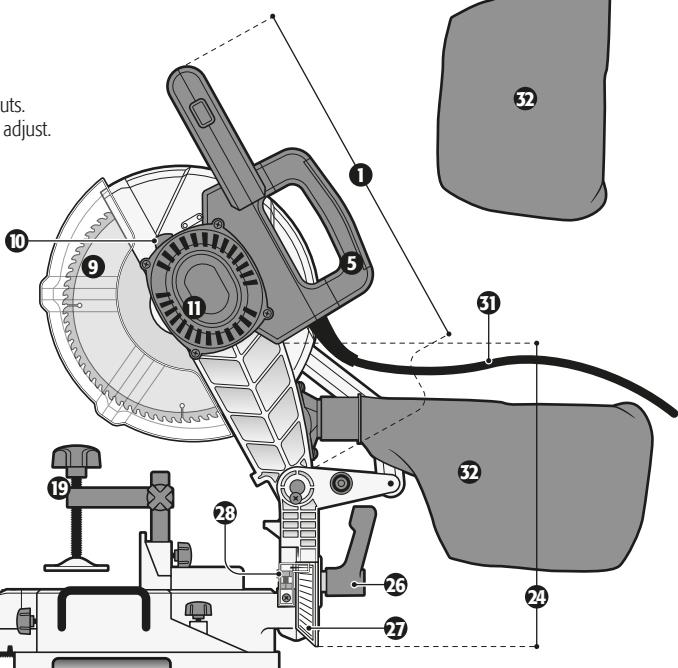

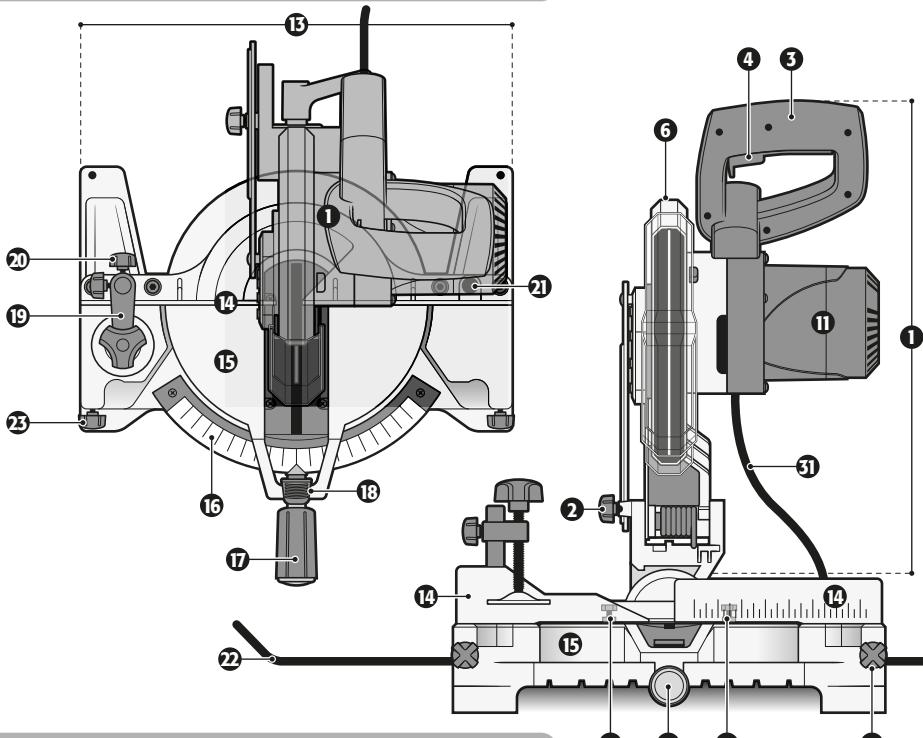

Unpacking and assembly


Due to tight quality controls there is a small probability that the tool has defects or missing parts. If there is any problem, before using the tool and to prevent severe injury, please go to a  **TRUPER®** Authorized Service Center

- Remove all loose parts from the packaging before unpacking the tool.
- Remove the packing material around the tool.
- Carefully lift the saw grasping only by the carrying handle (5). Sit the unit onto a totally leveled surface.
- Always carry the tool with the cutter head set down and blocked with the release knob (2). Lift the saw only using the carrying handle and / or the extension arms (22). Prevent back injury. Seek help to lift the saw.

Mounting onto a work bench

- Find four orifices in each one of the four supports to fix the base onto a worktable.
- Fix the base onto a perfectly leveled worktable. Use screws (not included).
- Or, fix the base onto 1/2" or larger piece of plywood to be able to fasten the board to the table or to carry it to different work places.

⚠ WARNING • Assembling the tool onto a warped, tilted or irregular surface will cause uneven cuts.

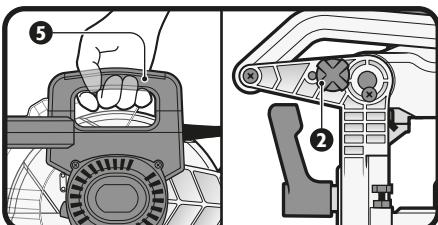


Cutter head release

- Once the tool is assembled, use the release knob (2) to free the cutter head and use the saw.
- Press down the cutter head while pulling out the release knob. Turn it 45° and release.
- Then, slowly lift the cutter head.
- To lock the cutter head back set it down while pulling out the release knob. Turn it -45° and release.


Side extension arms

- The arms are useful to support work pieces exceeding the cutting table area.
- To install onto the worktable loosen the extension arms locks (23).
- Set the extension arms on both sides of the table. Tighten the locks.

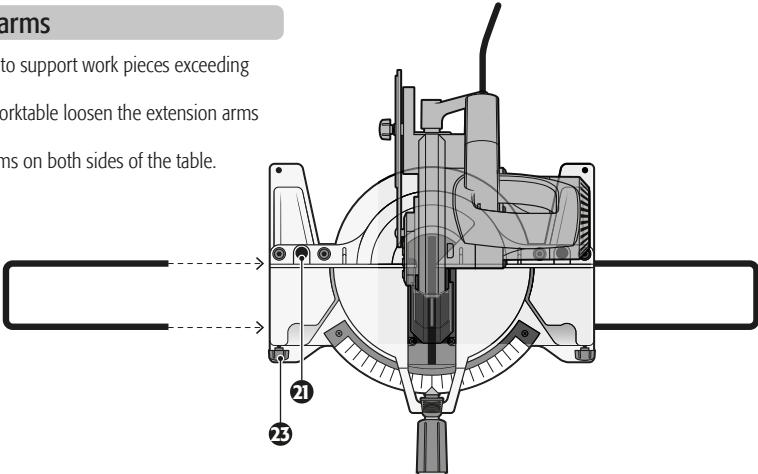


Press

- Use the press (19) to secure the work piece onto the cutting table.
- Regarding the job set the press on any of the two orifices (21) found in the cutting table edges.
- To secure fasten the press lock (20).

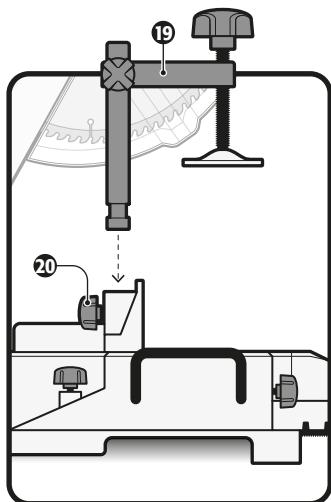




Dust collecting pouch

- Set the dust-collecting pouch (32) in the dust-collecting chute (12) found in the back of the cutter head column.

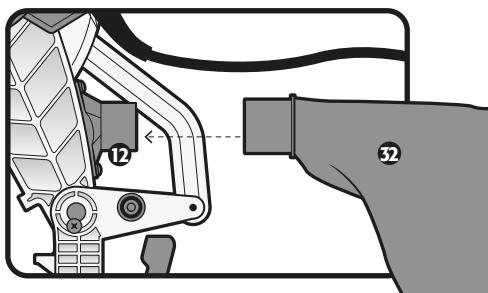


Cutting disc replacement

- CAUTION** • Wear protective gloves to prevent injuries when changing or setting the cutting disc.
- Disconnect the tool from the power source.
 - Lift the cutter head.
 - Move the guard's retractable arm backwards (**A**). Using a Phillips screwdriver remove the screw that fastens it to the retractable guard
 - Lift the retractable guard (**B**) until the two screws on the inside plate are uncovered (**a** and **b**).
 - Loosen the screw (**a**). DO NOT remove.
 - Remove the screw (**b**).
 - Lift the inside plate altogether with the retractable guard to uncover the screw fastening the disc (**C**).
 - Press the shaft lock (**D**) while rotating the disc until the shaft is engaged.
 - Using the included wrench remove the screw that fastens the disc altogether with the washer (**E**).
 - Remove the cutting disc.
 - Apply a drop of lubricant in the inside and outside washers onto the side where they make contact with the cutting disc.
 - Set the new cutting disc into the shaft assuring the inside washer is sitting correctly on the disc.
 - Reverse the former steps to fasten the disc, return the inside plate, the retractable guard and the retractable arm into their original position before using the tool.
 - Double-check the guard is operating normally before starting the tool.
 - Turn on the saw for a little while to verify the disc is correctly assembled.

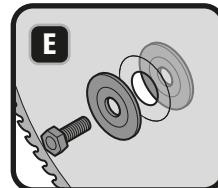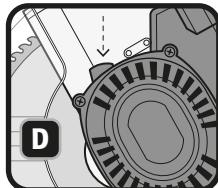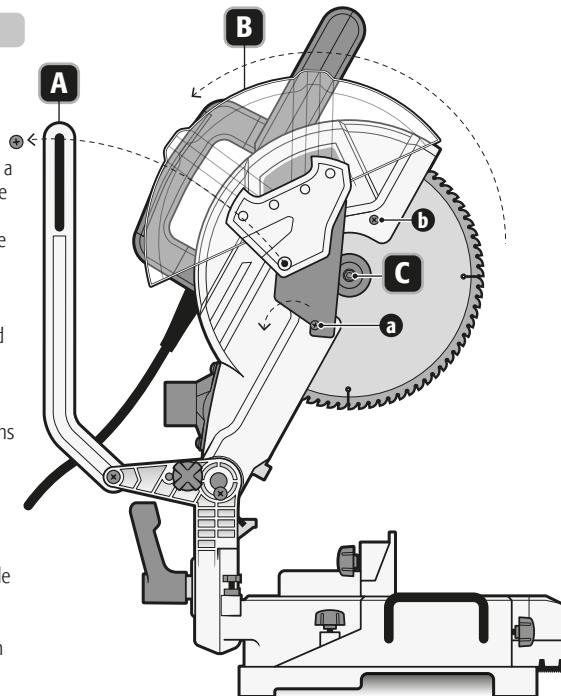

Tighten up the rotating table to make miter cuts



- To make 45° and up to -45° miter cuts use the rotating table (15).
 - Press the miter bracing lock (18) to release the rotating table. Turn the table without releasing the lock and using the control knob (17).
 - Turn the table into the desired angle. Use the miter scale (16) as an aid. This scale is built with 0°, ±15°, ±22.5° ±31.6° and ±45° stops to quickly set the most common miter angles.
 - Release the blocking lock to fix the table.
- WARNING** • Double-check the rotating table is perfectly blocked before starting to cut. Otherwise the table could move and cause a severe injury.

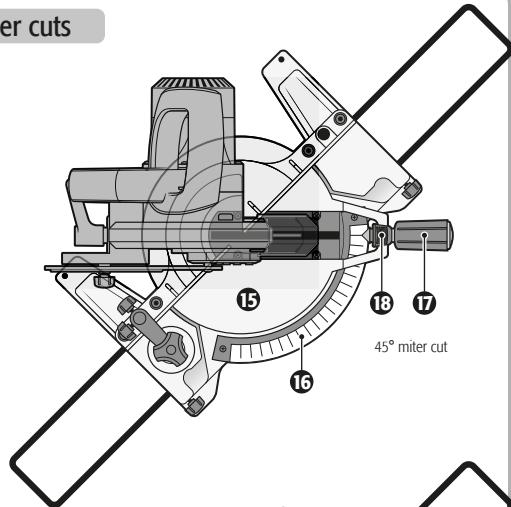


Tighten up the cutter head to make bevel cuts

- To make 0° and up to 45° bevel cuts tighten up the cutter head column into the desired angle.
- For angles different to 0° loosen the bevel cut knob (26) and turn the column into the desired angle using the bevel cut scale (27) as guide.
- Tighten the bevel cut knob to block the column.

WARNING • Double-check to tighten the knob to fix the column before starting to cut. Otherwise the cutter head could move and cause severe injury.

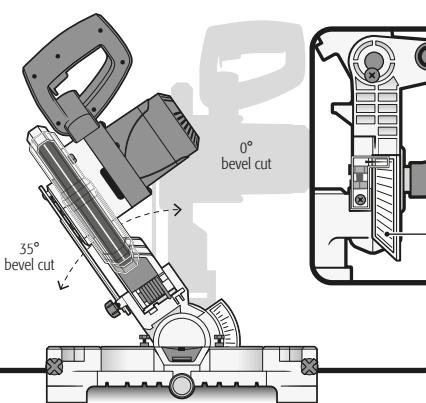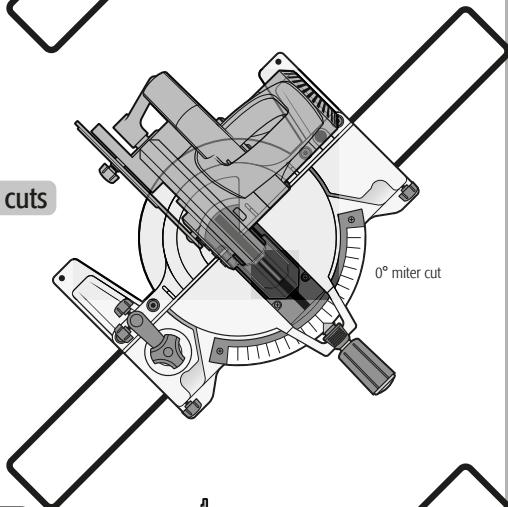

In the illustration the cut guide is not shown to notice the bevel stops



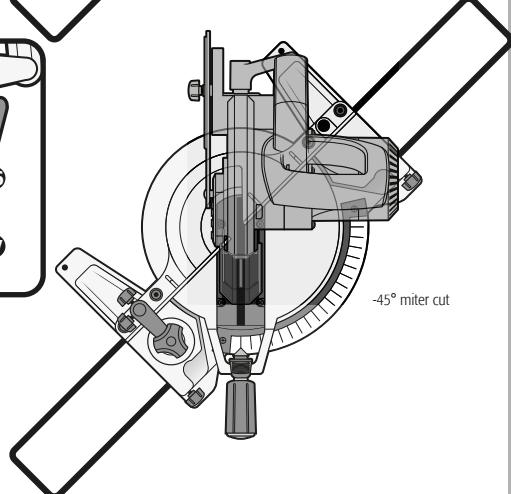


Tightening Up

TRUPER®


Tighten up the angle to make bevel cuts

- Disconnect the tool.
- Set the cutter head into the 0° bevel cut position. Verify the cutter head stop is making contact with the stop screw for 0° bevel cuts (28).
- Adjust the 0° miter cut rotating table.
- Put down and secure the cutter head (see page 7).
- Set a square set against the table and the disc flat side (A). Wearing gloves turn by hand the disc to verify the square set is making contact onto various places. If the disc is off somewhere in the square set it means the cutter head is misaligned.
- To align the cutter head loosen the lower side of the stop screw. Lower the stop (28) to prevent contact with the stop in the cutter head.
- Move the cutter head until the entire disc face makes contact along the square set edge.
- Keep the cutter head in that position and raise the stop screw (28) until making contact with the cutter head stop.
- Once the cutter head is gauged, adjust the miter gauge loosening the screw (a) with a Phillips screwdriver, and setting it correctly onto the zero in the scale.

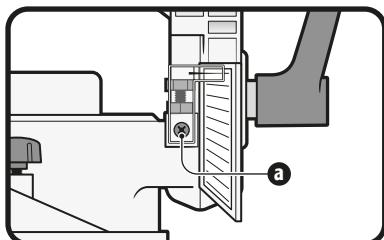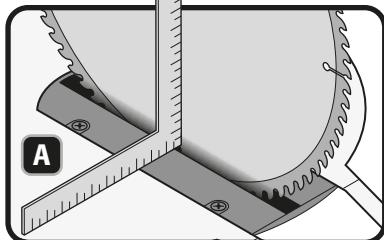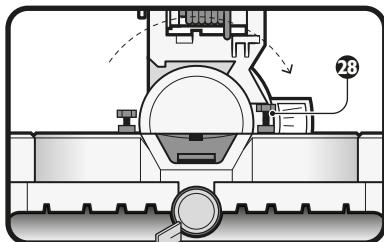


Tighten up the angle in the cutting guide

- Disconnect the tool.
- Put down and secure the cutter head (see page 7).
- Tighten up the 0° miter cut rotating table. Keep the bevel-cut cutter head column on 0° (see page 10).
- Set a square set against the cutting guide and the disc face. The square set face should completely make contact with the cutting guide (14) and the cutting disc (9).
- If the cutting guide or disc is not making contact along the length of the square set, loosen the screws (A) that fix the cutting guide to the table using the hexagonal wrench.
- Set the square set as reference and adjust the guide until it sits perpendicular to the cutting disc.
- Tighten back the four screws (A) to fix the cutting guide onto the correct position.

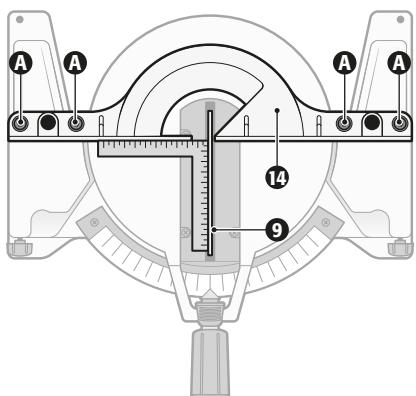

Start up

- To start the saw, tighten and keep the switch pressed (4).
 - To stop the saw, release the switch. When making this movement the automatic brake activates and stops the saw in seconds.
- ⚠ CAUTION** • To prevent non-qualified persons using the tool, there is an orifice for inserting a padlock in the switch and hinder its use (33).

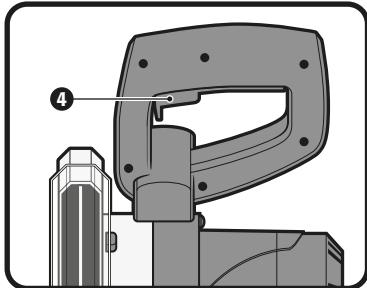

Cutting procedure

- Decide the type of cut: bevel, miter or compound (bevel and miter at the same time).
- Using a pencil draw the cutting line(s) onto the work piece.
- Make the adjustments regarding the rotating table angles and the cutter head column as described in page 10.
- Once secured both the rotating table and the cutter head column in the desired angle, proceed to set the work piece on the cutting table with the drawn cutting line(s) perfectly visible.
- One of the work piece sides shall be firmly supported in the cutting guide. If the work piece is warped, set the convex side against the cutting guide. Otherwise, if you set the concave side- the piece could get out of control.
- If the work piece is larger than the worktable, aid yourself with the side extension arms. In the event the work piece is larger than the extension arms, use a workbench as tall as the table to support the exceeding material.
- After correctly setting the work piece and whenever possible, use the press to secure the piece in place. Regarding the job to be done, the press can be set on any end of the cutting guide. If necessary and to better support the piece, use extra brackets.

- Hold firmly the saw handle and press the trigger. Run the disc to reach its maximum speed (two seconds approximately). Slowly lower the cutter head to make the disc cut the work piece.
- Once the cut is finished release the switch. Before rising the cutter head wait for the disc to get to a complete stop.

Compound cut

- This type of cut uses bevel and miter at the same time. It is used to make picture frames, to cut moldings, boxes with slanted sides or frames.

- ⚠ CAUTION** • Make trial cuts using scraps of material before making the definitive cut on the work piece.

Troubleshooting



Problem

The saw will not start.

Cause

- The power cord is disconnected from the power source.
- Power fault: blown fuse or flipped circuit breaker.
- Damaged power cord.
- Burnt switch.
- Defective motor.

The disc is not reaching its full speed.

Inadequate cut.

Misaligned cut.

The tool vibrates or produces abnormal noises.

Carbons generate lots of sparks when releasing the switch.

Solution

- Connect the power cord.
- Replace fuse or activate the circuit breaker.
- Go to a **TRUPER** Authorized Service Center to repair the saw.

- Replace the extension cord with one with the right length and gauge.
- Turn off the tool. Let it cool down to room temperature and clean the ventilation slots.

- Replace the disc with a new one.

- Inspect adjustments in both rotating table angle and cutter head column (see page 10). Make fine adjustments if necessary (see page 11).

- Verify all knobs, screws, nuts and levers are perfectly tight.
- Double-check the disc shaft is perfectly tight.
- Go to a **TRUPER** Authorized Service Center to repair or replace.
- Set the saw base correctly as indicated in page 7.

- Normal situation due to brake activation.

Maintenance

CAUTION

- Double-check the tool is disconnected before any maintenance.
- Repairs or service: go only to a **TRUPER** Authorized Service Center.
- Prevent accidents. The warranty will only be valid when qualified personnel using **TRUPER** original spare parts repair and service the tool.

Lubrication

- Lubricate periodically the mobile parts.
- The motor bearings are factory greased and waterproof. Do not lubricate.

Carbon brush replacement


- Carbon brushes should be checked periodically and if worn be replaced always in a **TRUPER** Authorized Service Center.
- After replacement ask the technician to inspect if the new carbon brushes can move freely in the carbon brush housing. Ask to turn on the tool 5 minutes to match contact between carbons and commutator.
- Use only original spare **TRUPER** spare carbon brushes specifically designed with the hardness and electric resistance suited for each type of motor. Carbon brushes that are out of specification may damage the motor.
- When changing carbon brushes always replace both.

General inspection

- Inspect regularly the tool. Screws or mobile parts get loose with use. Verify they are perfectly tight.

Cleansing and care

- Keep the ventilation slots clean and free of debris. Remove dust or sawdust after each use. Use compressed air or a brush.
- Clean the tool body with a slightly damp cloth with a mild detergent. Any other cleansing agent may damage the plastic parts of the tool.

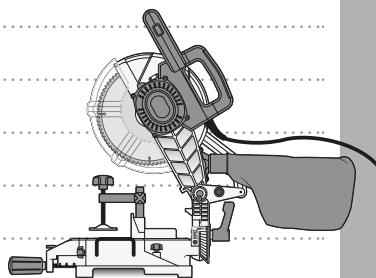

Authorized Service Centers



In the event of any problem contacting a Truper Authorized Service Center, please see our webpage www.truper.com to get an updated list, or call our toll-free numbers **800 690-6990** or **800 0187-8737** to get information about the nearest Service Center.

AGUASCALIENTES	DE TODO PARA LA CONSTRUCCIÓN GRAL. BARRAGÁN #1201, COL. GREMIAL, C.P. 20030, AGUASCALIENTES, AGS. TEL.: 449 994 0557	MORELOS	FIX FERRETERÍAS CAPITAN ANZURES #95, ESQ. JOSÉ PERDIZ, COL. CENTRO, C.P. 62740, CUAUTLA, MOR. TEL.: 735 352 8931
BAJA CALIFORNIA	SUCRAL SJUANA AV. LA ENCANTADA, LOTE #5, PARQUE INDUSTRIAL EL MOLINO II, C.P. 22244, Tijuana, B.C. TEL.: 664 969 5100	NAYARIT	HERRAMIENTAS DE TEPIC MAZATLÁN #117, COL. CENTRO, C.P. 63000, TEPIC, NAY. TEL.: 311 258 0540
CALIFORNIA SUR	FIX FERRETERÍAS FELIPE ÁNGELES ESQ. RUIZ CORTÍNEZ S/N, COL. PUEBLO NUEVO, C.P. 23670, CD. CONSTITUCIÓN, B.C.S. TEL.: 613 132 1115	NUEVO LEÓN	SUCRAL MONTERREY CARRETERA LAREDO #300, 1B MONTERREY PARKS, COLONIA PUERTA DE ANÁHUAC, C.P. 66052, ESCOBEDO, NUEVO LEÓN, TEL.: 81 8352 8791 / 81 8352 8790
CAMPECHE	TORNILLERÍA Y FERRETERÍA AAA AV. ALVARO OBREGÓN #524, COL. ESPERANZA C.P. 24080 CAMPECHE, CAMP. TEL.: 981 815 2808	OAXACA	FIX FERRETERÍAS AV. 20 DE NOVIEMBRE #910, COL. CENTRO, C.P. 68300, TUXTEPEC, OAX. TEL.: 287 106 3092
CHIAPAS	FIX FERRETERÍAS AV. CENTRAL SUR #27, COL. CENTRO, C.P. 30700, TAPACHULA, CHIS. TEL.: 962 118 4083	PUEBLA	SUCRAL PUEBLA AV. PERIFÉRICO #2-A, SAN LORENZO ALMECATLA, C.P. 72710, CUAUTLA/CINGO, PUE. TEL.: 222 282 8282 / 84 / 85 / 86
CHIHUAHUA	SUCRAL CHIHUAHUA AV. SILVESTRE TERRAZAS #12-111, PARQUE INDUSTRIAL BAFAR, CARRETERA MÉXICO CUAUHTÉMOC, C.P. 31415, CHIHUAHUA, CHIH. TEL. 614 434 0052	QUERÉTARO	ARU HERRAMIENTAS S.A DE C.V. AV. PUERTO DE VERACRUZ #110, COL. RANCHO DE ENMEDIO, C.P. 76842, SAN JUAN DEL RÍO, QRO. TEL.: 427 268 4544
MEXICO CITY	FIX FERRETERÍAS EL MONSTRUO DE CORREGIDORA, CORREGIDORA # 22, COL. CENTRO, C.P. 06060, CUAUHTÉMOC, CDMX. TEL: 55 5522 5031 / 5522 4861	QUINTANA ROO	FIX FERRETERÍAS CARRETERA FEDERAL MZ. 46 LT. 3 LOCAL 2, COL EJIDAL, C.P. 77710 PLAYA DEL CARMEN, Q.R. TEL.: 984 267 3140
COAHUILA	SUCRAL TORREÓN CALLE METAL MECÁNICA #280, PARQUE INDUSTRIAL ORIENTE, C.P. 27278, TORREÓN, COAH. TEL: 871 209 68 23	SAN LUIS POTOSÍ	FIX FERRETERÍAS AV. UNIVERSIDAD #1850, COL. EL PASEO, C.P. 78320, SAN LUIS POTOSÍ, S.L.P. TEL: 444 822 4341
COLIMA	BOMBAS Y MOTORES BYMTESA DE MANZANILLO BLVD. MIGUEL DE LA MADRID #190, COL. 16 DE SEPTIEMBRE, C.P. 28239, MANZANILLO, COL. TEL: 314 332 1986 / 332 2013	SINALOA	SUCRAL CULIACÁN AV. JESÚS KUMATE SUR #4301, COL. HACIENDA DE LA MORA, C.P. 80143, CULIACÁN, SIN. TEL.: 667 173 9139 / 173 8400
DURANGO	TORNILLOS ÁGUILA, S.A. DE C.V. MAZURIÓ #200, COL. LUIS ECHEVERRÍA, DURANGO, DGO.TEL.: 618 817 1946 / 618 818 2844	SONORA	FIX FERRETERÍAS CALLE 5 DE FEBRERO #517, SUR LT. 25 MZ. 10, COL. CENTRO, C.P. 85000, CD. OBREGÓN, SON. TEL.: 644 413 2392
ESTADO DE MÉXICO	SUCRAL CENTRO JILOTEPEC AV. PARQUE INDUSTRIAL #1-A, C.P. 54240, JILOTEPEC, EDO. DE MÉX. TEL: 761 782 9101 EXT. 5728 Y 5102	TABASCO	SUCRAL VILLAHERMOSA CALLE HELIO LOTES 1, 2 Y 3 MZ. #1, COL. INDUSTRIAL, 2A ETAPA, C.P. 86010, VILLAHERMOSA, TAB. TEL.: 993 353 7244
GUANAJUATO	CÍA. FERRETERA NUEVO MUNDO S.A. DE C.V. AV. MÉXICO - JAPÓN #225, CD. INDUSTRIAL, C.P. 38010, CELAYA, GTO. TEL.: 461 617 7578 / 79 / 80 / 88	TAMAULIPAS	VM ORINGS Y REFACCIONES CALLE ROSITA #527 ENTRE 20 DE NOVIEMBRE Y GRAL. RODRÍGUEZ, FRACC. REYNOSA, C.P. 88780, REYNOSA, TAMS. TEL.: 899 926 7552
GUERRERO	CENTRO DE SERVICIO ECLIPSE CALLE PRINCIPAL MZ.1 LT. 1, COL. SANTA FE, C.P. 39010, CHILPANCINGO, GRO. TEL.: 747 478 5793	TLAXCALA	SERVICIOS Y HERRAMIENTAS INDUSTRIALES PABLO SIDAR #132, COL. BARRIO DE SAN BARTOLOMÉ, C.P. 90970, SAN PABLO DEL MONTE, TLAX. TEL.: 222 271 7502
HIDALGO	FERREPRESOS S.A. DE C.V. LIBERTAD ORIENTE #504 LOCAL 30, INTERIOR DE PASAJE ROBLEDO, COL. CENTRO, C.P. 43600, TULANCINGO, HGO. TEL.: 775 753 6615 / 775 753 6616	VERACRUZ	LA CASA DISTRIBUIDORA TRUPER BLVD. PRIMAVERA ESQ. HORTENSIA S/N, COL. PRIMAVERA C.P. 93308, POZA RICA, VER. TEL.: 782 823 8100 / 826 8484
JALISCO	SUCRAL GUADALAJARA AV. ADOLFO B. HORN # 6800, COL. SANTA CRUZ DEL VALLE, C.P. 45665, TLAJOMULCO DE ZÚÑIGA, JAL. TEL.: 33 3606 5285 AL 90	YUCATÁN	SUCRAL MÉRIDA CALLE 33 #600 Y 602, LOCALIDAD ITZINCAB Y MULSAY, MPIO. UMÁN, C.P. 97390, MÉRIDA, YUC. TEL.: 999 912 2451
MICHOACÁN	FIX FERRETERÍAS AV. PASEO DE LA REPÚBLICA #3140-A, COL. EX-HACIENDA DE LA HUERTA, C.P. 58050, MORELIA, MICH. TEL.: 443 334 6858		

Code

12462

Model

SINA-10

Brand**TRUPER®**

This product is guaranteed for 1 year. To make the warranty valid or purchase parts and components you must present the product in Corregidora 22, Col. Centro, Alc. Cuauhtémoc, CDMX C.P. 06060 or at the establishment where you purchased it, or at any Truper® Service Center listed in the annex to the warranty policy and/or in www.truper.com. Transportation costs resulting from compliance of this warranty will be covered by **TRUPER®**.

For questions or comments, call **800-690-6990**. Made in China. Imported by Truper S.A. de C.V. Parque Industrial 1, Jilotepec, Edo. de Méx. C.P. 54240

**1
YEAR**

Stamp of the business. Delivery date:

Sello del establecimiento comercial. Fecha de entrega:

1 AÑO



Este producto está garantizado por 1 año. Para hacer válida la garantía o adquirir piezas y componentes debes presentar el producto en Corregidora 22, Col. Centro, Alc. Cuauhtémoc, CDMX C.P. 06060 o en el establecimiento donde lo compró, o en algún Centro de Servicio Truper® de los establecimientos que resulten para su cumplimiento señalados en el anexo de la poliza de garantía y/o en www.truper.com. Los gastos de transportación que resulten para su cumplimiento se harán cargo por **TRUPER®**. Para dudas o comentarios, llame al 800-690-6990. Hecho en China. Importado por Truper S.A. de C.V. Parque Industrial 1, Jilotepéc, Ed. de Mex. C.P. 54240


Código	Modelo	Marca	SINA-10	TRUPER®
12462				

Poliza de Garantía

TRUPER®

ACUASCALENTES DE TODO PARA LA CONSTRUCCIÓN FIX FERRERIAS CAPITANIA AZNUZAS #95, E/SQ. JOSE PEDRIZ, COL. MORELOS TEL.: 735 328 8931 COLONIA URBINA DE MONTERRA PARKS, NUVO LEON, TEL.: 81 8352 8979 / 81 8352 8900 AV. DE MONTERREY PARKS #18 MONTERREY PARKS, TUXPETEC, OAXACAH. TEL.: 287 106 3092 AV. ALVARO OBREGÓN #241 COL. LORAZO ALMECTA C.P. 77170 PLAZA LOCAL MZ 46 LT. 3 LOCAL 2, COL. EIDAL, SAN LUIS POTOSI, SL.P. TEL.: 44 822 4541 TEL.: 984 267 1440 QUINTANA ROO FIX FERRERIAS AV. PIEDRAS DE VERA #101 COL. RANCHO DE ENMEDIO, C.P. 7642, SAN JUAN DEL RIO, QRO. COAHUILA SUCURSAL TORREON C.P. 25522 5301 / 2552 4861 TEL.: 871 209 68 23 COLIMA BOMBS Y MOTORES BYMTESA DE MANZANILLO BLDW MILICEL DE LA MANDIBA #1-A, COL. 16 DE DURANGO CLARA FERRERIAS AGUILA S.A DE CV. AV. MEXICO-INDUSTRIAL #1-A, COL. 16 DE SONORA FIX FERRERIAS TEL.: 667 173 9139 / 173 8400 SAN LUIS POTOSI, SL.P. TEL.: 44 822 4541 SINALOA SUCURSAL CULIACAN AV. REYES MEXICO #401, COL. HACENDA DE LA TABASCO SUCURSAL Y HERRAMIENTAS CALLE HELO ILOTIS 1, 2 Y 3 MZ #1, COL. INDUSTRIAL, TAB. TEL.: 993 353 7244 TAJAMULPAS VM DORNYS Y FRESCIONES CALLE ROSITA #527 ENTRE 20 DE NOVIEMBRE Y GRAL. RODRIGUEZ, R.R.C. 8800, REYNOSA, C.P. 88780, REYNOSA, TEL.: 782 823 8100 / 826 8484 TLAXCALA SERVICIOS Y HERRAMIENTAS INDUSTRIALES PBLDO. PRIMERA E/SQ. HORNETISA N°, COL. VER. TEL.: 222 271 7502 VERACRUZ LA CASA DISTRIBUIDORA TRUPER BLVD. PRIMERA E/SQ. HORNETISA N°, COL. VER. TEL.: 782 823 8100 / 826 8484 MICHOACÁN EQUIPACIONES FIX FERRERIAS AV. PAESO DEL RÍA HUERFA #3140-A, COL. MORELIA, TEL.: 443 334 6858 JALISCO SUCURSAL GUADALAJARA AV. ADOLFO B. HORN # 6800, COL. SANTA CRUZ DEL VALLE, C.P. 45651 TLAJUANCO DE ZUNIGA, JAL. TEL.: 33 3606 5285 AL 90

En caso de tener algún problema para contactar un Centro de Servicio Autorizado Truper®, consulte nuestra página www.truper.com donde obtendrá un listado actualizado, o llame al: 800 690-6990 ó 800 0187-8737 donde le informarán cuál es el Centro de Servicio más cercano.

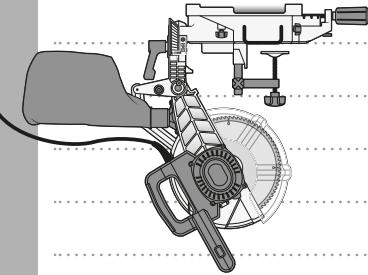

Notas

TRUPER®

- Cuando se ha aga el cambio de carbones siempre deban motor.
- Siempre que se cambie los carbonos se deben desgasificar.
- Despues de que haya sido reemplazado, pida que se inspeccione si los nuevos carbonos quedan morena.
- Interrumpir la operacion de la moto para empalmar el quemamiento durante 5 minutos para empalmar la combustion de los carbonos y el combustible.
- Solo se deben de usar carbonos de repuesto o originales, si se usan de segunda mano la duracion sera menor.
- Los carbonos extra de carbonas para cada tipo de motor.
- Cuando se ha aga el cambio de carbones siempre deban motor.

seuo

- Los rodamientos del motor están engrasados e imprenemalizadas de fábrica, por lo que no necesitan ser lubrificados.
- Lubrifique los partes móviles periódicamente.

Lubrication

- Si utilizamos normal por la activación del freno.
- Mante la base de la sierra debidamente como se explica en la página 7
- Utiliza un centro de servicio autorizado o taller para su reparación o mantenimiento.
- Asegúrate de que el tornillo del eje del disco esté bien apretado.
- Verifica que todas las perillas, tornillos, tuercas y palancas estén bien apretadas.
- Consulta la página 10. Haga ajustes finos de separación y le coloca el desplazamiento de cortina necesarios (consulte la página 11).

- Reemplaza el disco por uno nuevo.
- Reemplaza el cable de extensión por uno de longitud y calidad correcta.
- Asegura la herramienta, déjale que se enfrie a temperatura ambiente y limpia las ranuras de ventilación.

- Cambie el fusible o active el interruptor de circuito.

WORRIES

Solución de problemas

Solución de problemas
TRUPER®

- Motor de eje.
- El interruptor está quemado.
- Cable dañado.
- Exceso de corriente en el circuito.
- Fallas en la conexión eléctrica.

• Cambiar el motor de eje.

- Motor de eletroíoso.
- Eléctrico resistencia.
- Cables de agua.
- Relés en la corriente eléctrica: fusible fundido.
- Interruptor de circuito polarizado.
- Cables de conexión hidráulica.
- Filtros de agua.
- La serie es encuentra demasiado difícil su máxima velocidad. Pedal o calibre.
- El cable de extensión es muy largo o de disco no alcanza.

- La máquina vibra o produce ruidos anormales.
- El disco vibra.
- Piezas móviles desgastadas.
- Esta sobre una superficie inestable.

<p>• Verifique que todas las perillas, tornillos, tuerca y platinas estén bien apretados.</p> <p>• Asegúrese de que el tornillo del eje del disco esté bien apretado.</p> <p>• Audíe a un Centro de Servicio Autorizado.</p> <p>• TRUPER® para su preparación o empleazo.</p>	<p>• Pilezas móviles desgastadas.</p> <p>• El disco vibra.</p> <p>• La máquina vibra o produce ruidos anormales.</p>	<p>• Pilezas y/o tornillos flojos.</p> <p>• La máquina vibra o produce ruidos anormales.</p>	<p>• Pilezas móviles desgastadas.</p> <p>• El disco vibra.</p> <p>• La máquina vibra o produce ruidos anormales.</p>	<p>• Pilezas móviles desgastadas.</p> <p>• El disco vibra.</p> <p>• La máquina vibra o produce ruidos anormales.</p>	<p>• Los carbones quemados se desgastan mucho.</p>

Mantenimiento

- Revisa todos los ajustes del anillo de la mesa
- Reemplaza el disco por uno nuevo.

• La sierra se encuentra demasiado caliente.

- La sierra se encuentra demasiado caliente.
- Apaga la herramienta, déle que se enfrie a temperatura ambiente y limpia las ranuras de ventilación.
- La sierra se encuentra demasiado caliente.
- La sierra se encuentra demasiado caliente.

• El disco no alcanza su máxima velocidad. Puede ser:

- El motor defecuoso.
- El interruptor está quemado.
- El cable dañado.
- El cable de extensión es muy largo o de
- El cable de extensión es muy corto.
- Cambio de fusible o activa el interruptor de circuito.
- Fallas en la corriente eléctrica: fusible fundido o interruptor de circuito烧毁。
- Ajusta a un centro de servicio autorizado.
- TRUPER® para reparar la sierra.
- El disco no alcanza su máxima velocidad.

• Corte de eficiente.

- Disco sin filo.
- Disco desafilado.


Solución de problemas

- A ATENCIÓN** • Haga cortes de corte definitivo en la pizza de desecho antes de hacer el corte definitivo en la pizza de tabajo.
- Este tipo de corte utiliza cortes de bisel e inglete al mismo tiempo y se usa para fabricar marcos, cortar molduras, cortar molduras, cortar molduras o bastidores.

Corte compuesto

- Lentamente haga descender el cabezal de corte para que el disco de corte se detenga por completo antes de levantar el disco cortante la pizza de tabajo.
- Cuando el corte suelte el interruptor y espere a que el disco cortante la pizza de tabajo.
- Una vez aseguradas en el ángulo deseado tanto la mesa de trabajo como la columna del cabezal de corte, proceda a girarla hacia los ajustes correspondientes de los ángulos de la mesa giratoria y de la columna del cabezal de corte como se describe en la figura 10.
- Trace con lápiz (s) (máx (s) de corte en la pizza de compuesto (corte de bisel e inglete al mismo tiempo).
- Deje la pizza de corte a realizar bisel, inglete o abrazaderas extras para sujetar la pizza aún mejor.
- Sostenga firmemente el márgen de la sierra y apriete el interruptor. Permita que el disco alcance su máxima velocidad (proximadamente en dos segundos) y interrumpa el corte suelte el interruptor.
- Despues de colocar correctamente la pizza de trabajo utilice la prensa siempre que sea posible para asegurar la pizza en su sitio. La prensa puede ser colocada en cualquier parte de los extremos de la sierra de corte dependiendo de la necesidad.
- Despues de colocar correctamente la pizza de trabajo utilice la prensa siempre que sea posible para asegurar la pizza en su sitio. La prensa puede ser colocada en cualquier parte de los extremos de la sierra de corte dependiendo de la necesidad.

Procedimiento de corte

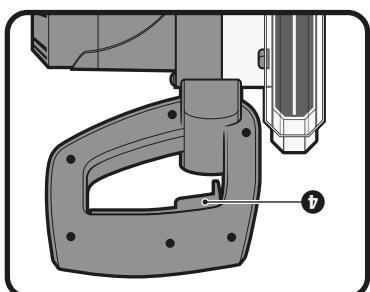


Operación

- A ATENCIÓN** • Para evitar el uso de la herramienta por parte de personal no calificado, el interruptor central con un dispositivo de freno automático para detener la sierra en caso de que se active el freno automáticamente durante su uso (33).
- Para encender la sierra suelte el interruptor, al hacerlo se activa el freno automático para detener la sierra en caso de que se active el freno automáticamente durante su uso (33).
 - Para mantener la sierra encendida mantenga presionado el interruptor (4).
 - Para encender la sierra, apriete y mantenga presionado el interruptor (4).


Encendido

TRUPER®

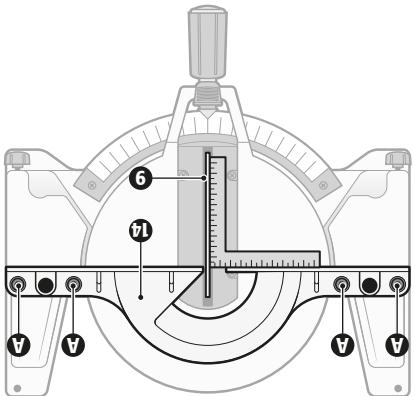


- Coloque la guía de corte a la medida que la llave hexagonal.
- Asegúrese de que el tornillo (A) para fijar la guía de corte esté bien apretado.
- Coloque una escuadra contra la guía de corte y contra la cara del disco.
- Coloque una escuadra contra la guía de corte y contra la biseladora a 0° (consulte la página 10).
- Desconecte la herramienta.
- Baje y asegúre el cabezal de corte (consulte la página 7).
- Ajuste la medida giratoria para hacer cortes de inglete a 0° .
- Desconecte la herramienta.


Ajuste del ángulo de la guía de corte

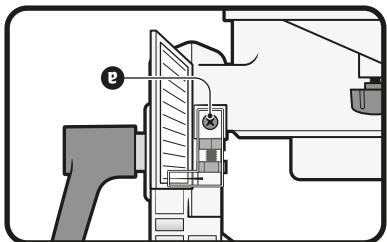

- Una vez calibrado el cabezal, ajuste el tornillo (3) con un escala para cortes en bisel alineando el tornillo (2) con un escamador de cruz y coloquándolo correctamente en el cerro de la escala.

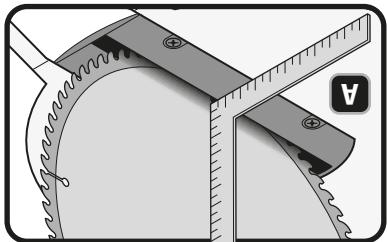



- Mueva el disco hasta que haga contacto con el tope de escuadra.
- Mueva el cabezal en esa posición y levante el tope de tornillo (2B) hasta que haga contacto con el borde de la escuadra.

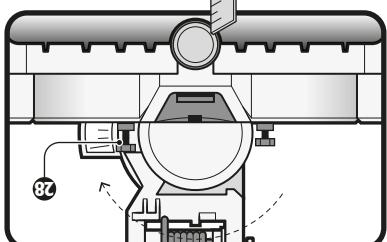

- Para alinear el cabezal alineado con el inferior del tope de escuadra.
- Coloque el disco que se separa en varios puntos con la parte inferior del cabezal en la escuadra.
- Coloque el disco que hace contacto con la mano protegida por guantes (A).
- Ajuste la medida giratoria para hacer cortes de inglete a 0° de bisel (28).
- Coloque una escuadra contra la medida que la llave hexagonal para hacer cortes de bisel de 0° .
- Asegúrese de que el tornillo para cortes esté bien apretado.
- Coloque el cabezal de corte en la posición para cortes en bisel de 0° .
- Desconecte la herramienta.

Ajuste del ángulo para cortes en bisel

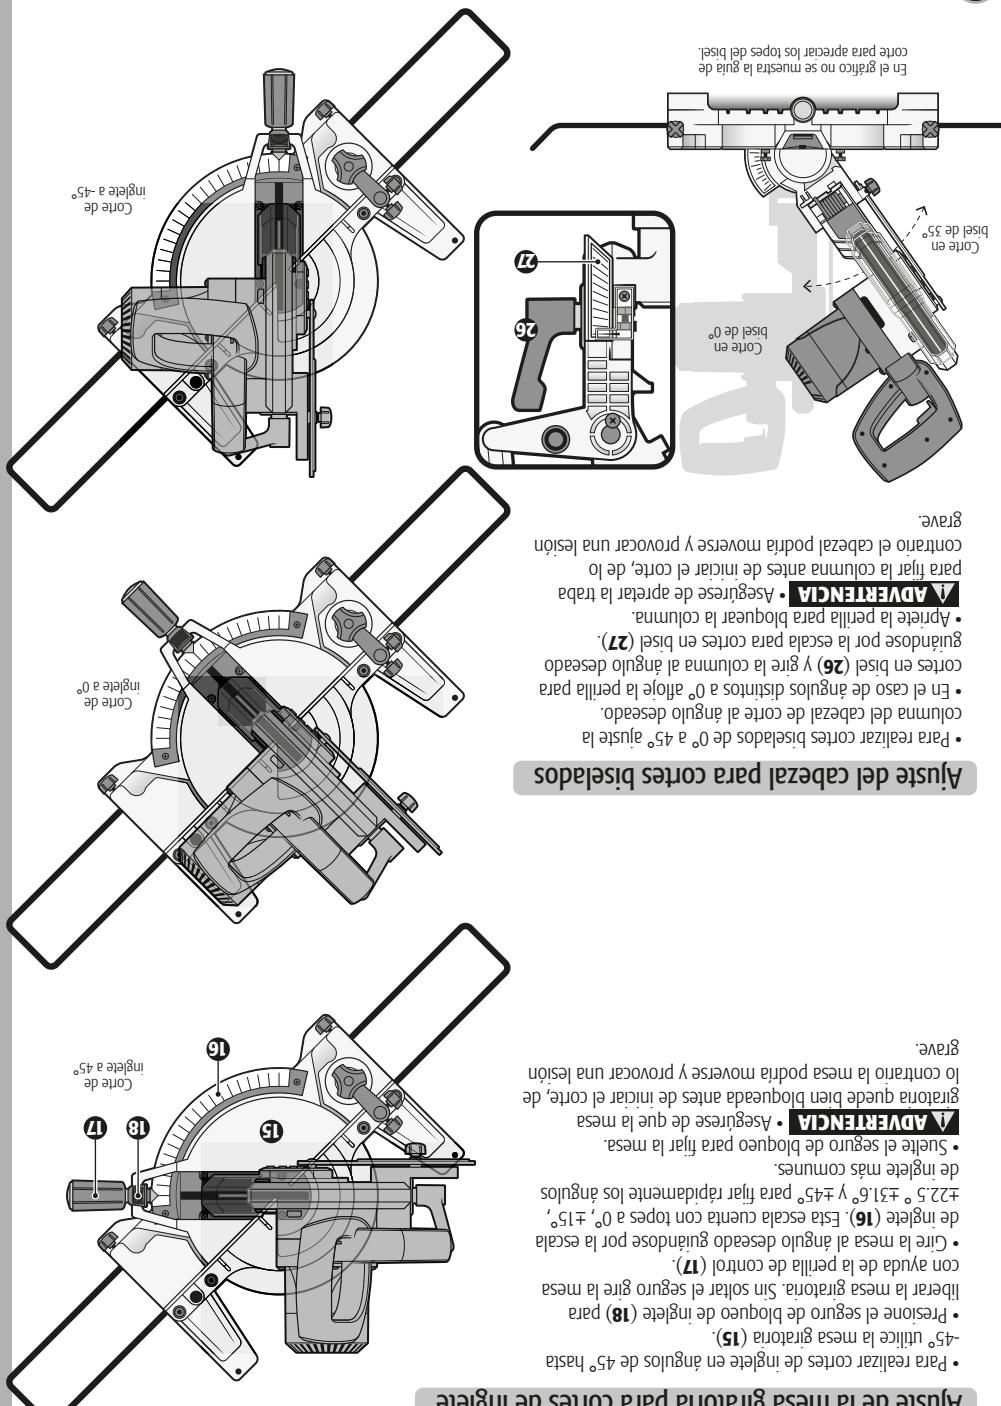**AJUSTES****CTRUPPER®**

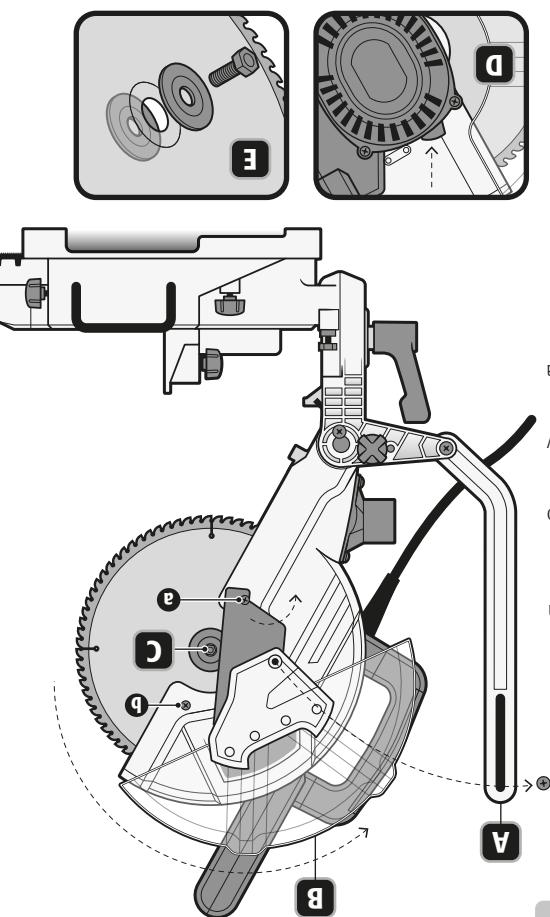


- Utilice guantes de protección para evitar lesiones.
- Desconecte la herramienta de la corriente eléctrica.
- Levante el cabezal de cortar.
- Muera hacia atrás el brazo retardador de la guarda retráctil con retiro de el tornillo que lo sujetaba a la guarda retráctil con dos tornillos de la placa interior (A y B).
- Levante la placa inferior junta con la guarda retráctil para retirar el tornillo (B).
- Afloje el tornillo (A). NO lo retire.
- Retire el disco de corte.
- Levante la guarda retráctil que se sujetó al disco (C).
- Aplique una goma de liberación en las arandelas inferiores exterior del disco de corte.
- Invierta los pasos anteriores para asegurar el disco, roldana interior caliente en el disco.
- Coloque el disco nuevo en la fresa asegurándose que la herramienta.
- Asegúrese de que la guarda funcione con normalidad antes de encender la herramienta.
- Encienda la sierra un instante para verifcar que el disco quede bien instalado.

Cambio del disco de corte


Montaje

TRUPER®

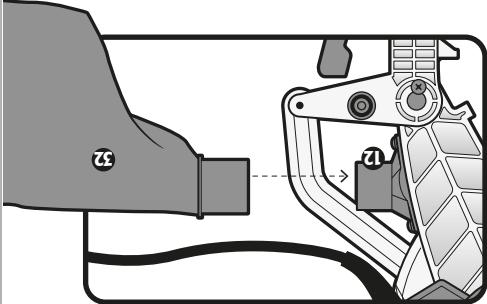


- Instale la bolsa recolectora de polvo (32) en el ducto de recolección de polvo (17) en la parte posterior de la columna del cabezal de corte.
- Instale la bolsa recolectora de polvo (32) en el ducto de recolección de polvo (17).

Bolsa recolectora de polvo

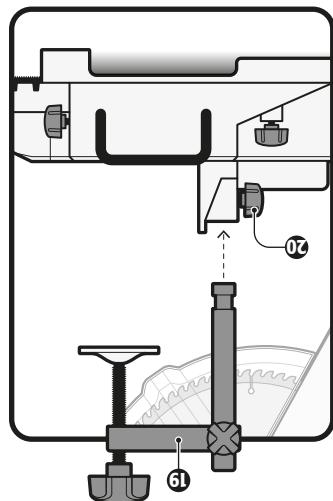

- Para asegurar la pieza de trabajo a la mesa de corte utilice la prensa (16).
- Instale en cada una de los dos orificios (21) a los extremos de la mesa de corte dependiendo del trabajo a realizar.
- Apriete el seguro de la prensa (20) para que quede asegurada.

Prensas

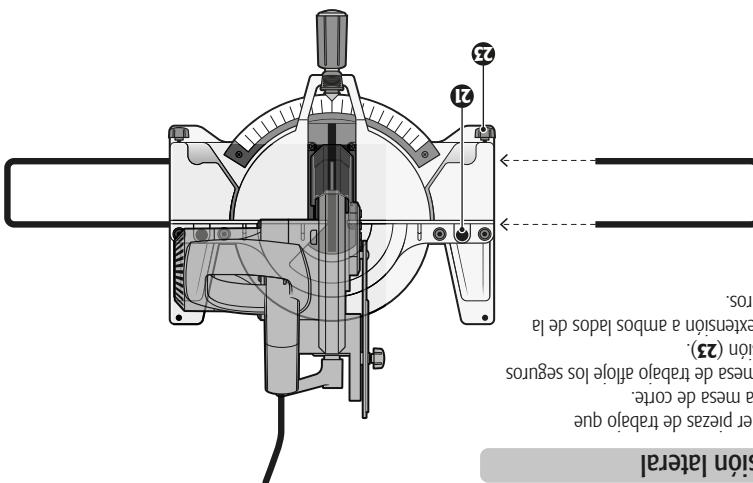


- Sujete los brazos de extensión (23) a ambos lados de la mesa y apriete los seguros.
- Inserte los brazos de extensión (23) en la mesa de corte.
- Para instalarlos en la mesa de trabajo afloje los seguros de los brazos de extensión (23).
- Sujete los brazos de extensión (23) a ambos lados de la mesa y apriete los seguros.

Brazos de extensión lateral

- Una vez montada la herramienta, libere el cabezal de corte para poder utilizarla a plena potencia.
- La presión que hace el cabezal sobre la mesa es de 15 mm (1/2") o más, para poder sujetar la mesa a la mesa.
- O si lo prefiere a un trozo de madera clavada de 15 mm (1/2") a la base de la herramienta.
- Fije la base a una mesa de trabajo con tornillos (no incluidos).
- La base de la herramienta cuenta con orificios en cada uno de sus cuatro soportes para fijarla a una mesa de trabajo.
- Para liberar el cabezal de corte, levante la herramienta y tire de la perilla liberadora.
- Para desenganchar la herramienta, libere el cabezal de corte y girelo 45° y suelte la perilla.
- Para asegurar de nuevo el cabezal, jale la herramienta hacia afuera la perilla liberadora. Girela -45° y suelte la perilla.
- Despus de levantar el cabezal lentamente.
- Presione hacia el cabezal mientras jala hacia afuera el cabezal (2).

Liberación del cabezal de corte

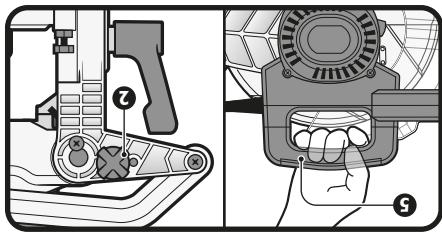

evitar lesiones de espalda.

Pida ayuda cuando necesite levantar la cortadora para extensión (2).

Cortadora solo por el mango de transporte y/o los brazos abajo y bloqueadlo por la perilla liberadora (2). Levante la herramienta y trasportarla la sierra hágalo siempre con el cabezal totalmente integrada.

• Para transportar la sierra hágalo siempre con el cabezal totalmente integrada.

• Pida ayuda cuando necesite levantar la cortadora para extensión (2).

Levante la perilla liberadora y coloque sobre una superficie manejable por el mango de transporte (5) y coloque la herramienta tomándola solo por el mango de transporte (5) y coloque sobre una superficie manejable.

• Recline el mango de transporte que rodea la herramienta.

• Retire el mango de transporte que rodea la herramienta.

• Para desempacar la herramienta primero extraiga todas las piezas sueltas de la caja.


• Para desempacar la herramienta prima la herramienta y tire de la perilla liberadora.


Gracias a estos controles de calidad es muy poco probable que su herramienta presente algún efecto que le lleve a sufrir una lesión grave.

Montaje sobre banco de trabajo

Algunas de las presentaciones de caso incluye un Cuchillo Automatizado **T-RUPER**, antes de utilizar la herramienta para evitar expornerse a lesiones graves.

Desempaque y montaje

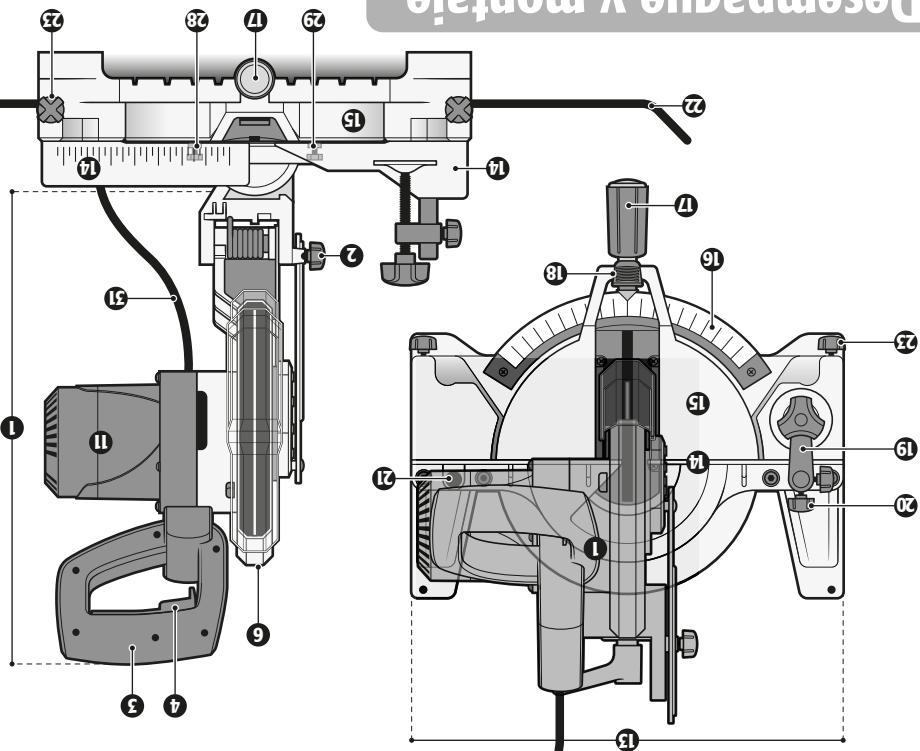

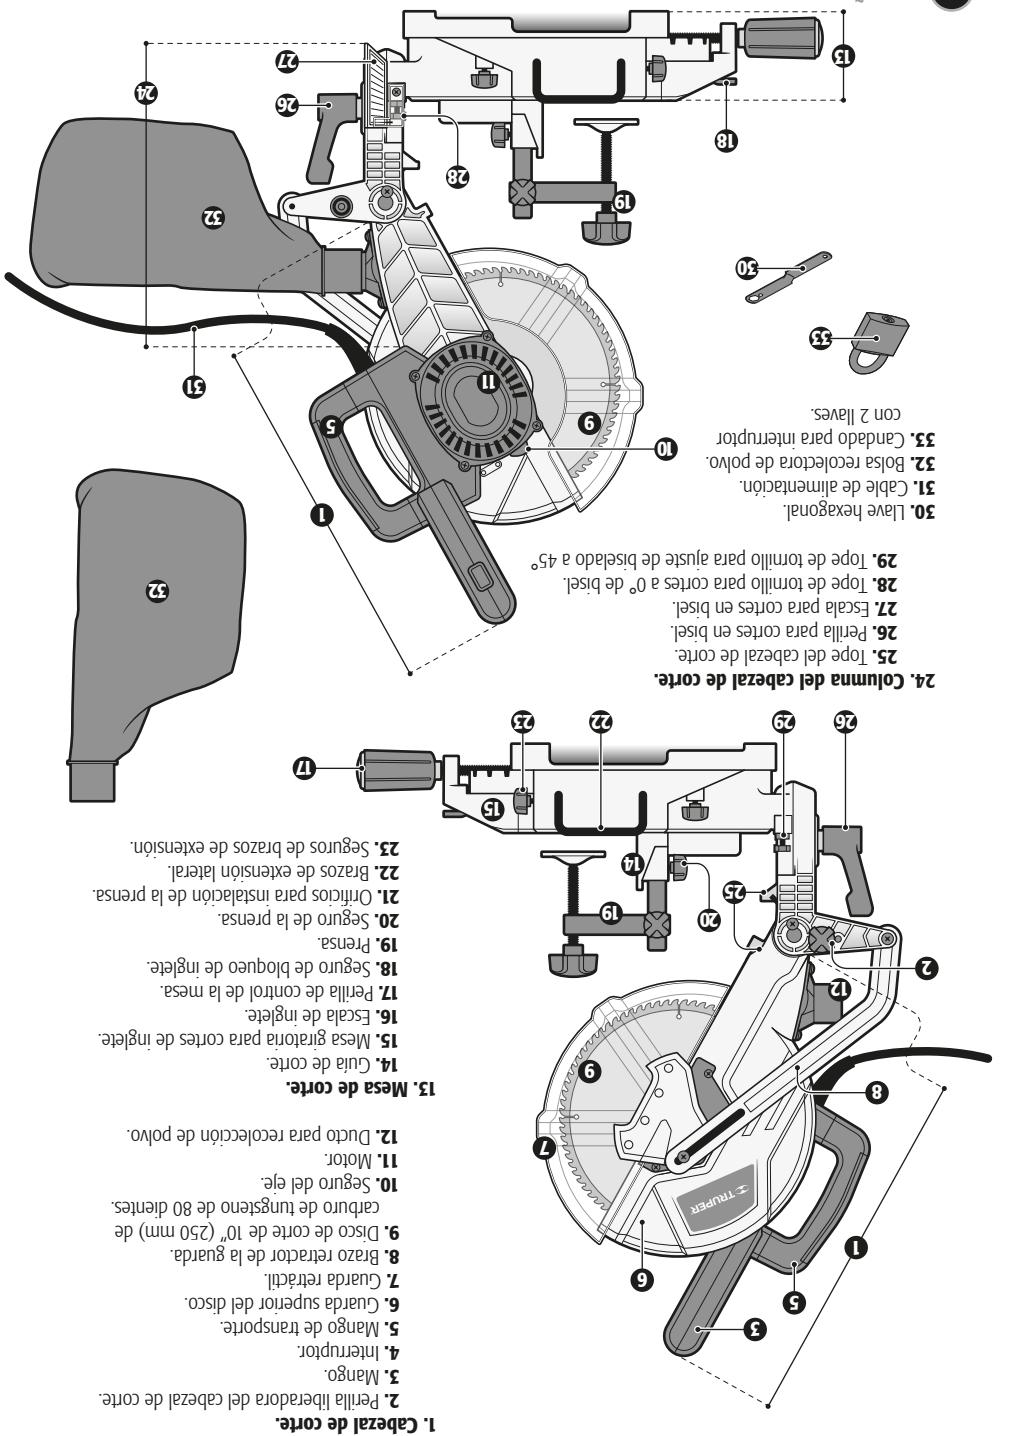




A ADVERTENCIA Al operar herramientas eléctricas en exteriores, utilice una extensión que sea firmeza como "uso exterior" marca **VOLTECK**. Estas extensiones son apropiadas para el uso en exteriores y reducen el riesgo de sufrir una descarga eléctrica.

* Se permite utilizar siempre y cuando las extensiones mismas estén con un atadillo de protección contra sobrecorriente.

AWG = Calibre de alambre extendido que es el mismo que AWG. Referencia: NM-B 195-1 ACNE

de 0 A hasta 10 A	16 AWG(*)	18 AWG(*)	3 (una a tierra)	14 AWG	16 AWG	14 AWG	16 AWG	8 AWG	6 AWG	de 15 A hasta 20 A	de 13 A hasta 13 A	de 0 A hasta 20 A
-------------------	-----------	-----------	------------------	--------	--------	--------	--------	-------	-------	--------------------	--------------------	-------------------

Cable de extensión de amperaje de la conexión. Si tiene dudas use el siguiente cable más alto.

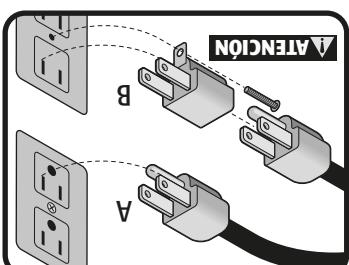

A ATTENCIÓN Al usar un adaptador temporal como se muestra en el ejemplo **B** siempre conecte la oruga del conductor de tierra al conductor de tierra de la conexión.

• **NINGUN MOTOR.** Utilice un adaptador temporal como se muestra en el ejemplo **A**.

• Si el conductor que plantea usar para el arranque tiene 2 polos (2 cables), proporcionele aterrizaje, si no está seguro verifique con un electricista calificado.

• NO REMUEVA O ALTERE EL CONDUCTOR DE TIERRA DE SU CLAVIJA POR.

• La construcción del sistema eléctrico de este herramienta es diferente a los sistemas estándares.

• Los conductores de tierra están conectados a tierra en la conexión de servicio.

• Enchufe la herramienta debajo de un contacto de servicio apropiadamente aterrizado.

• Enchufe la herramienta debajo de un contacto de servicio apropiadamente aterrizado.




A ADVERTENCIA Antes de obtener acceso a las terminales, todos los circuitos de alimentación deben ser desconectados.

La clase de aislamiento térmico de los devanados del motor: Clase F
La clase de construcción de la herramienta es: Aislamiento básico.
El cable de alimentación tiene: Sujetalas tipo Y

A ADVERTENCIA Si el cable de alimentación se daña, este debe ser reemplazado por el fabricante o Centro de Servicio autorizado.

Diseños	• Cilíndrico
Tensión	• 127 V~
Frecuencia	• 60 Hz
Corrente	• 15 A
Potencia	• 2 1/2 HP (1900 W)
Velocidad	• 500 r/min
Ciclo de trabajo	• 50 min de trabajo por 20 min de descanso. Máximo diario 6 horas.
Conductores	• 14 AWG X 3C con temperatura de aislamiento de 105 °C
Aislamiento	• Clase I
TRUPER	• Grado IP • IP20
AutORIZADO	• de 0° a ±45°
La clase de aislamiento térmico de los devanados del motor: Clase F	• de 0° a ±45°

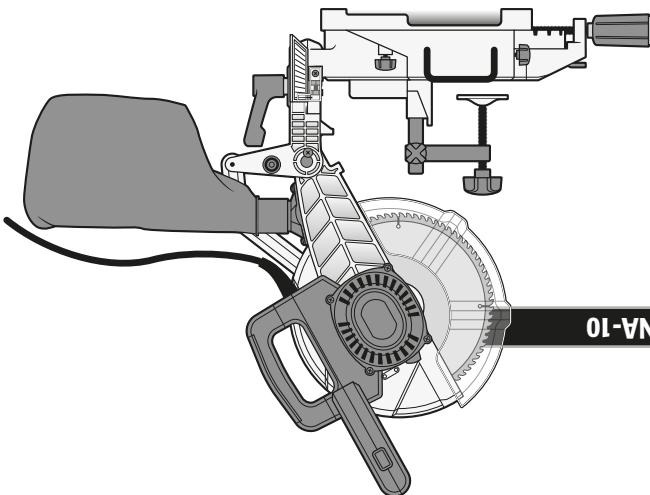

SINA-10

Para poder sacar el máximo provecho de la herramienta, la garantía su vida útil, hacer válida necesario y evitar riesgos o lesiones graves, es fundamental leer este instructivo por completo antes de usar la herramienta.

Guardé este instructivo para futuras referencias.

Los gráficos de este instrutivo son aspecos real de la herramienta.

3	Especificaciones técnicas.
3	Requerimientos eléctricos.
4	Advertencias generales de seguridad para herramientas eléctricas.
5	Advertencias de seguridad para uso de sierras estacionarias.
6	Partes.
7	Desempeño y montaje.
8	Montaje.
10	Usuarios.
12	Operación.
13	Solución de problemas.
13	Mantenimiento.
14	Notas.
15	Centros de Servicio Autorizados.
16	Poliza de Garantía.

A ATTENCIÓN

Índice






Lea este instructivo por completo
antes de usar la herramienta.

ATENCIÓN



SINA-10

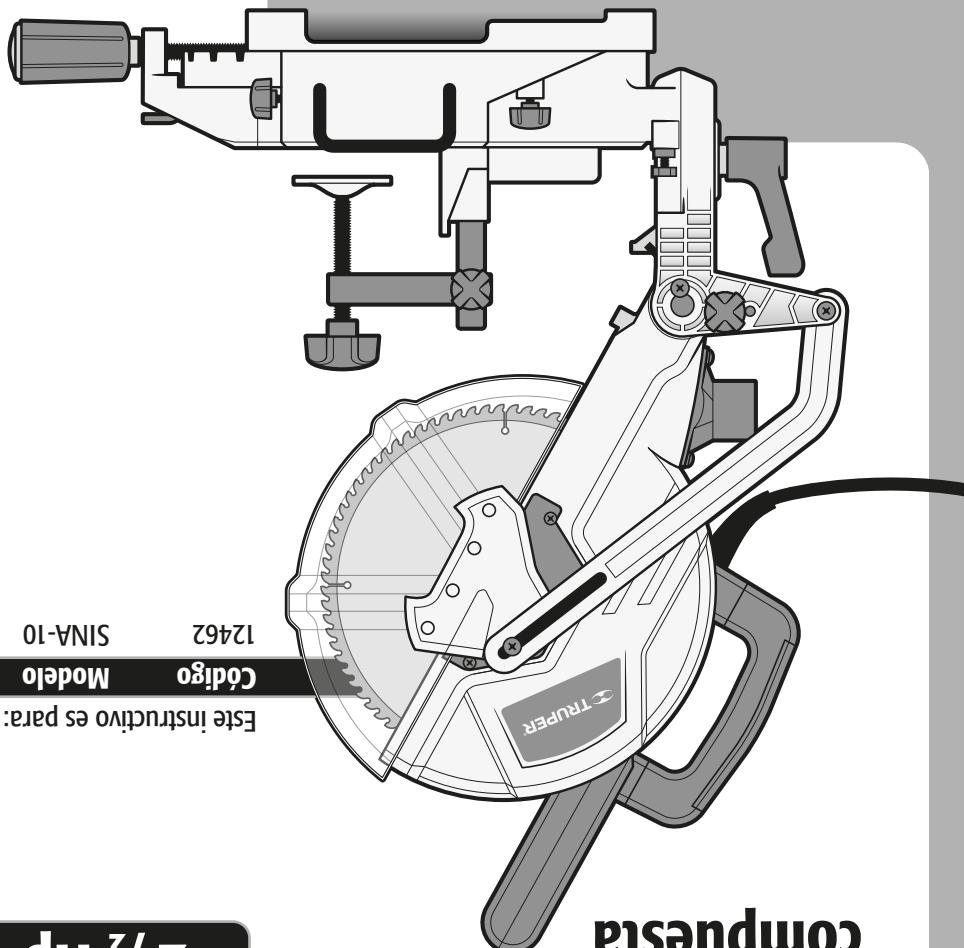

Este instructivo es para:
Modelo Módulo 12462 SINA-10

2 1/2 Hp
1900 W

Instructivo para
Sierra de inglete
compuesta

TRUPER®

ESPAÑOL
ENGLISH