


Manual

Gas Pressure Washer

4 000 PSI
Pressure

Applies for:

Code	Model
12910	LAGAS-4000

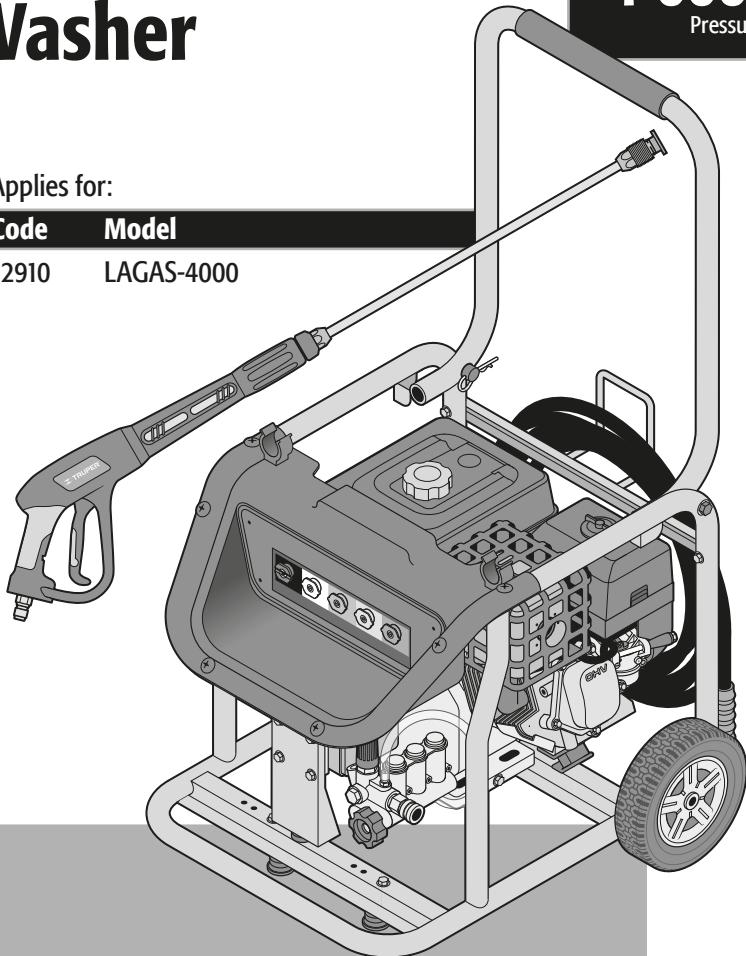

LAGAS-4000



Read the user's manual thoroughly
before operating this tool.



Technical Data	3
Fuel Specifications	3
 General Safety Warnings for Motor tools	4
 Safety Warnings for Gas Pressure Washers	5
Parts	6
Assembly	7
Fuel and Oil	8
Start Up	9
Operation	11
Maintenance	12
Troubleshooting	14
Authorized Service Centers	15
Warranty Policy	16

CAUTION

To gain the best performance of the tool, prolong the duty life, make the Warranty valid if necessary, and to avoid hazards of fatal injuries please read and understand this Manual before using the tool.

Keep this manual for future references.

The illustrations in this manual are for reference only. They might be different from the real tool.

Use and care recommendations

THIS MACHINE DOES NOT SUCK WATER FROM PONDS OR TANKS.



It must be connected to a supply outlet or an elevated tank.

DO NOT TURN THE GAS PRESSURE WASHER ON WITHOUT OIL, otherwise the engine could be damaged



 Perform periodic **MAINTENANCE** to your machine (page 12).

LAGAS-4000

Code •	12910
Description •	Gas Power Washer
Engine Capacity •	420 cc 4-stroke
Motor Rated Power •	10.5 Hp
Speed •	3 600 RPM
Type of Fuel •	Gasoline
Fuel Tank Capacity •	1.3 gal
Oil Deposit •	37.1 oz
Maximum Pressure •	4 000 PSI
Maximum Flow •	3.6 gpm
Water Flow Maximum Temperature •	104 °F
Noise Level •	86 dB

Fuel Specifications

- The equipment is built with an air-cooled 4-stroke motor using pure unleaded gasoline.
- Under any circumstance mix oil with fuel.



- ⚠ WARNING** • For any reason, do not use fuels mixed with ethylic alcohol (gasohol) ethanol, or methane. They may attract humidity causing separation and acid build up while being stored. Acidity can damage the motor fuel system when stored.
- To prevent issues with the motor drain the fuel system before storing the equipment 30 days or longer. Drain the gasoline tank. Start the engine and let it run until the fuel and carburetor lines are empty. Next time of use, use fresh gasoline.
 - Never use motor or carburetor cleansing products into the gasoline tank. Permanent damage is caused.



General safety warnings for motor tools



Keep your work area tidy and with good lighting.

CAUTION Cluttered and dark areas can cause injuries.



Never use the mixer in explosive environments or where there are flammable liquids present.

DANGER Set the mixer 30 ft. away from the fuel filling up area before starting the motor.



Keep children and passersby at a safe distance while the mixer is operating.

WARNING Distractions can make you loose control and cause accidents.



Avoid making contact with power lines and circuits.

DANGER Find and avoid all power lines and circuits, especially hidden wiring. Also keep away from grounded objects.



Stay always alert, be prudent and use common sense.

CAUTION Even tough you are familiar with the use of the mixer do not get distracted while operating the machine. It can cause accidents.

Use the right personal protection equipment.

CAUTION Using eye protection, anti-dust masks, non-skid safety shoes, helmet, hearing protection and safety gloves considerably reduce the risk of injury.



Do not operate the mixer when tired or under the influence of drugs, alcohol or medication.

DANGER A moment of distraction while operating the mixer can cause severe personal injury.

Turn off the mixer before adjusting, changing accessories or storing.

WARNING Double-check the mixer motor switch is in the OFF position.

Use the mixer with the guards and protector installed and in good repair.

WARNING Failure to comply with this warning leads to severe personal injury.

Never run the mixer if the switch is not working or is not duly assembled.

WARNING The operator is exposed to severe injury. Take it to repair immediately to a **TRUPER®** Authorized Service Center.

Never force the concrete mixer.

CAUTION Working within the range designed assures a better job and is safer.

Do not overreach.

CAUTION Good footing and balance give better control of the mixer in unexpected situations.

Store the mixer is a safe place away from the reach of children.

WARNING Motor concrete mixers are dangerous near inexperienced hands.

Prevent unintentional starting.

WARNING Double-check the mixer motor is OFF before leaving or servicing.



Wear the right clothes.

WARNING Loose clothing, jewelry or long hair can get tangled in the moving parts.

Remove any vise fixed in the mixer before starting it.

DANGER Additional tools or wrenches fixed in a rotating part in the mixer can cause severe personal injury.

Keep your hands away from the rotating or moving parts.

WARNING Failure to comply with this warning leads to severe personal injury.

Service the mixer and double-check it is in the best conditions before starting it.

CAUTION Check carefully the moving parts. See alignment and assembly. Do it periodically. Look for damaged elements or part that is not functioning correctly. Repair immediately in a **TRUPER®** Authorized Service Center.



Accessories.

CAUTION Use only accessories or spare parts indicated in this Manual o certified by **TRUPER®**.

Do not use the mixer in enclosed areas.

DANGER To prevent accumulation of carbon monoxide, an odorless toxic gas potentially deadly.

Never leave the concrete mixer running and unattended.

DANGER To prevent severe accidents turn off the mixer after operating and before setting it in a safe place.

Never smoke near fuel.

DANGER Do not smoke near the area where fuel is being supplied or when operating the mixer.



Safety warnings for Gas Pressure Washers



Fuel Handling

- Never smoke near the fuel, nor the supply area or when operating the tool.
- Reduce the risk of fire or burns. Handle fuel with care. It is extremely flammable.
- Prevent gasoline or oil come into contact with your skin.
- Protect your eyes. Prevent gasoline or oil spilling into your eyes. In case of accidental contact wash your eyes immediately with clean water. If irritation persists, visit your doctor.
- Store fuel in an approved container.

WARNING • Before refueling the tool turn off the motor, set it on clear floor and wait for the motor to cool down.

CAUTION • Wipe clean all the fuel that dripped in the tool before operating.

CAUTION • To prevent fire or burns look for fuel leaks. If there are any correct them before using the tool.
• Set the tool at least 30 feet away from the refueling site before starting the motor.
• Never ever burn spilled fuel to eliminate it.
• Under no circumstance use a different type of fuel different to the one specified in these instructions.

Before Operating the Pressure Washer

- To assure it is perfectly assembled double-check the tool is in perfect conditions. Do not start it if is not well adjusted or not fully assembled, or if the fuel tank shows leaks or loose screws.
- Double-check the tool surface is clean, dry and free of oil or fuel.
- Verify the work area is open and well ventilated.
- During extreme temperatures inspect there is no ice build-up or condensation in the tool.
- Visibility and light conditions shall be adequate. Otherwise do not operate the tool.

CAUTION • Bear in mind that pressure spraying is very powerful. It is not recommended using onto painted or wooden surfaces or on things stuck with adhesive.
• Check instructions and warnings regarding chemical products. Do not use bleach, chlorine or any other cleaning product containing acid.
• To minimize the amount of water that could enter into the pressure washer while running, set the machine as far as possible from the area about to be washed.
• Check the high-pressure hose. If damaged, please replace it immediately.
• To prevent water flow to be cut due to twisting untangle and straighten the hoses in full.

When Operating the Power Washer

WARNING • Wear eye protection.
CAUTION • Before starting the or when operating the tool verify the nozzle is not pointing towards people or animals.

- Keep all body parts away from the muffler. It produces severe burns.
- Keep the tool away from flammable materials.
- Do not try to make adjustments to the tool while the motor is running.
- Stay alert of everything around you. The tool noise could prevent you to make out hazards.
- When spraying always use both hands to gain total control over the high-pressure gun.

WARNING • Never touch the nozzle or the water jet while the machine operating.
• To allow free air circulation while the tool is running DO NOT cover the pressure washer.

CAUTION • Never aim the water jet towards the tool.
• Prevent the high-pressure hose getting tangled, make contact with sharp edges or hot surfaces, crushed or stepped on.

- Do not drag the pressure washer on top of the hoses.

After Operating the Tool

CAUTION • Always move the Tool with the motor OFF and the muffler away from the body. Before loading into the back of a vehicle empty the fuel tank.

WARNING • Turn off the motor before setting it idle. DO NOT leave the motor running unattended. Leave the tool cooling-off before storing.


CAUTION • The tool service and repairs shall only be carried out by highly trained personnel.

Assembly Recommendations

WARNING • In the event there are some parts missing, do not run the tool until they are replaced. Otherwise can cause severe personal injury.

WARNING • Do not try to modify the tool or produce accessories not recommended for this machine. Otherwise severe personal injuries can happen and makes the warranty void.

WARNING • Whenever you need to gain access to the mobile parts disconnect the spark plug cable to prevent an accidental start causing severe personal injury.

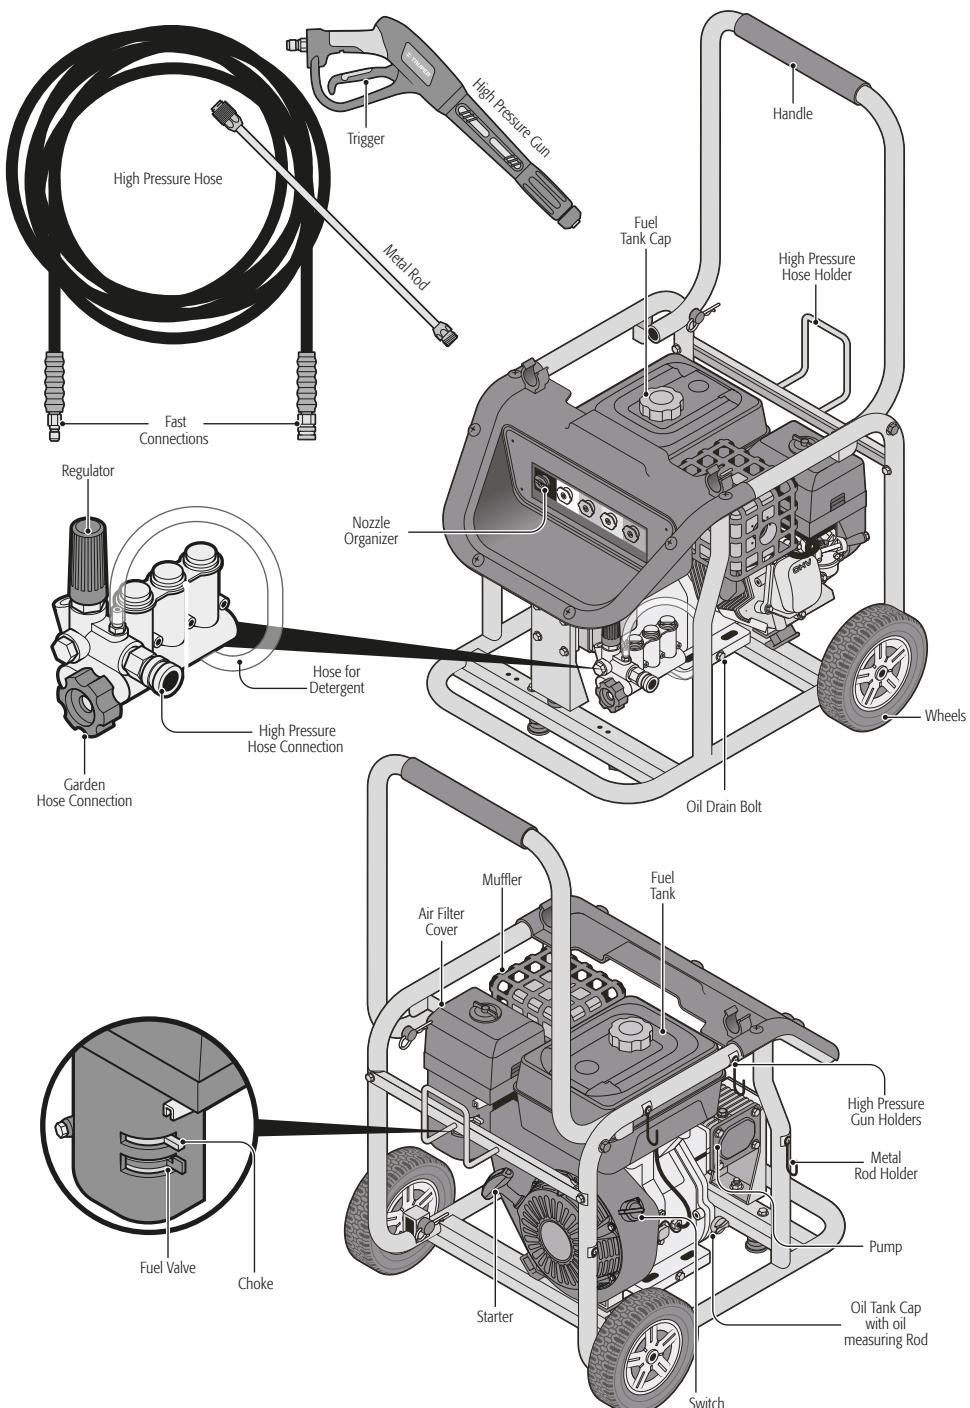



- Fix the wheels set passing the axis (**A**) through each wheel (**B**) and its respective mounting orifice (**C**) into the chassis. Secure with the pin (**D**) and the washer (**E**).
- Install the high-pressure holders and the metal rod into the chassis as shown in the figure.

- Assemble the metal rod (**F**) to the high-pressure gun (**G**) threading in a clockwise direction, the gun to the high-pressure hose (**H**) and the hose to the pump (**I**). These as fast connections.

- Close the garden hose faucet (**J**) fully. Connect the garden hose to the garden hose inlet (**K**). To connect and prevent kinking the garden hose turn the connection knob.


CAUTION • Use care no to thread the connections unevenly to prevent pressure loss.

- Once the connection is set and WITHOUT touching any nozzle (**L**) in the metal rod open all the way the garden hose faucet. Tighten the high-pressure trigger until a constant water flow is out from the metal rod. The purpose of this movement is to purge the system from air bubbles.
- If using detergent into the pressure washer, connect the detergent hose to the connection **M**.

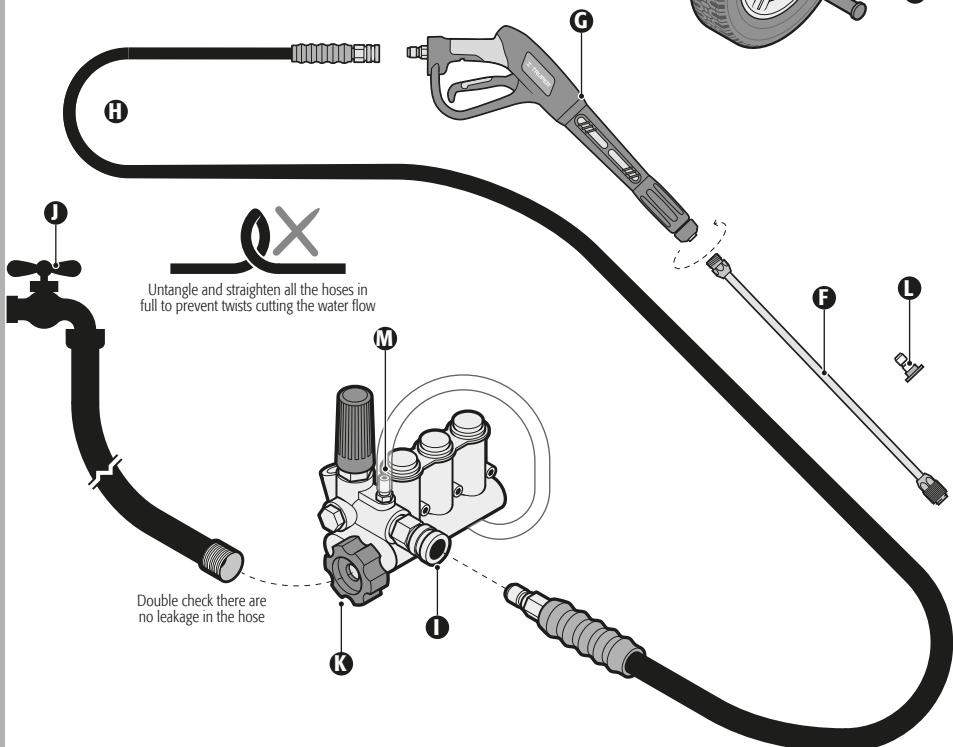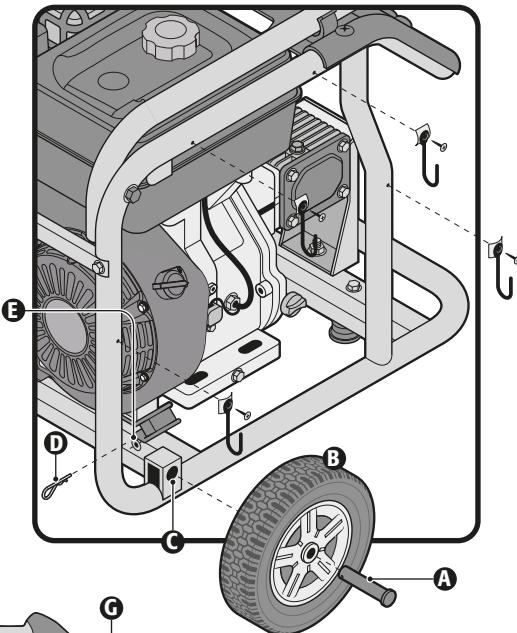

Oil Supply

- Set the Pressure Washer on a flat and leveled surface.
- Close the fuel valve (**A**).
- Turn and remove the oil cap (**B**).
- Use four-stroke motor oil. Using SAE 10W-30 oil for general use and for all temperatures. As is indicated in the following table other viscosities can be used when the average temperature in your vicinity is within the indicated range.

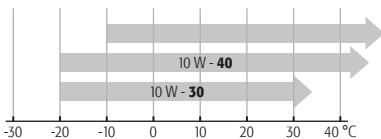


- Clean the oil measuring rod (**B**) with a clean cloth to check oil level.
 - The oil deposit has an approximate capacity of 37.1 oz Pour oil gradually and wait a couple of minutes to allow the oil to settle into the motor.
 - Insert the oil level measuring rod into the orifice and check if the oil is in the maximum level.
 - In the event the level is below the minimum level add oil until it reaches the maximum level in the rod.
- ⚠ CAUTION** • Checking oil level regularly is advisable.
- When the oil in the tank reaches the right level indicated in the rod, set the cap back (**B**) and tighten to prevent leaks.

⚠ CAUTION • Do not exceed the maximum oil level because it causes smoke coming out through the muffler que the motor stars.


⚠ CAUTION • Check oil level before each use. Add oil if necessary when it is between the limits in the oil measuring rod.

⚠ CAUTION • Replace oil after 20 hours' operation. In dusty or dirty conditions, it could be necessary changing oil more often.

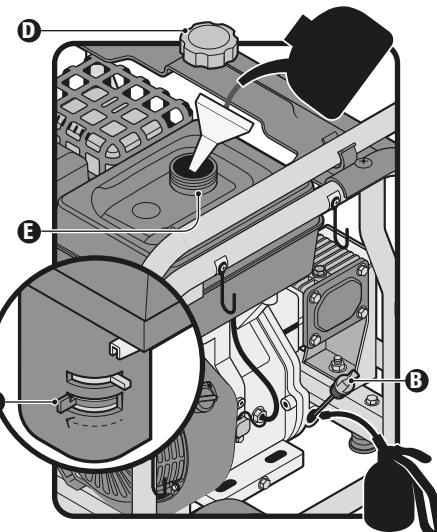

Fuel Supply

- Set the Pressure Washer on a flat and leveled surface.
- Clean and dry the area around the fuel cap.
- Remove the fuel cap (**D**).
- Using a funnel fill slowly the fuel tank up to the lower part of the tank neck. Do not overfill to allow fuel expansion and prevent spillage (**E**).
- Clean any fuel spills.
- Cover the tank rotating the cap until hearing a click.
- Clean any spilled fuel before starting up.

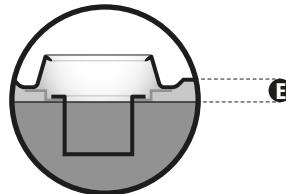


Switch ON

CAUTION Before starting the gas pressure washer please pay attention to the following. Failure to comply with this note could damage the machine and make the warranty void:

- All the hoses shall be connected, completely untangled and not presenting kinks.
- Water supply shall be connected and fully open.
- Gasoline and oil levels shall be the correct ones.
- The system shall be purged out of air bubbles. (see page 7).

- Open the fuel valve (**E**).
- Switch it on (**F**).
- Move the choke lever to the "START" position (**G1**).
- Move the throttle lever (**I**) to the left, to the high-speed position.
- Pull the jack-line (**H**) until the motor starts but no more than 6 times. Whenever pulling the jack-line release it gently into its original position. Do not allow it to snap back.
- After the motor runs a couple of seconds. Then move the choker lever into the "RUNNING" position (**G2**).

CAUTION • In case the motor is not starting after pulling out the jack-line, tighten the high-pressure gun trigger to release water pressure before trying to start the motor again.

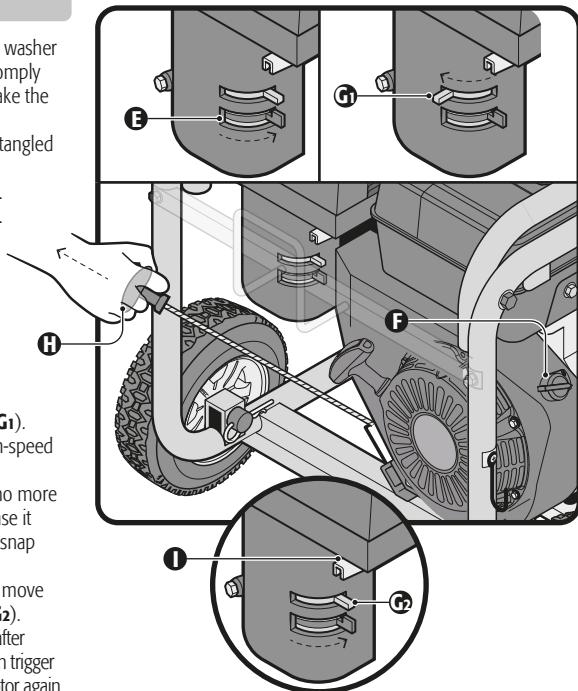


Switch OFF

- Release the gun trigger to stop the pressure jet.
- Move the accelerator lever (**I**) to the right into the low speed position.
- Switch off the switch.
- Close the fuel valve.
- Close the garden hose faucet.
- Press the high-pressure gun trigger to release pressure.

High Pressure Gun Operation

- To open the water flow keep the high-pressure trigger (**A**) depressed.
- To stop the water flow release the trigger.
- To prevent accidentally starting the machine separate the trigger lock until it is blocked in the slot (**B**). To release the lock turn it to its original position.

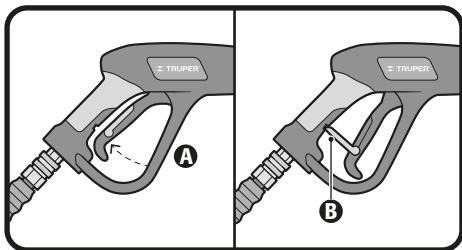

Nozzle Selection

- Depending on the job to carry out, the gas pressure washer carries different nozzles for different flow openings:

Nozzle	Flow	Abrasion	Cement, Brick, Masonry	Exteriors, Hedges, Patios, Terraces	Boats, RV's, Gardening Gear
Red	0°		✓		
Yellow	15°		✓	✓	✓
Green	25°		✓	✓	✓
White	40°		✓	✓	✓
Black	soap		✓	✓	✓

✓ Recommended Nozzle


✓ Use with Caution

Spray Nozzle Assembly

CAUTION • Before assembling or removing a nozzle in the metal rod, turn off the Pressure Washer, close the water supply, press the trigger to release the pressure and lift the gun trigger lock. Failure to comply with one of these points exposes the operator to severe injury.

CAUTION • When assembling and removing nozzles prevent from pointing the metal rod towards your face. The nozzles fast connection system could accidentally throw it and injure the operator.

- To assemble the nozzles push the fast connection ring (**J**).
- Set the nozzle in the metal rod.
- Pull the fast connection ring to secure the nozzle in place (**K**).
- To disassemble the nozzle, push the fast connection ring and pull the nozzle to release it.

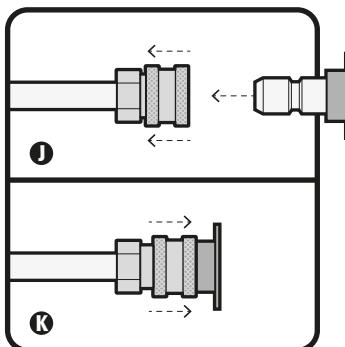

Use of Detergent

- The Pressure Washer is built to use detergents specified for "descending flow" gas pressure washers.

CAUTION • Use only detergents designed for gas pressure washers. Household detergents, acid, alkaline, bleach, solvent flammable or industrial grade solutions can damage the pump. Many detergents call for mixing before using. Prepare the mix following the instructions in the bottle. Always test in a less noticeable area before starting to pressure wash.

- Connect the detergent hose as indicated in page 7.
- Remove the detergent container cap and insert the detergent hose end with the container filter.

NOTE The gas pressure washer uses a 20:1 proportion of detergent. It usually is a 1 gallon undiluted detergent. See the instruction in your detergent to verify if is necessary to make an additional dilution.

- Set the detergent nozzle (black) in the spraying pipe.
- Press the trigger and wait approximately 5 seconds for the detergent to start being sprayed.
- Spray the detergent in a dry surface using long, uniform and overlapped passes. To prevent stripes to appear, do not leave the detergent drying in the surface.
- After spraying detergent in the work surface and before rinsing, set the end of the detergent hose with the filter into a bucket with clean water and expel the water with the high-pressure gun during two minutes to remove from the system all the detergent residues.
- Turn off the motor and press the trigger to pressure-purge the water.

Moving the Gas Pressure Washer

CAUTION • Never use the handle to lift the gas pressure washer. Never set the unit in a position other than vertical and sitting on its wheels.

- Turn off the gas pressure washer.
- Tilt the unit towards you until is balanced on its wheels. Then, push it to the desired position. Do not tilt forward or sideways while moving it.

CAUTION • DO NOT try to move the unit pulling from either of the hoses.

High Altitude Operation

• At high altitude the air fuel mix in the standard carburetor will be rich in fuel. Performance will be lower and fuel consumption will increase.

• Performance while in a high altitude can be increased if the carburetor is regulated adjusting the main knob. The equipment is set to operate at heights above 6000 feet above sea level. If the tool is not working efficiently call a **TRUPER®** Authorized Service Center to have them carry out modification in the carburetor.

• Even though the carburetor has an adequate injection the potency in the motor will decrease 3.5% approximately per each 1 000 feet increment, after 6890 feet above sea level. Decrease in potency will be higher if there are no modifications in the carburetor.

WARNING • If the equipment is operated in a height that is inadequate to the carburetor setting, low performance, over-heating and severe damage to the motor caused by the excessive air mix in the fuel may be obtained

Rinsing

- Remove the detergent nozzle and replace it with the high-pressure nozzle most suitable for the job.
- CAUTION** Follow the nozzle assembly and removal instructions and how to select the most adequate nozzle in page 10.
- Remove the detergent hose from the gas pressure washer.
- Start rinsing from the upper side of the work area. Use side-to side passes, overlapping each pass up and down.

CAUTION • Use only  **TRUPER®** original spare parts.

CAUTION • When servicing or repairing the Pressure Washer use eye protection complying with ANSI Z87.1.

CAUTION • Before servicing the Pressure Washer, shut off water supply, shut off the motor, press the trigger to release pressure, disconnect all the hoses, disconnect the spark plug cable and set it apart.

• Failure to comply with any of the previous points exposes the operator to severe injury or damage the Pressure Washer thus making the warranty void.

General Maintenance

- Use a clean cloth to remove dirt, dust, oil or grease from the unit. **CAUTION** Refrain from using detergent when cleaning the plastic parts. Use care not to make contact of the plastic parts with fluid like brake fluid, gasoline, other petroleum-based products, penetrating oils, etc. Otherwise the plastic could damage, it would alter the unit operation and expose the operator to severe injury.
- Periodically double-check the bolts, nuts and screws to be firmly tightened.
- Periodically check the filter to make sure is clean.
- Verify oil and fuel levels to fill up when necessary.
- Check the jack-line. If frayed, replace it immediately in a  **TRUPER®** Authorized Service Center.

Nozzle Cleansing

- Nozzles can get partially obstructed due to residues, thus increasing pressure in the high-pressure gun. This issue can be detected if there is constant pulsating when pressing the trigger.
- To solve this issue turn off the Pressure Washer and remove the nozzle as indicated in page 10.
- Using a paper clip, remove the obstruction from the nozzle.
- Set the nozzle in the front end of the garden hose. Open the faucet so that the water flow goes through the nozzle in an inverse sense and releases the rest of dirt.
- Connect back the nozzle into the metal spear.

Air Filter Cleansing

- Check the air filter once a month to make sure it is in good repair. Remember, a dirty filter can cause trouble when the motor is started, loss of performance and shorten the useful life of the motor.
- Uncover the air filter cover loosening and removing the wing nut.
- Using a damp cloth clean inside and out the filter cover. Do not allow dust to enter into the carburetor.

- Remove the sponge air filter and rinse it with clean water.
- Press the filter lightly to remove the excessive water.
- Apply a thin layer of motor oil to the filter. Let it drip.
- Set the filter in place. Double-check it sits perfectly into the compartment. Otherwise, dust will enter the motor and cause premature wear.
- Set the filter cover back in place. Tighten the wing nut.

Oil Change

- Set an approved oil container under the unit.
- Uncover the oil tank inlets and remove the hex screw in the lower side of the motor. Drain the oil into the container.
- Before filling up again, set and tighten the hex screw and follow instructions in page 8.

Spark Plug Maintenance

- Before removing the spark plug clean the area around the spark plug base to stop dust or debris enter into the motor. Remove the spark plug.
 - Clean the carbon deposits from the spark plug electrodes. Use a spark plug cleaner or a wire brush.
 - If you find the old one is worn or using it again is doubtful replace the spark plug using an identical LG FRTC spare plug.
 - Verify the gap between electrodes. It shall be 0,027" to 0,031". If necessary, adjust the gap by carefully bending the earth connection electrode.
 - Verify the spark plug joint.
 - Set the spark plug in place. Thread it and tighten by hand.
 - Tighten with a wrench to compress the washer. If it is a new spark plug, give it a 1/2 turn to press the washer in an adequate manner. If using an old spark plug give it an 1/8 to 1/4 turn to compress the washer properly.
- CAUTION** Use care to adjust the spark plug correctly. Otherwise the motor can get too hot and get damaged.

Pump Maintenance

- Make a visual inspection of the pump every day. If noticing oil loss around the pump seals, take the Pressure Washer to a  **TRUPER®** Authorized Service Center to be repaired.
- Do not try to repair or alter the pump. Otherwise the Pump Washer could get damaged and the warranty will be void.

Maintenance

Long Term Storage

- Connect and open the water supply. Keep the unit running until running out of fuel. Remember, gasoline gets spoiled after 30 days even with the recommended stabilizer.
- After all the fuel is gone and the motor stops, turn off the switch and disconnect all the hoses, see they are empty and roll without twisting while the motor cools off (approximately 30 minutes).
- Empty the pump. Pull the manual start jack-line handle 6 times approximately.
- Replace oil as indicated in page 12.
- Disconnect the spark plug and remove it. Pour less than a spoonful of 4-stroke clean motor oil through the spark plug orifice, into the combustion chamber.
- Having the spark plug removed pull the manual start jack-line two or three times to cover the insides of the cylinder wall.
- Service the plug before installing it back as indicated in page 12. Leave the spark plug cable disconnected.
- Clean the air filter as indicated in page 12.

- Store the unit and accessories in an area under a roof, well ventilated and protected from freezing temperatures. Using an adequate cover is recommended if stored in low temperatures. Do not store it near furnaces or other heat sources because it makes the pump seals dry.

Using the Unit After Long Term Storage

- Pull the start jack-line three to four times to clean the oil from the combustion chamber.
- Remove the spark plug from the cylinder. Clean the oil in the spark plug and set it back into the cylinder.
- Connect the spark plug cable.
- Fill up as indicated in page 8.

Periodic Maintenance	Before each use	Every 20 h	Every 50 h	Every 100 h	Every 300 h
General Overview	✓				
Oil Inspection	✓				
Oil Change		✓			
Water Filter Inspection	✓				
Pump Oil Change	✓				
Cleaning Spark Plug				✓	
Cleaning Air Filter	✓				
Replace air filter				✓	
Adjust spark Plug Electrodes				✓	
Replace Spark Plug				✓	
Verify and Adjust Valve*					✓

* Go to a  **TRUPER**® Authorized Service Center for this Service.

Troubleshooting

Problem	Cause	Solution
The motor will not start.	<ul style="list-style-type: none">No fuel.Water Pressure in the hose.Defective or inadequate spark plug.Disconnected or damaged spark plug cable.Ignition system is not working.	<ul style="list-style-type: none">Fill up the fuel tank.Press the trigger to release water pressure before starting the motor.Replace spark plug.Connect the cable or replace if worn.Go to a  TRUPER® Authorized Service Center.
Trouble starting the motor.	<ul style="list-style-type: none">There is water in the gasoline.Weak spark in the spark plug.	<ul style="list-style-type: none">Drain the whole system and refill with new fuel.Go to a  TRUPER® Authorized Service Center.
There will not power in the engine.	<ul style="list-style-type: none">The air filter is dirty.	<ul style="list-style-type: none">Clean or replace the air filter.
Detergent is not mixing in the spray.	<ul style="list-style-type: none">The detergent hose end is not submerged into the detergent.A high-pressure nozzle is installed.	<ul style="list-style-type: none">Submerge the whole detergent hose filter into the detergent container.Use the black nozzle to apply detergent.
The pump will not generate pressure.	<ul style="list-style-type: none">The detergent nozzle is installed.Water supply is inadequate.Wrong hose and high-pressure gun connection.Clogged nozzle.Air in the hoses.Leaks in the hose.Twisted hose.Choke in the start position.Defective pump.	<ul style="list-style-type: none">Replace the nozzle with a high-pressure nozzle.Connect adequately the garden hose to the Pressure Washer and open the water supply all the way.Verify and correct all the connections.Undog the nozzle as indicated in page 11.Press the trigger to purge the air from the system.Replace the hose.Stretch, untangle and untwist the hose.Set the choke in the Gear position.Go to a  TRUPER® Authorized Service Center.
The unit will not reach high pressure.	<ul style="list-style-type: none">The garden hose diameter is too small.Water supply is restricted.There is not enough water inlet.The detergent nozzle is installed.	<ul style="list-style-type: none">Replace the hose. Use a 3/4"Double-check the garden hose to stretch bends, leaks or blockage.Open the water supply all the way.Replace the nozzle. Use a high-pressure nozzle.

Authorized Service Centers



In the event of any problem contacting a **TRUPER®** Authorized Service Center, please see our webpage www.truper.com to get an updated list, or call our toll-free numbers **800 690-6990** or **800 018-7873** to get information about the nearest Service Center.

AGUASCALIENTES	DE TODO PARA LA CONSTRUCCIÓN GRAL. BARRAGÁN #1201, COL. GREMIAL, C.P. 20030, AGUASCALIENTES, AGS. TEL.: 449 994 0537	MORELOS	FIX FERRETERÍAS CAPITÁN ANZURES #95, ESQ. JOSÉ PERDIZ, COL. CENTRO, C.P. 62740, CUAUTLA, MOR. TEL.: 735 352 8931
BAJA CALIFORNIA	SUCRAL Tijuana AV. LA ENCANTADA, LOTE #5, PARQUE INDUSTRIAL EL FLORIDO II, C.P. 22244, TIJUANA, B.C. TEL.: 664 969 5100	NAYARIT	HERRAMIENTAS DE TEPIK MAZATLÁN #117, COL. CENTRO, C.P. 63000, TEPIK, NAY. TEL.: 311 258 0540
BAJA CALIFORNIA SUR	FIX FERRETERÍAS FELIPE ÁNGELES ESQ. RUIZ CORTÍNEZ S/N, COL. PUEBLO NUEVO, C.P. 23670, CD. CONSTITUCIÓN, B.C.S. TEL.: 613 132 1115	NUEVO LEÓN	SUCRAL MONTERREY CARRETERA LAREDO #300, 1B MONTERREY PARKS, COLONIA PUERTA DE ANÁHUAC, C.P. 66052, ESCOBEDO, NUEVO LEÓN, TEL.: 81 8532 8791 / 81 8532 8790
CAMPECHE	TORNILLERÍA Y FERRETERÍA AAA AV. ALVARO OBREGÓN #524, COL. ESPERANZA C.P. 24080 CAMPECHE, CAMP. TEL.: 981 815 2808	OAXACA	FIX FERRETERÍAS AV. 20 DE NOVIEMBRE #910, COL. CENTRO, C.P. 68300, TUXTEPEC, OAX. TEL.: 287 106 3092
CHIAPAS	FIX FERRETERÍAS AV. CENTRAL SUR #27, COL. CENTRO, C.P. 30700, TAPACHULA, CHIS. TEL.: 962 118 4083	PUEBLA	SUCRAL PUEBLA AV. PERIFÉRICO #2-A, SAN LORENZO ALMECATLA, C.P. 72710, CUAUTLACINGO, PUE. TEL.: 222 282 8282 / 84 / 85 / 86
CHIHUAHUA	SUCRAL CHIHUAHUA AV. SILVESTRE TERRAZAS #121-11, PARQUE INDUSTRIAL BAFAR, CARRETERA MÉXICO CIUAHTEMÓC, C.P. 31415, CHIHUAHUA, CHIH. TEL. 614 434 0052	QUERÉTARO	ARU HERRAMIENTAS S.A. DE C.V. AV. PUERTO DE VERACRUZ #110, COL. RANCHO DE ENMEDIO, C.P. 76842, SAN JUAN DEL RÍO, QRO. TEL.: 427 268 4544
CIUDAD DE MÉXICO	FIX FERRETERÍAS EL MONSTRUO DE CORREDIGORA, CORREDIGORA # 22, COL. CENTRO, C.P. 06060, CIUAHTEMÓC, CDMX. TEL.: 55 5522 5031 / 5522 4861	QUINTANA ROO	FIX FERRETERÍAS CARRETERA FEDERAL MZ. 46 LT. 3 LOCAL 2, COL. EJIDAL, C.P. 77110 PLAYA DEL CARMEN, Q.R. TEL.: 984 267 3140
COAHUILA	SUCRAL TORRÉON CALLE METAL MECÁNICA #280, PARQUE INDUSTRIAL ORIENTE, C.P. 27278, TORRÉON, COAH. TEL.: 871 209 68 23	SAN LUIS POTOSÍ	FIX FERRETERÍAS AV. UNIVERSIDAD #1850, COL. EL PASEO, C.P. 78320, SAN LUIS POTOSÍ, S.L.P. TEL.: 444 822 4341
COLIMA	BOMBAS Y MOTORES BYMTESA DE MANZANILLO BLVD. MIGUEL DE LA MADRID #190, COL. 16 DE SEPTIEMBRE, C.P. 28239, MANZANILLO, COL. TEL.: 314 332 1986 / 332 8013	SINALOA	SUCRAL CULIACÁN AV. JESÚS KUMATE SUR #4301, COL. HACIENDA DE LA MORA, C.P. 80143, CULIACÁN, SIN. TEL.: 667 173 9139 / 173 8400
DURANGO	TORNILLOS ÁGUILA, S.A. DE C.V. MAZURIÓ #200, COL. LÍO. ECHEVERRÍA, DURANGO, DGO. TEL.: 618 817 1946 / 618 818 2844	SONORA	FIX FERRETERÍAS CALLE 5 DE FEBRERO #517, SUR LT. 25 MZ. 10, COL. CENTRO, C.P. 85000, CD. OBREGÓN, SON. TEL.: 644 413 2392
ESTADO DE MÉXICO	SUCRAL CENTRO JILOTEPEC PARQUE INDUSTRIAL # 1, COL. PARQUE INDUSTRIAL JILOTEPEC, JILOTEPEC, EDO. DE MÉX. C.P. 54257 TEL.: 761 782 9101 EXT. 5728 Y 5102	TABASCO	SUCRAL VILLAHERMOSA CALLE HELIO LOTES 1, 2 Y 3 MZ. #1, COL. INDUSTRIAL, 2A ETAPA, C.P. 86010, VILLAHERMOSA, TAB. TEL.: 993 353 7244
GUANAJUATO	CÍA. FERRETERA NUEVO MUNDO S.A. DE C.V. AV. MÉXICO - JAPÓN #225, CD. INDUSTRIAL, C.P. 38010, CELAYA, GTO. TEL.: 461 71578 / 79 / 80 / 88	TAMAULIPAS	VM ORINGS Y REPARACIONES CALLE ROSITA #527 ENTRE 20 DE NOVIEMBRE Y GRAL. RODRÍGUEZ, FRACC. REYNOSA, C.P. 87870, REYNOSA, TAMS. TEL.: 899 926 7552
GUERRERO	CENTRO DE SERVICIO ECLIPSE CALLE PRINCIPAL MZ.II LT. 1, COL. SANTA FE, C.P. 39100, CHILPANCINGO, GRO. TEL.: 747 478 5793	TLAXCALA	SERVICIOS Y HERRAMIENTAS INDUSTRIALES PABLO SIDAR #132, COL. BARRIO DE SAN BARTOLOMÉ, C.P. 90970, SAN PABLO DEL MONTE, TLAX. TEL.: 222 271 7502
HIDALGO	FERREPRECIOS S.A. DE C.V. LIBERTAD ORIENTE #304 LOCAL 30, INTERIOR DE PASAJE ROBLEDO, COL. CENTRO, C.P. 43600, TULANCINGO, HGO. TEL.: 775 753 6615 / 775 753 6616	VERACRUZ	LA CASA DISTRIBUIDORA TRUPER BLVD. PRIMAVERA ESQ. HORTENSIA S/N, COL. PRIMAVERA, C.P. 93308, POZA RICA, VER. TEL.: 782 823 8100 / 826 8484
JALISCO	SUCRAL GUADALAJARA AV. ADOLFO B. HORN # 6800, COL: SANTA CRUZ DEL VALLE, C.P.: 45655, TLAJOMULCO DE ZUÑÍA, JAL. TEL.: 33 3606 5285 AL 90	YUCATÁN	SUCRAL MÉRIDA CALLE 33 #600 Y 602, LOCALIDAD ITZINCAB Y MULSAY, MPIO. UMAN, C.P. 97390, MÉRIDA, YUC. TEL.: 999 912 2451
MICHOACÁN	FIX FERRETERÍAS AV. PASEO DE LA REPÚBLICA #3140-A, COL. EX-HACIENDA DE LA FUERTA, C.P. 58050, MORELIA, MICH. TEL.: 443 334 6858		

Code	Model	Brand
12910	LAGAS-4000	 TRUPER®

This product is guaranteed for 1 year. To make the warranty valid or purchase parts and components you must present the product in Corregidora 22, Col. Centro, Alc. Cuauhtémoc, CDMX C.P. 06060 or at the establishment where you purchased it, or at any Truper® Service Center listed in the annex to the warranty policy and/or in www.truper.com. Transportation costs resulting from compliance of this warranty will be covered by .

For questions or comments, call **800-690-6990**. Made in China. Imported by Truper S.A. de C.V. Parque Industrial 1, Parque Industrial Jilotepec, Jilotepec, Edo. de Méx. C.P. 54257



1
YEAR

Stamp of the business. Date of purchase:

Sellos del establecimiento comercial. Fecha de compra:

Este producto es la garantía de que la impresión quedará perfecta en cada una de las páginas. La impresión se basa en la calidad de los componentes y la precisión de la impresora.

Presentar el producto en Coreografía 22, Col. Centro, Alc. Cuauhtémoc, CDMX CP. 06060 o en el establecimiento donde lo compró, o en la oficina de Servicio Técnico de la empresa que realizó la impresión para su cumplimiento.

Será cobrado el importe por **TURPEL**.

Para dudas o comentarios, llame al 800-690-6990. Hecho en China. Importado por Turpel S.A. de C.V. Parque Industrial 1, Parque Industrial Jilotepéc, Jilotepéc, Edo. de Méx. CP. 54257

Código
Modelo
Marca
12910
LAGS-4000
TRUPER.



ANO

**Garantía
Poliza de**

TRUPEER®

Un período largo de almacenamiento

Almacenamiento por períodos largos

Mantenimiento

Mantenimiento Periodico	Cada uso	Antes de cada uso	Cada 20 h	Cada 50 h	Cada 100 h	Cada 300 h
Revisión general						
Inspección de aceite						
Cambio de aceite						
Inspección del filtro de entrada de agua						
Agregador protector para bombas						
Limpieza del filtro de agua						
Reemplazo del filtro de aire						
Ajuste de electrodomésticos de la bomba						
Cambio de bomba						
Ventilación y ajuste de la válvula*						

- Debe la cámara de combustión.
- La bujía debe ser de tipo resistente al calor.
- Debe descomponerse a la temperatura de la bujía.
- Debe descomponerse a la temperatura de la bujía antes de instalarla como recubrimiento interno del cilindro.
- Debe descomponerse a la temperatura de la bujía antes de instalarla como recubrimiento interno del cilindro.

- Con el suministro de agua conectado y abierto mantenga enfriada la unidad hasta que el combustible. Recuerde que la gasolina puede echarse a perder en 30 días incluso con el estabilizador.
 - Despues de que el combustible se consuma y el motor se detenga apague el interruptor y desconecte todos los mangos, vacíos y tubos de motor se enfría por completo.
 - Despues de que el combustible se consuma y el motor se detenga apague el interruptor y desconecte todos los mangos, vacíos y tubos de motor se enfría por completo.
 - Cambie de aceite como se indica en la página 12.
 - Descuelgue el cable de la bujía y retírela. Vuelta poco a poco la bomba triángulo de la placa seis veces para comprobar si el motor arranca.
 - Desconecte el cable de la bujía y retirela. Vuelta poco a poco la bomba triángulo de la placa seis veces para comprobar si el motor arranca.

Mantenimiento de la bomba

- Verifique la condición de la juntura de la bomba.
 - Vuelva a instalar la bomba. Asegure en su lugar la bomba.
 - Enrosquela y apriétela manualmente.
 - Quite con una llave para compimir la arandela de la bomba.
 - Quite la arandela de la bomba.
 - Quite la bomba.
 - Realice una inspección visual de la bomba. Si adverte que una pérdida de lubricante aparece de los sellos de la bomba, quite la bomba y realice el servicio.
 - No intente reparar o alterar la bomba. De lo contrario se dañará la bomba.
 - Autrizado **TRUPER**. Para que le preparen.
 - No intente reparar o alterar la bomba y realice su garantía.

- Coloque debajo de la unidad para acelerar.
- Desplace las entradas del depósito para que el aceite fluya directamente al tanque.
- Para que el aceite fluya directamente al tanque, coloque debajo de la unidad para acelerar.
- Antes de llenar el aceite nuevo el tanque.
- Apriete el tornillo de la tapa de la baseza y apriete el tornillo de la tapa de la baseza.
- Instale las instrucciones de la página 8.

Cambio de aceite

- Coloque el filtro nuevo en la cubierta del filtro y presione el permuttero que permite que el polvo entre al filtro.
 - Coloque la tapa húmeda limpia por dentro y por fuera la cubierta del filtro de aire, no permita que entre polvo al cubreto.
 - Coloque el filtro de aire y equínguelo con agua limpia.
 - Quite la sujeción del filtro hasta quitar el exceso de agua.
 - Aplique una capa delgada de aceite de motor al filtro y luego asérralo.
 - Coloque el filtro en su lugar, asegurándose que esté bien centrado en el compartimiento, de lo contrario el polvo puede entrar al motor, causando un desgaste prematuro del mismo.
 - Coloque el nuevo en la cubierta del filtro y presione el permuttero que permite que el polvo entre al filtro.
 - Coloque la tapa húmeda limpia por dentro y por fuera la cubierta del filtro de aire, no permita que entre polvo al cubreto.


Mantenimiento

Limpieza del filtro de aire

- Las bocanillas pueden llegar a obstruirse parcialmente por algodón enredado, lo que incrementaría la presión en la percluta de una presa. Esto puede ser detectado si se percibe una pulsación constante al separar el gatillo.
 - Para solucionar ese problema se aplica la hidrocorona y retira la bocanilla como se indica en la página 10.
 - Con ayuda de un clip retira la obstrucción de la bocanilla. Y manipula la bocanilla de nuevo para que el agua fluya a través de la bocanilla en sentido inverso y libere los restos de suciedad.
 - Conecte de nuevo la boquilla al tubo rociador.
 - Revise mensualmente el filtro de aire para asegurarse de que esté en buenas condiciones. Recuerde que un filtro rendimiento y acortará la vida útil del motor.
 - Destape la cajuela del filtro del aire si lo hace.

Limpieza de las Bodas

Mantenimiento general

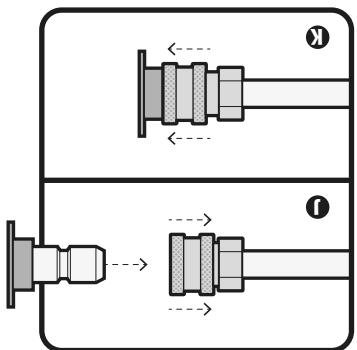


- Para desmontar la boquilla se la suelta para liberar el collar de conexión rápidamente.
- Para montar una boquilla se la suelta para asegurar la boquilla en su lugar (K).
- Introduzca la boquilla en la lancea metálica.
- Para montar una boquilla se la suelta empuje el collar de conexión rápidamente.
- Para sujetar la boquilla en la lancea metálica desmontar las boquillas la lancea metálica rápidamente sujetando a su vez, el sistema de conexión rápidamente para producir una lesión.
- Para sujetar la boquilla en la lancea metálica desmontar las boquillas la lancea metálica rápidamente para sujetar la boquilla en la lancea metálica rápidamente.

A ATENCIÓN • No permita que al montar o

desmontar las boquillas la lancea metálica apague la hidrolavadora.


• Antes de montar o desmontar una boquilla en la lancea metálica apague la hidrolavadora. Cierre el suministro de agua, optima el gatillo para liberar la presión y suba la lancea metálica para bloquear el gatillo. De modo similar con alguno de estos puntos se expone una lesión grave.

Montaje de las boquillas

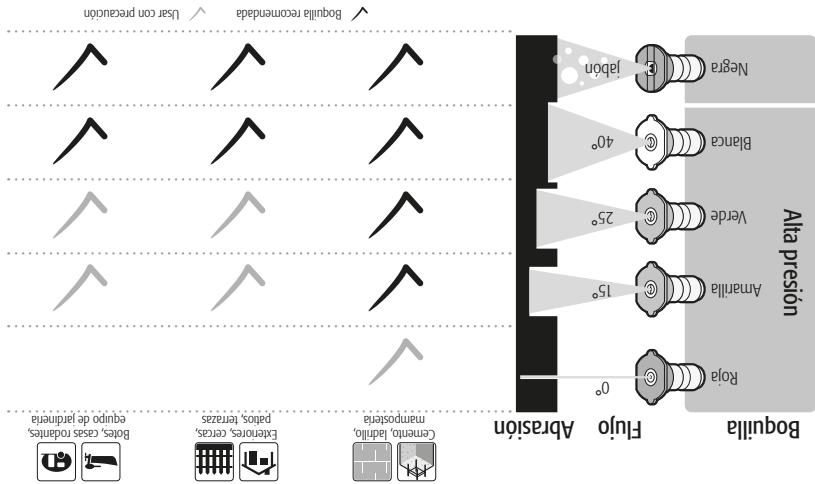

- La hidrolavadora cuenta con diferentes boquillas para distintas aperturas de flujo dependiendo del trabajo a realizar:

Selección de las boquillas

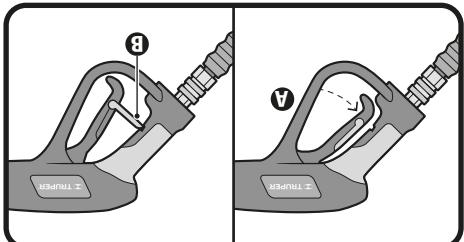


- Para evitar encendidos accidentales separar el seguro del gatillo hasta dejarlo bloqueado en la ranura (B). Para soltar el seguro regreselo a su posición original.
- Para detener el chorro de agua sujetar el gatillo.
- Para bajar el chorro de agua mantenga apretado el gatillo de la pistola de alta presión (A).
- Para bajar el chorro de agua mantenga apretado el gatillo de la pistola de alta presión (A).

Operación de la pistola de alta presión

Puesta en marcha

CTRUPER®

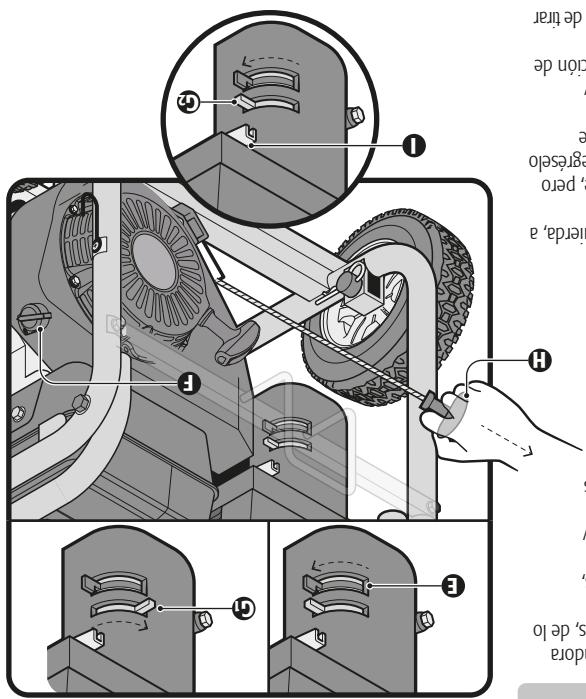


- Liberar la presión de la pistola para detener el chorro a presión.
- Mueva la palanca del acelerador (I) hacia la derecha, a la posición de baja velocidad.
- Apague el interruptor.
- Cierre la válvula de combustible.
- Cierre el suministro de agua.
- Apriete el gatillo de la pistola de alta presión para liberar la presión.

Apagado

- Si el motor no arranca después de tirar "Marcha" (G2), despresione la palanca del acelerador a la posición de marcha con fuerza.
- Permite que el motor funcione unos segundos y despresione con fuerza.
 - Tire de la pista (H) hasta que el motor arranque, pero suavemente a su posición original, no permita que el motor se detenga más de 6 veces. Siempre tire de la pista rápidamente, pero sin soltarla.
 - Mueva la palanca del acelerador (I) hacia la izquierda, a la posición de alta velocidad.
 - Mueva la palanca del acelerador (I) hacia la izquierda, a la posición de alta velocidad.
 - Apriete el interruptor (F).
 - Encienda la válvula de combustible (E).
 - Abra la válvula de combustible (E).

- Los niveles de gasolina y aceite deben de ser los correctos.
- Los niveles de aceite deben de ser purgados de cada pieza.
 - El sistema debe de ser purgado de cada pieza.
 - Los niveles de aceite deben de ser los correctos.
 - El sistema de agua debe de estar conectado y completamente desatendido y sin torceduras.
 - Todas las mangüeras deben de estar conectadas, controlando posibles fugas y garantizando que las mangüeras drenen el exceso de agua.
 - Es indispensable cumplir con los siguientes puntos, de lo contrario podría dañarla la garantía:

Encendido

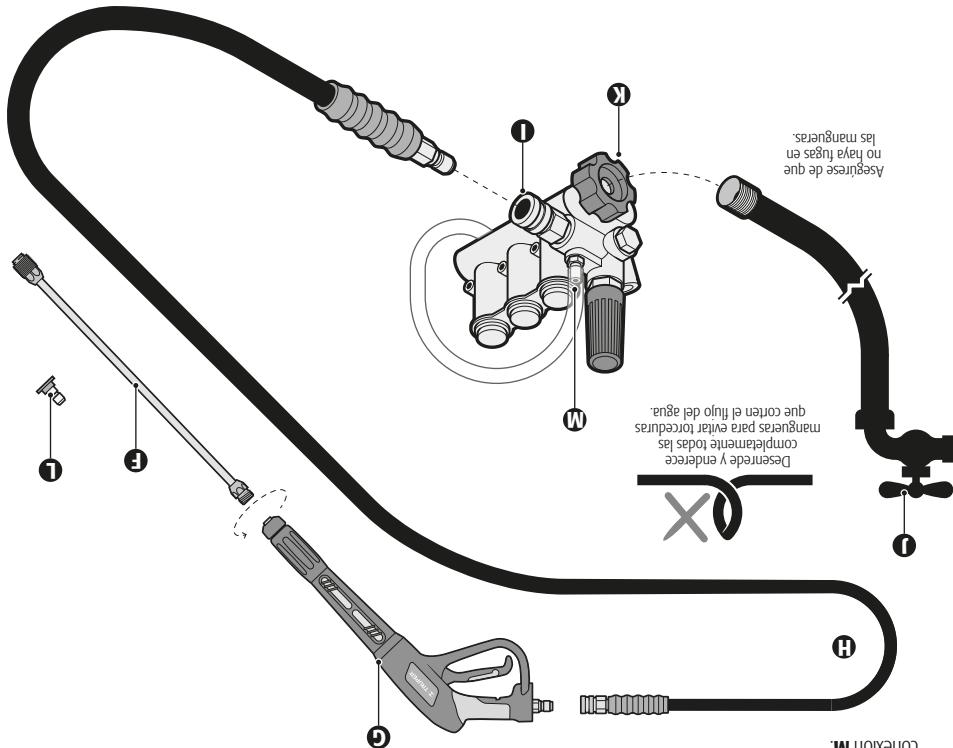



• Si va a utilizar detergente líquido para el lavado de la hidrolavadora, conecte la manguera de detergente a la conexión M.

- Si va a utilizar detergente para el trabajo de la

- Una vez hechas las conexiones S/N colocar un lingua bocagilla (L) en la lanza metálica, para por completo la toma de aguja de la manguera de jardín. Apretar el gatillo de la pistola de alta presión hasta que salga de la lanza medida la unión constante de agua. Esto es con el propósito de purgar el sistema de cualquier burbuja de aire.

A) ATENCIÓN • Lengua cuidado de no trasoscar las credades de las conexiones para no tener perdidas de que la managua se tuerza. grie le perilla de la conexión, mangueara de jardín (W). Para hacer la conexión y evitar jardín (J) (conecte la managua de jardín a la entrada de la conexión de la managua de aquella de la managua de jardín.

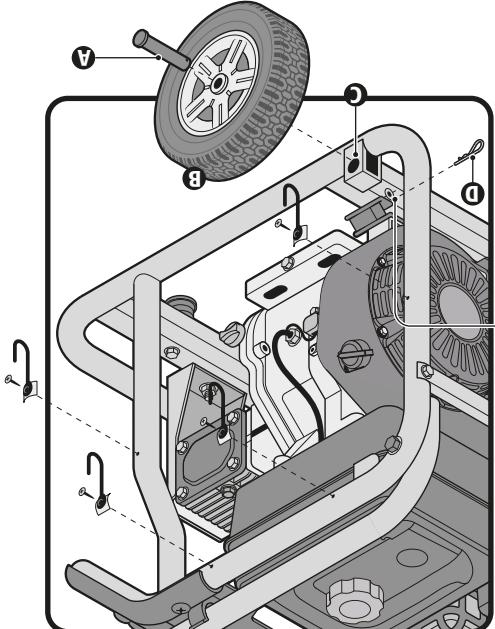

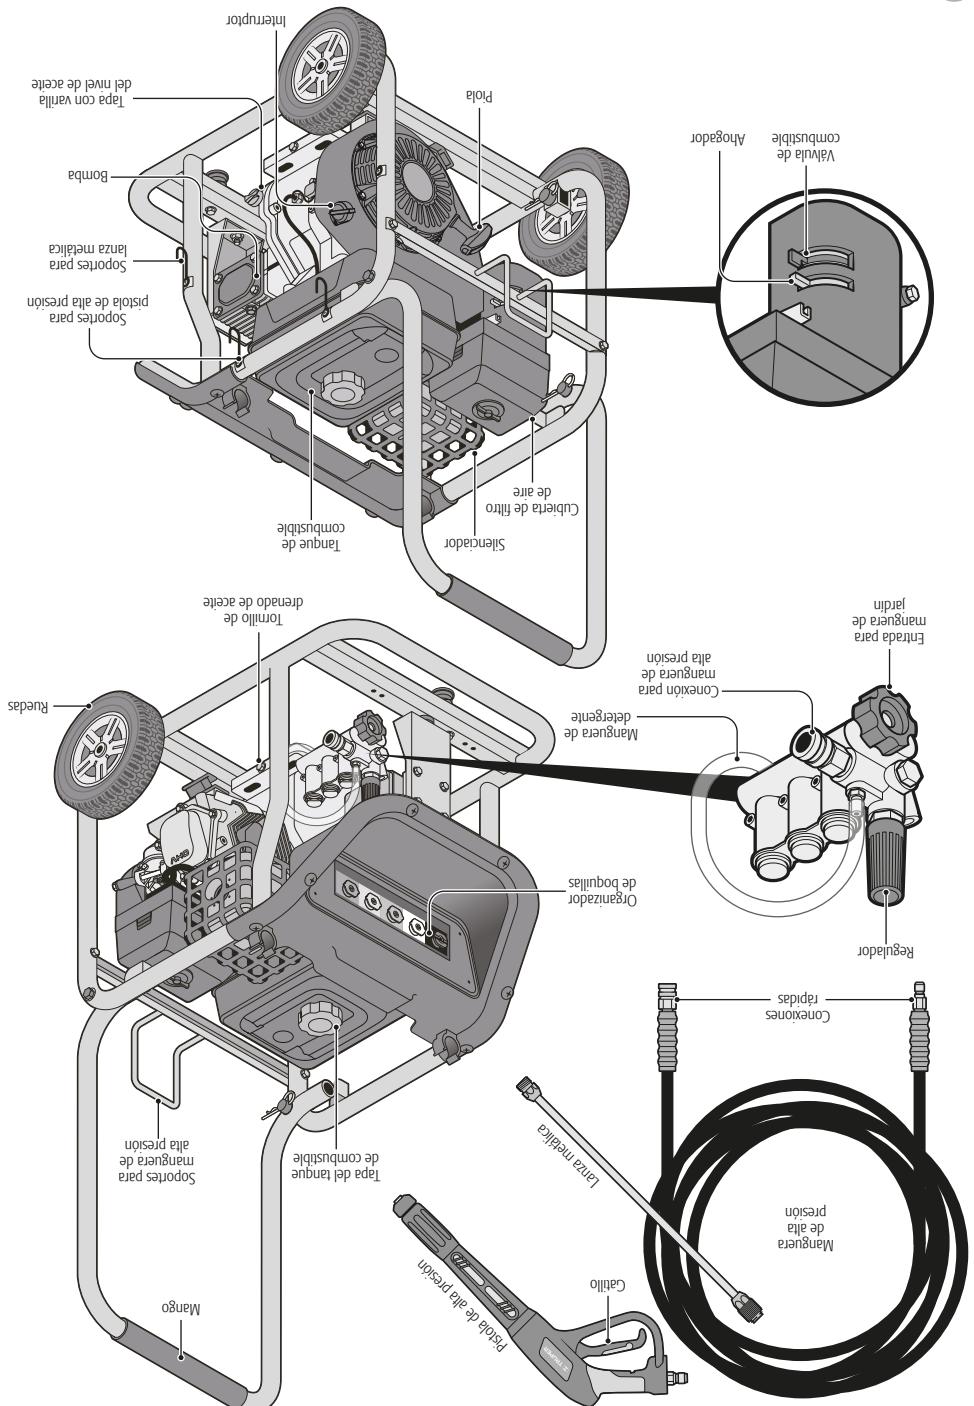

ocasionalmente lesiones personales serias.

con el fin de prevenir un arranque accidental que pudiera causar daño.

ADVOCACION Siempre que tenga acceso a las partes móviles desencadenadas en el cable de la llave del motor, garanítila.

ella. De lo contrario puede sufrir lesiones e invalidar la herramienta.

ADVOCACION No intente modificar la herramienta para accesorios no recomendados para otras funciones.

comúnmente se utilizan para sellar juntas de tubos. De lo contrario puede sufrir lesiones personales serias.

ADVOCACION En caso que le falten piezas, no

Recomendaciones de ensamblado

alimente la herramienta deseada de ser rellazado solo por personal almacenar la herramienta.

ADVOCACION • El servicio y reparación de la herramienta deseada debe de ser realizada solo por personal que se encargue de la herramienta.

sin perjudicar la herramienta. No debe de motor funcionando en reposo la herramienta. No debe de motor arrancar en el motor para las herramientas. De lo contrario se detiene.

ADVOCACION • Apague el motor antes de poner en marcha.

Antes de usarla una vez que se ha quitado del cuello. el motor apagado y con el silenciador aliviado.

ADVOCACION • Siempre tráslade la herramienta con combusible.

Despues de operar la hidrolavadora

No arroste la hidrolavadora sobre las mangüeras.

emudece en obstrucciones o se aplastada o pisada.

contadas con bordes filosos o superficies cortantes, se evite que la mangüera de alta presión se retuerza, haga agujas hacia la hidrolavadora.

ADVOCACION Nunca se debe dirigir el rociado de agua en la hidrolavadora. NO debe dirigir.

Para permitir que circule el aire libremente durante su operación, la hidrolavadora NO debe dirigir.

rociado de agua sin mangüeras al rociado o el

ADVOCACION Nunca toque la boquilla o el control total de la pistola de alta presión.

Al rociar siempre utilice ambas manos con el fin de tener herramienta aliviada exterior que los niños.

Este dentro a resguardo su entorno, el riñón de la en marcha.

No intente hacer juntas a la herramienta con el motor silenciador, pues puede producirse una quemadura severa.

Mantenga todos los partes del cuello alejados del motor durante su operación de la herramienta.

Proteja los ojos para evitar golpeadas de la gasolina y el aceite de combustible.

No permita que la gasolina o el aceite tengan contacto con la piel.

Para reducir el riesgo de incendio o quemaduras herramientas.

donde se abastezca de la gasolina, ni al operar la

Nunca tirem agua de combustible, ni en la zona en

Al operar la hidrolavadora

para evitar torceduras que contienen el fluido del agua.

• Desmonte y enderece completamente las mangüeras daño remediado inmediatamente.

• Revise la mangüera de alta presión, si presenta algún

debido ubicar la máquina lo más lejos posible del sitio que introducese en la hidrolavadora durante su operación, se para minimizar la cantidad de agua que podría causarle otro líquido que contiene agua.

• Productos químicos. No utilice blanqueador, cloro o clorurante otros desinfectantes que contenga ácidos.

• Revisar las instrucciones y advertencias acerca de superfluidos y productos, específicas de madera o articulos de plástico con adhesivo.

ATENCION • Considerar que el rociado es útil en la herramienta.

sean adecuadas para ver el daño, de lo contrario no se agudiza de que la visibilidad las condiciones de uso.

• Aségúrese de que la herramienta esté condensación en la herramienta.

funcionamiento de hidro que no hayan se presentan extremas revisiones que no haya una área libre bien ventilada.

• Aségúrese de que el área de trabajo es suficiente en una área libre de actividad o combustible.

seca y libre de herramientas de encuadre limpia.

• Aségúrese de que la herramienta esté limpia, presentada al igual que el equipo limpio.

funcionamiento de forma segura o el tanque de combustible ajustada o no está demasiado completo en el recipiente de combustible.

perfecas condiciones. No la encienda si se encuentra mal.

• Aségúrese de que la herramienta se encuentre en

Antes de operar la hidrolavadora

esta instrucción.

combustible que el especificado para la herramienta en el recipiente.

• Por ningún motivo utilizar claudicar otro tipo de derriamado para eliminarlo.

• Bajo ninguna circunstancia quemar el combustible ligero de gasolina por lo menos 9 metros (30 pies) de distancia de cualquier otra persona.

• Algo la herramienta por lo menos 9 metros (30 pies) de ser alrededor de arrancar el motor.

evitar incendios que usen gasolina.

ATENCION • Revise si hay fugas de combustible que haber caído en la herramienta antes de operarla.

de ser así corrijálas antes de usar la herramienta.

ATENCION • Limpie todo el combustible que en suelo despedido y espere a que el motor se enfrie.

herramienta de combustible apague el motor, coloque la herramienta de combustible apague el motor, coloque la

parte final.

• Almacene el combustible en un recipiente diseñado para a un médico.

immediamente con agua limpia. Si persiste la irritación oculta a un médico.

y el aceite. En caso de contacto accidental, lavelos.

• Proteja los ojos para evitar golpeadas de la gasolina con la piel.

No permite que la gasolina o el aceite tengan contacto con la piel.

• Para reducir el riesgo de incendio o quemaduras herramientas.

donde se abastezca de la gasolina, ni al operar la

Manejo de combustible

- Nunca use dentro del tanque de gasolina, productos para limpiar motores o carburadores ya que puede ocasionar daño permanente.
- Nunca use el carburador se vacíen. La siguiente ocasión, use gasolina fresca.
- Para no tener problemas con el motor se debe vaciar el sistema de combustible antes de almacenar el equipo por períodos de 30 días o más tiempo. Vacie el tanque de gasolina, arranque el motor y déjelo funcionar hasta que las líneas de combustible y el carburador estén vacíos. La siguiente ocasión, use gasolina fresca.
- Para no tener problemas con el motor cuando se encuentre almacenado.
- Debe prevenir atear humedad, la cual provoca la separación y la formación de ácidos durante el almacenaje. La adicción puede darse en sistema de combustible del motor cuando se encuentra almacenado.
- ADVERTENCIA** • Por ningún motivo utilice combustibles mezclados con alcohol etílico (gasohol), etanol o metanol, ya que pueden atear humedad, la cual provoca la separación y la formación de ácidos durante el almacenaje. La adicción puede darse en sistema de combustible del motor cuando se encuentra almacenado.
- Por ningún motivo mezcle aceite con el combustible.
- El equipo tiene un motor de 4 tiempos enfriado por aire que utiliza gasolina pura sin plomo.

Especificaciones de combustible

Código	12910	Nivel sonoro	86 dB
Presión máxima	27.5 MPa (4 000 PSI)	Temperatura máxima de entrada de agua	40 °C (104 °F)
Flujo máximo	13.6 L/min (3.6 gpm)	Capacidad del tanque de gasolina	5 L (1.3 gal)
Depósito de aceite	1.1 L (37.1 oz)	Tipo de carburante	Gasolina
Depósito de aceite	27.5 MPa (4 000 PSI)	Potencia nominal del motor	7 829 W (10.5 HP)
Velocidad	3 600 r/min	Cilindrada del motor	420 cm³ (cc) a 4 tiempos
Descripción	Hidrolavadora a gasolina	Descripción	Cilindrada del motor a gasolina
Código	12910	Código	12910

LACAS-4000

Especificaciones técnicas

C TRUPER®

! Realice MANTENIMIENTO periódico a su máquina (Página 12).



! NO ENCENDA LA HIDROLAVADORA SIN ACEITE.

de lo contrario el motor se podría desbilear.



! ESTA MÁQUINA NO SUCCIONA AGUA DE ESTANQUES O DEPÓSITOS.

Debe conectarse a una toma de suministro o a un tanque elevado.

RECOMENDACIONES DE USO Y CUIDADOS

- Para poder sacar el máximo provecho de la herramienta, alargar su vida útil, hacer válida la garantía en caso de ser necesario y evitar riesgos o lesiones fatales, es fundamental leer y comprender este instructivo por completo antes de usar la herramienta.
- Guarde este instructivo para futuras referencias.
- Los gráficos de este instructivo son para referencia, pueden variar del aspecto real de la herramienta.
- Para uso de hidrolavadoras a gasolina.
- Advertencias de Seguridad
- Advertencias Generales de Seguridad
- Especificaciones de combustible.
- Especificaciones técnicas

! ATENCIÓN

Indice

TRUPER®

- 3 Especificaciones técnicas
- 3 Advertencias Generales de Seguridad
- 4 Para uso de herramientas motorizadas
- 5 Partes
- 6 Ensamblaje
- 7 Operación
- 8 Combustible y aceite.
- 9 Puesta en marcha.
- 10 Mantenimiento
- 11 Solución de problemas
- 12 Centros de Servicio Autorizados
- 13 Poliza de Garantía




Lea este instructivo por completo
antes de usar el equipo.

ATENCION



LAGAS-400

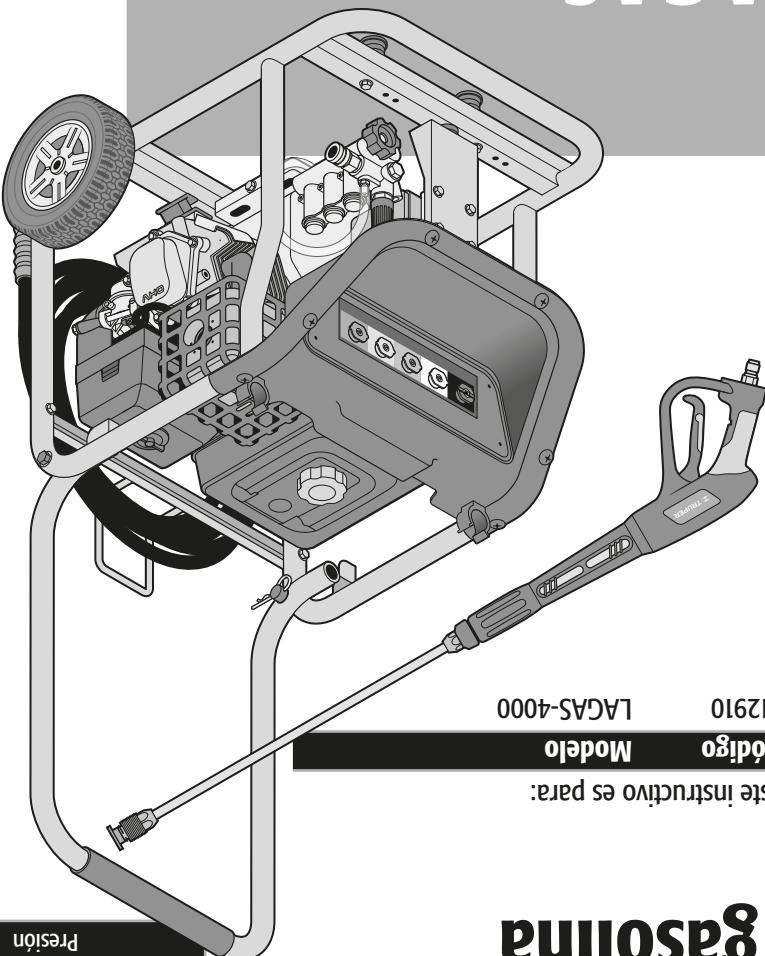

12910 LAGAS-4000

Código Modelo

Este instructivo es para:

4 000 PSI
275 MPa
Precision

Hidrolavadora
a gasolina
Instructivo de

TRUPER®

ESPAÑOL
ENGLISH