


Manual

Gas Blower / Vacuum

SOPLA-26T

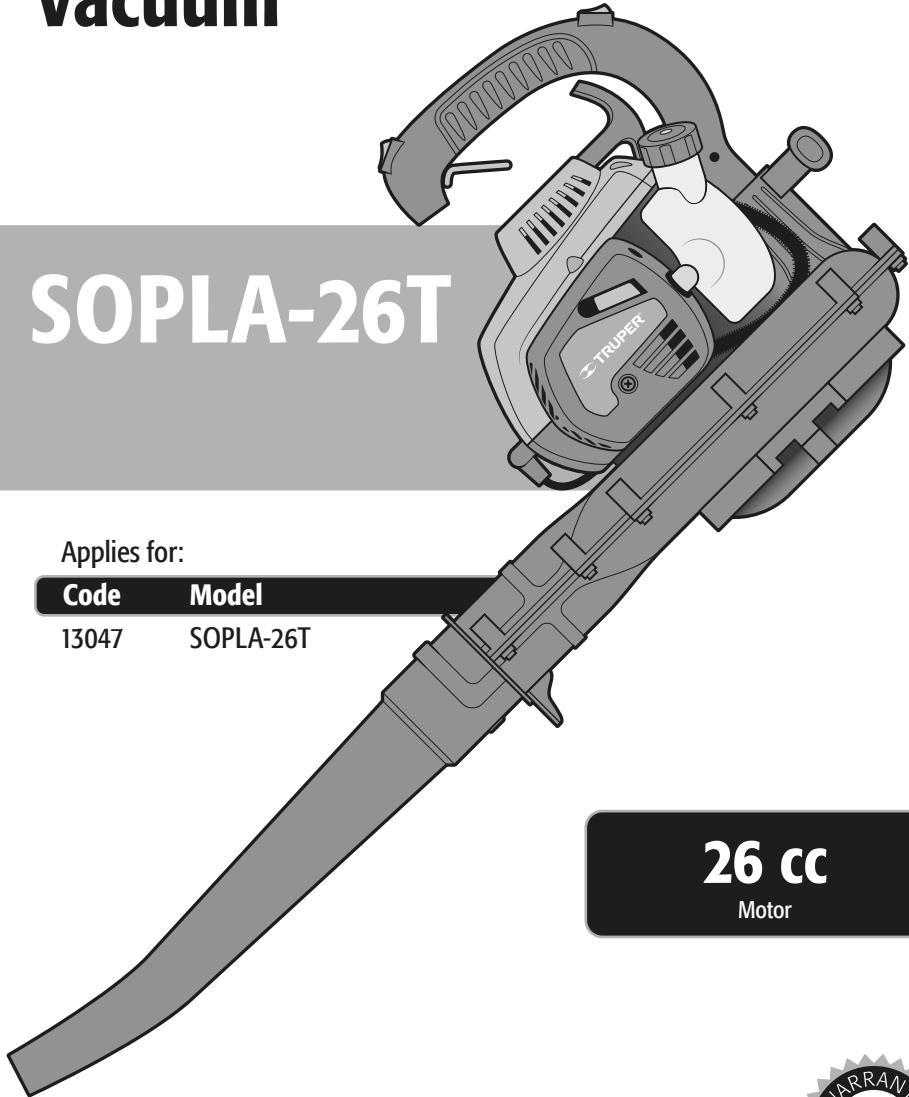

Applies for:

Code	Model
13047	SOPLA-26T

26 cc

Motor

! CAUTION



Read this Manual thoroughly
before using the tool.



Technical Data	3
Fuel Specifications	3
 Safety Warnings for Motor Tools	4
 Safety Warnings for Using Blowers	5
Parts	6
Assembly and Grip	7
Fuel Supply	7
Start up	8
Operation	9
Maintenance	10
Troubleshooting	12
Authorized Service Centers	13
Warranty Policy	14

CAUTION

To gain the best performance of the tool, prolong the duty life, make the Warranty valid if necessary, and to avoid hazards of fatal injuries please read and understand this Manual before using the tool.

Keep this manual for future references.

The illustrations in this manual are for reference only. They might be different from the real tool.



Use and care recommendations

 Use gasoline mixed with **2-STROKE** motor **OIL**.
A wrong mix may cause the blower / vacuum to throw a rod, causing expensive repairs!

4 oil
capsules + 1 liter
of Gasoline = Mix
 +  = **50:1**

 Do not use a fuel **MIX** that has been stored longer than 15 days.

 **ALWAYS** operate your blower / vacuum at **MAXIMUM POWER** with the trigger **FULLY** tightened

 Perform periodic **MAINTENANCE** to your machine (page 10).

SOPLA-26T

Code •	13047
Description •	Gas Blower / Vacuum
Motor •	26 cc
Power •	1 Hp
Air Speed •	180 MPH
Air Volume •	353 CFM
Maximum Motor Speed •	8 000 RPM
Idle Speed •	3 000 RPM
Fuel Tank •	15.5 oz
Weight •	9.7 lb
Work Cycle •	30 minutes rest per tank consumed. Maximum 6 hours daily

Fuel Specifications

- The blower is built with an air-cooled, 2-stroke engine using unleaded gasoline and high-quality auto-mixing oil with fuel stabilizer specified for air-cooled, 2-stroke engines.
- The motor is certified to run with unleaded gasoline for vehicles with octane rating 87 ([R+M]/2) or higher.
- Do not use any type of pre-mixed gasoline with oil sold in service stations, especially for motorcycles, etc.
- Do not use engine oil for self-propulsion, or two-cycle oil outboard motor.
- The ratio in the mix shall be 50 parts of gasoline per 1 part oil (50:1 ratio). Prepare the mix in a container approved to store gasoline. Always mix thoroughly before pouring into the motor tank.

CAUTION Do not use gasoline mix that has been stored for more than 15 days. Mix small amounts.

WARNING Never smoke in the vicinity of the fuel or the filling up area, or where the mix is being prepared, or when operating the blower.

WARNING Trying to start the blower without adding oil into the fuel mix will cause the motor to malfunction.

Using the ACES-2, ACES-5 or ACES-20  Oils** cap as measure, mix 4 capfuls oil per each liter gasoline.

A wrong mix may cause the motor to throw a rod causing expensive repairs!



To increase the working life or the motor use  TRUPER® synthetic oil for 2-stroke motors.

* 1 gallon = 3.78 liter

** Not included

Safety Warnings for Motor Tools

Keep your work area clean, tidy and well lit.

CAUTION Cluttered and dark areas may cause accidents.



Never use the tool in explosive areas or in the presence of flammable liquids.

DANGER Before starting the motor keep the tool at least 30 feet away from the fill up area.



Keep children and passersby at a safe distance while operating the tool.

WARNING Distractions could cause losing control and cause accidents.



Avoid contact with power lines and circuits.

DANGER Find and avoid power lines and circuits, especially hidden wiring as well as any grounded object.



Stay alert, use care and common sense.

CAUTION Familiarity with the tool operation could lead to distractions. It could cause accidents.

Refrain from using the tool if tired or under the influence of drugs, alcohol or medication.

DANGER Being momentarily distracted while using the tool could cause severe personal injury.

Operate the tool with guards and protection devices in place and in good working condition.

WARNING Failure to comply with this warning is a hazard of severe personal injury.

Do not force the tool.

CAUTION Working within the tool's working design assures a better and safer job.



Keep the tool in a safe place and out of the reach of children.

WARNING Motor powered tools are dangerous to inexperienced people.



Wear proper clothes.

WARNING Loose clothes, jewelry or long hair could get caught in the mobile parts.



Keep hands away from rotating and/or mobile parts.

WARNING Failure to comply with this warning is a hazard of severe personal injury.



Do not operate the tool in enclosed areas.

DANGER Avoid breathing accumulated carbon monoxide, a potentially deadly odorless toxic gas.



Wear adequate protective safety accessories.

CAUTION Wear eye protection, dust mask, non-skid safety shoes, helmet and ear plugs. These safety gears reduce the risk of injury.



Turn off the tool before adjusting, changing accessories or storing.

WARNING Double check the tool switch is in the off position.

Refrain from operating the tool if the switch is not working or is not properly assembled.

WARNING Failure to comply with this warning is a hazard of personal injury. Immediately send it to a **C TRUPER** Authorized Service Center.

Do not overreach.

CAUTION Good balance and support lead to better controlling the tool in unexpected situations.



Avoid the tool to unintentionally start.

WARNING Double-check the tool motor is off before maintenance or putting it away.

Remove brackets before turning on the tool.

DANGER Additional tools or vices installed in a rotating part could cause severe personal injury.



Service the tool and double-check it is in good working conditions before operating.

CAUTION Carefully check mobile parts, alignment and assembly. Do it periodically. Look for any damaged element or part not working properly. Repair immediately in a **C TRUPER** Authorized Service Center.

Accessories.

CAUTION Use only accessories or spare parts indicated in this Manual or certified by **C TRUPER**.

Never leave a running tool unattended.

DANGER Turn off and disconnect the tool after using. Set it in a safe position to avoid severe injury.



Never smoke in the proximity of fuel.

DANGER Do not smoke in the proximity of the fuelling area or when using the tool.

Do not touch parts with high temperatures.

The surface of the engine and the exhaust reach high temperatures during the operation of the tool..



Service and repair.

Always go to a **C TRUPER** Authorized Service Center to use identical spare parts and maintain the security of the tool.

Safety Warnings for Using Blower



- Safety is a combination of common sense, alert mind and knowledge about how the tool works.

⚠ CAUTION • Read the manual carefully before you start using the tool. Pay close attention to safety rules, alert symbols and danger, warning and attention labels. Also read all the stickers on the tool.

Fuel Handling

- Never smoke where there is fuel present or the filling area or where the oil mix is prepared or while operating the tool.

• To reduce the risk of fire or burns handle fuel with care. It is extremely flammable.

• Prevent that gasoline or oil make contact with your skin.

• Protect your eyes to prevent gasoline or oil spills. If there is any type of accidental contact rinse immediately with clear water. If there is irritation see your physician.

• Mix and store fuel in a designated container.

⚠ WARNING • Mix fuel outdoors away from fire or sparks.

• Before re-fueling the tool stop the turn off the motor, set it on clear ground and wait for the motor to cool down.

⚠ CAUTION • Before operating the machine clean any amount of fuel that might have dripped onto the tool.

⚠ CAUTION • Check for fuel leaks. If any, fix the leaks before using the tool to prevent fire, injury or burns.

• Set the tool away at least 30 feet away from the filling up place before starting the motor.

• For no reason at all burn spilled fuel to get rid of it.

• For no reason at all use any fuel different from the one specified in this manual for the tool.

Before Operating the Blower

⚠ DANGER • Never run the tool when tired, sick or under the effects of drugs, alcohol or prescription medicine.

• Wear adequate clothes to operate the tool: tight clothes, thick trousers non-skid safety boots, heavy-duty protecting gloves and safety eyeglasses with side protection under ANSI Z87.1 Standard.



⚠ WARNING • Remove any accessory or loose clothes that could get caught inside the motor. Fix long hair so that it stays at shoulder level.

• Double check the tool is in perfect conditions. Do not start the machine if misadjusted or not fully assembled preventing it to work properly, or if the fuel tank shows leaks or loose screws.

• Make sure the tool is clean, dry and free of oil or fuel.

• Double check the work area is open and well ventilated.

• In extreme weather check, there is no ice or condensation in the tool.

• Make sure visibility and light conditions are adequate to clearly watch the job. Otherwise do not use the tool.

When Operating the Blower

- Make sure the pipes are not pointing towards people or animals before starting the motor.

⚠ WARNING • Hold the blower correctly and keep both feet firmly supported on the ground.

• Keep your full body away from the muffler. Otherwise it can produce severe burns.

• Keep the tool away from flammable material.

• Do not carry out adjustments to the tool with the motor running.

• Stay alert to any type of hazards. The noise of the tool could prevent you to notice dangerous situations.

After Operating the Blower

⚠ CAUTION • Always carry the tool with the motor off and the muffler away from your body. Before putting it up into a vehicle empty the fuel tank.

⚠ WARNING • Set the motor off before resting the tool. DO NOT leave the motor running unattended. Allow it to cool down before storing the tool.


⚠ CAUTION • Service and repairs to the tool shall only be carried out by highly trained staff.

Assembly Recommendations

⚠ WARNING • In the event that some parts are missing do not start the tool until replacing them. Otherwise the user may suffer severe personal injuries.

⚠ WARNING • Do not try to modify the tool or manufacture accessories not recommended for the tool. Otherwise the user may be hurt making the warranty void.

⚠ WARNING • When gaining access to mobile parts disconnect the spark plug cable in the motor to prevent an accidental start up that causes severe injuries to the user.

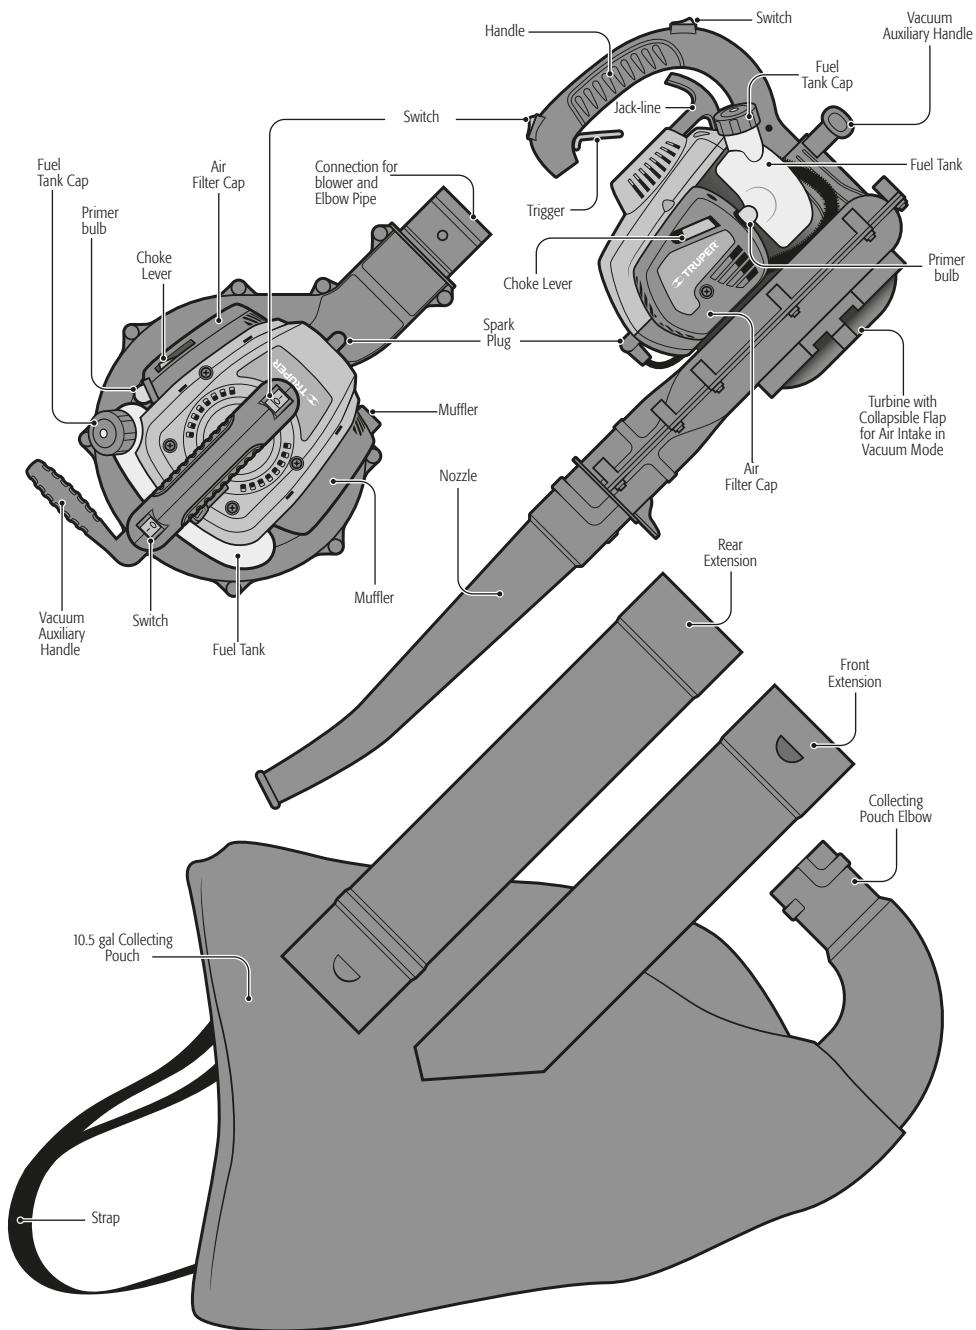


Assembly and Grip

 TRUPER®

Blower Mode


- Align the nozzle slot (A) with the connection pinion shaft (B).
- Push the nozzle as indicated with the arrows and turn it counterclockwise to lock it into position.
- The machine while in blower mode shall be held by the handle, either right-handed or left-handed.

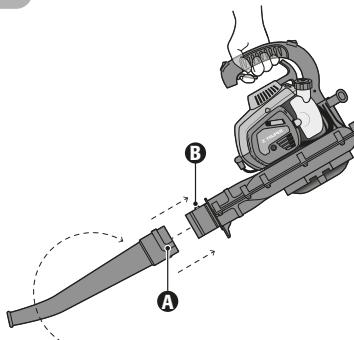

Vacuum Mode

- To join the vacuuming extensions, align the rear extension slot with the rear extension notch (A).
- Push the extensions following the arrows direction until the pinion shaft in the rear extension is locked in the notch (B).
- Using a screwdriver, loosen the screw in the collapsible flap (C).
- Open the collapsible flap and align the slot in the rear extension (D) with the pinion shaft in the turbine housing.
- Push the extension and turn in a clockwise direction until interlocking into position.
- Align the elbow slot (E) with the connection pinion shaft (F).
- Push the elbow and turn counterclockwise to lock it into position.
- Always hold the handle with your left hand and the auxiliary handle with the right hand while in vacuum mode.

⚠ WARNING Otherwise, your body will be exposed to burns when making contact with the motor exhaust.

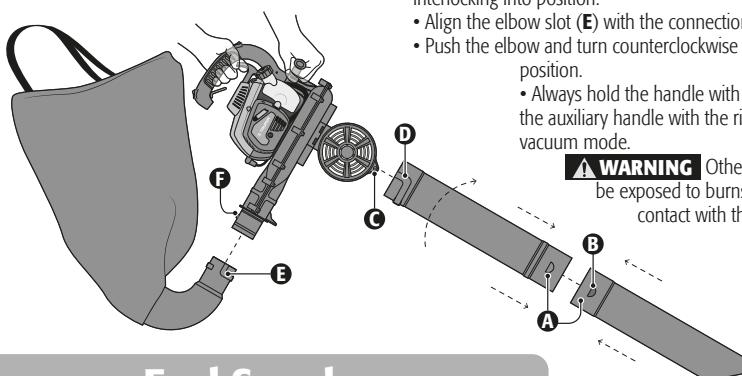


Fuel Supply

Fuel Supply


- Follow the safety standards for fuel handling (page 5).
- Clean the surface around the fuel tank cap to avoid contamination.
- Slowly loosen the fuel tank cap.
- Using care to prevent spills, pour the fuel mix into the tank. **⚠ CAUTION** Follow the fuel specifications (page 3).
- Immediately set back the fuel tank cap and hand tighten.
- Clean all the spilled fuel.

⚠ CAUTION When the motor is new, smoke emissions are a normal occurrence after being used for the first time .

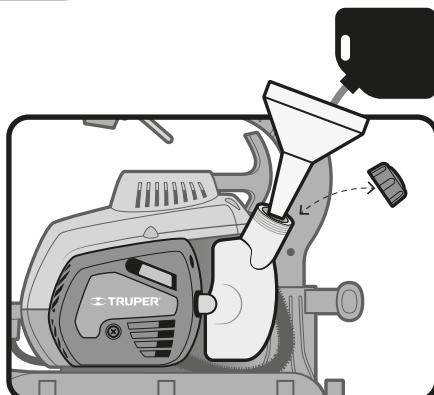

Start Up with a Cold Motor

- The blower shall be placed on a flat and clean surface.
- Set the two handle switches (**A**) in the On position (**I**).
- Press the primer bulb 6 times (**B**). Fuel shall be visible inside the primer bulb. Otherwise, keep on pressing the primer bulb until fuel can be seen inside the bulb.
- Move the starter choke lever (**C**) into the “**|** **¶** | Start” position.
- Lightly pull the jack-line (**D**) until feeling resistance. Pull quickly 3 or 4 times. Usually, the motor will not start in this step.
- Move the starter choke lever into the “**|** **¶** | Run” position. Pull the jack line one more time to start the motor.


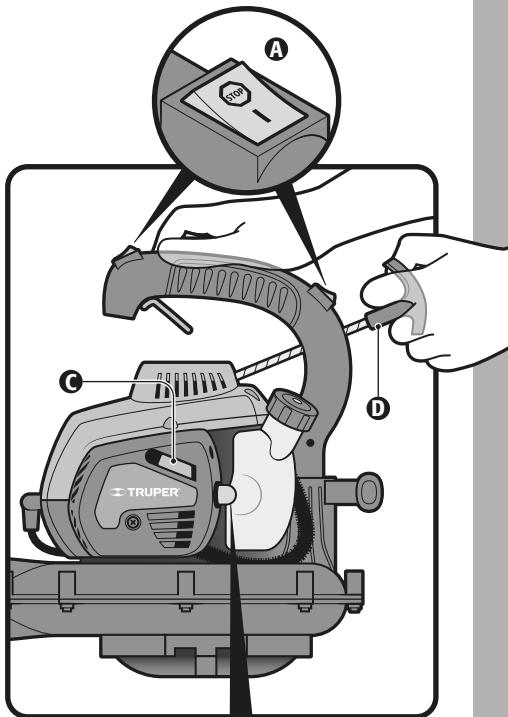


Start Up with a Hot Motor

- The blower shall be placed on a flat and clean surface.
- Set the two handle switches (**A**) in the On position (**I**).
- Set the starter choke into the “**|** **¶** | Run” position.
- Pull the jack-line until the motor starts.


Turning Off

- Press any of the switches into the (**STOP**) position to stop the motor.

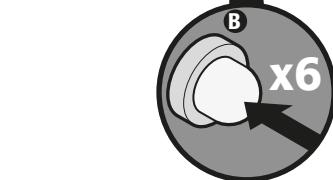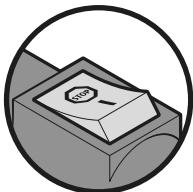

Blower Mode


- Double check your body's weight is distributed through both feet.
- Keep the nozzle close to the ground.
- ⚠ WARNING** • Do not point the pipe towards people or animals. Otherwise severe injuries may occur.
- Press the trigger to start the air coming out through the blowing pipe.
- Using a balancing movement rotate your waist keeping the nozzle close to the ground. Start sweeping leaves or residues.

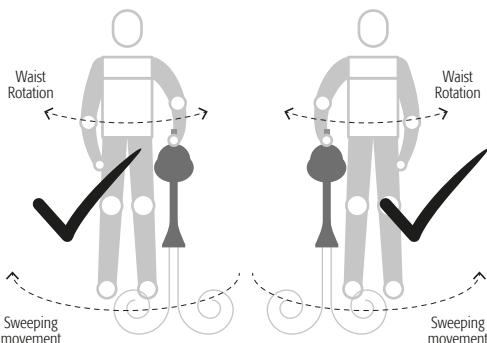

Vacuum Mode

- Double check your body's weight is distributed through both feet.
- Set the collecting pouch strap over your left shoulder. Do not set it through your chest to be able to quickly remove the machine and the pouch in case of emergency.
- Hold the handle with your left hand and the auxiliary handle with your right hand.
- ⚠ WARNING** • Do not point the pipe towards people or animals. Otherwise severe injuries may occur.
- Press the trigger to start vacuuming.
- Using a balancing movement rotate your waist keeping the nozzle close to the ground. Start sweeping leaves or residues.

- ⚠ WARNING** • Do not hold the tool any way different than the one indicated in this instructions manual. Otherwise, your body is exposed to burns when making contact with the motor or muffler while working.

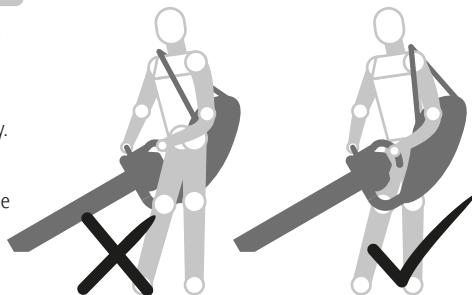

- Before inspecting, cleaning or servicing the tool turn the motor off, wait for all the mobile parts to stop, disconnect the spark plug cable and set it away from the spark plug. Otherwise, the operator may suffer severe burns and / or damage the tool.

Air Filter Cleansing

- Adjust the choke lever into the “| Start” position.
- Remove the air filter cap pressing the lock situated on both sides.
- Using compressed air or a brush, eliminate as much dirt or sawdust as possible, away from the area uncovered when removing the motor housing.
- Remove the air filter.
- Depending on how long the machine is used, you may clean the filter by superficially tapping it lightly against a flat and smooth surface to displace most of the sawdust and dust.
- You may also use compressed air on both sides of the filter to blow away dirt.
- For a more thorough cleansing clean the air filter in soapy water. Rinse and let it dry completely before installing it back into the tool.
- If using compress air to dry it, blow on both sides of the filter.
- Set back the filter. Verify it is flush in place.

General Cleansing

- Using a brush or compressed air, clean and clear the ventilation slots from the starter unit when necessary.
- Likewise, clean periodically the motor cylinder and fan blades to remove debris. Otherwise the motor may get damaged do to overheating.
- Depending on the type of fuel and oil used, or the particular working conditions, the exhaust pipe and muffler orifices may get obstructed with carbon deposits. If the tool shows some power loss it may be necessary to eliminate those deposits to restore performance. Take the tool to a C TRUPER® Authorized Service Center to carry out this type of service.

Debris Collecting Pouch

- CAUTION** When the debris pouch is full, the suction capacity of the machine decreases considerably. Once the pouch is full, empty the collecting pouch before you continue using the tool.
- Remove the collecting pouch from its connection. Use the steps opposite from assembly.
 - Empty the pouch contents and turn the pouch inside-out to clean it using a brush.
 - For a more thorough cleansing remove the pouch from the elbow pipe loosening the hook fastener and loop. Clean the pouch using water and mild soap. Let it dry completely before using or storing.

Spark Plug Replacement

- The motor runs with a Champion RCJ-6Y spark plug or Torch L8RTC with 0.025" electrode gap. Replace every year with an identical spark plug.
 - Using a spark plug wrench turn left to loosen the worn spark plug. Remove it.
 - Insert the new spark plug and tighten by hand. Then, give it half-a-turn using the wrench.
- CAUTION** • Use care not to damage the spark plug thread, otherwise the motor gets seriously damaged.

Muffler and Exhaust Cleansing

- Dependent of type of fuel, amount of oil used and / or conditions, the muffler and exhaust can get clogged with carbon deposits. If the tool shows loss of power, those deposits shall need to be removed to improve performance. Go to a C TRUPER® Authorized Service Center to carry out the service.
- The muffler is built with a spark-arrest screen inside the muffler. After long periods of use the screen gets dirty and the muffler needs replacement. Go to a C TRUPER® Authorized Service Center to carry out the replacement.

Tool Storage

- When the tool is stored one month or longer consider the following:
- Drain the fuel tank contents into a gasoline designated container. All the remaining fuel shall be re-used in other equipment using 2-stroke motors with 50:1 ratio.
 - Run the motor until burning the rest of the fuel and it off. This way all residual fuel will be eliminated and will prevent gum deposit build up that damages the fuel system.
 - Clean the tool thoroughly.
 - Store the unit in a ventilated area, away from corrosive agents such as garden chemical products or de-icing salt. Keep it away from the reach of children.
 - Obey all the government regulations concerning fuel handling and management.

Regular Maintenance Table

		Before each use	After each use	Every 25 hours of use	Every 50 hours of use	Every 150 hours of use
Complete machine	Visual inspection (general condition, wear leaks)	✓				
	Clean		✓			
Handle	Check functioning	✓				
Air filter	Clean			✓		
	Replace*					✓
Fuel tank filter	Check				✓	
	Replace filter*					✓
Fuel tank	Clean				✓	
Carburetor	Stable speed while empty				✓	
	Carburize*					✓
Spark plug	Adjust gap between electrodes*				✓	
	Replace					✓
Exhaust	Substitute*				✓	

*  **TRUPER**® Authorized Service Center

Problem**Cause****Solution**

Motor does not start.

- There is no spark.
- No fuel.
- The motor is flooded.
- The jack-line is difficult to pull out when new.
- Check the spark. Remove the motor cover. Connect the spark plug cable and set it onto the motor cylinder with the metallic side touching the cylinder. Pull the starter and watch the spark in the spark plug electrode. If there is no spark, repeat the test with a new spark plug.
- Press the primer bulb until the fuel is visible in the bulb. If the fuel is not visible, it means that the fuel primary supply system is blocked. Contact a  TRUPER® Authorized Service Center. If the starter choke is filled with fuel, it means the motor is flooded.
- With the switches in the OFF position, remove the spark plug. Set the choke lever in the "I ♦ I Run" position and pull the jack-line 15 to 20 times to eliminate the excessive fuel from the motor. Clean the spark plug and set it back. Follow the normal start up procedure (see page 8). If the motor is not starting, set the choke lever in the "I ▲ I Start" position and repeat the starting procedure. If the motor is still not starting, repeat the procedure with a new spark plug.
- Take the tool to a  TRUPER® Authorized Service Center.

The motor starts but does not accelerate.

- The motor need a couple of minutes to warm up.
- Allow the motor to warm up completely. If there is no throttle after three minutes contact a  TRUPER® Authorized Service Center.

The motor starts but runs only at high speed with half a choke.

- Carburetor need adjustment.
- Take the tool to a  TRUPER® Authorized Service Center.

The motor does not get to full speed and has too much smoke emissions .

- Check the oil / fuel mix.
- The air filter is dirty.
- The spark arrest screen is dirty.
- Use new fuel and the right oil mix for 2-cycle motors.
- Clean the air filter. See page 10.
- Take the tool to a  TRUPER® Authorized Service Center.

The motor starts, runs and accelerates but there is no idle speed.

- The idle speed screw in the carburetor needs adjustment.
- Turn the idle screw clockwise to increase speed.

Authorized Service Centers



In the event of any problem contacting a Truper Authorized Service Center, please see our webpage www.truper.com to get an updated list, or call our toll-free numbers **800 690-6990** or **800 018-7873** to get information about the nearest Service Center.

AGUASCALIENTES	DE TODO PARA LA CONSTRUCCIÓN GRAL. BARRAGÁN #1201, COL. GREMIAL, C.P. 20030, AGUASCALIENTES, AGS. TEL.: 449 994 0537	MORELOS	FIX FERRETERÍAS CAPITÁN ANZURES #95, ESQ. JOSÉ PERDIZ, COL. CENTRO, C.P. 62740, CUAUTLA, MOR. TEL.: 735 352 8931
BAJA CALIFORNIA	SUCURSAL TIJUANA AV. LA ENCANTADA, LOTE #5, PARQUE INDUSTRIAL EL FLORIDO II, C.P. 22244, TIJUANA, B.C. TEL.: 664 969 5100	NAYARIT	HERRAMIENTAS DE TEPIC MAZATLÁN #117, COL. CENTRO, C.P. 63000, TEPIC, NAY. TEL.: 311 258 0540
CALIFORNIA SUR	FIX FERRETERÍAS FELIPE ÁNGELES ESQ. RUIZ CORTÍNEZ S/N, COL. PUEBLO NUEVO, C.P. 23670, CD. CONSTITUCIÓN, B.C.S. TEL.: 613 152 1115	NUEVO LEÓN	SUCURSAL MONTERREY CARRETERA LAREDO #300, 1B MONTERREY PARKS, COLONIA PUERTA DE ANÁHUAC, C.P. 66052, ESCOBEDO, NUEVO LEÓN, TEL.: 81 8352 8791 / 81 8352 8790
CAMPECHE	TORNILLERÍA Y FERRETERÍA AAA AV. ALVARO OBREGÓN #524, COL. ESPERANZA C.P. 24080 CAMPECHE, CAMP. TEL.: 981 815 2808	OAXACA	FIX FERRETERÍAS AV. 20 DE NOVIEMBRE #910, COL. CENTRO, C.P. 68300, TUXTEPEC, OAX. TEL.: 287 106 5092
CHIAPAS	FIX FERRETERÍAS AV. CENTRAL SUR #27, COL. CENTRO, C.P. 30700, TAPACHULA, CHIS. TEL.: 962 118 4083	PUEBLA	SUCURSAL PUEBLA AV. PERIFÉRICO #2-A, SAN LORENZO ALMECATLA, C.P. 72710, CUAUTLACINGO, PUE. TEL.: 222 282 8282 / 84 / 85 / 86
CHIHUAHUA	SUCURSAL CHIHUAHUA AV. SILVESTRE TERRAZAS #128-11, PARQUE INDUSTRIAL BAFAR, CARRETERA MÉXICO CUAHTÉMOC, C.P. 31415, CHIHUAHUA, CHIH. TEL.: 614 434 0052	QUERÉTARO	ARU HERRAMIENTAS S.A DE C.V. AV. PUERTO DE VERACRUZ #110, COL. RANCHO DE ENMEDIO, C.P. 76842, SAN JUAN DEL RÍO, QRO. TEL.: 427 268 5444
CIUDAD DE MÉXICO	FIX FERRETERÍAS EL MONSTRUO DE CORREGIDORA, CORREGIDORA # 22, COL. CENTRO, C.P. 06060, CUAUHTEMOC, CDMX. TEL: 55 5522 5031 / 5522 4861	QUINTANA ROO	FIX FERRETERÍAS CARRETERA FEDERAL MZ. 46 LT. 3 LOCAL 2, COL EJIDAL, C.P. 77710 PLAYA DEL CARMEN, Q.R. TEL.: 984 267 3140
COAHUILA	SUCURSAL TORREÓN CALLE METAL MECÁNICA #280, PARQUE INDUSTRIAL ORIENTE, C.P. 27278, TORREÓN, COAH. TEL.: 871 209 68 23	SAN LUIS POTOSÍ	FIX FERRETERÍAS AV. UNIVERSIDAD #1850, COL. EL PASEO, C.P. 78320, SAN LUIS POTOSÍ, SLP. TEL.: 444 822 4341
COLIMA	BOMBAS Y MOTORES BYMTESA DE MANZANILLO BLVD. MIGUEL DE LA MADRID #190, COL. 16 DE SEPTIEMBRE, C.P. 28239, MANZANILLO, COL. TEL.: 314 332 1986 / 332 8013	SINALOA	SUCURSAL CULIACÁN AV. JESÚS KUMATE SUR #4301, COL. HACIENDA DE LA MORA, C.P. 80143, CULIACÁN, SIN. TEL.: 667 173 9139 / 173 8400
DURANGO	TORNILLOS ÁGUILA, S.A. DE C.V. MAZURIJO #200, COL. LUIS ECHEVERRÍA, DURANGO, DGO. TEL.: 618 817 1946 / 618 818 2844	SONORA	FIX FERRETERÍAS CALLE 5 DE FEBRERO #517, SUR LT. 25 MZ. 10, COL. CENTRO, C.P. 85000, CD. OBREGÓN, SON. TEL.: 644 413 2392
ESTADO DE MÉXICO	SUCURSAL CENTRO JILOTEPEC PARQUE INDUSTRIAL # 1, COL. PARQUE INDUSTRIAL JILOTEPEC, JILOTEPEC, EDO. DE MÉX. C.P. 54257 TEL: 761 782 9101 EXT. 5728 Y 5102	TABASCO	SUCURSAL VILLAHERMOSA CALLE HELIO LOTES 1, 2 Y 3 MZ. #1, COL. INDUSTRIAL, 2A ETAPA, C.P. 86010, VILLAHERMOSA, TAB. TEL.: 993 353 7244
GUANAJUATO	C.I.A. FERRETERA NUEVO MUNDO S.A. DE C.V. AV. MÉXICO - JAPÓN #225, CD. INDUSTRIAL, C.P. 38010, CELAYA, GTO. TEL.: 461 617 7578 / 79 / 80 / 88	TAMAULIPAS	VM ORINGS Y REFACCIONES CALLE ROSITA #527 ENTRE 20 DE NOVIEMBRE Y GRAL. RODRÍGUEZ, FRACC. REYNOSA, C.P. 88780, REYNOSA, TAMS. TEL.: 899 926 7552
GUERRERO	CENTRO DE SERVICIO ECLIPSE CALLE PRINCIPAL MZ.1 LT. 1, COL. SANTA FE, C.P. 39010, CHILPANCINGO, GRO. TEL.: 747 478 5793	TLAXCALA	SERVICIOS Y HERRAMIENTAS INDUSTRIALES PABLO SIDAR #132, COL. BARRO DE SAN BARTOLOMÉ, C.P. 90970, SAN PABLO DEL MONTE, TLAX. TEL.: 222 271 7502
HIDALGO	FERREPRESIOS S.A. DE C.V. LIBERTAD ORIENTE #504 LOCAL 30, INTERIOR DE PASAJE ROBLEDO, COL. CENTRO, C.P. 43600, TULANCINGO, HGO. TEL.: 775 753 6615 / 775 753 6616	VERACRUZ	LA CASA DISTRIBUIDORA TRUPER BLVD. PRIMAVERA. ESQ. HORTENSIA SJN./COL. PRIMAVERA C.P. 93308, POZA RICA, VER. TEL.: 782 823 8100 / 826 8484
JALISCO	SUCURSAL GUADALAJARA AV. ADOLFO B. HORN #6800, COL: SANTA CRUZ DEL VALLE, C.P.: 45655, TLALOYMULCO DE ZUÑIGA, JAL. TEL.: 33 3606 5285 AL 90	YUCATÁN	SUCURSAL MÉRIDA CALLE 33 #600 Y 602, LOCALIDAD ITZINCAB Y MULSAY, MPIO. UMÁN, C.P. 97390, MÉRIDA, YUC. TEL.: 999 912 2451
MICHOACÁN	FIX FERRETERÍAS AV. PASEO DE LA REPÚBLICA #3140-A, COL. EX-HACIENDA DE LA HUERCA, C.P. 58050, MORELIA, MICH. TEL.: 443 334 6858		

Code	Model	Brand
13047	SOPLA-26T	 TRUPER®

Warranty. Duration: 1 year. Coverage: parts, components and workmanship against manufacturing or operating defects, except if used under conditions other than normal; when it was not operated in accordance with the instructive; was altered or repaired by personnel not authorized by **Truper®**. To make the warranty valid, present the product, stamped policy or invoice or receipt or voucher, in the establishment where you bought it or in Corregidora 22, Centro, Cuauhtémoc, CDMX, 06060, where you can also purchase parts, components, consumables and accessories. It includes the costs of transportation of the product that derive from its fulfillment of its service network. . Phone number **800-018-7873**. Made in China. Imported by Truper, S.A. de C.V. Parque Industrial 1, Parque Industrial Jilotepec, Jilotepec, Edo. de Méx. C.P. 54257, Phone number 761 782 9100.



Stamp of the business. Delivery date:

Póliza de
Garantía

TRUPER®

AÑO



Sello del establecimiento comercial. Fecho de entrega:

Garan^{ta}. Duración: 1 año. Cobertura: Piezas, componentes y mano de obra contra defectos de fabricación ofuncionamiento, excepto si se uso en condiciones distintas a las normales; cuando no fue operado conforme instrucciones; fue alterado o reparado por personal no autorizado por Truper®. Para hacer efectiva la garantía se presentará el producto, poliza sellada o recibo o comprobante, en el establecimiento donde lo compró o en Corregidora 22, Centro, Querétaro, CDMX, 06060, donde también podrá adquirir partes, componentes, consumibles y accesorios, incluye los gastos de transportación del producto que deviene de su cumplimiento de acuerdo con la legislación federal, estatal y local. Para que la garantía sea válida debe cumplirse con lo siguiente: 1. Parque Industrial Jiutepec, Jiutepec, Ed. de Mex. C.P. 54257, Tel. 761 782 9100. 2. Tel. 800-018-7873. Made in/Hecto en China. Importador Truper, S.A. de C.V. Parque Industrial Jiutepec, Jiutepec, Morelos, C.P. 52100, Tel. 01 724 80 00 00. 3. Se adjuntarán los recibos de compra de los componentes y piezas que se presenten para su revisión.

Código	Modelo	Marca	TRUPER®
13047	SOPLA-26T		

En caso de tener algún problema para contactar un Centro de Servicio Autorizado Truper®, consulte nuestra página www.truper.com donde obtendrá un listado actualizado, o llame al: **800 690-6990** ó **800 018-7873** donde le informarán cuál es el Centro de Servicio más cercano.

MICHOACÁN	FIX FERRERIAS Y SERVICIOS INDUSTRIALES	AV. DEL DIF DE LA REPÚBLICA #310-A COL. HUERFANAS, TEL.: 443 3348 8589 TEL.: 33 3605 2853 AL 90
JALISCO	SUCRALSA GUADALAJARA	AV. DIF OFICIO 8 HORAS #6800, COL. SANTA CRUZ DEL VALLE, C.P. 45653, TLAJOMULCO DE ZAVALA, JAL.
HIDALGO	FERRETERÍAS S.A DE C.V.	CLAVE 33 #609 y 692, LOCAL 102, C.P. 38050, MORELIA, MICH. TEL.: 443 3348 8589 TEL.: 775 753 6615 / 775 753 6616
GUERRERO	CENTRO DE SERVICIO ECIPSE	CLAVE PRINCIPAL MZ. 1, LT. 1, COL. ANTENA FE, C.P. 39010, HGO. TEL.: 775 753 6615 / 775 753 6616
CUANAUATO	C.E.A.F. FERRERIA NUEVA MUNDO S.A. DE C.V.	CLAVE 33 #609 y 692, LOCAL 102, C.P. 38010, HGO. TEL.: 775 753 6615 / 775 753 6616
MÉXICO	SUCRALSA CENTRO LITORNEC	PROBLEMA INDUSTRIAL #1, COL. PROBLEMA INDUSTRIAL TEL.: 761 782 9101 EXT. 5728 5102 JUJOTPEC, JILOTEPEC, EDO. DE MÉX. C.P. 54257
DURANGO	TORNILLOS AGUILA, S.A. DE C.V.	CLAVE 33 #609 y 692, LOCAL 102, C.P. 38010, HGO. TEL.: 616 671 7578 / 79 / 80 / 88
COAHUILA	SUCRALSA TORNILLO	BLOD. MIGUEL DE LA MADRID #199, PARQUE INDUSTRIAL ORIENTE, C.P. 27228, TORREÓN, COAH. TEL.: 871 209 0803 / 332 8013
COLIMA	BOMILLAS Y MOTORES BYMTEA DE MANZANILLO	CLAVE METAL MECÁNICA #280, PARQUE INDUSTRIAL SPUTNIK, TEL.: 314 332 1986 / 618 8171 9146 / 618 818 2844 MANZANILLO, COL. LUIS CECILIEIRENA, DURANGO, MZA 008 Lote #200, C.P. 28393, MANZANILLO, COL. SPUTNIK, TEL.: 314 332 1986 / 332 8013
GUADALAJARA	FIX FERRERIAS	AV. UNIVERSITARIA SUR #300, COL. HACENDA DE LA MORA, C.P. 45043, GUADALAJARA, JAL. TEL.: 666 173 9139 / 173 8400
CHIAPAS	SUCRALSA CLAUDIO ACUÑA SIN.	AV. UNIVERSITARIA SUR #300, COL. HACENDA DE LA MORA, C.P. 45043, GUADALAJARA, JAL. TEL.: 666 173 9139 / 173 8400
QUINTANA ROO	FIX FERRERIAS	AV. UNIVERSITARIA SUR #300, COL. HACENDA DE LA MORA, C.P. 45043, GUADALAJARA, JAL. TEL.: 666 173 9139 / 173 8400
PUEBLA	SUCRALSA PLEBIA	AV. PLEBEIA #28, SAN LORENZO ALMECATELA, C.P. 72701, CUAUTLA/CING, PUE. TEL.: 222 282 2828 / 84 / 85 / 86
OAXACA	FIX FERRERIAS	AV. 20 DE NOVIEMBRE #190, COL. CENTRO, C.P. 68300. TUXTEPEC, OAX. TEL.: 287 106 3092
NUEVO LEÓN	SUCRALSA MOTORREY	AV. MONTERREY #100, COL. MONTERREY PARKS, COLONIA PIEDRA DE ANAHUAC, C.P. 66022 ESCOBEDO, MONTERREY, C.P. 66824, SAN JUAN DEL RÍO, QRO. TEL.: 222 282 2828 / 84 / 85 / 86
NAVARRA	HERRMANNETAS DE TEPIC	AV. MZATLÁN #17, COL. CENTRO, C.P. 63000, TEPIC, NAY. TEL.: 331 258 0540
MORLOS	FIX FERRERIAS	CARREtera MONTERREY #120, COL. SOTE PEREZ, COL. CENTRO, C.P. 62930, GUADALAJARA. TEL.: 733 552 9319
BAJA CALIFORNIA	SUCRALSA TIJUANA	FRDORIO 11, C.P. 22244, TIJUANA, B.C. TEL.: 664 699 5100
AGUASCALIENTES	DE TODO PARA LA CONSTRUCCIÓN	AV. LA ENCANTADA, LOTE #5, PARQUE INDUSTRIAL EL AGUASCALIENTES, AGS., COL. GEMIMA, C.P. 20030. CARL. BARRAGÁN #120, COL. GEMIMA, C.P. 20030. AGUASCALIENTES, AGS., TEL.: 449 994 0557
BAJA CALIFORNIA SUR	FIX FERRERIAS	ELITE AV. LA ENCANTADA #5, RUIZ CONTRÍNEZ SN, COL. PUEBLO NUVE, C.P. 26260, COL. CONSULTORIO, B.C.S. TEL.: 613 152 1115
CAMPACHE	TORNILLO Y FERRERIA AAA	AV. ALVARO OBREGÓN #25, COL. ESPERANZA C.P. 24080 CAMPECHE, CAMP. TEL.: 981 815 2808 AV. ALVARO OBREGÓN #25, COL. ESPERANZA C.P. 24080 CAMPECHE, CAMP. TEL.: 981 815 2808
CHIHUAHUA	SUCRALSA CHIHUAHUA	AV. 18 DE SEPTIEMBRE #28-11, PARQUE INDUSTRIAL CALLE METAL MECÁNICA #280, PARQUE INDUSTRIAL ORIENTE, C.P. 27228, TORREÓN, COAH. TEL.: 871 209 0803 / 552 4861
MÉJICO	FIX FERRERIAS	EL MUNICIPIO DE CORREGIDORA, CORREGIDORA #22, COL. CENTRO, C.P. 60060, CUAUTITLÁN, CDMX. TEL.: 55 5520 5051 / 552 4861
COAHUILA	SUCRALSA TORNILLO	AV. 18 DE SEPTIEMBRE #28-11, PARQUE INDUSTRIAL CALLE METAL MECÁNICA #280, PARQUE INDUSTRIAL ORIENTE, C.P. 27228, TORREÓN, COAH. TEL.: 871 209 0803 / 552 4861
GUADALAJARA	FIX FERRERIAS	AV. UNIVERSITARIA SUR #27, COL. CENTRO, C.P. 30700, TAPACHULA, CHIH. TEL.: 962 118 4083 BFRACC. CARRETERA MEJICO CUAUTITLÁN, P. 3145, TAPACHULA, CHIH. TEL.: 962 118 4083
CHIAPAS	SUCRALSA CLAUDIO ACUÑA SIN.	AV. UNIVERSITARIA SUR #300, COL. HACENDA DE LA MORA, C.P. 45043, GUADALAJARA, JAL. TEL.: 666 173 9139 / 173 8400
QUINTANA ROO	FIX FERRERIAS	AV. UNIVERSITARIA SUR #300, COL. HACENDA DE LA MORA, C.P. 45043, GUADALAJARA, JAL. TEL.: 666 173 9139 / 173 8400
PUEBLA	SUCRALSA PLEBIA	AV. PLEBEIA #28, SAN LORENZO ALMECATELA, C.P. 72701, CUAUTLA/CING, PUE. TEL.: 222 282 2828 / 84 / 85 / 86
OAXACA	FIX FERRERIAS	AV. 20 DE NOVIEMBRE #190, COL. CENTRO, C.P. 68300. TUXTEPEC, OAX. TEL.: 287 106 3092
NUEVO LEÓN	SUCRALSA MOTORREY	AV. MONTERREY #100, COL. MONTERREY PARKS, COLONIA PIEDRA DE ANAHUAC, C.P. 66022 ESCOBEDO, MONTERREY, C.P. 66824, SAN JUAN DEL RÍO, QRO. TEL.: 222 282 2828 / 84 / 85 / 86
NAVARRA	HERRMANNETAS DE TEPIC	AV. MZATLÁN #17, COL. CENTRO, C.P. 63000, TEPIC, NAY. TEL.: 331 258 0540
MORLOS	FIX FERRERIAS	CARREtera MONTERREY #120, COL. SOTE PEREZ, COL. CENTRO, C.P. 62930, GUADALAJARA. TEL.: 733 552 9319
BAJA CALIFORNIA	SUCRALSA TIJUANA	FRDORIO 11, C.P. 22244, TIJUANA, B.C. TEL.: 664 699 5100
AGUASCALIENTES	DE TODO PARA LA CONSTRUCCIÓN	AV. LA ENCANTADA, LOTE #5, PARQUE INDUSTRIAL EL AGUASCALIENTES, AGS., COL. GEMIMA, C.P. 20030. CARL. BARRAGÁN #120, COL. GEMIMA, C.P. 20030. AGUASCALIENTES, AGS., TEL.: 449 994 0557

Solución de problemas

TRUPER®

PCNPA

SEARCH CARDS THESAURUS

*Centro de Servicio Autorizado TRUPER

Mantenimiento

TRUPEER®

completo antes de utilizarla o de almacenarla.

- ✓ Vadece el contenedor y volteé la bolsa de dentro hacia fuera para limpiarla con un cepillo.
 - ✓ Vadece el contenedor y volteé la bolsa de dentro hacia fuera para limpiarla con un cepillo.
 - ✓ Para una limpieza más profunda, retire la bolsa del tubo en cada alojamiento de sujeción de ganchito y tire. Limpie la bolsa con agua y jabón suave y déle que seque por completo.

L'Île-à-Vache à
ATTENTION

SERVICES

- Dependiendo de un tipo de combusible y acuerdo utilizados se cumplirán las condiciones de combustible y acuerdo utilizados.
 - Dependiendo de un acuerdo de combustible y acuerdo utilizados se cumplirán las condiciones de combustible y acuerdo utilizados.

Limpieza general

empare en su lugár.

- Kerele es mito del dile.
 - Dependiendo del tiempo de uso puede dar al filtro una limpia superficial con solo golpearlo ligeramente contra partículas de serrín y polvo.
 - Tambien puede soplar el filtro con aire comprimido, hasta que los bordes estén limpios.
 - Para una limpia más completa la limpia el filtro del aire en agua jabonosa blita, suéltale y déjale secar por completo antes de instalarlo de nuevo en la herramienta.
 - En caso de que utilice aire comprimido para secarlo, sopla por ambas caras del filtro.
 - Limpieza de nuevo el filtro del aire, verificando que

Cambridge University Press

odinba IP SOURCE


Limpieza del filtro del aire

odinba IP SOURCE

Mantenimiento

TRUPER®

• Añades de imprescindibles, más allá de servicios y funcionalidades que no son esenciales para el funcionamiento del sistema.

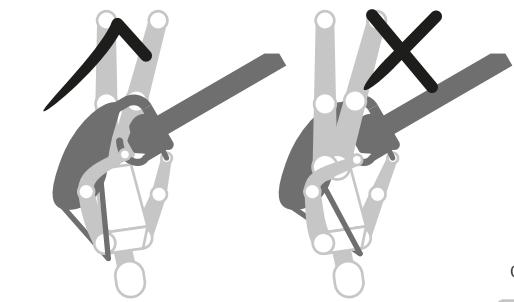

trabajo.

ADVERTENCIA • No sujetar la herramienta de con el escape del motor o el silenciamador durante el uso

cuerpo puede expulsar quemaduras al hacer contacto inigualadas que forman la indicada en el instrumento. Si

aspirar las hojas o residuos.

ADVERTENCIA • No sujetar la herramienta de maniobrando la boquilla cerca del suelo comience a

• Con movimientos de lado a lado, rotando su cintura y

• Presione el gatillo para que el tubo comience a aspirar.

severas.

animales. De lo contrario puede causar lesiones

ADVERTENCIA • No apunte el tubo a personas o

• Sostenga el mango con la mano izquierda y el mango

rápidamente la máquina y la bolsa recogerá en caso de


• Colocar con la derecha. De lo contrario puede sufrir

• Coloque la correa de la bolsa recogerá sobre el hombro

en ambos pies.

• Confirme que el peso de su cuerpo esté bien distribuido

Modo Aspirado

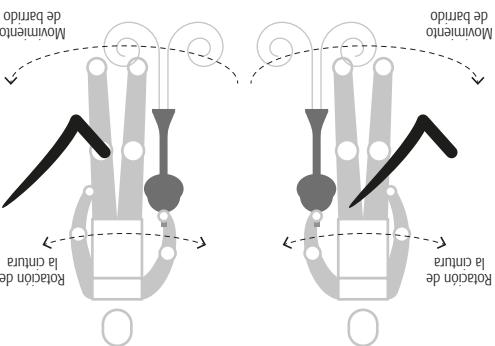

barrer las hojas o residuos.

ADVERTENCIA • No sujetar la herramienta de maniobrando la boquilla cerca del suelo comience a

• Con movimientos de lado a lado, rotando su cintura y

el tubo de soplando.

• Presione el gatillo para que el aire comience a salir por

severas.

animales. De lo contrario puede causar lesiones

ADVERTENCIA • No apunte el tubo a personas o


• Confirme que el peso de su cuerpo esté bien distribuido

en ambos pies.

• Confirme que el peso de su cuerpo esté bien distribuido

Modo Soplado

Encendido

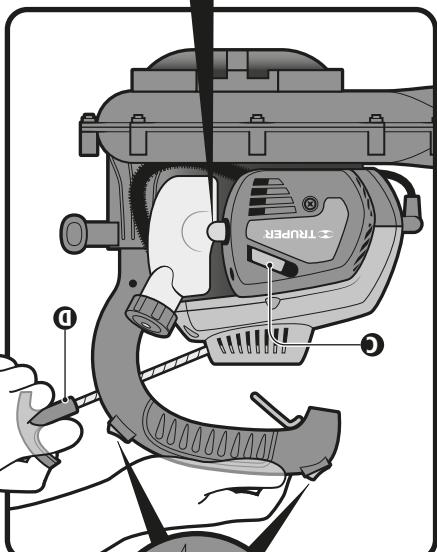



TRUPER®


Arranque del motor en frío

- La sopladora debe estar en una superficie plana y limpia.
- Coloque los dos interruptores del mango (A) en la posición de encendido (I).
- Presione el botón de arranque (B) hasta sentir resistencia. Jale la sopladora 3 o 4 veces. El motor normalmente no arranca en este paso.
- Mueva la palanca del ahogador (C) a la posición "Start". Jale una vez más la sopladora para arrancar el motor.
- Continúe presionando la palanca del ahogador hasta ver el combustible debajo ser visible en el bulbo cepillado. De lo contrario, presione el bulbo cepillado 6 veces (B). El combustible debe ser visible en el bulbo cepillado (I).
- Mueva la palanca del ahogador (C) a la posición de encendido (I).
- Jale la sopladora hasta que el motor comience a girar.

Arranque del motor en caliente

- La sopladora debe estar en una superficie plana y limpia.
- Coloque los dos interruptores del mango (A) en la posición de encendido (I).
- Coloque los dos interruptores del mango (A) en la posición de apagado (STOP) para que se detenga el motor.
- Presione cada una de los interruptores en la posición "Run".
- Coloque la palanca del ahogador a la posición "I" (Run).
- Jale la sopladora hasta que arranque el motor.

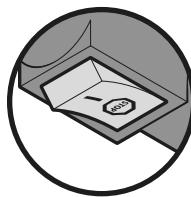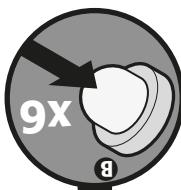

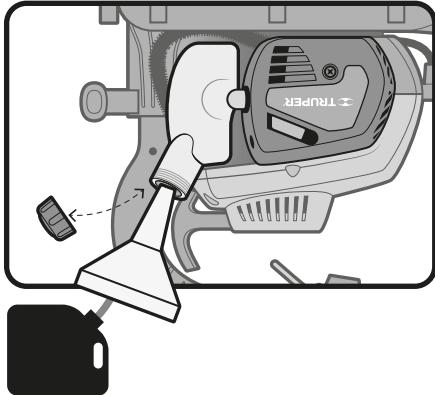


- Limpie todo el tanque de combustible.
- Coloque el tanque en la tapa del tanque de combustible y apriete con las manos.
- Tenga en cuenta que el tanque de combustible debe estar desmontado para extraer la mecha de combustible.
- Afloje lentamente la tapa del tanque de combustible para evitar su contaminación.
- Limpie la superficie alrededor de la tapa del tanque de combustible (figura 5).
- Siga las normas de seguridad para el manejo de combustible (figura 5).

Almacenamiento de combustible

Almacenamiento de combustible

- Alinee la ranura del cable (E), con el pivote de conexión (F).
- Empuje el cable y gire en sentido antihorario para tratarlo en posición.
- Empuje el cable y gire en sentido horario, hasta tratarlo en posición.
- Abra la puerta deslizante y alinee la ranura de la extensión trasera con la abertura deslizante (C).
- Con la ayuda de un destornillador, afloje el tornillo de la puerta de la extensión trasera (D), con el pivote en la posición de la extensión trasera.
- Empuje las extensiones en sentido de las flechas, hasta que el extensión deslizante, con la puerta de la extensión trasera (A).
- Para retirar las extensiones de aspirado, alinee la ranura de la extensión deslizante de aspirado (B), con el pivote de conexión (E).
- Empuje la extensión y girela en sentido horario, hasta tratarla en posición.
- Alinee la ranura del cable (E), con el pivote de conexión (F).
- Empuje el cable y gire en sentido horario, hasta tratarlo en posición.
- Cierre la puerta deslizante y girela en sentido horario, hasta tratarla en posición.
- Cierre la puerta deslizante y girela en sentido horario, hasta tratarla en posición.
- Alinee la ranura de la boquilla (A), con el pivote de conexión (B).
- Empuje la boquilla, conforme se indique en las flechas y conecte (B).
- Alinee la ranura de la boquilla (A), con el pivote de conexión (B).


Modo Aspirado

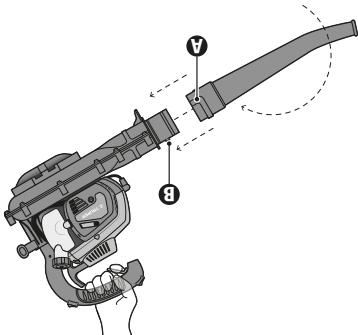

- Alinee la ranura de la boquilla (A), con el pivote de conexión (B).
- Empuje la boquilla, conforme se indique en las flechas y conecte (B).
- Alinee la ranura de la boquilla (A), con el pivote de conexión (B).
- La máquina en modo de aspirado debe sujetarse por el mango, ya sea con la mano izquierda o derecha.
- La máquina en modo de aspirado debe sujetarse por el mango, ya sea con la mano izquierda o derecha.
- Empuje la boquilla, conforme se indique en las flechas y conecte (B).
- Alinee la ranura de la boquilla (A), con el pivote de conexión (B).

Modo Soplado

Ensamblaje Agarré

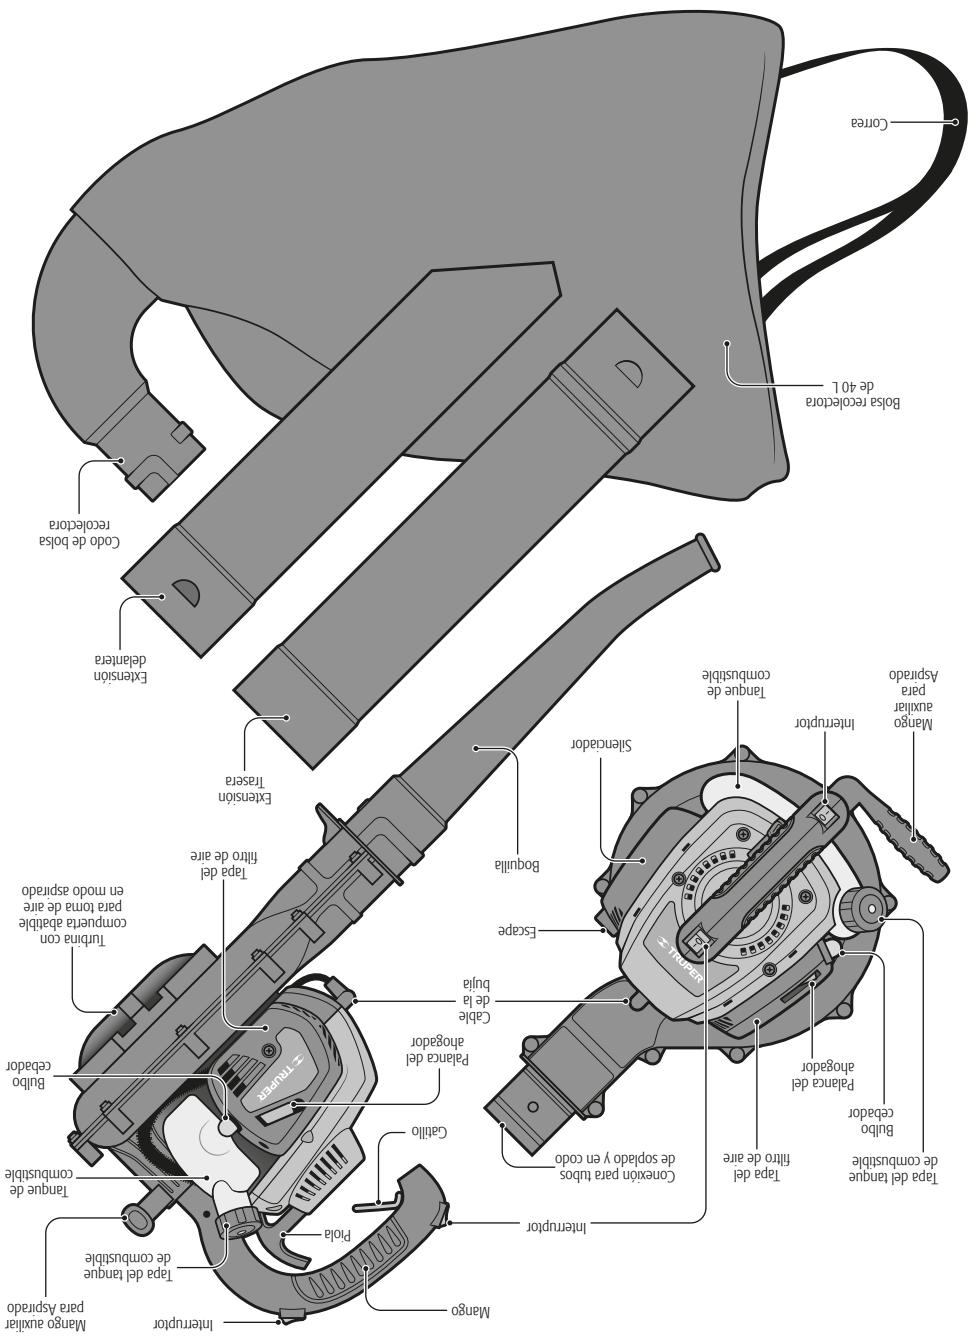

Partes

TRUPER®

ocasionar lesiones personales severas.

con el fin de prevenir un arranque accidental que pudiera causar daños a las partes móviles desconecte el cable de la bujía del motor.

A ADVERTENCIA • Siempre que tenga acceso a las garatitas.

ella. De lo contrario puede sufrir lesiones graves si se acciona el interruptor de arranque.

A ADVERTENCIA • No intente modificar la herramienta para obtener una mejor eficiencia.

contar con la herramienta para acceder a los componentes internos.

A ADVERTENCIA • No intente modificar la herramienta para acceder a los componentes internos.

haga lo contrario puede sufrir lesiones graves.

A ADVERTENCIA • En caso que le falten piezas, no

Recomendaciones de ensamblado

alimente la herramienta deseada de ser realizada sólo por personal altamente capacitado.

A ATENCIÓN • Si es necesario repararla de la herramienta deseada de acuerdo con las instrucciones de fabricación.

en reposo la herramienta. NO déle el motor funcioneando sin restricción. Deje que el motor运转antes de poner en marcha.

A ADVERTENCIA • Asegúrese de que el motor esté detenido antes de combustible.

antes de subirla a un vehículo vacío de tanque de combustible.

A ATENCIÓN • Siempre tránsite la herramienta con el motor apagado y sin el silenciador aligerado del cuerpo.

Despues de operar la sopladora

después de usarla a un vehículo vacío de tanque de combustible.

• Es importante a seguir las instrucciones de uso en el manual de la herramienta.

• No intente hacer ajustes a la herramienta con el motor en marcha.

A ATENCIÓN • Mantenga alejada la herramienta de materiales inflamables.

que contienen aceite o grasa.

• Mantenga todas las partes del cuerpo alejadas del silenciador. De lo contrario puede producirse una fumar humo.

• Mantenga que todos los componentes de la herramienta estén secos.

A ADVERTENCIA • Sostenga debidamente la sopladora para que no esté en contacto con el agua.

• Asegúrese de que los tubos no estén apretados a la herramienta.

A ADVERTENCIA • Utilice la herramienta únicamente para el trabajo que se indica en el manual.

utilice la herramienta.

• Sean adecuadas para el trabajo que se indica en el manual.

A ADVERTENCIA • Asegúrese de que la visibilidad y las condiciones de luz no interfieran con la formación de nubes de polvo o arena en la herramienta.

• En temperaturas extremas revisar que no haya nubes de vapor.

A ATENCIÓN • Asegúrese de que el área de trabajo sea abierta y bien ventilada.

seca y libre de ceniza o combustible.

A ADVERTENCIA • Asegúrese de que la herramienta esté encendida limpia.

de segundas a la herramienta.

A ATENCIÓN • Lea cuidadosamente las instrucciones de operación de la herramienta.

de segundas a la herramienta.


A ADVERTENCIA • La combinación de segundas con el combustible de la herramienta.

Advertencias de Seguridad para uso de sopladoras

Manejo de combustible

de segundas a la herramienta.

Para alargar la vida útil del motor use aceite sintético **TRUPER®** para motores de dos tiempos.

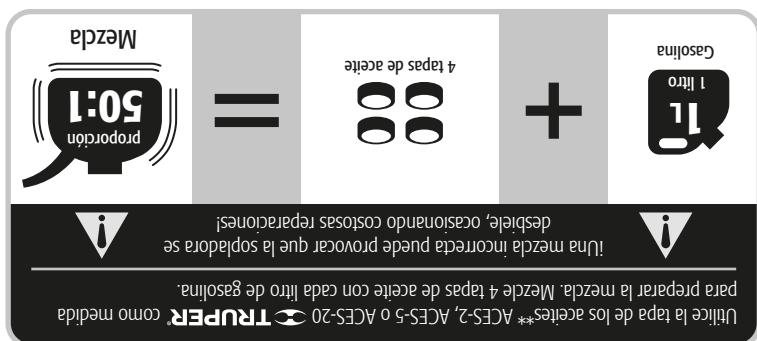

- A ADVERTENCIA** Cluidad el interento de arrancar la sopladora sin añadirle aceite a la mezcla de combustible provocara fallas en el motor.
- A ADVERTENCIA** Nunca lume cerca del combustible almacenada durante mas de 15 días. Haga la mezcla en pedazos en donde prepare la mezcla con el aceite, ni de la zona en donde se abastezca de la gasolina.
- A ATENCIÓN** Nunca utilice mezcla de combustible almacenada durante mas de 15 días. Haga la mezcla en pedazos en donde prepare la mezcla para gasolina. Siempre mezcle bien antes de vertirlo en el tanque del motor.
- La refrigeración de la mezcla debe de ser de 50 tantos de gasolina por 1 de aceite (proporción 50:1). Prepare la mezcla en un recipiente separado para gasolina. Sempre mezcle bien antes de vertirlo en el tanque del motor.
- No use aceite de uso automotor ni aceite para sopladoras de bordo de 2 tiempos.
- No use ningún tipo de gasolina premedida con aceite adquirida en gasolineras, como lo denominan las estaciones de servicio.
- El motor sera estropeado para funicular con gasolina sin plomo vehiculos con un octanaje de 87 (R+M)/2 o mas.
- La sopladora tiene un motor de 2 tiempos enfriado por aire que utiliza una mezcla de gasolina sin plomo y aceite automezclante de alta calidad con establezador de combustible especializado para motor de dos tiempos enfriado por aire.

Especificaciones de combustible

Ciclo de trabajo	30 min de descanso por tanque consumo. Máximo diario 6 horas.
Peso neto	4.4 kg
Tanque de combustible	460 ml
Velocidad en ralentí	3 000 r/min
Velocidad máxima del motor	8 000 r/min
Volumen de aire	10 m ³ /min (353 CFM)
Velocidad de aire	290 km/h (180 MPH)
Potencia	750 W (1 HP)
Motor	26 cm ³ (cc)
Descripción	Sopladora / Aspiradora a gasolina
Código	13047

SOPLA-261

■ Realice **MANTENIMIENTO** periódico a su máquina (página 10).

■ **SIMPRE** opere su sopladora / aspiradora a **MAXIMA POTENCIA** con el galón

■ No usar **MEZCLA** de combustible de más de 15 días.

88 + 12 = 50:1

de aceite de Gasolina Mezcla
4 tazas 1 litro

desbile, ocasionalmente costosas reparaciones!

pede provocar que la sopladora / aspiradora se

de 2 TIEMPOS! Una mezcla incorrecta

Utilice gasolina mezclada con **ACEITE** para motor

RECOMENDACIONES DE USO Y CUIDADOS



Para poder sacar el máximo provecho de la sopladora, alargar su vida útil, hacer válida la garantía en caso de ser necesario y evitar riesgos o lesiones fatales, es fundamental leer y comprender este instructivo por completo antes de usar la sopladora.

Guardé este instructivo para futuras referencias.

Los gráficos de este instructivo son para referencia, pueden variar del aspecto real de la sopladora.

- 14 Poliza de Garantía
- 13 Centros de Servicio Autorizados
- 12 Solución de problemas
- 10 Mantenimiento
- 9 Operación
- 8 Encendido
- 7 Abastecimiento de combustible
- 7 Ensamble y Agarre
- 6 Partes
- 5 Para uso de sopladoras
- 4 Advertencias de seguridad
- 3 Especificaciones de combustible
- 3 Especificaciones técnicas

ATENCIÓN

Indice

TRUPER®



Lea este instructivo por completo
antes de usar la herramienta.

ATENCIÓN




26 cm³ (cc)
Motor

13047 SOPLA-26T

Código Modelo

Este instructivo es para:

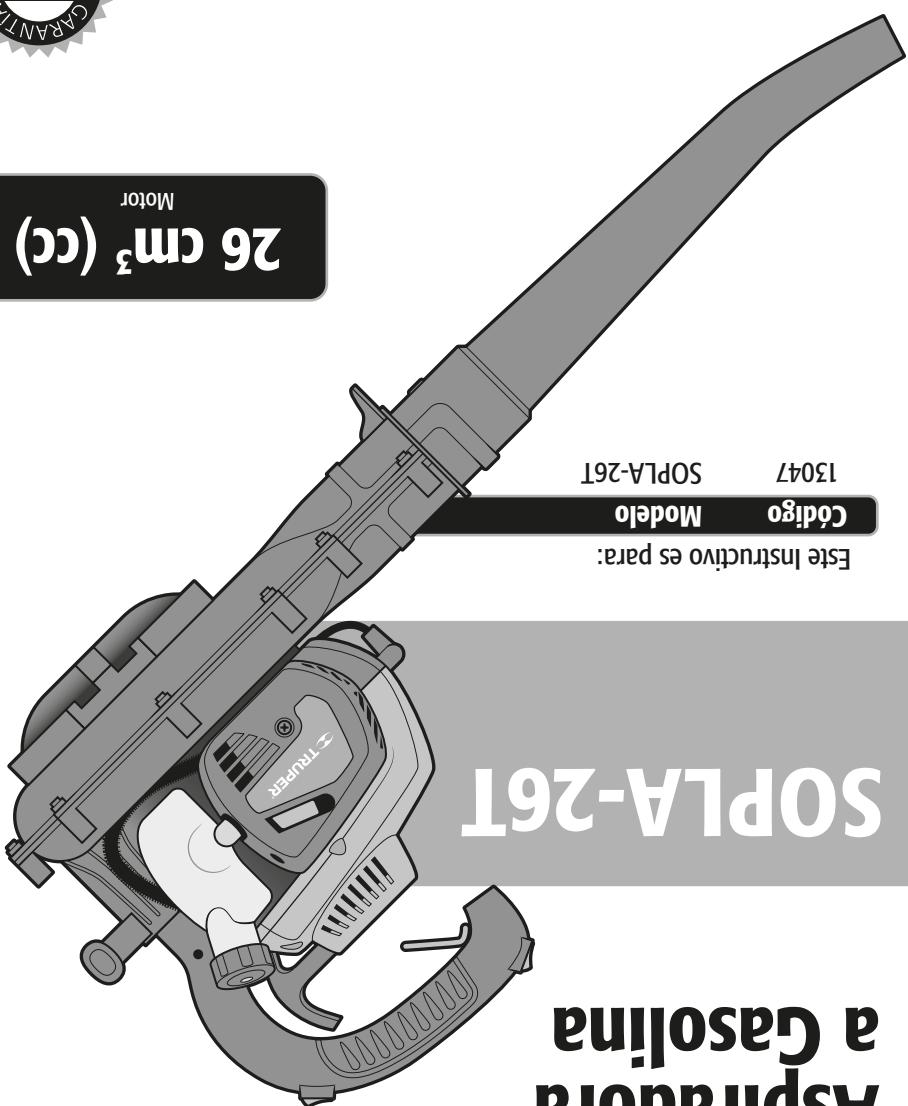

Sopladora /
Aspiradora
a Gasolina

Instructivo de

TRUPER®

ESPAÑOL
ENGLISH