


ENGLISH
ESPAÑOL

TRUPER®
PRO

Manual

Variable speed jig saw

1 Hp
Power

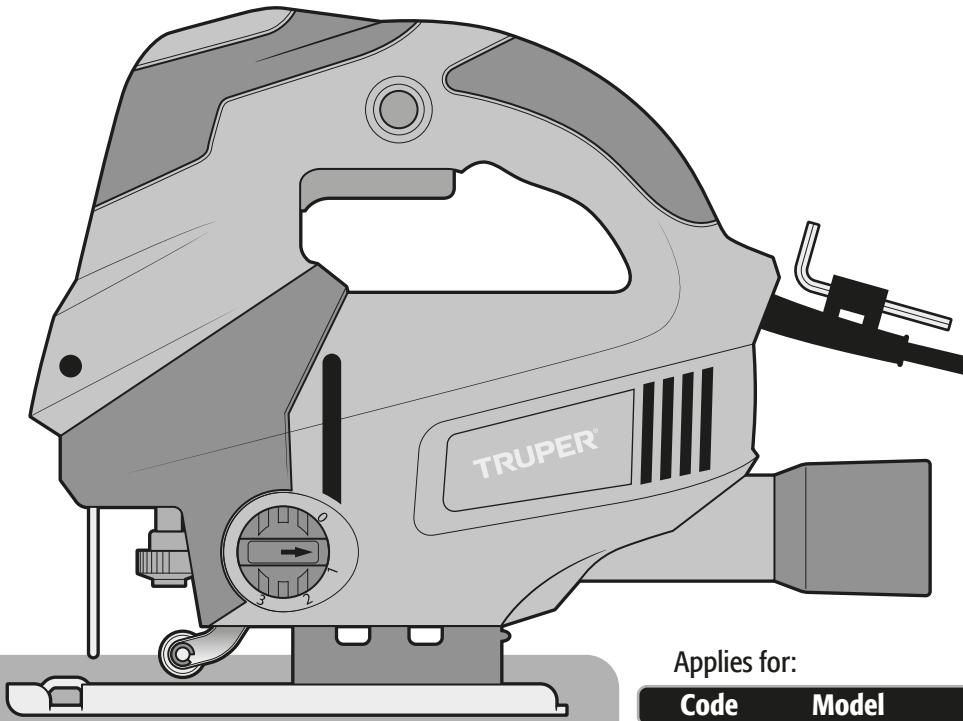

Applies for:

Code

Model

15423

CALA-A5

CALA-A5

 CAUTION



Read this manual thoroughly
before using the tool.




CAUTION

To gain the best performance of the tool, prolong the duty life, make the Warranty valid if necessary, and to avoid hazards of fatal injuries please read and understand this Manual before using the tool.

Technical data.....	3
Power requirements.....	3
 General power tool safety warnings.....	4
 Safety warnings for jig saws.....	5
Parts.....	6
Preparation.....	6
Start up.....	8
Maintenance.....	10
Notes.....	10
Authorized service centers.....	11
Warranty policy.....	12

Keep this manual for future references.

The illustrations in this manual are for reference only. They might be different from the real tool.

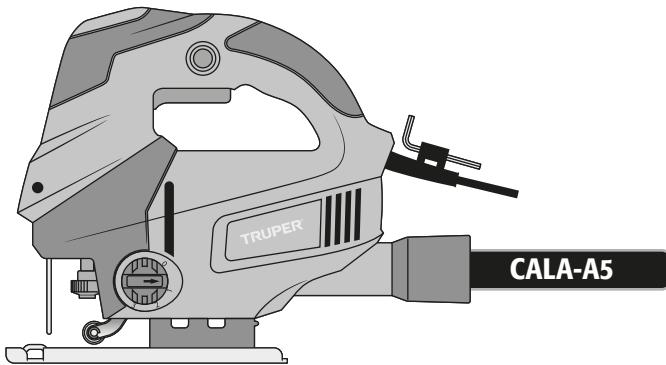

CALA-A5

Code	•	15423
Description	•	Variable speed jig saw
Voltage	•	127 V~
Frequency	•	60 Hz
Current	•	5.9 A
Power	•	1 Hp
Speed	•	800 strokes / min - 3 000 strokes / min
Miter cutting	•	0° - 45° left / right
Stroke length	•	3/4"
Cutting capacity	•	Wood 4" Steel 3/8"
Work cycle	•	30 minutes work per 15 minutes idle. Maximum 3 hours per day.
Conductors	•	18 AWG x 2C with insulating temperature of 221 °F
Insulation	•	Class II IP Grade • IP20

Power Cord Grips: Type Y.
Build Quality: Reinforced Insulation.
Thermal Insulation on Motor Winding: Class E.


WARNING Avoid the risk of electric shock or severe injury. When the power cable gets damaged it should only be replaced by the manufacturer or at a **TRUPER**® Authorized Service Center. The build quality of the electric insulation is altered if spills or liquid gets into the tool while in use. Do not expose to rain, liquids and/or dampness.

WARNING Before gaining access to the terminals all power sources should be disconnected.



Power requirements

WARNING Tools with double insulation and reinforced insulation are equipped with a polarized plug (one prong is wider than the other). This plug will only fit in the right way into a polarized outlet. If the plug cannot be introduced into the outlet, reverse the plug. If it still doesn't fit, call a qualified electrician to install for you a polarized outlet. Do not alter the plug in any way. Both insulation types eliminate the need of both a grounded third power cord with three prongs or a grounded power connection

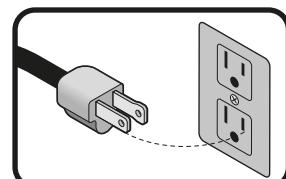

WARNING When using an extension cable, verify the gauge is enough for the power that your product needs. A lower gauge cable will cause voltage drop in the line, resulting in power loss and overheating. The following table shows the right size to use depending on cable's length and the ampere capability shown in the tool's nameplate. When in doubt use the next higher gauge.

Ampere Capacity	Number of Conductors	Extension gauge	
		from 6 ft to 49 ft	higher than 49 ft
from 0 A and up to 10 A		18 AWG(*)	16 AWG
from 10 A and up to 13 A		16 AWG	14 AWG
from 13 A and up to 15 A	3 (one grounded)	14 AWG	12 AWG
from 15 A and up to 20 A		8 AWG	6 AWG

* It is safe to use only if the extensions have a built-in artifact for over current protection.

AWG = American Wire Gauge. Reference: NMX-J-195-ANCE

WARNING When operating power tools outdoors, use a **VOLTECK**® grounded extension cable labeled "For Outdoors Use". These extensions are specially designed for operating outdoors and reduce the risk of electric shock.



General power tool safety warnings

⚠️ WARNING! Read carefully all safety warnings and instructions listed below. Failure to comply with any of these warnings may result in electric shock, fire and / or severe damage. **Save all warnings and instructions for future references.**

Work area

Keep your work area clean, and well lit.

Cluttered and dark areas may cause accidents.



Never use the tool in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.

Sparks generated by power tools may ignite the flammable material.



Keep children and bystanders at a safe distance while operating the tool.

Distractions may cause loss of control.



Electrical Safety

The tool plug must match the power outlet. Never modify the plug in any way. Do not use any adapter plugs with grounded power tools.

Modified plugs and different power outlets increase the risk of electric shock.



Avoid body contact with grounded surfaces, such as pipes, radiators, electric ranges and refrigerators.

The risk of electric shock increases if your body is grounded.

Do not expose the tool to rain or wet conditions.

Water entering into the tool increases the risk of electric shock.

Do not force the cord. Never use the cord to carry, lift or unplug the tool. Keep the cord away from heat, oil, sharp edges or moving parts.

Damaged or entangled cords increase the risk of electric shock.

When operating a tool outdoors, use an extension cord suitable for outdoor use.

Using an adequate outdoor extension cord reduces the risk of electric shock.

If operating the tool in a damp location cannot be avoided, use a ground fault circuit interrupter (GFCI) protected supply.

Using a GFCI reduces the risk of electric shock.

Personal safety

Stay alert, watch what you are doing and use common sense when operating a tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.

A moment of distraction while operating the tool may result in personal injury.

Use personal protective equipment. Always wear eye protection.

Protective equipment such as safety glasses, anti-dust mask, non-skid shoes, hard hats and hearing protection used in the right conditions significantly reduce personal injury.



Prevent unintentional starting up. Ensure the switch is in the "OFF" position before connecting into the power source and / or battery as well as when carrying the tool.

Transporting power tools with the finger on the switch or connecting power tools with the switch in the "ON" position may cause accidents.

Remove any wrench or vice before turning the power tool on.

Wrenches or vices left attached to rotating parts of the tool may result in personal injury.

Do not overreach. Keep proper footing and balance at all times.

This enables a better control on the tool during unexpected situations.

Dress properly. Do not wear loose clothing or jewelry. Keep hair, clothes and gloves away from the moving parts.

Loose clothes, jewelry or long hair may get caught in moving parts.



If you have dust extraction and collection devices connected onto the tool, inspect their connections and use them correctly.

Using these devices reduce dust-related risks.

Power Tools Use and Care

Do not force the tool. Use the adequate tool for your application.

The correct tool delivers a better and safer job at the rate for which it was designed.



Do not use the tool if the switch is not working properly.

Any power tool that cannot be turned ON or OFF is dangerous and should be repaired before operating.

Disconnect the tool from the power source and / or battery before making any adjustments, changing accessories or storing.

These measures reduce the risk of accidentally starting the tool.

Store tools out of the reach of children. Do not allow persons that are not familiar with the tool or its instructions to operate the tool.

Power tools are dangerous in the hands of untrained users.



Service the tool. Check the mobile parts are not misaligned or stuck. There should not be broken parts or other conditions that may affect its operation. Repair any damage before using the tool.

Most accidents are caused due to poor maintenance to the tools.



Keep the cutting accessories sharp and clean.

Cutting accessories in good working conditions are less likely to bind and are easier to control.

Use the tool, components and accessories in accordance with these instructions and the projected way to use it for the type of tool when in adequate working conditions.

Using the tool for applications different from those it was designed for, could result in a hazardous situation.

Service

Repair the tool in a TRUPER® Authorized Service Center using only identical spare parts.

This will ensure that the safety of the power tool is maintained.



This tool is in compliance with
the Official Mexican Standard
(NOM - Norma Oficial Mexicana).

Safety warnings for jig saws

TRUPER
PRO

Select the adequate blade

- CAUTION** • Select the adequate blade for the material. Reduce the risk of severe personal injury and make the job faster.
- WARNING** • Do not use dull or damaged blades. Bent blades may break easily and could cause kickback.
- CAUTION** • Handle blades with care. The teeth are very sharp.

Before operating the jig saw


- DANGER** • Double-check wall, floors, and ceilings to prevent making contact with power wires and / or pipes.
- CAUTION** • Before starting to cut verify there are no nails or screws along the cutting line.
- Clamp and secure the work piece if possible to prevent it from moving.
 - This jig saw is intended for manual use. Do not fix it.

After operating the jig saw


- WARNING** • Metal parts and accessories may get very hot if the tool is used for long periods of time.
- CAUTION** • Remove the Jig saw from the work piece only when it stops moving.

While operating the jig saw


- CAUTION** • Hold the tool by the insulated gripping parts when there is risk of making contact with hidden wiring or the tools cable. Contact with "live" wiring will electrify the exposed metal parts of the tool and send an electric shock to the operator.
- Use a bench vice or other practical way to support and secure the work piece onto a firm platform. Holding the work piece with your hand against your body makes it unstable and could cause loss of control.
 - **WARNING** • Keep your hands away from the cutting area. Do not overreach over the material to be cut. The distance of your hand with the blade is out of sight.
 - **CAUTION** • Never stop the blade by applying force on its side.
 - When operating the jig saw always assure it is firmly held.
 - When operating the jig saw sit it firmly against the material. It reduces vibration, stops the tool from jumping or breaking the blade.

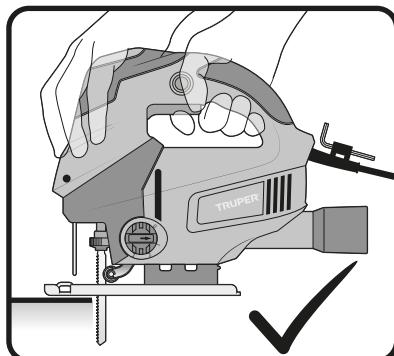

right way to hold the jig saw

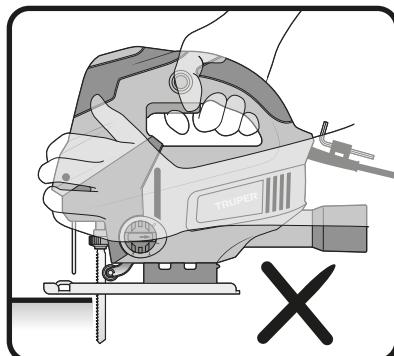



wrong way to hold the jig saw

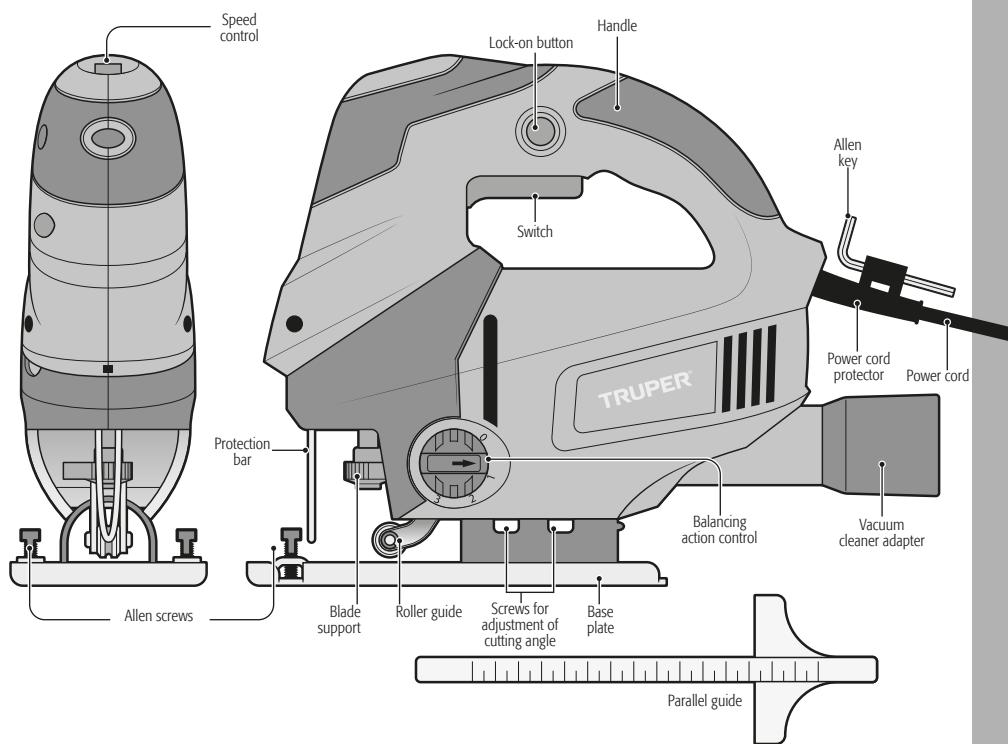

Preparation

Blade set up


- The opening of the blade support should be free of sawdust.
- Turn the lever to the right to open the blade support.
- Insert the blade all the way in the blade support. The backside of the blade should be set into the roller guide slot.
- Turn the lever to the left to close the blade support.

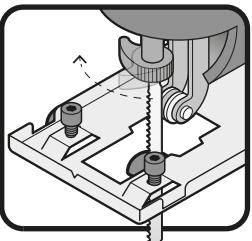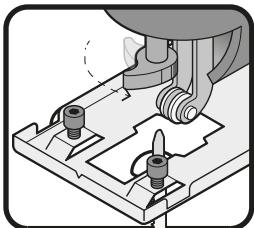

This jigsaw uses T-shank blade. To get better cutting results make sure to use the adequate blade for the material and cut to be made.


Preparation

TRUPER[®]
PRO

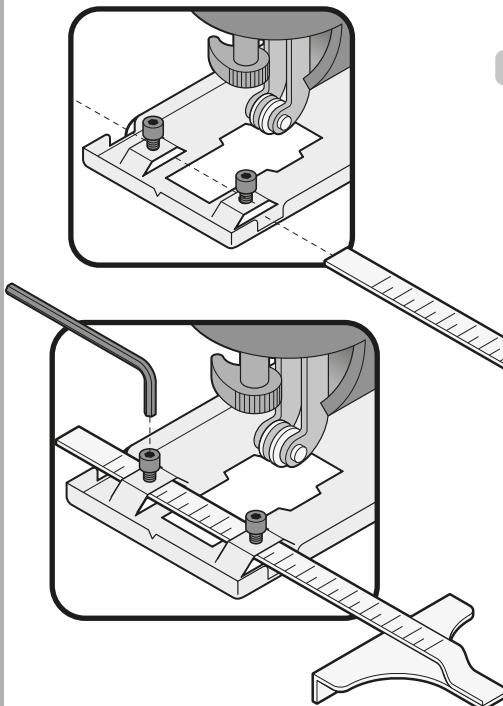


Parallel guide installation

- Loosen the fixing screws with the Hex key (included) and insert the parallel guide through the base of the guide.
- Set the width of the desired cut according to the scale on the inside of the base.
- Tighten the fixing screw.

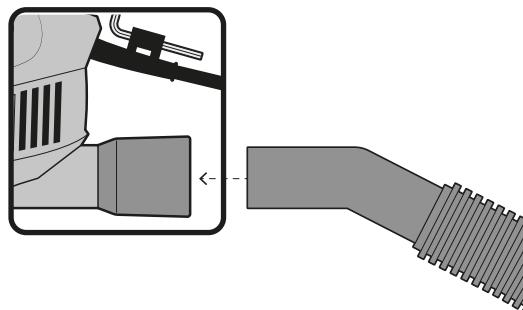

Extraction dust hose

- Connect the extraction hose to the dust extraction port of the machine with an internal diameter of 1 3/8" (35 mm) (not compatible with Truper brand vacuums).
- Connect the dust extraction hose to a dust extractor or vacuum cleaner.

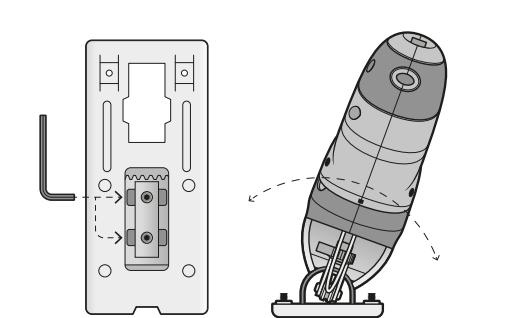

Adjusting the cutting angle

- Disconnect the unit from the power source.
- Loosen the 2 screws on the base plate with the Allen key included.
- Move the shoe forward in order to release it from the locking pin of the toothed guide of the shoe.
- Adjust the base plate into the desired angle using the serrated guide in the base plate.
- Tighten the screws back.
- Set the Allen key back in its holder in the power cable protector immediately after use.

Start up and operation control

- Intermittent Operation:

Connect the plug to the electrical outlet.

Press the switch (A) to start the jig saw operating.

To interrupt its use, simply release the switch.

- Continuous Operation:


Connect the plug to the electrical outlet. Press the switch (A) and lock it by pressing the Lock-on button (B).

To interrupt its operation, press and then release the switch.


Balancing action control (C)

The balancing action varies the blade cutting angle to increase the cutting efficiency.

It shall be adjusted with the jig saw unloaded. Do not apply excessive force on the blade when cutting with the balancing action. The blade cuts only upwards.

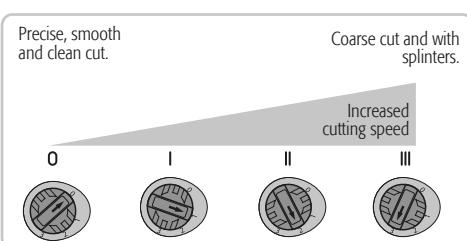

Material	Hard	Soft
	Steel, stainless steel, aluminum, plastic, wood and plywood.	Steel, stainless steel, aluminum, plastic, wood and plywood.
Wood and plywood		
Cut	Straight and curved	Straight only

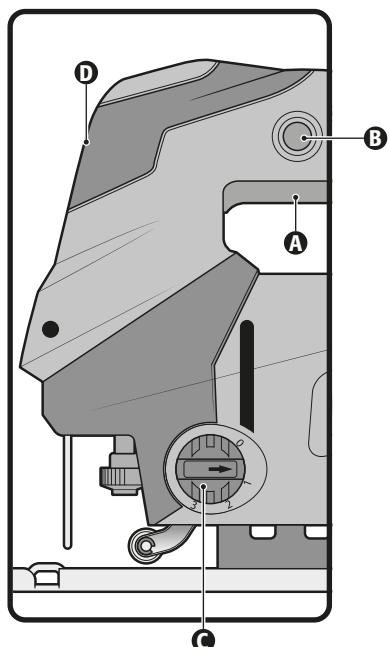

Speed control

- The tool can be operated at different speeds. These are selected by adjusting the speed control (D) located on the top of the tool.

- The number of coats required depends on the material and working conditions, and it is advisable to determine it by testing.

It is advisable to reduce the number of strokes when applying the saw blade while it is in operation against the workpiece, as well as when sawing plastic and aluminum.

- Refer to the speed guide to select the appropriate one for the job to be done.

! WARNING • When working for an extended period of time with a limited number of blades, the power tool may heat up strongly. Remove the saw blade and let the power tool run for about 3 minutes at maximum speed to allow it to cool down.


Speed guide

Application	Speed
Sharp curves	1-2
Curve cutting	3-4
Curve cutting	4-5
Standard cut, Fast cut	6

Cut wood sheets


- When cutting most wood sheets or very thin wood use a blade with fine teeth. Reduce splinters in the edges.
- Clamp scrap pieces of wood onto both faces of the work piece and start cutting.

⚠ CAUTION • Do not use the balancing action when cutting much closed circles or angles.

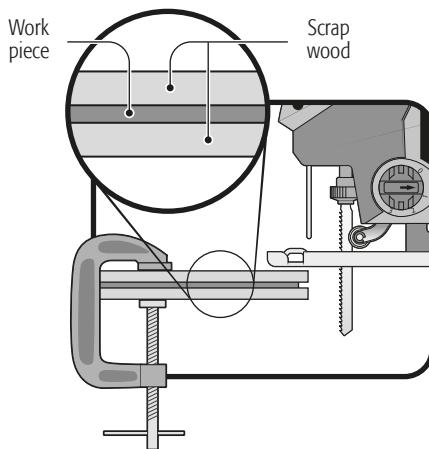

Straight cut

- To make more accurate straight cuts, use the parallel guide provided with the tool by resting it against the edge of the workpiece.
- The parallel guide is inserted through the slots on the saw's shoe. To adjust the width, loosen the Allen head screws and move the parallel guide to the desired position.
- Straight cuts can also be made with a good finish by cutting slowly along a previously marked cutting line.

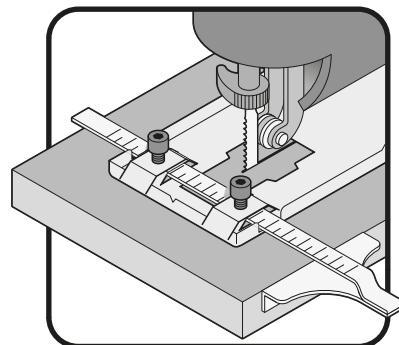

Circular cut

- Circular cuts can also get a fine finish if cutting slowly over a line previously marked similar to the straight cut. With a circular guide (not included) the jig saw can make perfect circular cuts.

⚠ WARNING Disconnect the tool from the power source before making adjustments, service or maintenance to the jig saw.

Cleaning and care

- Keep the tool free of dust. Never use water or chemical-based cleansing materials. Clean only using a clean and dry cloth.
- Keep the ventilation slots always clean and free of obstructions to guarantee the right cooling of the motor.
- Check the feeding cable regularly to look for any damages. In case the cable is damaged change it in a **TRUPER**® Authorized service center.

Service


- The tool shall only be serviced in a **TRUPER**® Authorized service center. Service and maintenance carried out by non-qualified people may be dangerous and could cause severe personal injury. It also makes the product warranty void.

Carbon brush replacement


- Carbon brushes need to be checked regularly and when worn, replaced in a **TRUPER**® Authorized Service Center. After the carbons have been replaced, ask the technician to inspect if they run freely in the carbon housing and to let run the machine 5 minutes to make even the contact of carbon and commutator.
- Use only **TRUPER**® original spare carbon brushes, designed specifically with the strength and electric resistance fit for each type of motor. Carbon brushes that are out of specifications may damage the motor.
- When replacing carbon brushes always change both pieces.

Lubrication

- Regularly apply a drop of lubricant to the roller guide for proper blade slippage when cutting.

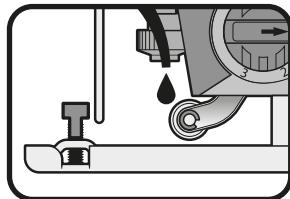

Notes

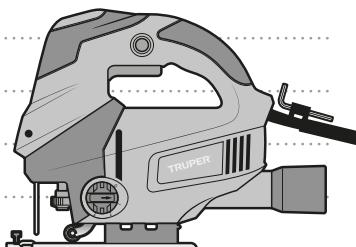

Authorized service centers

In the event of any problem contacting a Truper Authorized Service Center, please see our webpage www.truper.com to get an updated list, or call our toll-free numbers 800 690-6990 or 800-018-7873 to get information about the nearest Service Center.

AGUASCALIENTES	DE TODO PARA LA CONSTRUCCIÓN	
	GRAL. BARRAGÁN #1201, COL. GREMIAL, C.P. 20030, AGUASCALIENTES, AGS. TEL.: 449 994 0537	
BAJA CALIFORNIA	SUCRAL TIJUANA	
	AV. LA ENCANTADA, LOTE #5, PARQUE INDUSTRIAL EL FLORIDO II, C.P. 22244, TIJUANA, B.C. TEL.: 664 969 5100	
BAJA CALIFORNIA SUR	FIX FERRETERÍAS	
	FELIPE ÁNGELES ESQ. RUIZ CORTÍNEZ S/N, COL. PUEBLO NUEVO, C.P. 23670, CD. CONSTITUCIÓN, B.C.S. TEL.: 613 132 1115	
CAMPECHE	TORNILLERÍA Y FERRETERÍA AAA	
	AV. ALVARO OBREGÓN #524, COL. ESPERANZA C.P. 24080 CAMPECHE, CAMP. TEL.: 981 815 2808	
CHIAPAS	FIX FERRETERÍAS	
	AV. CENTRAL SUR #27, COL. CENTRO, C.P. 30700, TAPACHULA, CHIS. TEL.: 962 118 4083	
CHIHUAHUA	SUCRAL CHIHUAHUA	
	AV. SILVESTRE TERRAZAS #128-11, PARQUE INDUSTRIAL BAFAR, CARRETERA MÉXICO CUAHTEMOC, C.P. 31415, CHIHUAHUA, CHIH. TEL. 614 434 0052	
CIUDAD DE MEXICO	FIX FERRETERÍAS	
	EL MONSTRUO DE CORREDORIA, CORREDORIA # 35, COL. CENTRO, C.P. 06060, CUAUHTÉMOC, CDMX. TEL: 55 5522 5031 / 5522 4861	
COAHUILA	SUCRAL TORREÓN	
	CALLE METAL MECÁNICA #280, PARQUE INDUSTRIAL ORIENTE, C.P. 22128, TORREÓN, COAH. TEL.: 871 209 68 23	
COLIMA	BOMBAS Y MOTORES BYMTESA DE MANZANILLO	
	BLVD. MIGUEL DE LA MADRID #190, COL. 16 DE SEPTIEMBRE, C.P. 28239, MANZANILLO, COL. TEL.: 314 332 1986 / 332 8013	
DURANGO	TORNILLOS ÁGUILA, S.A. DE C.V.	
	MAZURIO #200, COL. LUIS ECHEVERRÍA, DURANGO, DGO.TEL: 618 817 1946 / 618 818 2844	
ESTADO DE MÉXICO	SUCRAL CENTRO JILOTEPEC	
	PARQUE INDUSTRIAL # 1, COL. PARQUE INDUSTRIAL JILOTEPEC, JILOTEPEC, EDO. DE MÉX. C.P. 54257 TEL: 761 782 910 EXT. 5728 Y 5102	
GUANAJUATO	CIA. FERRETERA NUEVO MUNDO S.A. DE C.V.	
	AV. MÉXICO - JAPÓN #225, CD. INDUSTRIAL, C.P. 38010, CELAYA, GTO. TEL.: 461 617 7578 / 79 / 80 / 88	
GUERRERO	CENTRO DE SERVICIO ECLIPSE	
	CALLE PRINCIPAL MZ.1 LT. 1, COL. SANTA FE, C.P. 39010, CHILPANCINGO, GRO. TEL.: 747 479 5793	
HIDALGO	FERREPRECIOS S.A. DE C.V.	
	LIBERTAD ORIENTE #304 LOCAL 30, INTERIOR DE PASAJE ROBLEDO, COL. CENTRO, C.P. 43600, TULANCINGO, HGO. TEL.: 775 753 6615 / 775 753 6616	
JALISCO	SUCRAL GUADALAJARA	
	AV. ADOLFO B. HORN # 6800, COL: SANTA CRUZ DEL VALLE, C.P.: 45655, TLAJOMULCO DE ZUÑIGA, JAL. TEL.: 33 3606 5285 AL 90	
MICHOACÁN	FIX FERRETERÍAS	
	AV. PASEO DE LA REPÚBLICA #3140-A, COL. EX-HACIENDA DE LA HUERTA, C.P. 58050, MORELIA, MICH. TEL.: 443 334 6858	
MORELOS	FIX FERRETERÍAS	
	CAPITÁN ANZURES #95, ESQ. JOSÉ PERDIZ, COL. CENTRO, C.P. 62740, CUÁUTLA, MOR. TEL.: 735 352 8931	
NAYARIT	HERRAMIENTAS DE TEPIC	
	MAZATLÁN #117, COL. CENTRO, C.P. 63000, TEPIC, NAY. TEL.: 311 258 0540	
NUEVO LEÓN	SUCRAL MONTERREY	
	CARRETERA LAREDO #500, 18 MONTERREY PARKS, COLONIA PUERTA DE ANÁHUAC, C.P. 66052, ESCOBEDO, NUEVO LEÓN, TEL: 81 8352 8791 / 81 8352 8790	
OAXACA	FIX FERRETERÍAS	
	AV. 20 DE NOVIEMBRE #910, COL. CENTRO, C.P. 68300, TUXTEPEC, OAX. TEL: 287 106 3092	
PUEBLA	SUCRAL PUEBLA	
	AV. PERIFÉRICO #2-A, SAN LORENZO ALMECATLA, C.P. 72710, CUÁUTLACINGO, PUE. TEL: 222 282 8282 / 84 / 85 / 86	
QUERÉTARO	ARU HERRAMIENTAS S.A. DE C.V.	
	AV. PUERTO DE VERACRUZ #110, COL. RANCHO DE ENMEDIO, C.P. 76842, SAN JUAN DEL RÍO, QRO. TEL.: 427 268 4544	
QUINTANA ROO	FIX FERRETERÍAS	
	CARRETERA FEDERAL MZ. 46 LT. 3 LOCAL 2, COL. EJIDAL, C.P. 77710 PLAYA DEL CARMEN, Q.R. TEL: 984 267 3140	
SAN LUIS POTOSÍ	FIX FERRETERÍAS	
	AV. UNIVERSIDAD #1850, COL. EL PASEO, C.P. 78320, SAN LUIS POTOSÍ, SLP. TEL: 444 822 4341	
SINALOA	SUCRAL CULIACÁN	
	AV. JESÚS KUMATE #4301, COL. HACIENDA DE LA MORA, C.P. 80143, CULIACÁN, SIN. TEL.: 667 173 9139 / 173 8400	
SONORA	FIX FERRETERÍAS	
	CALLE 5 DE FEBRERO #517, SUR LT. 25 MZ. 10, COL. CENTRO, C.P. 85000, CD. OBREGÓN, SON. TEL.: 644 413 2392	
TABASCO	SUCRAL VILLAHERMOSA	
	CALLE HELIO LOTES 1, 2 Y 3 MZ. #1, COL. INDUSTRIAL, 2A ETAPA, C.P. 86010, VILLAHERMOSA, TAB. TEL.: 993 353 7244	
TAMAULIPAS	VM ORINGS Y REFACCIONES	
	CALLE ROSITA #527 ENTRE 20 DE NOVIEMBRE Y GRAL. RODRÍGUEZ, FRACC. REYNOSA, C.P. 88780, REYNOSA, TAMS. TEL.: 899 926 7552	
TLAXCALA	SERVICIOS Y HERRAMIENTAS INDUSTRIALES	
	PABLO SIDAR #152, COL. BARRIO DE SAN BARTOLOMÉ, C.P. 90970, SAN PABLO DEL MONTE, TLAX. TEL.: 222 271 7502	
VERACRUZ	LA CASA DISTRIBUIDORA TRUPER	
	BLVD. PRIMAVERA. ESQ. HORTENSIA S/N, COL. PRIMAVERA C.P. 93308, POZA RICA, VER. TEL.: 782 823 8100 / 826 8484	
YUCATÁN	SUCRAL MÉRIDA	
	CALLE 33 #600 Y 602, LOCALIDAD ITZINCAZ Y MULSAY, MPIO. UMÁN, C.P. 97390, MÉRIDA, YUC. TEL.: 999 912 2451	

Code

15423

Model

CALA-A5

Brand**TRUPER®
PRO**

Warranty. Duration: 3 year. Coverage: parts, components and workmanship against manufacturing or operating defects, except if used under conditions other than normal; when it was not operated in accordance with the instructive; was altered or repaired by personnel not authorized by Truper®. To make the warranty valid, present the product, stamped policy or invoice or receipt or voucher, in the establishment where you bought it or in Corregidora 35, Centro, Cuauhtémoc, CDMX, 06060, where you can also purchase parts, components, consumables and accessories. It includes the costs of transportation of the product that derive from its fulfillment of its service network. Phone number **800-018-7873**. Made in China. Imported by Truper, S.A. de C.V. Parque Industrial 1, Parque Industrial Jilotepec, Jilotepec, Edo. de Méx. C.P. 54257, Phone number 761 782 9100.



Stamp of the business. Delivery date:

Sello del establecimiento comercial. Fecho de entregas:



Industrial 1, Parque Industrial Jilotepic, Jilotepic, Edo. de Mex. C.P. 54257, Tel. 761 782 9100.
Industriales y servicios. Incluye los gastos de transportación del producto que deviven de su cumplimiento de consumoables y accesorios. Compra o recibo o cambio de adquisitor partes, componentes, o en Corregidora 35, Centro, Querétaro, CDMX, 60060, donde también podrá adquirir partes, componentes, presentes el producto, poliza sellada o factura o recibo o compra de establecimientos donde lo compró institutivo, fue alrededo o repartido por personal no autorizado por Truper®. Para hacer efectiva la garantíafuncionamiento, excepto si se uso en condiciones distintas a las normales; cuando no fué operado conforme a las normas establecidas por el fabricante o el instalador.

Garantía. Duración: 3 años. Cobertura: piezas, componentes y mano de obra contra defectos de fabricación o

Código	Modelo	Marca	CAL-A5	PRO TRUPER®	15423
--------	--------	-------	--------	----------------	-------

garantía
poliza de

PRO
TRUPER®

En caso de tener algún problema para contactar un Centro de servicio autorizado TRUPER®, consulte nuestra página www.truper.com donde obtendrá un listado actualizado, o llame al: **800 690 6990** u **800-018-7873** donde le informarán cuál es el centro de servicio más cercano.

MORELOS	SUCRAL PUEBLA	AV. PAPALOMBAR #93, ESO, JOSE PEREZ, COL. PUEBLA, MOR.	TEL.: 755 552 6931
NAVARA	HERMANITAS DE TEPIC	MZ.511 #17, COL. CENTRO, CP. 63000, TEPIC, NAY.	TEL.: 311 258 040
COLIMA	SUCRAL MEXICALI	CARRERA LA LARDO #500, 1B MONTERREY PARKS, COLONIA PLAZA DE NAVALCHA, CP. 66062 EDOMEX.	TEL.: 010 606 3092
OAXACA	SUCRAL OAXACA	AV. 20 DE ENERO #1910, COL. CENTRO, CP. 68300.	TEL.: 222 282 2828 / 84 / 85 / 96
QUERÉTARO	AU HERMANITAS SA DE CV	AV. PELÍCULA #27-A SAN LORENZO ALMECTLA, CP. 77170 PLAZA DEL CARMEN, QR.	TEL.: 947 267 1470
QUINTANA ROO	FIX FERRERIAS	CARRETERA A RIVIERA MAYA #10, 3 T LOCAL 2, COL. EJIDAL,	TEL.: 947 268 4544
PUEBLA	SUCRAL PUEBLA	CP. 77710 PLAZA DEL CARMEN, QR.	TEL.: 947 267 1470
GUERRERO	QUERÉTARO	AV. PELÍCULA #1850, COL. EL PASO, CP. 78220.	TEL.: SAN LUIS POTOSI, SL/P TEL.: 444 822 4341
SINALOA	SUCRAL SINALOA	CP. 80000, COL. DURANGO, SON.	TEL.: 667 713 1939 / 173 8400
MEXICO	SONORA	AV. JESUS MARIA SUR #401, COL. HACENDA DE LA MORA, CP. 86100, COAH.	TEL.: 667 713 2392
TAMAULIPAS	WIM REFRACCIONES	CALLIE HEDINA LOTES 1, 2 Y 3 ZN #1, COL. INDUSTRIAL, CP. 88100, MEXICO.	TEL.: 993 553 7252
VERACRUZ	LA CASA DISTRIBUIDORA TRUPER	APARTADO DE CORREO #1725 COL. BARRIO DE SAN BARTOLOME, CP. 90010, SAN MIGUEL TLAZ.	TEL.: 222 271 7502
TLAXCALA	ERARIO Y HERMANITAS INSTRUMENTOS	PRIMERAS CP. 3508, PZA. HORSENA, SN, COL. PRIMERAS, CP. 90010, SAN MIGUEL TLAZ.	TEL.: 782 823 8100 / 826 8484
JALISCO	SUCRAL GUADALAJARA	EDIFICIO PIRAMIDE, PZA. HORSENA, CP. 38050, MORELIA, MICHOACÁN.	TEL.: 35 366 2825 AL 90

MICHOACÁN	AL. ADOFO G. HORN #6800, COL. SANTO CRUZ DEL VALLE, CP. 45651, TLAZULILCO DE ZINAC, JAL.
JALISCO	EDIFICIO PIRAMIDE, PZA. HORSENA, CP. 38050, MORELIA, MICHOACÁN.

HIDALGO	LAUREMOS S.A DE C.V.
JALISCO	LAUREMOS S.A DE C.V.

GUANAJAUTA	CAJA NEGRA MINDO S.A DE C.V.
MEXICO	CAJA NEGRA MINDO S.A DE C.V.

MEXICO	ESTADO DE MEXICO
MEXICO	ESTADO DE MEXICO

DURANGOC	TONILLOS GÜILIA S.A DE C.V.
MEXICO	TONILLOS GÜILIA S.A DE C.V.

COLIMA	BOMMAS R MOTORES BMTESA DE MANZANILLO
MEXICO	BOMMAS R MOTORES BMTESA DE MANZANILLO


CUAHUILA	SUCRAL TORREÓN S.A DE C.V.
MEXICO	SUCRAL TORREÓN S.A DE C.V.

CHIHUAHUA	SUCRAL CHIHUAHUA S.A DE C.V.
MEXICO	SUCRAL CHIHUAHUA S.A DE C.V.


CHIAPAS	TONILLESERIA Y FERRERIA A.A
MEXICO	TONILLESERIA Y FERRERIA A.A

BAJA	FIX FERRERIAS S.A DE C.V.
MEXICO	FIX FERRERIAS S.A DE C.V.

AGUASCALIENTES	DE TODO PARA LA CONSTRUCCIÓN
MEXICO	DE TODO PARA LA CONSTRUCCIÓN

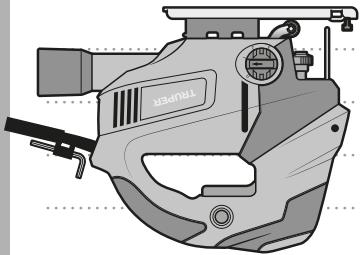

Notas

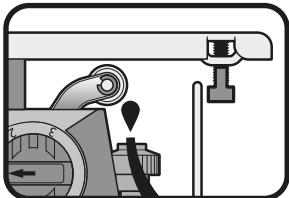

mantenidas corta.

- Aplicar regularmente una gota de lubricante al rodamiento guía para un adecuado deslizamiento de la sección de cuchilla.

Lubricación

- Cuando se haga el cambio de carbonos siempre deben reemplazarse los dos carbonos.

TRUPER® ofrece diferentes tipos de especificaciones para el motor los carbonos fúnebra de especificaciones con la durada la resistencia eléctrica adecuadas para cada tipo de motor.

Solo se deben usar carbonos de repuesto que se adapten al motor. Los carbonos de repuesto deben ser empalmados de acuerdo a las instrucciones de manejo del fabricante. Despues de usarlos deben ser desechados.

- Los carbonos deben revisarse periódicamente y ser reemplazados siempre por un centro de servicio autorizado **TRUPER®**.

Cambio de carbonos

ocasionar daños personales además de invalidar la garantía por personas no calificadas puede resultar peligroso y llevar a un accidente en un centro de servicio autorizado.

- El servicio de las sierras caladoras debe ser realizado únicamente en un centro de servicio autorizado.

Servicio

TRUPER® ofrece cambios de cable en un centro de servicio autorizado de acuerdo a la durada. En caso de estar dañados, revisar completamente el cable de alimentación para del motor.

- Revisar completamente el cable de alimentación para del motor.
- Siempre mantener las ventosas limpias y libres de obstrucciones para garantizar un entornamiento adecuado de la limpieza.
- Caladora limpia solamente con un trapo limpio y seco.
- Agua o limpiadores químicos para limpiar la sierra.
- Mantenga la sierra caladora libre de polvo. Nunca utilice agua ni líquidos para limpiar la sierra caladora.

Limpieza y cuidados

del tomacorriente antes de hacer cambios de servicio o mantenerlo a la sierra caladora.


- **ADVERTENCIA** Desconecte el cable de alimentación

Mantenimiento


PRO
TRUPER®

- Los cortes circulares se pueden realizar con un buen acuerdo de una guía circular (no incluida) al caladore puede previamente marcada al igual que los cortes rectos. Con la acabado cortando lentamente sobre una línea de corte hacer cortes circulares perfectos.

Cortes circulares

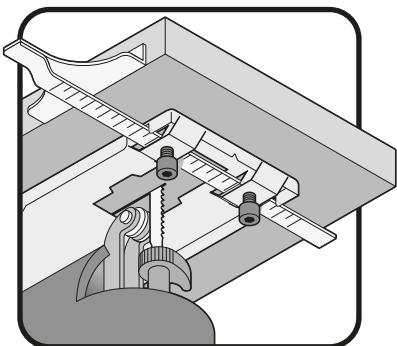

corte previamente marcada.
buen acabado cortando lentamente sobre una linea de
acabado rectos también se pueden realizar con un
desecho.

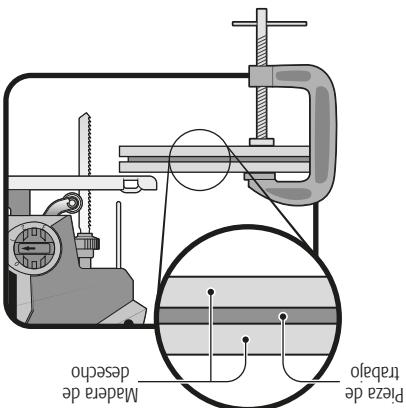

corte circulares muy cercados o angulosos.

A ATENCIÓN No utilice la acción pendular cuando

- Los cortes rectos también se realizan se inserta por las ranuras que tiene la
cabeza lineal y recorta la guía paralela a la posicón
de la pieza de trabajo.
- La guía paralela se inserta por las ranuras que tiene la
cabeza lineal y recorta la guía paralela a la posicón
de la pieza de trabajo.
- Para realizar cortes rectos más exactos use la guía
paralela provista con la herramienta apoyándola al canto
de la pieza de trabajo.

Cortes rectos

Velocidad	Aplicación	Corte de velocidadas
1-2	Cortas agudas	Corte de curvas
3-4	Cortes de curvas	Corte de curvas
4-5	Cortes de curvas	Corte espinadas / Corte rápido
6		Corte espinadas / Corte rápido


Guía de velocidades

• **ADVERTENCIA** • Al trabajar prolongadamente con un número de cortes reducido, puede que la herramienta eléctrica se caliente excesivamente. Retire la sierra y déje tratar la herramienta eléctrica durante aproximadamente 3 minutos para que se enfrié.

• Es recomendable reducir el número de cortes al trabajar a una velocidad constante para el trabajo, así como lo hará una sierra en función inversa contra la pieza de trabajo.


• En material de plástico, se recomienda reducir el número de cortes para evitar el sobrecalentamiento del material y la deformación.

• La herramienta puede operar a distintas velocidades dependiendo del selector de velocidad (D) que se selecciona ajustando el selector de velocidadas (D).

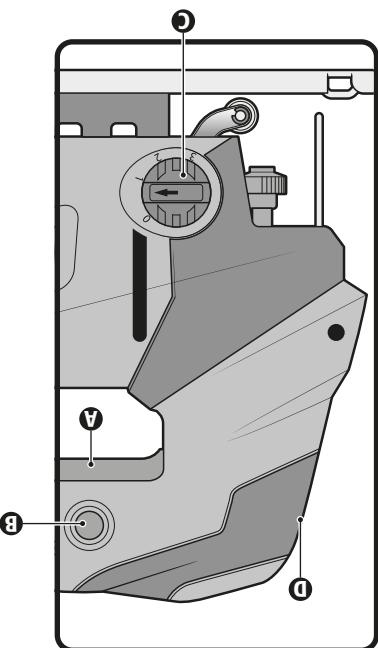

Control de velocidad

Material	Dura	Suave	Solo recto	Recto y	Corte
Aire, aero	Acero, hierro	Madera y	contrachapado	madera y	contrachapado
maderable,	maderable,	Aluminio,	Aluminio,	plástico,	plástico,
aluminio,	aluminio,	plástico,	plástico,	madera y	madera y
lino y lino.	lino y lino.				

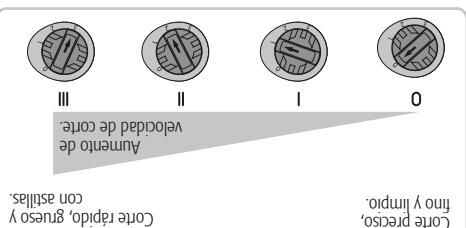

• Corte rápido, grueso y con aspillas.

• Segunda corte solamente cuando va hacia arriba. Con el fin de aumentar la eficiencia del corte, se debe ajustar con la sierra cada vez sin carga. No ejerza fuerza excesiva con la sierra cada vez sin carga. La sierra se detendrá cuando se use con la acción pendular.

• La acción pendular varía el ángulo de corte de acuerdo con las necesidades.

Control de acción pendular (C)

Para interrumpir su función amarilleto, presione y desplace suelte el interruptor. Presione el interruptor (A) y bloquelo, apretando el botón de uso continuo (B).

• Conecte la máquina al tornacorriente.

• Opréracion continua: Opréracion continua.


• Conecte la máquina al tornacorriente. Para interrumpir su uso, simplemente suelte el interruptor.

• Opréracion continua: Opréracion continua.

Encendido y control de operación


Puesta en marcha

TRUPER® PRO

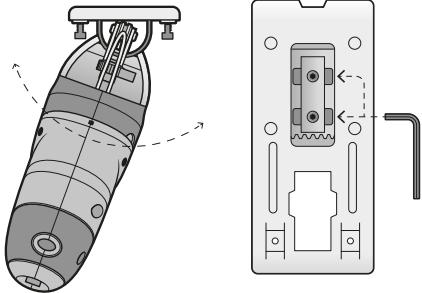


- Desconecte el cable de alimentación.
 - Afloje los 2 tornillos que se encuentran en la base de la zapata con la llave Allen incluida.
 - Desplace la zapata hacia el freno con el fin de liberarla del pin de bloquillo de la guía dentada de la zapata.
 - Afloje la tuerca de la base de la zapata y desacople el cable de la zapata de la base de la zapata.
 - Afloje la tuerca de la base de la zapata y desacople el cable de la zapata de la base de la zapata.
 - Afloje los 2 tornillos que se encuentran en la base de la zapata con la llave Allen incluida.

Ajuste del ángulo de corte

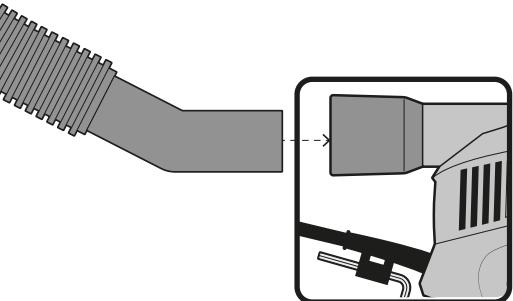


- Cabecear la manigüera de extacción del polvo al punto para extacción del polvo con aspiradores de líne
 - Cabecear la manigüera de extacción del polvo a un 1 3/8" (35 mm) (No comparable con aspiradores de líne
 - Cabecear la manigüera de extacción del polvo a un 1 3/8" (35 mm) (No comparable con aspiradores de líne

Mangueira de extracción de polvo

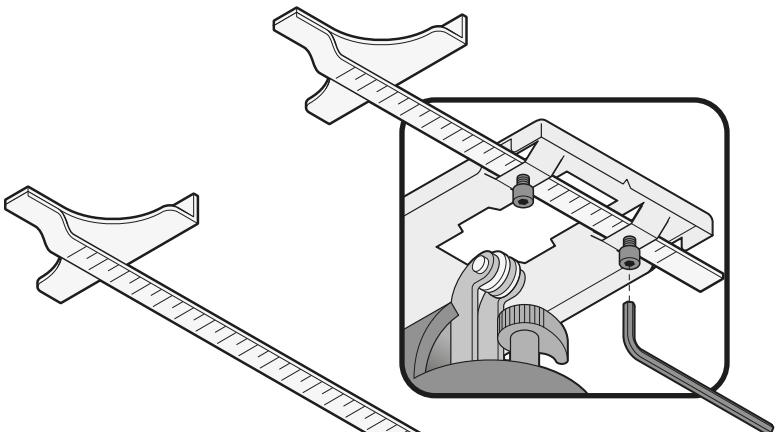


- Añade los tomillos de hierro con la lleva libre (individua) e inverso la que se pone en la base.
 - Ajuste el ancho de la corte deseado según la escala en el centro interior de la base.
 - Apriete el tornillo de fijación.

Instalación de Guía Paralela

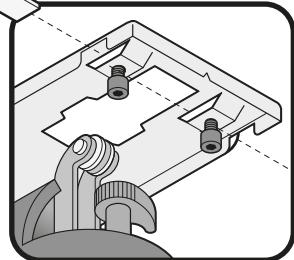

Preparación


Esta alabadera utiliza seguetas con zancos tipo "T". Para obtener mejores resultados de corte desgaste la segueta.

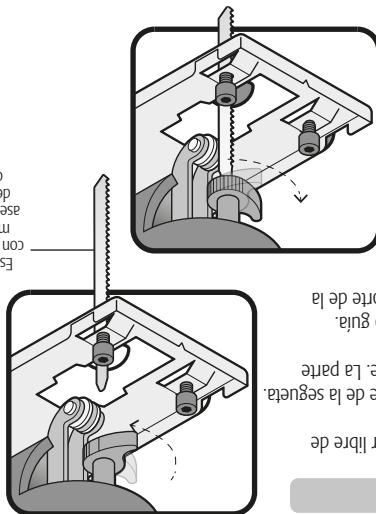

- La abertura del soporte de la segueta debe estar libre de aserrín.
- Girar la palanca a la derecha para abrir el soporte hasta el tope. La parte trasera de la segueta debe entrar en la ranura del rodillo guía.
- Introducir la segueta en el soporte hasta el tope. La parte trasera de la segueta debe entrar en la ranura del rodillo guía.
- Girar la palanca a la izquierda para cerrar el soporte de la segueta.
- Seguir la operación.


Instalación de la segueta

Preparación

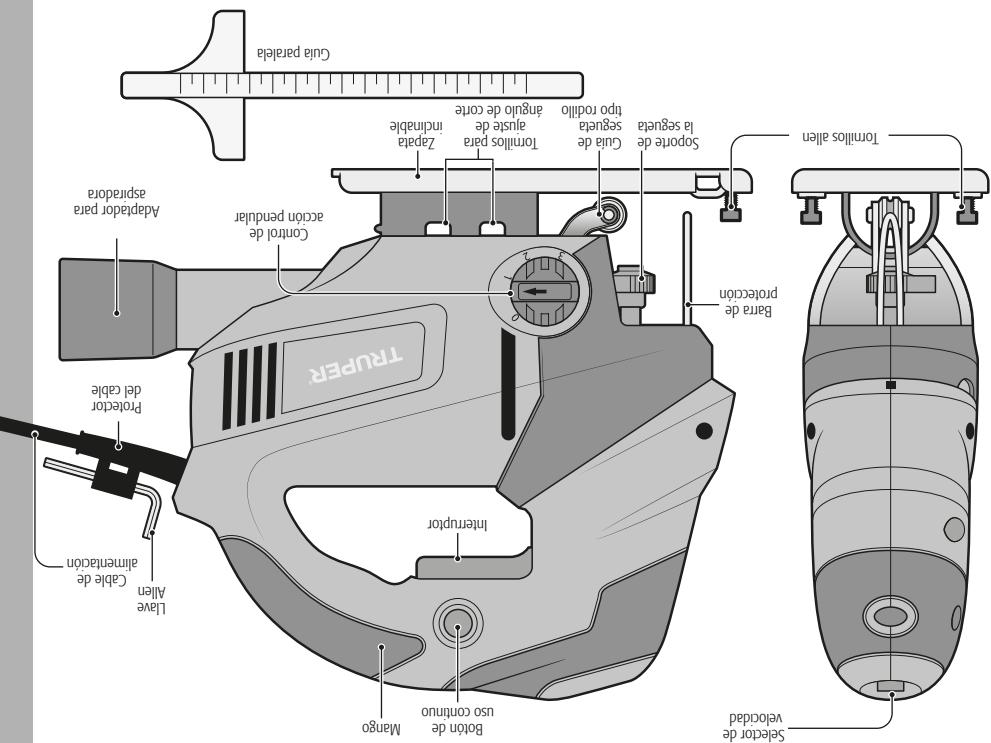


Partes

Jorma incorrecta de sostener la sierra caladora

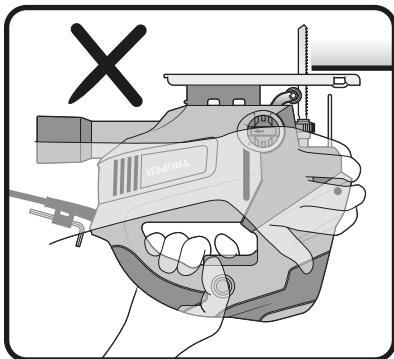

Forma correcta de sostener la sierra caladora

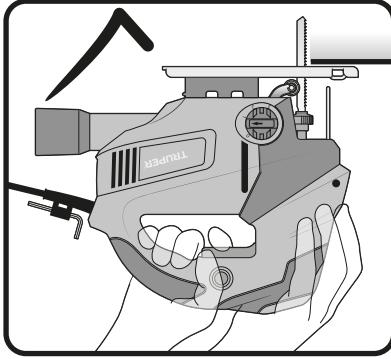

- Siempre que opere la sierra caladora, asegúrese de sostenerla firmemente.
- Al operar la sierra caladora la place base debajo de su mano con el fin de reducir la vibración producida, evitando que la sierra brinque o se rompa la següeta.

■ ADVERTENCIA • Las partes metálicas y accesorios pueden estar calientes si se utiliza la herramienta por períodos prolongados.

Después de operar la sierra caladora

- Esta caladora es para uso manual. No lo tire.
- Siempre que opere la sierra caladora, asegúrese de sujetarla firmemente.
- De ser posible, la pliega de trabajo debe situarse que la linea de corte no toque divisores, tornillos, etc.

■ ATENCIÓN • Antes de empezar el corte verifique que las manos lejos del eje de rotación.

■ PELIGRO • Revise siempre las paredes, pisos y techos para evitar entrar en contacto con cables eléctricos y/o tubería.

Antes de operar la sierra caladora

- Utilice tornillos de banco u otro medio práctico para sujetar la sierra caladora al escritorio.
- Utilice una soga o correa para sujetar la sierra caladora eléctrica al pedestal.
- Utilice tornillos de banco u otro medio práctico para sujetar la sierra caladora al escritorio.
- Utilice una soga o correa para sujetar la sierra caladora eléctrica al pedestal.

■ ATENCIÓN • Mientras las seguetas con precaución, romper con facilidad y pueden causarle un contagio de pieles.















■ ADVERTENCIA • No utilice seguetas sin afilar o que estén dañadas. Las seguetas despedidas se pueden arañar a la piel.


- Sostenga la herramienta por las partes de agarre lisas cuando lleve a cabo operaciones en los que exista el riesgo de que la herramienta de corte se salga de la mano.
- Sostenga la herramienta por las partes de agarre lisas cuando lleve a cabo operaciones en los que exista el riesgo de que la herramienta de corte se salga de la mano.

■ ATENCIÓN • Elija la segueta apropiada para el material a trabajar, esto reduce el riesgo de lesiones graves y agiliza el trabajo.

Elija la segueta apropiada

Mientras opera la sierra caladora

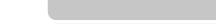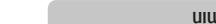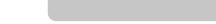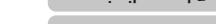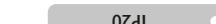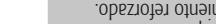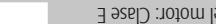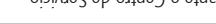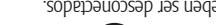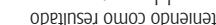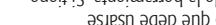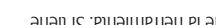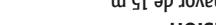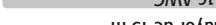

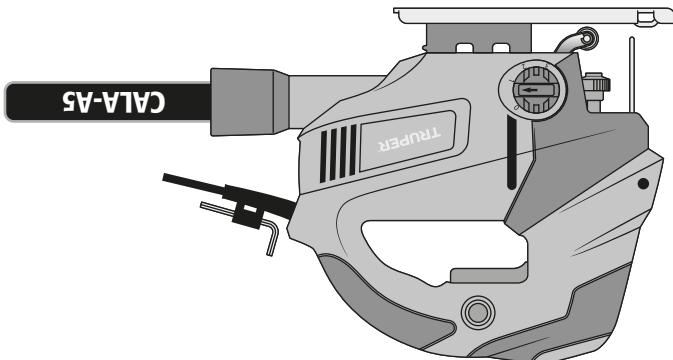**CALA-A5**

Para poder sacar el máximo provecho de la herramienta, alargar su vida útil, hacer válida la garantía en caso de ser necesario y evitar riesgos o lesiones graves, es fundamental leer este instructivo por completo antes de usar la herramienta.

Guarde este instructivo para futuras referencias.

Los gráficos de este instructivo son para referencia, pueden variar del aspecto real de la herramienta.

A) ATENCIÓN

Índice

- | | |
|----|--|
| 12 | Poliza de garantía |
| 11 | Centros de servicio autorizados |
| 10 | Notas |
| 10 | Mantenimiento |
| 8 | Puesta en marcha |
| 9 | Preparación |
| 6 | Partes |
| 5 | Advertencias de seguridad para uso de sierras caladoras |
| 4 | Advertencias generales de seguridad para herramientas eléctricas |
| 3 | Requerimientos eléctricos |
| 3 | Especificaciones técnicas |



Lea este instructivo por completo
antes de usar la herramienta.


¡ATENCIÓN!

CALA-A5

15423 CALA-A5

Código Modelo

Este instructivo es para:

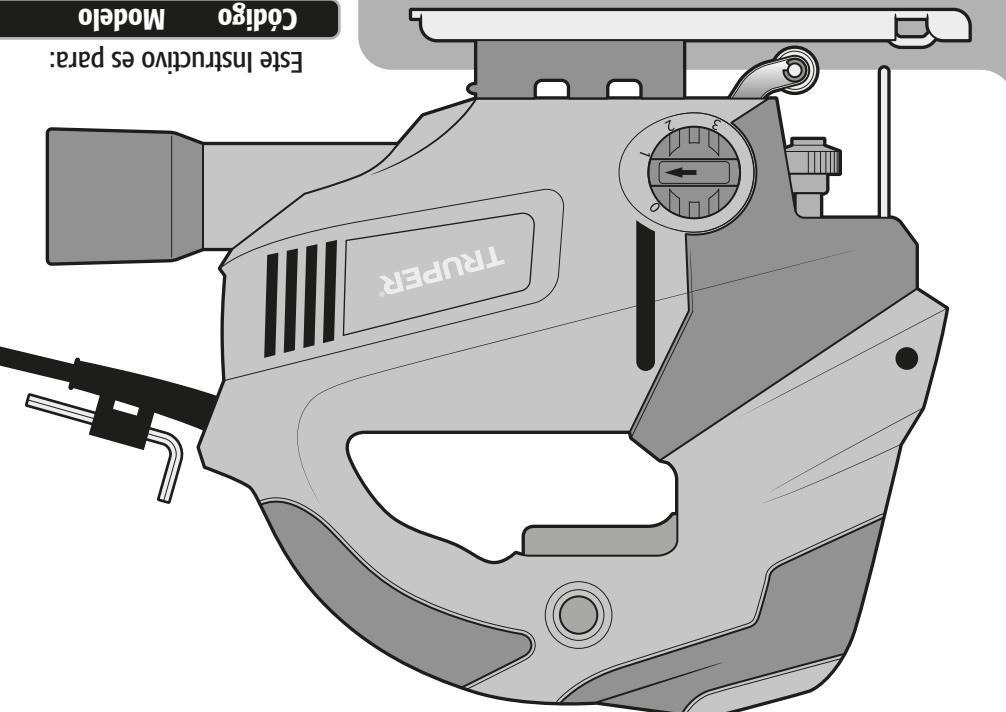

750 W
Potencia

Síerra Caladora de Velocidad Variable

Instructivo de

TRUPER® PRO

ESPAÑOL
ENGLISH