


Manual

Hammer drill

0.8 Hp 3/8"

Power

Chuck

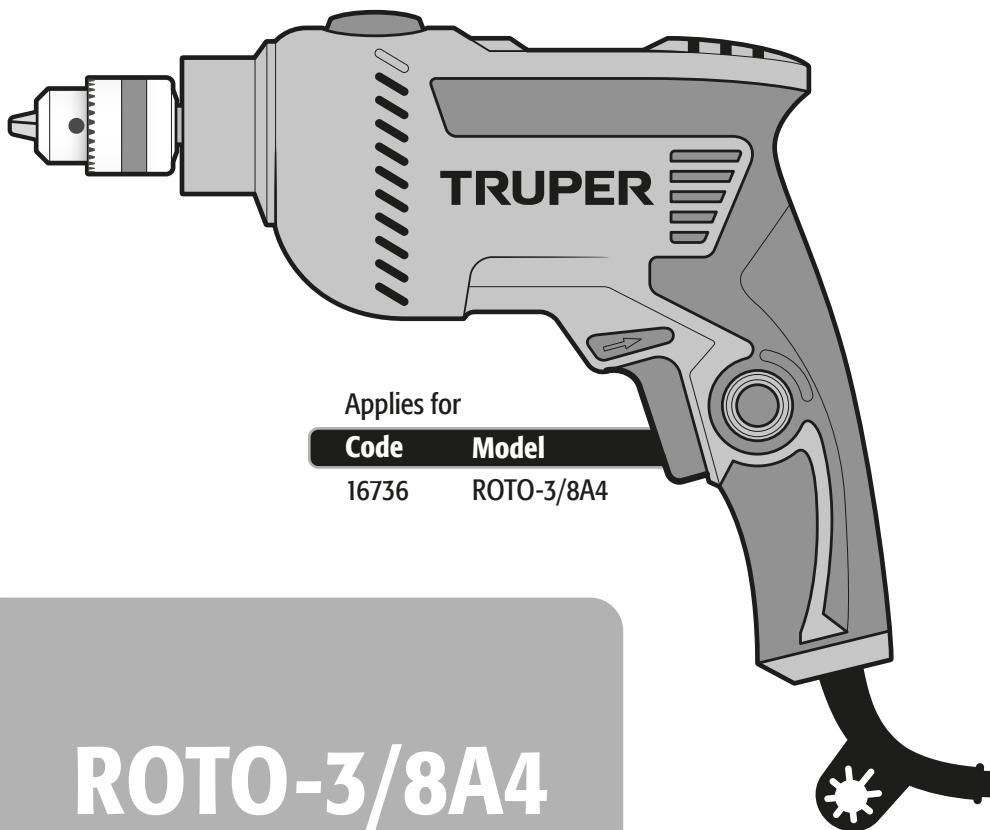

ROTO-3/8A4



Read this manual thoroughly
before using the tool.




Technical Data	3
Power Requirements	3
 General power tool safety warnings	4
 Safety warnings for drills and hammer drills	5
Parts	6
Start Up	7
Maintenance	9
Notes	10
Authorized Service Centers	11
Warranty Policy	12

CAUTION

To gain the best performance of the tool, prolong the duty life, make the Warranty valid if necessary, and to avoid hazards of fatal injuries please read and understand this Manual before using the tool.

Keep this manual for future references.

The illustrations in this manual are for reference only. They might be different from the real tool.

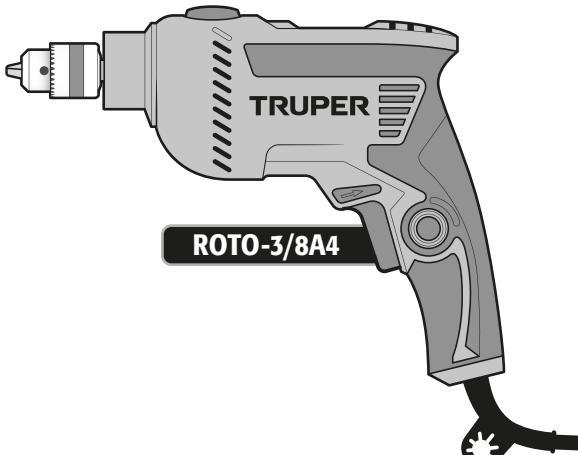

ROTO-3/8A4

Code	•	16736
Description	•	Hammer drill
Chuck	•	3/8"
Voltage	•	127 V~
Frequency	•	60 Hz
Current	•	4.7 A
Power	•	0.8 Hp
Speed	•	Drill: 3 100 RPM Hammer drill: 48 000 Strokes/minute
Drill Capacity	•	Metal: 3/8" Concrete: 3/8" Wood: 3/4 "
Duty Cycle	•	30 minutes work per 15 minutes idle. Maximum 3 hours per day.
Conductors	•	18 AWG x 2C with insulating temperature of 221 °F
Insulating	•	Class II
		IP Grade • IP20

Power Cord Grips used in this product: Type Y.
Tool Build Quality: Reinforced insulation.
Thermal insulation on motor winding: Class E.


WARNING Avoid the risk of electric shock or severe injury. When the power cable gets damaged it should only be replaced by the manufacturer or at a **TRUPER** Authorized Service Center. The build quality of the electric insulation is altered if spills or liquid gets into the tool while in use. Do not expose to rain, liquids and/or dampness.

WARNING Before gaining access to the terminals all power sources should be disconnected.



Power Requirements

WARNING Tools with double insulation and reinforced insulation are equipped with a polarized plug (one prong is wider than the other). This plug will only fit in the right way into a polarized outlet. If the plug cannot be introduced into the outlet, reverse the plug. If it still doesn't fit, call a qualified electrician to install for you a polarized outlet. Do not alter the plug in any way. Both insulation types eliminate the need of both a grounded third power cord with three prongs or a grounded power connection.

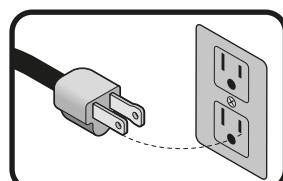

WARNING When using an extension cable, verify the gauge is enough for the power that your product needs. A lower gauge cable will cause voltage drop in the line, resulting in power loss and overheating. The following table shows the right size to use depending on cable's length and the ampere capability shown in the tool's nameplate. When in doubt use the next higher gauge.

Ampere Capacity	Number of Conductors	Extension gauge from 6' to 49'	higher than 49'
from 0 A and up to 10 A		18 AWG(*)	16 AWG
from 10 A and up to 13 A		16 AWG	14 AWG
from 13 A and up to 15 A	3 (one grounded)	14 AWG	12 AWG
from 15 A and up to 20 A		8 AWG	6 AWG

* It is safe to use only if the extensions have a built-in artifact for over current protection.

AWG = American Wire Gauge. Reference: NMX-J-195-ANCE

WARNING When operating power tools outdoors, use a **VOLTECK** grounded extension cable labeled "For Outdoors Use". These extensions are especially designed for operating outdoors and reduce the risk of electric shock.



⚠ WARNING! Read carefully all safety warnings and instructions listed below. Failure to comply with any of these warnings may result in electric shock, fire and / or severe damage. **Save all warnings and instructions for future references.**

Work area

Keep your work area clean, and well lit.

Cluttered and dark areas may cause accidents.



Never use the tool in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.

Sparks generated by power tools may ignite the flammable material.



Keep children and bystanders at a safe distance while operating the tool.

Distractions may cause loss of control.



Electrical Safety

The tool plug must match the power outlet. Never modify the plug in any way. Do not use any adapter plugs with grounded power tools.



Modified plugs and different power outlets increase the risk of electric shock.

Avoid body contact with grounded surfaces, such as pipes, radiators, electric ranges and refrigerators.

The risk of electric shock increases if your body is grounded.

Do not expose the tool to rain or wet conditions.

Water entering into the tool increases the risk of electric shock.

Do not force the cord. Never use the cord to carry, lift or unplug the tool. Keep the cord away from heat, oil, sharp edges or moving parts.

Damaged or entangled cords increase the risk of electric shock.

When operating a tool outdoors, use an extension cord suitable for outdoor use.

Using an adequate outdoor extension cord reduces the risk of electric shock.

If operating the tool in a damp location cannot be avoided, use a ground fault circuit interrupter (GFCI) protected supply.

Using a GFCI reduces the risk of electric shock.

Personal safety

Stay alert, watch what you are doing and use common sense when operating a tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.

A moment of distraction while operating the tool may result in personal injury.

Use personal protective equipment. Always wear eye protection.

Protective equipment such as safety glasses, anti-dust mask, non-skid shoes, hard hats and hearing protection used in the right conditions significantly reduce personal injury.



Prevent unintentional starting up. Ensure the switch is in the "OFF" position before connecting into the power source and / or battery as well as when carrying the tool.

Transporting power tools with the finger on the switch or connecting power tools with the switch in the "ON" position may cause accidents.



General power tool safety warnings



Remove any wrench or vice before turning the power tool on.

Wrenches or vices left attached to rotating parts of the tool may result in personal injury.

Do not overreach. Keep proper footing and balance at all times. This enables a better control on the tool during unexpected situations.

Dress properly. Do not wear loose clothing or jewelry. Keep hair, clothes and gloves away from the moving parts.



Loose clothes or long hair may get caught in moving parts.

If you have dust extraction and collection devices connected onto the tool, inspect their connections and use them correctly. Using these devices reduce dust-related risks.

Power Tools Use and Care

Do not force the tool. Use the adequate tool for your application.



The correct tool delivers a better and safer job at the rate for which it was designed.

Do not use the tool if the switch is not working properly.

Any power tool that cannot be turned ON or OFF is dangerous and should be repaired before operating.

Disconnect the tool from the power source and / or battery before making any adjustments, changing accessories or storing.

These measures reduce the risk of accidentally starting the tool.

Store tools out of the reach of children. Do not allow persons that are not familiar with the tool or its instructions to operate the tool.



Power tools are dangerous in the hands of untrained users.

Service the tool. Check the mobile parts are not misaligned or stuck. There should not be broken parts or other conditions that may affect its operation. Repair any damage before using the tool.



Most accidents are caused due to poor maintenance to the tools.

Keep the cutting accessories sharp and clean.

Cutting accessories in good working conditions are less likely to bind and are easier to control.

Use the tool, components and accessories in accordance with these instructions and the projected way to use it for the type of tool when in adequate working conditions.

Using the tool for applications different from those it was designed for, could result in a hazardous situation.

Service

Repair the tool in a TRUPER® Authorized Service Center using only identical spare parts.

This will ensure that the safety of the power tool is maintained.



This tool is in compliance with
the Official Mexican Standard
(NOM - Norma Oficial Mexicana).

Safety warnings for drills and hammer drills

 **TRUPER®**

Choose the right bit

- CAUTION** • Choose the right bit for the work piece. It reduces the risk of severe injury and makes the job easier.
- To drill concrete or stone, use bits specifically designed for concrete.
 - To work on metal or plastic, use bits suitable for metal. Sizes encompass a minimum of 0.03" (0.04" for a 0.5" chuck) and up to the chuck maximum capacity.
 - On wood, use regular bits suitable for wood. In any case, to drill 0.25" or smaller orifices, use bits designed to drill on metal.
 - Do not try using bits exceeding the chuck capacity.

Before using the hammer drill


- Before starting to work with the hammer drill, take a few minutes to assess the job to be done and double-check all the safety caution rules.

WARNING • Fit the bit into the chuck. Remove the chuck wrench before drilling. Failure to follow this instruction shoots out the chuck wrench with great speed and cause severe injury.

DANGER • Before drilling walls, floors or ceiling, look for any built-in objects, like power cables and conductors or pipes.

DANGER • Verify the switch is in the OFF position before connecting the hammer drill. Otherwise, it can unexpectedly start operating and could cause sever injuries.

CAUTION • Turn off and disconnect the tool before reversing the chuck's direction as well as fitting or replacing bits.

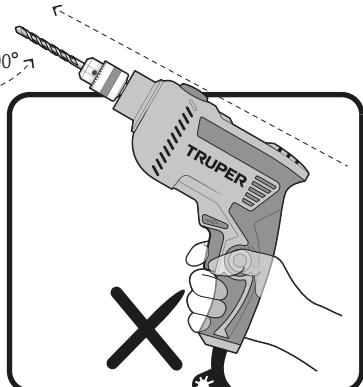

Wrong way to operate the hammer drill.

While operating the hammer drill

- Use the auxiliary handles, if supplied with the tool. Loss of control may result in personal injury.
- Hold the tool by the isolated parts. The cutting part of bit could come into contact with hidden wiring or with its own power cord. Making contact with a power cord causes the tool metal parts get electrified and may result in electric shock to the user.
- Do not force the tool to excessive workloads.

CAUTION • Turn off the hammer drill immediately if the bit gets stuck into de work piece. Then, remove the bit off the work piece. Do not try removing stuck bits turning on and off the tool.

• Do not apply too much force on the tool in order to accelerate the drilling procedure. The bit could get damaged and the tool would loose efficiency and useful life.

WARNING • A large diameter bit causes a higher reactive force leading to losing control over the tool. To avoid this possibility, firmly hold the tool with both hands and keep balanced footing. Drill at 90°

• Be prepared to relax the drilling force when the bit goes through the material. Sudden movements could break the bit or damage the hammer drill.


CAUTION • Do not touch the bit or the orifices immediately after drilling. Wait until they cool down to handle them. Do not try to cool them down using water or oil.

• Immediately after using do not set the tool where there are particles and / or dust. They can be absorbed into the tool mechanism and cause damage.


• Use earplugs when using the hammer drill. Exposure to noise can cause hearing loss.

• Use dust mask and dust extractor if necessary. Remember that materials such as asbestos, paint with lead, additives, some types of wood, metals or minerals are highly toxic.

• Use safety glasses.

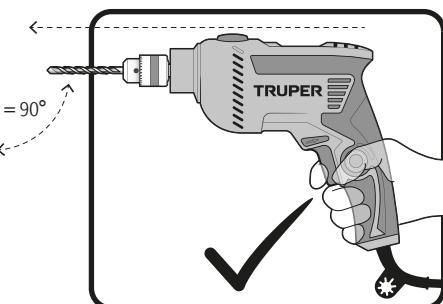

Right way to operate the hammer drill.

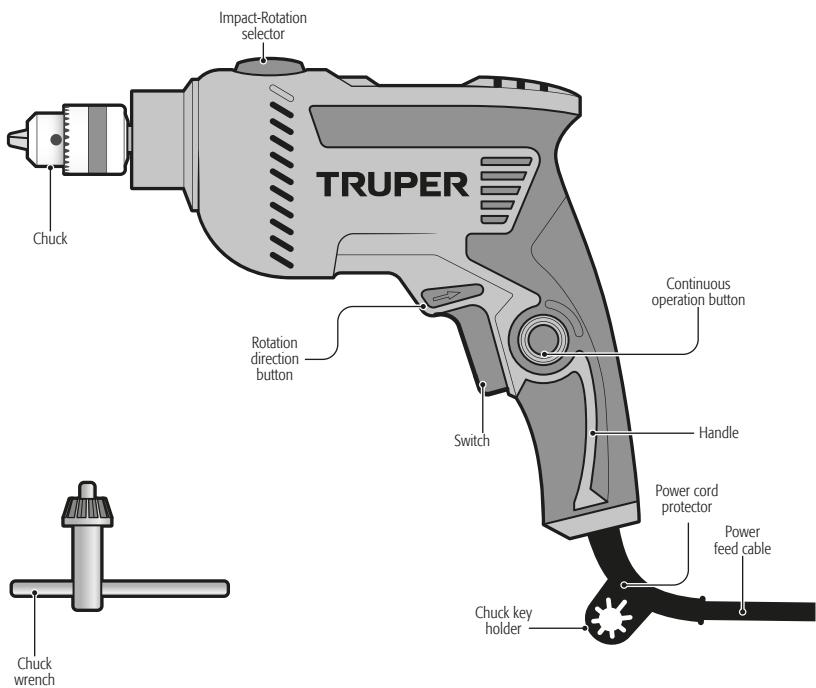


Start Up

 TRUPER®

Bit fitting

- Put the bit into the chuck until it stops. Fasten with the chuck wrench and tighten alternately the chuck into each of the orifices.

WARNING Clean burrs and any other foreign objects from the drill bit and drill bit, otherwise the drill bit may not be tight and cause serious personal injury.

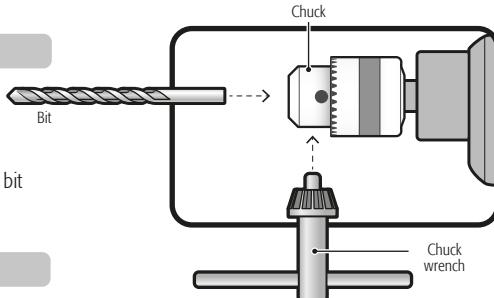


Turn on and operation control

• Intermittent operation:

Connect the plug into the power inlet.
Press the switch (A) to start the hammer drill.
To stop, just release the switch.

• Continuous Operation:


Connect the plug into the power inlet.
Press the switch (A) and block it pressing the continuous use button (B).
To stop, press and then, release the switch.

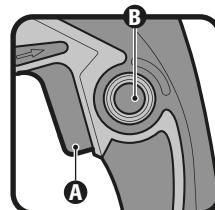

Changing from hammer drill to drill


- To drill concrete, floor tile or materials of similar hardness, turn the impact-rotation selector (D) completely into the IMPACT (➡) position (pointing towards the chuck). The bit will simultaneously impact and rotate onto the material.
- To drill metal, wood or plastic, turn the impact-rotation selector completely into the DRILL (➡➡) position (pointing towards the chuck). The bit will rotate onto the material.

WARNING Do not try to drill metal; wood or plastic with the selector impact-rotation into IMPACT (➡) mode (pointing towards the chuck). Otherwise the tool efficiency will lessen and the bit tip would get damaged.

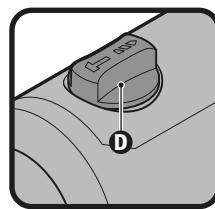

Rotation direction

- The rotation direction button is located on both sides of the drill (E).
- To make the drill turning forwards and drill, press the rotation direction button with the arrow pointing towards the chuck.
- To make it reversible press the rotation direction button with the arrow pointing towards the drill handle.
- The reverse rotation enables the drill to loosen screws and nuts turning the drill into a screwdriver. When using the drill in the screwdriver mode do not exercise too much pressure onto the switch.
- Changing the rotation direction can only be carried out when the switch is not pressed.

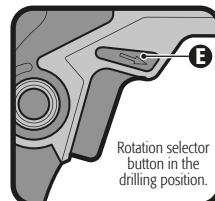

Wood drilling

- To make holes of 1/4" or less it is recommended to use high speed bits. To make holes larger than 1/4", it is recommended to use spade bits for wood.
- Turn impact-rotation selector to drill mode (➡ pointing towards the chuck).
- ⚠ CAUTION** • Secure the workpiece to prevent it from turning when drilling.
- When drilling through the holes, place a block of wood behind the workpiece to prevent ragged or splintered edges on the back side of the hole.
- Release the trigger when the drill may need to be stopped suddenly.

Masonry drilling

- Use tungsten carbide-tipped masonry act bit when drilling holes in brick, tile, concrete,etc.
- Turn impact-rotation selector to hammer mode (➡ pointing towards the chuck).
- Apply light pressure for best results in brick.
- Apply additional pressure for hard materials such as concrete.
- When drilling in tile, practice on a scrap piece to determine the best speed and pressure.


Metal drilling

- Use high speed steel bits for metal or steel drilling.
- Turn impact-rotation selector to drill mode (➡ pointing towards the chuck).
- Use a center punch to mark the hole location on the workpiece.
- Begin drilling at a very low speed to prevent the bit from slipping off the starting point.
- Maintain speed and pressure which allows cutting without overheating the bit.

- ⚠ CAUTION** Applying too much pressure or faster speed will: overheat the drill, wear the bearings, bend or burn bits and produce off-center or irregular shaped holes
- When drilling large holes in metal, it is recommended to drill with a small bit at first, then finish with a larger bit.
 - Lubricate the bit with oil to improve drilling action and increase bit life.

Chuck change

- Open the chuck jaws.
- Using a screwdriver remove the left-threaded safety screw with a clockwise movement.
- Fit the long side of a Hex key (not included) in a vise and insert the short side of the Hex key (not included) to the chuck. Close the jaws.
- Move the rotation selector button (**E**) into the reverse position (page 7 - Rotation direction) and fastening with a firm hand activate the hammer drill. The chuck will be released with the turn.
- Set the new chuck turning it into the hammer drill thread until it stops.
- Open fully the jaws and set the screw threading counter-clockwise. Tighten with a screwdriver.

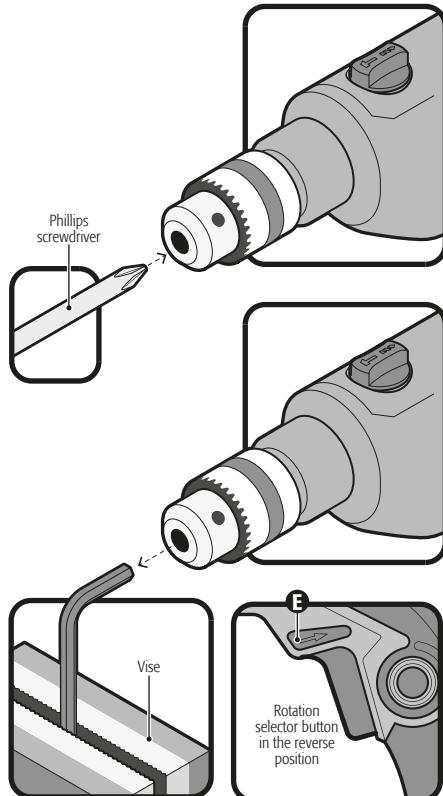

Cleaning and care

- To guarantee adequate motor cooling, always keep slots clean and free of obstructions.
- Regularly inspect all the mounting screws. Double-check they are properly tighten. If any screw is loose tighten immediately.

Service


- Service should only be made in a  **TRUPER®** Authorized Service Center. Service and maintenance performed by non-qualified people may be dangerous and lead to personal injuries. It also makes the product Warranty void.

Lubrication

- We recommend lubricating the tool transmission every carbon brush change in a  **TRUPER®** Authorized Service Center.

Carbon brush replacement

- Carbon brushes should be checked periodically.
- When one or both carbon brushes show signs of wear go to a  **TRUPER®** Authorized Service center to have both carbon brushes replaced. When replaced, see if the new carbon brushes move freely in the carbon brush housing. Ask to turn on the tool during five minutes to make the contact in the carbon brushes and the commutator even.
- Use only original  **TRUPER®** spare carbon brushes, designed specifically with the right strength and electric resistance for each type of motor. Carbon brushes with different specifications may damage the motor.
- When replacing carbon brushes, always change both.

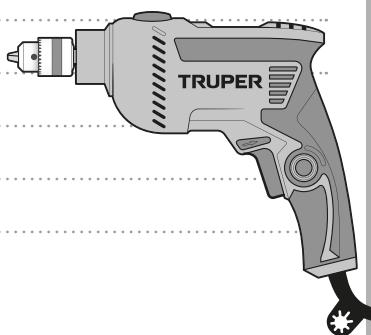

Authorized Service Centers



In the event of any problem contacting a Truper Authorized Service Center, please see our webpage www.truper.com to get an updated list, or call our toll-free numbers **800 690-6990** or **800 0187-8737** to get information about the nearest Service Center.

AGUASCALIENTES	DE TODO PARA LA CONSTRUCCIÓN GRAL. BARRAGÁN #1201, COL. GREMIAL, C.P. 20030, AGUASCALIENTES, AGS. TEL.: 449 994 0537	MORELOS	FIX FERRETERÍAS CAPITÁN ANZURES #95, ESQ. JOSÉ PERDIZ, COL. CENTRO, C.P. 62740, CUAUTLA, MOR. TEL.: 735 352 8931
BAJA CALIFORNIA	SUCRASAL TIJUANA AV. LA ENCANTADA, LOTE #5, PARQUE INDUSTRIAL EL FLORIDO II, C.P. 22244, TIJUANA, B.C. TEL.: 664 969 5100	NAYARIT	HERRAMIENTAS DE TEPIC MAYAZTLAN #117, COL. CENTRO, C.P. 63000, TEPIC, NAY. TEL.: 311 258 0540
BAJA CALIFORNIA SUR	FIX FERRETERÍAS FELIPE ÁNGELES ESQ. RUIZ CORTÍNEZ S/N, COL. PUEBLO NUEVO, C.P. 23670, CD. CONSTITUCIÓN, B.C.S. TEL.: 613 132 1115	NUEVO LEÓN	SUCURSAL MONTERREY CARRETERA LAREDO #300, 1B MONTERREY PARKS, COLONIA PUERTA DE ANÁHUAC, C.P. 66052, ESCOBEDO, NUEVO LEÓN, TEL.: 81 8352 8791 / 81 8352 8790
CAMPECHE	TORNILLERÍA Y FERRETERÍA AAA AV. ALVARO OBREGÓN #524, COL. ESPERANZA C.P. 24080 CAMPECHE, CAMP. TEL.: 981 815 2808	OAXACA	FIX FERRETERÍAS AV. 20 DE NOVIEMBRE #910, COL. CENTRO, C.P. 68300, TUXTEPEC, OAX. TEL.: 287 106 3092
CHIAPAS	FIX FERRETERÍAS AV. CENTRAL SUR #27, COL. CENTRO, C.P. 30700, TAPACHULA, CHIS. TEL.: 962 118 4083	PUEBLA	SUCURSAL PUEBLA AV. PERIFÉRICO #2-A, SAN LORENZO ALMECATLA, C.P. 72710, CUATLACINGO, PUE. TEL.: 222 282 8282 / 84 / 85 / 86
CHIHUAHUA	SUCRASAL CHIHUAHUA AV. SILVESTRE TERRAZAS #12-111, PARQUE INDUSTRIAL BAFAR, CARRETERA MÉXICO CUAUHTÉMOC, C.P. 31415, CHIHUAHUA, CHIH. TEL. 614 434 0052	QUERÉTARO	ARU HERRAMIENTAS S.A. DE C.V. AV. PUERTO DE VERACRUZ #110, COL. RANCHO DE ENMEDIO, C.P. 76842, SAN JUAN DEL RÍO, QRO. TEL.: 427 268 4544
MEXICO CITY	FIX FERRETERÍAS EL MONSTRUO DE CORREDIGORA, CORREDIGORA # 22, COL. CENTRO, C.P. 06060, CUAUHTÉMOC, CDMX. TEL: 55 5522 5031 / 5522 4861	QUINTANA ROO	FIX FERRETERÍAS CARRETERA FEDERAL MZ. 46 LT. 3 LOCAL 2, COL EJIDAL, C.P. 77710 PLAYA DEL CARMEN, Q.R. TEL.: 984 267 3140
COAHUILA	SUCRASAL TORRÉON CALLE METAL MECÁNICA #280, PARQUE INDUSTRIAL ORIENTE, C.P. 27228, TORRÉON, COAH. TEL.: 871 209 68 23	SAN LUIS POTOSÍ	FIX FERRETERÍAS AV. UNIVERSIDAD #1850, COL. EL PASEO, C.P. 78320, SAN LUIS POTOSÍ, S.L.P. TEL: 444 822 4341
COLIMA	BOMBAS Y MOTORES BYMTESA DE MANZANILLO BLVD. MIGUEL DE LA MADRID #190, COL. 16 DE SEPTIEMBRE, C.P. 28239, MANZANILLO, COL. TEL: 314 332 1986 / 332 8013	SINALOA	SUCURSAL CULIACÁN AV. JESÚS KUMATE SUR #4301, COL. HACIENDA DE LA MORA, C.P. 80143, CULIACÁN, SIN. TEL.: 667 173 9139 / 173 8400
DURANGO	TORNILLOS ÁGUILA, S.A. DE C.V. MAZURIÓ #200, COL. LÍOS ECHEVERRÍA, DURANGO, DGO. TEL.: 618 817 1946 / 618 818 2844	SONORA	FIX FERRETERÍAS CALLE 6 DE FEBRERO #517, SUR LT. 25 MZ. 10, COL. CENTRO, C.P. 85000, CD. ÓBREGÓN, SON. TEL.: 644 413 2392
ESTADO DE MÉXICO	SUCRASAL CENTRO JILOTEPEC AV. PARQUE INDUSTRIAL 1, PARQUE INDUSTRIAL JILOTEPEC, JILOTEPEC, EDO. DE MÉX. C.P. 54257, TEL.: 761 782 9101 EXT. 5728 Y 5102	TABASCO	SUCURSAL VILLAHERMOSA CALLE HELIO LOTES 1, 2 Y 3 MZ. #1, COL. INDUSTRIAL, 2A ETAPA, C.P. 86010, VILLAHERMOSA, TAB. TEL.: 993 353 7244
GUANAJUATO	CÍA. FERRETERA NUEVO MUNDO S.A. DE C.V. AV. MÉXICO - JAPÓN #225, CD. INDUSTRIAL, C.P. 38010, CELAYA, GTO. TEL.: 461 67 7578 / 79 / 80 / 88	TAMAULIPAS	VM ORINGS Y REFACCIONES CALLE ROSITA #527 ENTRE 20 DE NOVIEMBRE Y GRAL. RODRÍGUEZ, FRACC. REYNOSA, C.P. 88780, REYNOSA, TAMS. TEL.: 899 926 7552
GUERRERO	CENTRO DE SERVICIO ECLIPSE CALLE PRINCIPAL MZ.1 LÍ. 1, COL. SANTA FE, C.P. 39010, CHILPANCINGO, GRO. TEL: 747 478 5793	TLAXCALA	SERVICIOS Y HERRAMIENTAS INDUSTRIALES PABLO SIDAR #132, COL. BARRIO DE SAN BARTOLOMÉ, C.P. 90970, SAN PABLO DEL MONTE, TLAX. TEL.: 222 271 7502
HIDALGO	FERREPRESOS S.A. DE C.V. LIBERTAD ORIENTE #304 LOCAL 30, INTERIOR DE PASAJE ROBLEDO, COL. CENTRO, C.P. 43600, TULANCINGO, HGO. TEL.: 775 753 6615 / 775 753 6616	VERACRUZ	LA CASA DISTRIBUIDORA TRUPER BLVD. PRIMAVERA ESQ. HORTENSIA S/N, COL. PRIMAVERA C.P. 93508, POZA RICA, VER. TEL.: 782 823 8100 / 826 8484
JALISCO	SUCRASAL GUADALAJARA AV. ADOLFO B. HORN # 6800, COL: SANTA CRUZ DEL VALLE, C.P. 45655, TLAJOMULCO DE ZUÑIGA, JAL. TEL.: 33 3606 5285 AL 90	YUCATÁN	SUCURSAL MÉRIDA CALLE 33 #600 Y 602, LOCALIDAD ITZINCAB Y MULSAY, MPIO. UMAN, C.P. 97390, MÉRIDA, YUC. TEL.: 999 912 2451
MICHOACÁN	FIX FERRETERÍAS AV. PASEO DE LA REPÚBLICA #3140-A, COL. EX-Hacienda DE LA HUERTA, C.P. 58050, MORELIA, MICH. TEL.: 443 334 6858		

Code

16736

Model

ROTO-3/8A4

Brand **TRUPER®**

This product is guaranteed for 2 years. To make the warranty valid or purchase parts and components you must present the product in Corregidora 22, Col. Centro, Alc. Cuauhtémoc, CDMX C.P. 06060 or at the establishment where you purchased it, or at any Truper® Service Center listed in the annex to the warranty policy and/or in www.truper.com. Transportation costs resulting from compliance of this warranty will be covered by 

For questions or comments, call **800-690-6990**. Made in China. Imported by Truper, S.A. de C.V. Parque Industrial 1, Parque Industrial Jilotepec, Jilotepec, Edo. de Méx. C.P. 54257

**2** YEARS

Stamp of the business. Date of purchase:

**Poliza de
Garantía**

Sello del establecimiento comercial. Fecha de compra:

Este producto está garantizado por 2 años. Para hacer válida la garantía o adquirir piezas y componentes debes presentar el producto en Corregidora 22, Col. Centro, Alc. Cuauhtémoc, CDMX C.P. 06060 o en el servicio técnico autorizado de Truper® en el país que te indica tu etiqueta de garantía. Los gastos de transporte que resulten para su cumplimiento serán cubiertos por **TRUPER®**. Para dudas o comentarios, llame al 800-690-6990. Hecho en China. Importado por Truper, S.A. de C.V. Parque Industrial 1, Parque Industrial Jiutepec, Jiutepec, Edo. de Mex. C.P. 54257

2
AÑO




Código	Modelo	Marca	ROT0-3/8A4	TRUPER®
16736				

TRUPER®

En caso de tener algún problema para contactar un Centro de Servicio Autorizado Truper®, consulte nuestra página www.truper.com donde obtendrá un listado actualizado, o llame al: 800 690-6990 ó 800 0187-8737 donde le informarán cuál es el Centro de Servicio más cercano.

AGUASCALIENTES	DE TODO PARA LA CONSTRUCCIÓN	GRAL. BARRAGÁN #120, C.P. 20030.	AGUASCALIENTES, AGS. TEL.: 449 994 0537	TEL.: 664 996 5100	EL ENCANTADA LOTE #5, PARQUE INDUSTRIAL	TEL.: 613 123 2222	CHIHUAHUA	TEL.: 962 118 4083	TAPACHULA, CHIS. TEL.: 962 118 4083	TEL.: 314 322 1986 / 322 8013	SINALOA	TEL.: 664 996 5100	MAZATLÁN #200, C.P. 84000, CIUDAD DE DURANGO	TEL.: 618 817 1946 / 618 818 2844	DGO. TEL.: 618 817 1946 / 618 818 2844	TEL.: 761 782 9101 EXT. 5782 y 5102	TEL.: 461 677 7578 / 79 / 80 / 88	CELESTE DE SERVICIO CLÍSISE	TEL.: 775 755 6615 / 775 755 6616	HGO. TEL.: 775 755 6615 / 775 755 6616	TEL.: 33 3606 5285 AL 90	JALISCO	TEL.: 33 3606 5285 AL 90	MICHOCÁN	TEL.: 443 344 8888	ED. BACHACUNDI DE LA REPÚBLICA #310-A, C.P.	TEL.: 443 344 8888	ED. BACHACUNDI DE LA REPÚBLICA #310-A, C.P.	TEL.: 443 344 8888																																																																																																																																																																																									
BAJA CALIFORNIA	SISTEMAS Y EQUIPOS PARA LA MANUFACTURA	BOMBA Y MOTORES BRYMETSA DE MANZANILLO	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23	TEL.: 761 209 68 23

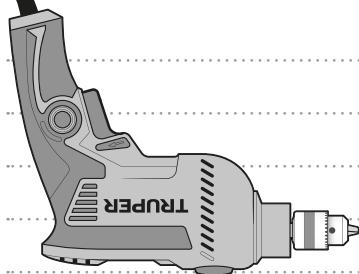

Puesta en marcha

- Utilice brocas con punta de carburo de tungsteno para taladrar orificios en latilla, azulejos, concreto, etc.
- Corte el selector de impacto-torsión hacia el modo de impacto (■■■■■) para obtener mejores resultados en los latillas aplicando presión ligera.
- Para metálicos duros tales como concreto aplique más presión.
- Para tablones azulejos, practique en un trozo de desechos del mismo material para determinar cuál es la mejor presión.





Taladrar en mampostería

- Utilice brocas de acero de alta velocidad para madera o acero.
- Utilice brocas de acero de alta velocidad para metal o acero.
- Utilice una velocidad y presión moderada y constante que permita cortar sin sobrecalentar la broca.
- Protege la mesa de trabajo.
- Utilice un punzón para el sello oficial en la tabla de trabajo (***apuntando al trinquete).
- Utilice brocas de acero de alta velocidad para madera o acero.
- Aplicar demasiada presión y trabajar a alta velocidad puede sobrecalentar el taladro, desgastar los brocas, doblar o quemar las brocas y producir arrugados descentrados o de forma irregular.
- Al taladrar otros materiales en metal se recomienda utilizar una broca más grande.
- Se recomienda liberar la broca para mejorar la acción de liberado y aumentar la vida de la broca.

Taladrar en metal

Taladrar en madera

- Utilice un punzón para marcar el sitio del orificio en la pieza de trabajo.
- Utilice una viseoletad para sujetarla firmemente al broqueador.
- Quite el selector de impacto-rotación hacia el modo de trabajo o selección de velocidad.
- Quite el selector de velocidad para moverlo a otro lado.
- Quite el selector de velocidad para moverlo a otro lado.
- Quite el selector de velocidad para moverlo a otro lado.
- Quite el selector de velocidad para moverlo a otro lado.

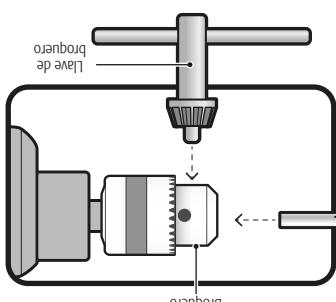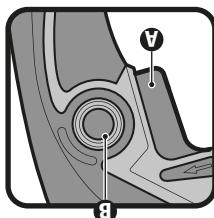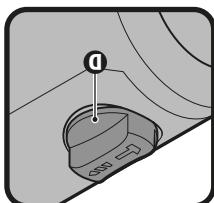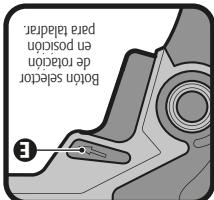

- El cambio de dirección de rotación solo se puede realizar cuando no se está presionando el interruptor.
- El cambio de dirección de rotación solo se interrumpe.
- La rotación en función de desacelerar o frenar útilice el rotamotor en su posición de desacelerador, cuando conviene para rotar más rápido o más lento.
- La rotación en función de acelerar o acelerar más rápido permite aplicar más fuerza y tracción.
- Para que gire en reversa presione el botón de dirección de rotación al revés.
- Para que gire en reversa presione el botón de dirección de rotación en la dirección deseada.
- El botón de dirección de rotación se encuentra a ambos lados de la broca.

dirección de rotación

- ADVERTENCIA** No intente perforar metal, madera o plástico con el selector de impacto-rotación en el modo de IMPACTO (► apuntando al broqueño). De lo contrario dañaría la herramienta, y perdería la punta de la broca.
- apuntando a la posición de impacto-rotación en el modo de IMPACTO (► apuntando al broqueño). La broca dará impactos sobre el material, romperá la herramienta y causará un daño considerable.
- Para perforar metal, madera o plástico, gire el selector de rotación al mismo tiempo.
- Para perforar hormigón, piedra basáltica o materiales duros como la piedra caliza al tomacorriente.


Cambio de rotamotor a taladro

- Para interrumpir su fundicionamiento, presione y desplace suelte el interruptor. Conecte la clavija al tomacorriente.
- Operación continua: Presione el interruptor (A) para hacer que el rotamotor empiece a funcionar. Para interrumpir su uso, simplemente suelte el interruptor.
- Operación intermitente: Conecte la clavija al tomacorriente. Presione el interruptor (A) para hacer que el rotamotor empiece a funcionar.

Encendido y control de operación

- ADVERTENCIA** Limpie las rebabas y quítele otro objeto extraño de la broca y broqueño, de lo contrario la broca puede no quedar bien apretada y causar lesiones personales serias.
- Introduzca la broca dentro del broqueño hasta que tope y asegúrela con cada uno de los orificios alineados.


Instalación de la broca

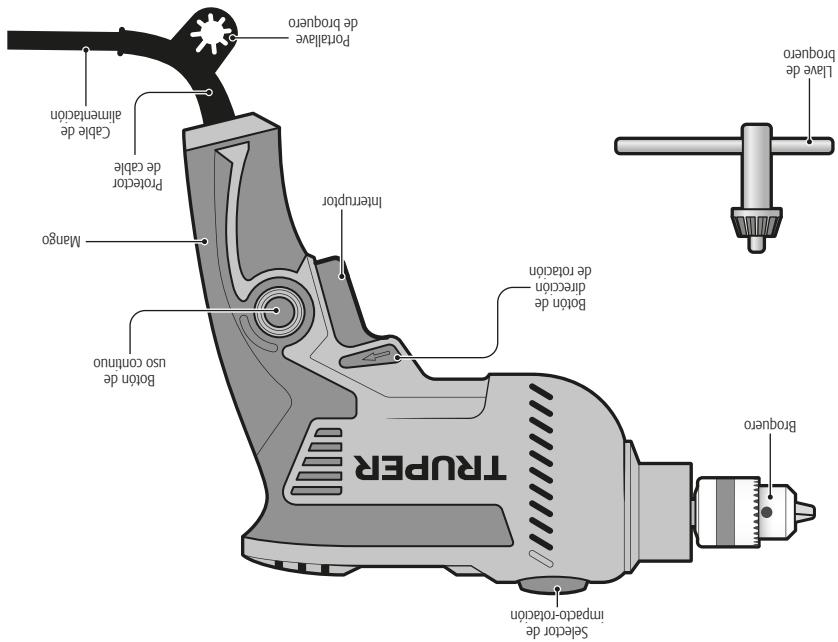


Partes

TRUPER®

recta de operar el rotomarillo.

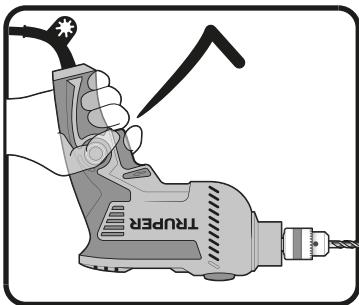

۱۰

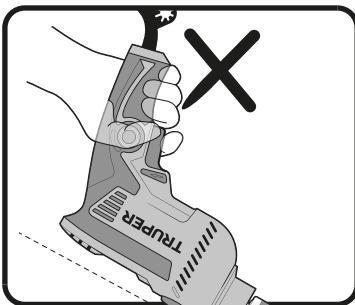

- Utilice gafas de seguridad.
 - Use guantes para evitar el contacto con partículas.
 - Evite colocar la herramienta en un sitio con partículas y/o polvo en inmediaciones de haber sido usada.
 - Usar protectores para los ojos cuando se utilice el tornamáquina. La exposición al ruido puede causar perdida auditiva.
 - Utilice accesorios apropiados para el trabajo que no solo causen daño a la herramienta sino a su propia persona.
 - Utilice accesorios apropiados para el trabajo que no solo causen daño a la herramienta sino a su propia persona.
 - Utilice accesorios apropiados para el trabajo que no solo causen daño a la herramienta sino a su propia persona.
 - Utilice accesorios apropiados para el trabajo que no solo causen daño a la herramienta sino a su propia persona.

ATENCIÓN • Apague y desconecte la hermanilla antes de invertir el sentido del giro del broquero, así como de instalar o reemplazar una broca.

ATEN

- A PELIGRO** • Ajuste de preferencia en una pared, situado a la altura recomendada y colocando las unidades giradas.

A PELIGRO • Asegúrese que el interruptor esté instalado como se establece o conducciones eléctricas a tuberías.

A PELIGRO • Asegúrese que el interruptor esté instalado como se establece o conducciones eléctricas a tuberías.

14

A PELIGRO • Antes de perforar en una pared, suelo o techo, asegúrese de que no haya objetos empotrados.

techo, asé

- **PELIGRO** . Alts des preferit en una parella, s'el o gran velocitat y provocar lesions graves.
 - **ADVERGÈNCIA** . Així corre el mateix que la broca al treballar. Si no se quita la llave, esta pude saltar i començar a broquar. Què es la lleva del buró que antigament es de fer a la mà.

Antes de operar el rotomartillo

- No intente utilizar brocas que excedan la capacidad del broqueiro.

madera. En cualquier caso, perforando orificios de 6.5 mm o menos, use brocas para trabajos en metal.

• Para madera use brocas ordinarias para trabajos de broqueo de 13 mm) hasta la capacidad máxima del broqueo.

- Para metal o plástico use brocas para trabajos en metal. Las medidas abarcan un mínimo de 0,8 mm (12 mm para

- En caso de perforar hormigón o piedra, use brocas especiales para concreto.

máterial a trabajar, esto reduce el riesgo de lesiones graves y agiliza el trabajo.

• Sostenegà la heràmienta per si manageg y per el

Elijá la broca apropiada

www.mechanics.com | 800-338-6833

www.sociedad.org

Vérité n°2 : Les séquelles

Digitized by srujanika@gmail.com

TRUPER®



! ADVERTENCIA Al aplicar la fuerza máxima las articulaciones de los dedos se podrían lesionar. Utilizar una fuerza moderada para el uso en exteriores y reducir el riesgo de sufrir una desgarra eléctrica.

ADVERTENCIAS


* Se permite utilizarlo siempre y cuando las extensiones mismas cumplan con el criterio de protección contra sobrecorriente.

Capacidad en	Número de	Calibre de extensión	Conductores	Ampares	máyores de 15 m
de 0 hasta 10 A	18 AWG(*)	de 1,8 a 15 m		mayores de 15 m	
de 10 A hasta 13 A	16 AWG				
de 13 A hasta 15 A	16 AWG				
de 15 A hasta 20 A	14 AWG				
	12 AWG				
	8 AWG				

duelas usé el sledgehette callibre más alto.

ADVERTENCIA Al usar un cable de extensión, asegúrese de que el diámetro suficiente para transportar la corriente que consumiría su herramienta. Un cable de un diámetro inferior ocasionaría caídas de tensión en la línea, teniendo como resultado la sobrecaloración del motor. La siguiente tabla muestra el tamaño correcto que debe usarse.

ADVERTENCIA

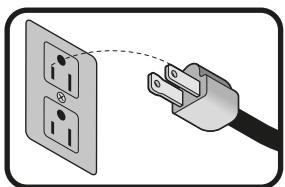

A ADVERTENCIA Las herramientas de doble sistema y las limpiadoras rotativas están equipadas con una dável polarizada (una pata es más ancha que la otra). Esta clavija se adapta en cualquier enchufe polarizado sólo si se coloca correctamente de una forma. Si se adapta en el sentido contrario, volverá a salir así de nuevo.

Redes de suministro eléctricos

ADVERTENCIA Antes de obtener acceso a las terminales, todos los circuitos de alimentación deben ser desconectados. Durante mantenimiento de líquidos durante su operación. No se expande a la lluvia, agua o humedad.


ADVERTISING

ADVERTENCIA Si es capaz de desarmar el sistema de alarma, este debe ser reemplazado por el fabricante o Centro de Servicio Autorizado **TRUPER**, con fin de evitar algún riesgo de desgarro o accidente.

El cable de aluminio tiene sujetacables tipo Y. La clase de construcción de la hérmite es: Aislamiento reforzado. La clase de aislamiento terminal de los devanados del motor: Clase E.

- | | | | | | | | | | | | | | | | | | | | |
|--------|-------|-------------|----------|----------|-----------|-----------|-----------|--|---|--------------------------|---|------------------|---|-------------|--|-------------|----------|----------|------|
| Código | 16736 | Descripción | Broquero | Broquero | Corriente | Corriente | Velocidad | Taladro: 300 r/min
Rotomartillo: 48 000 Golpes/minuto | Metal: 3/8" (9.5 mm) Concrete: 3/8" (9.5 mm) Madera: 3/4" (19 mm) | Capacidad de perforación | Metal: 3/8" (9.5 mm) Concrete: 3/8" (9.5 mm) Madera: 3/4" (19 mm) | Ciclo de trabajo | 30 minutos de trabajo por 15 minutos de descanso. Máximo 3 horas diarias. | Conductores | 18 AWG x 2C con temperatura de aislamiento de 105 °C | Aislamiento | Clase II | Gradó IP | IP20 |
|--------|-------|-------------|----------|----------|-----------|-----------|-----------|--|---|--------------------------|---|------------------|---|-------------|--|-------------|----------|----------|------|

ROTO-3/8A4

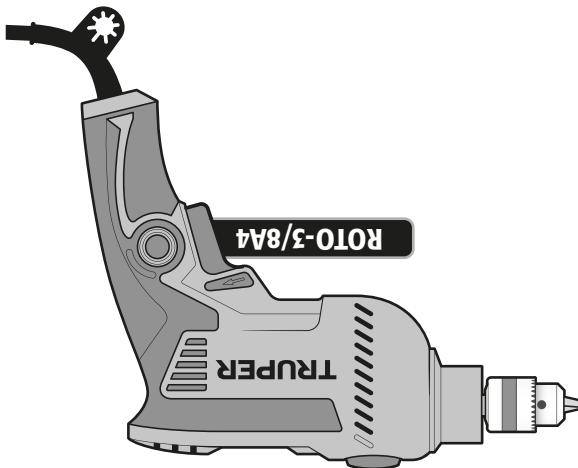

ATENCIÓN

Para poder sacar el máximo provecho de la herramienta, alargar su vida útil, hacer válida la garantía en caso de ser necesario y evitar riesgos o lesiones graves, es fundamental leer este instructivo por completo antes de usarla.

Guarde este instructivo para futuras referencias.

Los gráficos de este instructivo son para referencia, pueden variar del aspecto real de la herramienta.

- 3 Especificaciones técnicas.
- 3 Requerimientos eléctricos.
- 4 Advertencias generales de seguridad.
- 5 Para uso de taladros y rotomartillos.
- 6 Partes.
- 7 Puesta en marcha.
- 8 Mantenimiento.
- 9 Notas.
- 10 Leer este instructivo por completo antes de usar la herramienta.
- 11 Centros de Servicio Autorizados.
- 12 Poliza de Garantía.




Lea este instructivo por completo
antes de usar la herramienta.

! ATENCIÓN



ROTO-3/8A4

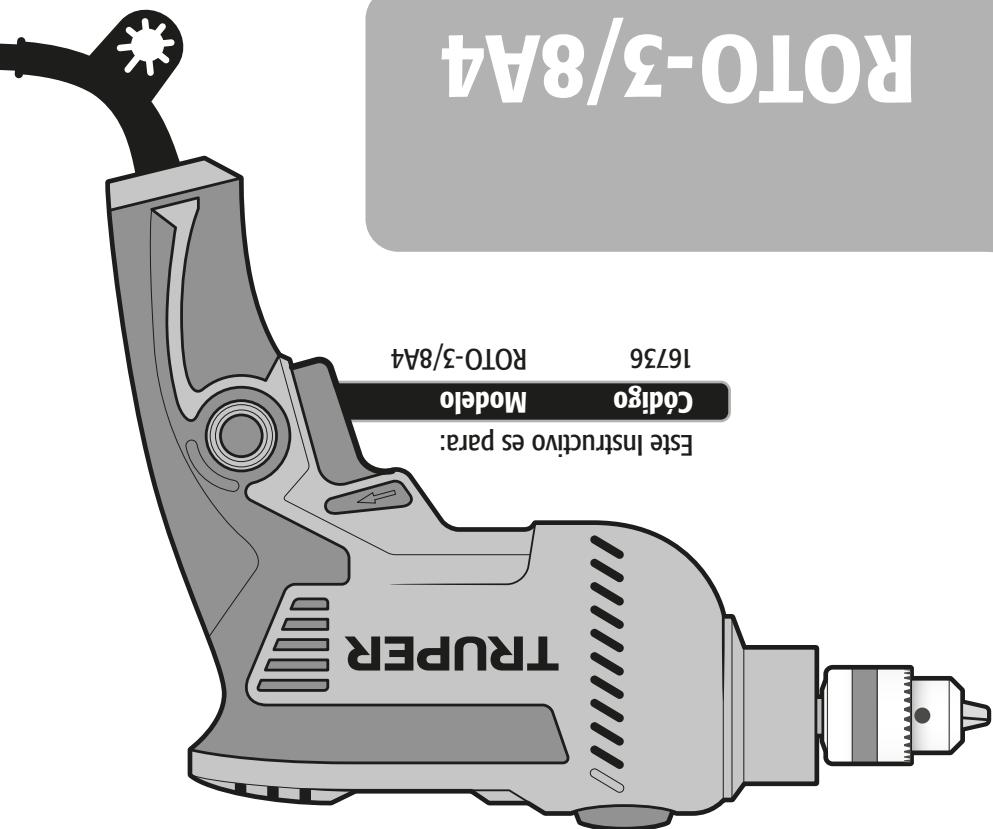

16736 ROTO-3/8A4

Código Modelo

Este instructivo es para:

Potencia Broca
3/8" 9.5 mm

Rotomarfillo

Instructivo de

TRUPER®

ESPAÑOL
ENGLISH