

ENGLISH  
ESPAÑOL

TRUPER®  
ERGO-PRO

Manual


# Angle grinder

1.1 Hp

Power

4½"

Disc

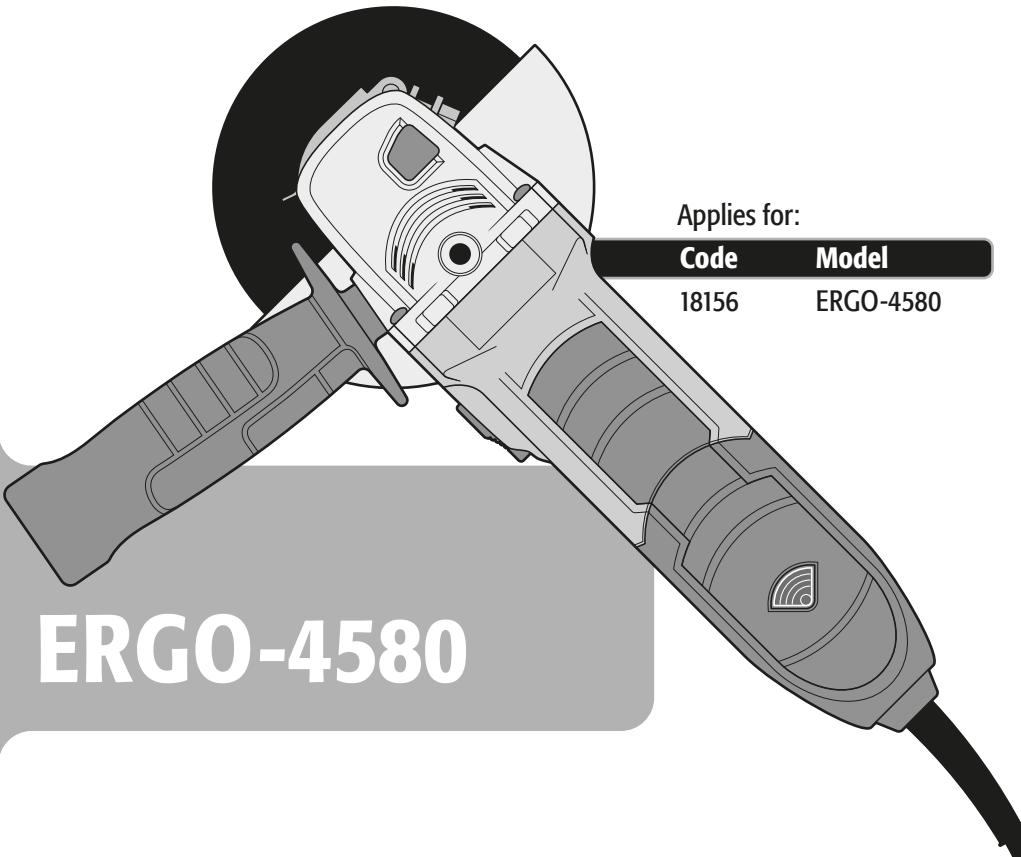

Applies for:

Code

Model

18156

ERGO-4580

# ERGO-4580

 CAUTION



Read this manual thoroughly  
before using the tool.



|   |    |
|---|----|
| Technical Data .....  | 3  |
| Power Requirements .....  | 3  |
|  General power tool safety warnings ..... | 4  |
|  Safety warnings for angle grinders ..... | 5  |
| Parts .....   | 7  |
| Assembly .....  | 7  |
| Start Up .....  | 8  |
| Maintenance .....   | 9  |
| Notes .....   | 10 |
| Authorized Service Centers .....  | 11 |
| Warranty Policy .....   | 12 |

**CAUTION**

To gain the best performance of the tool, prolong the duty life, make the Warranty valid if necessary, and to avoid hazards of fatal injuries please read and understand this Manual before using the tool.

Keep this manual for future references.

The illustrations in this manual are for reference only. They might be different from the real tool.

**ERGO-4580**

# Technical Data

**TRUPER®  
ERGO-PRO**

**ERGO-4580**

|             |   |  |
|-------------|---|--|
| Code        | • | 18156  |
| Description | • | Angle grinder  |
| Discs       | • | 4 1/2"   |
| Voltage     | • | 127 V~   |
| Frequency   | • | 60 Hz  |
| Current     | • | 6 A  |
| Power       | • | 1.1 Hp   |
| Speed       | • | 12 000 RPM   |
| Duty cycle  | • | 30 minutes work per 15 minutes idle.<br>Maximum 3 hours per day. |
| Conductors  | • | 18 AWG x 2C with insulating temperature of 221 °F                |
| Insulating  | • | Class II      IP Grade • IP20                                    |

Power Cord Grips used in this product: Type Y  
Tool Build Quality: Reinforced insulation.  
Thermal insulation on motor winding: Class E


**WARNING** Avoid the risk of electric shock or severe injury. When the power cable gets damaged it should only be replaced by the manufacturer or at a  TRUPER Authorized Service Center. The build quality of the electric insulation is altered if spills or liquid gets into the tool while in use. Do not expose to rain, liquids and/or dampness.

**WARNING** Before gaining access to the terminals all power sources should be disconnected.



## Power Requirements

**WARNING** Tools with double insulation and reinforced insulation eliminate the need of a grounded power cord with three prongs or a grounded power connection.

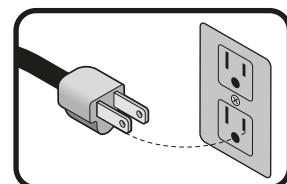

**WARNING** When using an extension cable, verify the gauge is enough for the power that your product needs. A lower gauge cable will cause voltage drop in the line, resulting in power loss and overheating. The following table shows the right size to use depending on cable's length and the ampere capability shown in the tool's nameplate. When in doubt use the next higher gauge.

| Ampere Capacity          | Number of Conductors | Extension gauge<br>from 6' to 49' | higher than 49' |
|--------------------------|----------------------|-----------------------------------|-----------------|
| from 0 A and up to 10 A  |                      | 18 AWG(*)                         | 16 AWG          |
| from 10 A and up to 13 A |                      | 16 AWG                            | 14 AWG          |
| from 13 A and up to 15 A | 3 (one grounded)     | 14 AWG                            | 12 AWG          |
| from 15 A and up to 20 A |                      | 8 AWG                             | 6 AWG           |

\* It is safe to use only if the extensions have a built-in artifact for over current protection.

AWG = American Wire Gauge. Reference: NMX-J-195-ANCE

**WARNING** When operating power tools outdoors, use a  VOLTECK grounded extension cable labeled "For Outdoors Use". These extensions are specially designed for operating outdoors and reduce the risk of electric shock.



**⚠ WARNING! Read carefully all safety warnings and instructions listed below.** Failure to comply with any of these warnings may result in electric shock, fire and / or severe damage. **Save all warnings and instructions for future references.**

**Work area****Keep your work area clean, and well lit.**

Cluttered and dark areas may cause accidents.

**Never use the tool in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.**

Sparks generated by power tools may ignite the flammable material.

**Keep children and bystanders at a safe distance while operating the tool.**

Distractions may cause loss of control.

**Electrical Safety****The tool plug must match the power outlet. Never modify the plug in any way. Do not use any adapter plugs with grounded power tools.**

Modified plugs and different power outlets increase the risk of electric shock.

**Avoid body contact with grounded surfaces, such as pipes, radiators, electric ranges and refrigerators.**

The risk of electric shock increases if your body is grounded.

**Do not expose the tool to rain or wet conditions.**

Water entering into the tool increases the risk of electric shock.

**Do not force the cord. Never use the cord to carry, lift or unplug the tool. Keep the cord away from heat, oil, sharp edges or moving parts.**

Damaged or entangled cords increase the risk of electric shock.

**When operating a tool outdoors, use an extension cord suitable for outdoor use.**

Using an adequate outdoor extension cord reduces the risk of electric shock.

**If operating the tool in a damp location cannot be avoided, use a ground fault circuit interrupter (GFCI) protected supply.**

Using a GFCI reduces the risk of electric shock.

**Personal safety****Stay alert, watch what you are doing and use common sense when operating a tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.**

A moment of distraction while operating the tool may result in personal injury.

**Use personal protective equipment. Always wear eye protection.**

Protective equipment such as safety glasses, anti-dust mask, non-skid shoes, hard hats and hearing protection used in the right conditions significantly reduce personal injury.

**Prevent unintentional starting up. Ensure the switch is in the "OFF" position before connecting into the power source and / or battery as well as when carrying the tool.**

Transporting power tools with the finger on the switch or connecting power tools with the switch in the "ON" position may cause accidents.

**General power tool safety warnings****Remove any wrench or vice before turning the power tool on.**

Wrenches or vices left attached to rotating parts of the tool may result in personal injury.

**Do not overreach. Keep proper footing and balance at all times.**

This enables a better control on the tool during unexpected situations.

**Dress properly. Do not wear loose clothing or jewelry. Keep hair, clothes and gloves away from the moving parts.**

Loose clothes or long hair may get caught in moving parts.

**If you have dust extraction and collection devices connected onto the tool, inspect their connections and use them correctly.**

Using these devices reduce dust-related risks.

**Power Tools Use and Care****Do not force the tool. Use the adequate tool for your application.**

The correct tool delivers a better and safer job at the rate for which it was designed.

**Do not use the tool if the switch is not working properly.**

Any power tool that cannot be turned ON or OFF is dangerous and should be repaired before operating.

**Disconnect the tool from the power source and / or battery before making any adjustments, changing accessories or storing.**

These measures reduce the risk of accidentally starting the tool.

**Store tools out of the reach of children. Do not allow persons that are not familiar with the tool or its instructions to operate the tool.**

Power tools are dangerous in the hands of untrained users.

**Service the tool. Check the mobile parts are not misaligned or stuck. There should not be broken parts or other conditions that may affect its operation. Repair any damage before using the tool.**

Most accidents are caused due to poor maintenance to the tools.

**Keep the cutting accessories sharp and clean.**

Cutting accessories in good working conditions are less likely to bind and are easier to control.

**Use the tool, components and accessories in accordance with these instructions and the projected way to use it for the type of tool when in adequate working conditions.**

Using the tool for applications different from those it was designed for, could result in a hazardous situation.

**Service****Repair the tool in a TRUPER® Authorized Service Center using only identical spare parts.**

This will ensure that the safety of the power tool is maintained.

This tool is in compliance with  
the Official Mexican Standard  
(NOM - Norma Oficial Mexicana).

# Safety warnings for angle grinders

This power tool is intended to function as a cutting tool. Read all safety warnings, instructions and specifications provided. Failure to follow the instructions outlined below may result in electric shock, fire and/or serious injury.

**TRUPER®  
ERGO-PRO**

## Select the right disc

**CAUTION** • Never use discs with bigger diameter than the size required in the tool.

**WARNING** • Use only discs or accessories than 12 000 RPM speeds.

The rated speed of the accessory must be at least equal to the maximum speed marked on the tool. Accessories running faster than their rated speed may break and become detached.

**CAUTION** • Use only discs or accessories with an orifice that fits perfectly in the tool spindle.

**CAUTION** • Use only discs or accessories specifically designed for the chosen material.

Keep present people at a safe distance from the work area. Anyone entering the work area should wear personal protective equipment.

## Before operating the grinder

• Set apart some time and assess the job you are about to do. Pay attention to all the necessary cautions before starting to grind.

**DANGER** • Remove all the fastening wrenches from the tool. Otherwise they can shoot away causing severe injuries to the user.

**WARNING** • Double-check the guard. It should be perfectly fastened and in good working condition. Do not use the tool without a guard. Fragments of workpieces or a broken accessory can break off and cause damage beyond the immediate area of operation.

**CAUTION** • Double-check the disc. It should not be broken or cracked. Tap the disc gently with a wooden hammer and listen for a strange sound to learn if is cracked.

**DANGER** • Before plugging the tool, see if is in the OFF position. Otherwise the tool could start unexpectedly causing severe injuries.

**CAUTION** • Run the tool 30 seconds before using, to detect important vibration or any type of unusual movement. If detected, unplug the tool and take it to a **TRUPER®** Authorized Service Center.


**CAUTION** • See if the disc rotates freely.  
• Do not tighten the disc. It could brake.

**WARNING** • To work with small work pieces fasten with wrenches. Never use your hands to hold the piece.

**DANGER** Do not place saw discs for wood or a serrated blade. Such blades create frequent kickbacks and loss of control.

Operations for which this power tool is not designed may result in an accident and cause personal injury. It is not recommended to use this power tool in operations such as sanding, brushing or polishing.

Do not use accessories that are not specifically designed and recommended by the manufacturer.

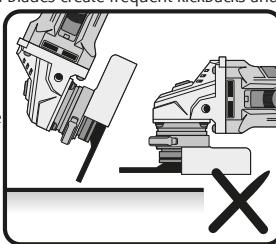

Wrong way to operate the grinder

## While operating the grinder

**CAUTION** • Do not start the tool when the disc is touching the work piece.

**WARNING** • Wear safety glasses, gloves and an apron when using the tool.

**WARNING** • Keep the power cable or extension in the back of the tool. Avoid accidentally damaging the cables with the disc.

• If control of the power tool is lost, the cable may be cut or tangled and the operator's arm or hand may be pulled toward the rotary attachment.

**WARNING** • Never hold the tool by the power cable. Hold by the housing or auxiliary handle.

**CAUTION** • Hold the tool by the isolated parts. The cutting tool could come into contact with hidden wiring or its own cable. Making contact with a "live" wire causes the metal parts to electrify and give an electric shock to the user.

• Never let go of the power tool until the attachment comes to a complete stop.

• Never hit the work surface with the disc.

**CAUTION** • To get the best result with the grinding process, the inclination of the disc and the working surface should have an angle measuring 15° to 30°.

**DANGER** • When the disc is rotating never use the spindle lock to stop it. It is very dangerous and may cause injuries to the user.

**CAUTION** • Do not touch the disc or the working piece after grinding. Wait for them to cool down. Never try to cool them down using water or oil.


**WARNING** • Before checking, adjusting or changing discs, double-check the tool is not plugged in.

• Do not use the power tool near flammable materials.  
• Do not operate the tool while it is being transported to your side.

**DANGER** • Sparks caused when grinding may be dangerous. Use caution. Make sure sparks do not get into contact with skin or flammable substances.

• Gradually clean the tool's vents. The motor fan directs dust into the housing and excessive accumulation of metal dust can cause an electrical hazard.

• Do not use accessories that require liquid refrigerants. The use of water or other liquid refrigerants can result in an electric shock.

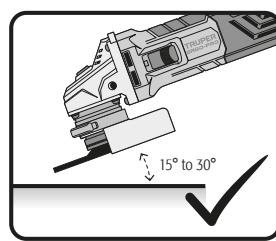

Right way to operate the grinder

The outer diameter and thickness of the accessories must be within the assigned capacity. Incorrectly sized accessories cannot be properly protected or controlled. For best results use 4 1/2" (115 mm) cutting discs with 1 mm - 6.4 mm thickness.

**⚠ DANGER** **KICKBACK (Sharp Recoil)**

Kickback (sharp recoil) is a sudden reaction when a rotating wheel, backrest, brush, or other accessory gets stuck or snagged. Stalling or snagging causes rapid stalling of the rotary attachment which in turn causes the power tool to be forced uncontrollably in the direction opposite to the rotation of the attachment at the working point. An abrasive disc jams into the workpiece, the edge of the contacting disc can be pinched into the surface of the material causing the disc to stop, creating a kickback (sudden recoil). The disc may break and the fragments may jump in the direction of or away from the operator, depending on the direction of disc movement at the point of jamming.

Kickback can occur as a result of misuse of power tools and/or improper operating procedures or conditions and can be avoided by taking the precautions listed below:

- a) **Keep a firm grip on the power tool. Maintain your body and arm so that they can resist the forces of kickback.** Always use the auxiliary handle, if provided, for maximum control over kickback or the reaction of the torsional movement of the engine during starting. The operator can control the torsional movement and the kickback forces if the appropriate precautions are taken;
- b) **Never place your hand near the rotating attachment.**

The accessories may kick back in your hand;

- c) **Do not place your body in the area where the power tool can move if kickback (sudden recoil) occurs.**

This will propel the power tool in the opposite direction of disc movement at the point of engagement or binding;

- d) **Take special care when working on corners, sharp edges, among others. Avoid bouncing and jamming of the attachment.**

When working corners, sharp edges, or bouncing, can cause the attachment to jam and result in loss of control of the power tool or kickback (sudden recoil) of the power tool.

**⚠ WARNING** **Specific safety for grinding and cutting operations with abrasives**

- a) **Use only disc types that are recommended for the specific power tool and the specific tool holder that is designed for the selected disc.**

Discs that are not designed for the power tool cannot be properly protected and are unsafe;

- b) **The grinding surface of discs with a sunken center must be installed below the plane of the guard.**

An improperly installed disc may project burrs outside the plane of the guard and cannot be properly protected;

- c) **The guard must be securely fastened to the power tool and positioned to provide maximum safety, so that the least amount of the blade is exposed to the operator.**

Do not use damaged accessories. Before each use inspect the accessories. \* Check abrasive discs for damage.

- \* Check backing pads for cracks, tears or excessive wear

After inspecting and installing the accessory, operate the tool at maximum speed without charge for one minute.

Damaged accessories usually break during this period of time.

Do not use accessories that are not specifically designed and recommended by the manufacturer. The fact that the accessory may be installed on the power tool does not ensure safe operation.

- d) **Discs should be used only for their recommended applications. For example: do not grind with the side of a cut-off wheel.** Abrasive discs are used for perfect grinding. If lateral forces are applied, they can break;
- e) **Always use flanges in perfect condition, of the correct size according to the shape of the selected disk.**

A flange with the correct characteristics supports the disc, which reduces the possibility of disc rupture. The flanges for cut-off wheels can be different from the flanges for grinding wheels;

- f) **Do not use worn out disks from larger or higher capacity tools**

Disks that are designed for larger or higher capacity tools are not suitable for the increased speed that occurs in the operation of a smaller size or capacity tool and may defragment.

**⚠ WARNING** **Additional safety warnings for abrasive cutting operations**

- a) **Avoid locking or applying excessive pressure to the abrasive cut-off wheel.** Do not attempt to make an excessively deep cut.

Applying excessive force to the disc increases the load on the power tool and the susceptibility to deformation in the cutting area and increases the possibility of kickback (sudden recoil) or blade breakage;

- b) **Do not place your body in line and behind the rotating disc.**

When the disc, at the point of operation, is aligned with your body, the possibility of a kickback (sudden recoil) can propel the spinning disc and the power tool directly against you;

- c) **When disc operation is interrupted or cutting stops for any reason, turn off the power tool and keep it stationary until the disc comes to a complete stop.** Do not attempt to remove the blade while it is in motion, as this may cause kickback (sudden recoil) or similar effect.

Investigate and complete corrective actions to eliminate the cause of the spin interruption;

- d) **Do not restart the cutting operation on the workpiece. Allow the blade to reach maximum speed off the workpiece and carefully restart cutting.**

The abrasive cut-off disc can jam, move upwards or produce a kickback if cutting is restarted on the workpiece;

- e) **Support large workpieces on presses or clamping brackets to reduce the risk of the abrasive cut-off disc becoming trapped or of kickback (sudden recoil).**


Large pieces tend to sink under their own weight. Brackets should be placed under the workpiece near the cutting line and near the edge of the workpiece on both sides of the abrasive cut-off wheel;

- f) **Be careful when making a "very small cut" in walls or other blind areas or where there is no visibility of internal components.**

The protruding abrasive cutting disc can cut through gas or water pipes, electrical wiring, or objects that may cause kickback (sudden recoil).

# Parts


TRUPER®  
ERGO-PRO™

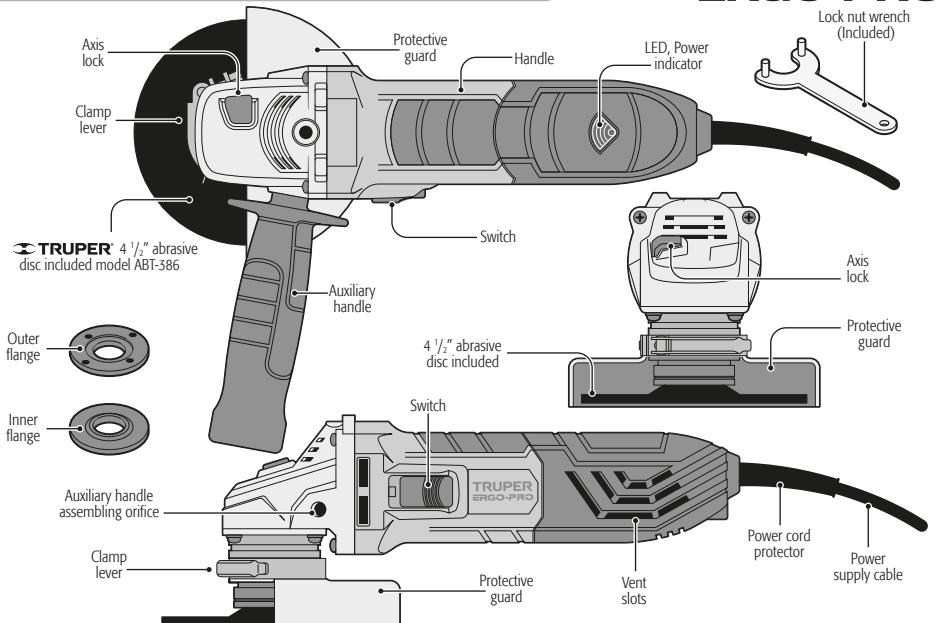

# Assembly

## Protection Guard Assembly

- Open the clamp lever and align the protruding parts inside the guard, push the guard down until the protruding parts engage and rotate freely with the corresponding slots in the shaft cover.
- With the clamp lever open, turn the guard to the desired working position.
- Fix pushing the clamp lever.

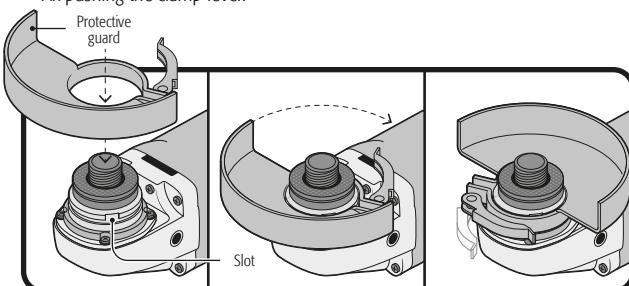


## Disc Assembly

- Fit the inner flange onto the axis.
- Set the disc onto the inner flange.
- Set the outer flange onto the axis.
- Press the axis lock into the grinder head.
- Screw the outer flange with the lock nut wrench until securely fastened.

**DANGER** The axis lock should only be used to change discs.


Never use the axis lock to stop the disc while rotating.

After installing and inspecting the accessory, operate the tool at maximum speed without load for one minute. Damaged accessories usually break during this period of time.

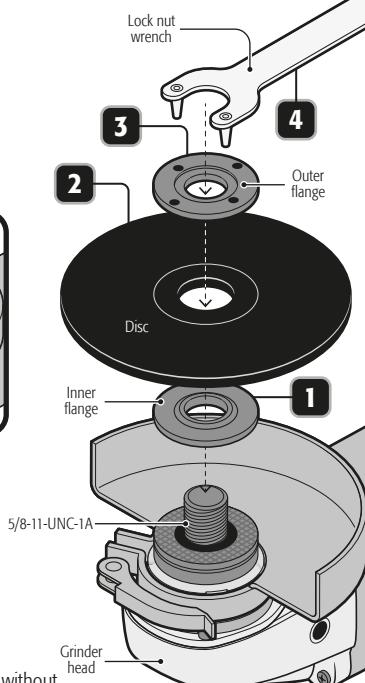

## Auxiliary handle assembly

- For a safer operation use the auxiliary handle. Fit it into any of the three mounting orifices. Use the one that makes your job easier.

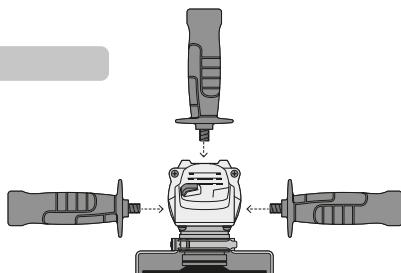

## Start Up

The angle grinder is a manual power tool used to grind and cut steel, pipes, iron angles, brick, tile, stone and / or ceramic pieces; to remove burr on metal surfaces, to level and make smooth welding lines.

## Switch On




- Connect the plug to the power inlet.
- Press the switch exactly in the pressing position (A), without releasing it, direct the pressure forward (B) and push down slightly, release the switch to remain locked.
- To stop operation, press in the pressing position (A) and then release the switch.

## How to correctly hold the tool

Always hold the tool with both hands. Hold the handle with one hand and the other hand hold the auxiliary handle. Be careful not to obstruct the ventilation slots.

• Grinding:  
For better results hold the tool 15° to 30° regarding the work piece. Move forwards to backwards applying light pressure with a constant rhythm. This way the work piece does not get too hot, will not discolor and there will not be rough edges.

• Cutting:  
Do not press, tilt or oscillate the tool. Work at a moderate speed. The disc should always rotate counterclockwise since there is a risk the tool shoots out uncontrolled.  
To cut hard stones using a diamond cutting disc is recommended.

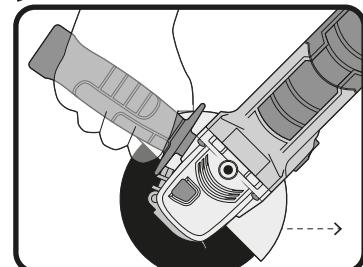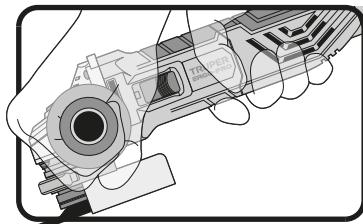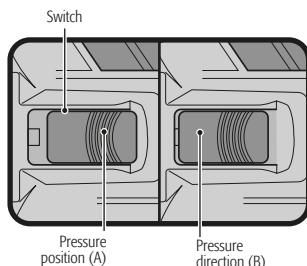

## Useful tips

- Work placing the disc in the right position to prevent damage.
- Press the work piece applying pressure lower than the tool's weight to prevent overload damaging the motor and the disc.
- After installing a new disc allow it to run unloaded at least one minute. If vibration occurs replace immediately.

**CAUTION** • Avoid working on wood or soft metals like lead. These materials saturate the disc very quickly making it useless.

# Maintenance

**TRUPER®**  
**ERGO-PRO**

- Always disconnect the tool before cleaning.
- Never use water or other liquids. Use only a brush.
- To prevent the motor to overheat clean the ventilation slots regularly.
- Check all the tool components are perfectly fixed.
- The housing should not be cracked or damaged.
- Double-check the power cable is not cut or peeled.
- After a prolonged use the grease on the tool head should be replaced in a  **TRUPER®** Authorized Service Center.

## Repairs


Use only spare parts and accessories recommended by the manufacturer. In the event the tool is not working, repairs should be performed in a  **TRUPER®** Authorized Service Center

## Carbon brush replacement

- Carbon Brushes should be periodically checked and when worn, replaced always in a  **TRUPER®** Authorized Service Center.
- After replacing the carbon brushes request to inspect if the new carbon brushes can move freely in the carbon housing. Also request to run the tool 5 minutes to make even the contact with the carbon brushes and the commutator.
- Use only original  **TRUPER®** spare carbons specifically designed with the hardness and resistance adequate for each type of motor. Carbons that are out of specification could damage the motor.
- Both carbons should be changed simultaneous.
- For better results, it is recommended to use grinding and/or cutting disc to 4-1/2"  **TRUPER®**

## Storage

Neatly store the tool in a dry place and protected from dust and water.

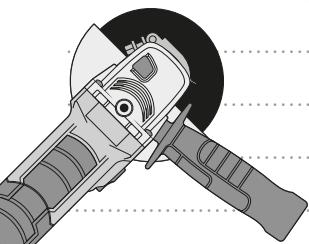

# Authorized Service Centers

**TRUPER®  
ERGO-PRO**

In the event of any problem contacting a Truper Authorized Service Center, please see our webpage [www.truper.com](http://www.truper.com) to get an updated list, or call our toll-free numbers **800 690-6990** or **800 0187-8737** to get information about the nearest Service Center.

|                  |  |  |
|------------------|--|--|
| AGUASCALIENTES   | <b>DE TODO PARA LA CONSTRUCCIÓN</b><br>GRAL. BARRAGÁN #1201, COL. GREMIAL, C.P. 20030,<br>AGUASCALIENTES, AGS. TEL.: 449 994 0537  |  |
| BAJA CALIFORNIA  | <b>SUCRASAL TIJUANA</b><br>AV. LA ENCANTADA, LOTE #5, PARQUE INDUSTRIAL EL<br>FLORIDO II, C.P. 22244, TIJUANA, B.C.<br>TEL.: 664 969 5100  |  |
| CALIFORNIA SUR   | <b>FIX FERRETERÍAS</b><br>FELIPE ANGELES ESQ. RUIZ CORTÍNEZ S/N, COL. PUEBLO<br>NUEVO, C.P. 23670, CD. CONSTITUCIÓN, B.C.S.<br>TEL.: 613 132 1115                                |  |
| CAMPECHE         | <b>TORNILLERÍA Y FERRETERÍA AAA</b><br>AV. ÁLVARO OBREGÓN #524, COL. ESPERANZA<br>C.P. 24080 CAMPECHE, CAMP. TEL.: 981 815 2808  |  |
| CHIAPAS          | <b>FIX FERRETERÍAS</b><br>AV. CENTRAL SUR #27, COL. CENTRO, C.P. 30700,<br>TAPACHULA, CHIS. TEL.: 962 118 4083   |  |
| CHIHUAHUA        | <b>SUCRASAL CHIHUAHUA</b><br>AV. SILVESTRE TERRAZAS #12-111, PARQUE INDUSTRIAL<br>BAFAR, CARRETERA MÉXICO CUAUHTÉMOC, C.P. 31415,<br>CHIHUAHUA, CHIH. TEL. 614 434 0052          |  |
| MEXICO CITY      | <b>FIX FERRETERÍAS</b><br>EL MONSTRUO DE CORREGIDORA, CORREGIDORA # 22,<br>COL. CENTRO, C.P. 06600, CUAUHTÉMOC, CDMX.<br>TEL: 55 5522 5031 / 5522 4861                           |  |
| COAHUILA         | <b>SUCRASAL TORREÓN</b><br>CALLE METAL MECÁNICA #280, PARQUE INDUSTRIAL<br>ORIENTE, C.P. 27278, TORREÓN, COAH.<br>TEL.: 871 209 6823   |  |
| COLIMA           | <b>BOMBAS Y MOTORES BYMTESA DE MANZANILLO</b><br>BLVD. MIGUEL DE LA MADRID #190, COL. 16 DE<br>SEPTIEMBRE, C.P. 28229, MANZANILLO, COL.<br>TEL.: 314 332 1986 / 332 2013         |  |
| DURANGO          | <b>TORNILLOS ÁGUILA, S.A. DE C.V.</b><br>MAZURIÓ #200, COL. LUIS ECHEVERRÍA, DURANGO,<br>DGO.TEL.: 618 817 1946 / 618 818 2844   |  |
| ESTADO DE MÉXICO | <b>SUCRASAL CENTRO JILOTEPEC</b><br>PARQUE INDUSTRIAL 1, PARQUE INDUSTRIAL JILOTEPEC,<br>JILOTEPEC, EDO. DE MÉX. C.P. 54257, TEL: 761 782 9101<br>EXT. 5728 Y 5102               |  |
| GUANAJUATO       | <b>CÍA. FERRETERA NUEVO MUNDO S.A. DE C.V.</b><br>AV. MÉXICO - JAPÓN #225, CD. INDUSTRIAL, C.P. 38010,<br>CELAAYA, GTO. TEL.: 461 617 7578 / 79 / 80 / 88                        |  |
| GUERRERO         | <b>CENTRO DE SERVICIO ECLIPSE</b><br>CALLE PRINCIPAL MZ.1 LT. 1, COL. SANTA FE, C.P. 39010,<br>CHILPANCINGO, GRO. TEL: 747 478 5793  |  |
| HIDALGO          | <b>FERREPRESOS S.A. DE C.V.</b><br>LIBERTAD ORIENTE #504 LOCAL 30, INTERIOR DE PASAJE<br>ROBLEDO, COL. CENTRO, C.P. 43600, TULANCINGO,<br>HGO. TEL.: 775 753 6615 / 775 753 6616 |  |
| JALISCO          | <b>SUCRASAL GUADALAJARA</b><br>AV. ADOLFO B. HORN # 6800, COL: SANTA CRUZ DEL<br>VALLE, C.P.: 45655, TLAJOMULCO DE ZÚÑIGA, JAL.<br>TEL.: 33 3606 5285 AL 90                      |  |
| MICHOACÁN        | <b>FIX FERRETERÍAS</b><br>AV. PASEO DE LA REPÚBLICA #3140-A, COL.<br>EX-HACIENDA DE LA HUERTA, C.P. 58050, MORELIA,<br>MICH. TEL.: 443 334 6858                                  |  |
| MORELOS          | <b>FIX FERRETERÍAS</b><br>CAPITÁN ANZURES #95, ESQ. JOSÉ PERDIZ, COL.<br>CENTRO, C.P. 62740, CUAUTLA, MOR.<br>TEL.: 735 352 8931   |  |
| NAYARIT          | <b>HERRAMIENTAS DE TEPIC</b><br>MAZATLÁN #117, COL. CENTRO, C.P. 63000, TEPIC, NAY.<br>TEL.: 311 258 0540  |  |
| NUEVO LEÓN       | <b>SUCRASAL MONTERREY</b><br>CARRETERA LAREDO #300, 1B MONTERREY PARKS,<br>COLONIA PUERTA DE ANÁHUAC, C.P. 66052, ESCOBEDO,<br>NUEVO LEÓN, TEL.: 81 8352 8791 / 81 8352 8790     |  |
| OAXACA           | <b>FIX FERRETERÍAS</b><br>AV. 20 DE NOVIEMBRE #910, COL. CENTRO, C.P. 68300,<br>TUXTEPEC, OAX. TEL.: 287 106 3092  |  |
| PUEBLA           | <b>SUCRASAL PUEBLA</b><br>AV. PERIFÉRICO #2-A, SAN LORENZO ALMECATLA,<br>C.P. 72710, CUAUTLACINGO, PUE.<br>TEL.: 222 282 8282 / 84 / 85 / 86                                     |  |
| QUERÉTARO        | <b>ARU HERRAMIENTAS S.A. DE C.V.</b><br>AV. PUERTO DE VERACRUZ #110, COL. RANCHO DE<br>ENMEDIO, C.P. 76842, SAN JUAN DEL RÍO, QRO.<br>TEL.: 427 268 4544                         |  |
| QUINTANA ROO     | <b>FIX FERRETERÍAS</b><br>CARRETERA FEDERAL MZ. 46 LT. 3 LOCAL 2, COL. EJIDAL,<br>C.P. 77710 PLAYA DEL CARMEN, Q.R.<br>TEL.: 984 267 3140  |  |
| SAN LUIS POTOSÍ  | <b>FIX FERRETERÍAS</b><br>AV. UNIVERSIDAD #1850, COL. EL PASEO, C.P. 78320,<br>SAN LUIS POTOSÍ, S.L.P. TEL.: 444 822 4341  |  |
| SINALOA          | <b>SUCRASAL CULIACÁN</b><br>AV. JESÚS KUMATE SUR #4301, COL. HACIENDA DE LA<br>MORA, C.P. 80143, CULIACÁN, SIN.<br>TEL.: 667 173 9139 / 173 8400                                 |  |
| SONORA           | <b>FIX FERRETERÍAS</b><br>CALLE 5 DE FEBRERO #517, SUR LT. 25 MZ. 10, COL.<br>CENTRO, C.P. 85000, CD. OBREGÓN, SON.<br>TEL.: 644 413 2392  |  |
| TABASCO          | <b>SUCRASAL VILLAHERMOSA</b><br>CALLE HELIO LOTES 1, 2 Y 3 MZ. #1, COL. INDUSTRIAL,<br>2A ETAPA, C.P. 86010, VILLAHERMOSA, TAB.<br>TEL.: 993 353 7244                            |  |
| TAMAULIPAS       | <b>VM ORINGS Y REFACCIONES</b><br>CALLE ROSITA #527 ENTRE 20 DE NOVIEMBRE Y GRAL.<br>RODRÍGUEZ, FRACC. REYNOSA, C.P. 88780, REYNOSA,<br>TAMS. TEL.: 899 926 7552                 |  |
| TLAXCALA         | <b>SERVICIOS Y HERRAMIENTAS INDUSTRIALES</b><br>PABLO SIDAR #132, COL. BARROJO DE SAN BARTOLOMÉ,<br>C.P. 90970, SAN PABLO DEL MONTE, TLAX.<br>TEL.: 222 271 7502                 |  |
| VERACRUZ         | <b>LA CASA DISTRIBUIDORA TRUPER</b><br>BLVD. PRIMAVERA ESQ. HORTENSIA S/N, COL.<br>PRIMAVERA C.P. 93308, POZA RICA, VER.<br>TEL.: 782 823 8100 / 826 8484                        |  |
| YUCATÁN          | <b>SUCRASAL MÉRIDA</b><br>CALLE 33 #600 Y 602, LOCALIDAD ITZINCAB Y MULSAY,<br>MPIO. UMÁN, C.P. 97390, MÉRIDA, YUC.<br>TEL.: 999 912 2451  |  |

**Code****Model****Brand**

18156

ERGO-4580

**TRUPER®**  
**ERGO-PRO**

This product is guaranteed for 2 years. To make the warranty valid or purchase parts and components you must present the product in Corregidora 22, Col. Centro, Alc. Cuauhtémoc, CDMX C.P. 06060 or at the establishment where you purchased it, or at any Truper® Service Center listed in the annex to the warranty policy and/or in [www.truper.com](http://www.truper.com). Transportation costs resulting from compliance of this warranty will be covered by  **TRUPER®**.

For questions or comments, call **800-690-6990**. Made in China. Imported by Truper S.A. de C.V. Parque Industrial 1, Parque Industrial Jilotepec, Jilotepec, Edo. de Méx. C.P. 54257

**2** YEARS

Stamp of the business. Date of purchase:

Sello del establecimiento comercial. Fecho de compra:

Este producto está garantizado por 2 años. Para hacer válida la garantía o adquirir piezas y componentes debiera presentar el producto en Corregidora 22, Col. Centro, Alc. Cuauhtémoc, CDMX C.P. 06060 o en el proveedor que lo adquirió. El servicio de atención al cliente Truper® se encuentra disponible dentro de los límites de la Ciudad de México y su área metropolitana. Para adquirir piezas o componentes debiera dirigirse a la sucursal más cercana o llamar al 800-690-6990. Hecho en China. Importado por Truper S.A. de C.V. Parque Industrial 1, Parque Industrial Jiutepec, Jiutepec, Edo. de Mex. C.P. 54257

| Código | Modelo    | Marca | ERGO-PRO | TRUPER® | ERGO-PRO | Modelo | Código |
|--------|-----------|-------|----------|---------|----------|--------|--------|
| 18156  | ERGO-4580 |       |          |         |          |        |        |



**Poliza de  
Garantía**

**ERGO-PRO**  
**TRUPER®**

www.rutper.com donde obtendrá un listado actualizado de Centros de Servicio más cercano.

לעומת מדיניותם הקיימת של ממשלת ישראל, מילאנו ממליצה על מילוי תפקידו של מושב כוכב גן.

ACUASCALENTES, AGS. TEL.: 449 994 0537

**BAIA FIX FIBERTEÍAS**  
TEL.: 664 969 5100

CAMPACHE TORNILLERA Y FERRETERIA AAA  
AV ALVARO OBREGON #24A, COL ESPERANZA  
C.P. 24080 CAMPACHE, CAMPECHE. TEL.: 981 815 2808

CHIHUAHUA  
SUCURSAL CHIHUAHUA  
AV. SILVESTRE TERRAZAS #128-11, PARQUE INDUSTRIAL  
BAFAR, CARRERAS MEXICO CUAUHTEMOC CP. 31415.

**SOCURSAL TORNEO** COAHUILA CALLE METAL MECANICA #280, PARQUE INDUSTRIAL ORIENTE, C.P. 27728, TORNEO, COAH.

SEPTIEMBRE, L.P. 28239, MANZANILLO, COL.  
TEL.: 314 332 1986 / 332 013

**MEXICO**  
ESTADIO DE  
SOLCURAL EN JILOTEPEC  
PARQUE INDUSTRIAL 1, PARQUE INDUSTRIAL JILOTEPEC,  
JILOTEPEC, EDO. DE MEX. C.P. 54257, TEL: 761 782 9101

GUERRERO CENTRO DE SERVICIOS ECLIPSE CALLE BERNICIA MZ 111 1 C01 501 SANTA FE CP 20010

HGO. TEL.: 775 753 6615 / 775 753 6616  
ROBLEDO, COL. CENTRO, C.P. 43600, TULANCINGO,  
GUERRERO, MEXICO. 351 262-3500, INTERNACIONAL 2-7151

MICH TEL : 443 334 6858  
EX-HACIENDA DE LA HUERTA, C.P. 58050, MORELIA,  
MICHIGAN, MEXICO. 58050, MEXICO.

Tel: 999 912 451  
MPIO UMAN, C.P. 97390, MERIDA, YUC  
CALLE 33 #600 Y 602, LOCALIDAD ITZINCA BY MULSAY,  
TEL: 999 912 451

TEL.: 782 823 8100 / 826 8484  
PRIMAVERA C.P. 93308, POZA RICA, VER.  
BLD. PRIMAVERA ESO. HORNOSA SN. COL.  
EL MOLINO, 100 MTS. AL NORTE DE LA  
CALLE 100, 100 MTS. AL NORTE DE LA CALLE 100

TEL.: 222717502  
C.P. 90970, SAN PABLO DEL MONTE, T.LAX.  
PABLO SIERRA #13, COL. BARRO DEL SAN BARTOLOME,  
MEXICO. 11100. TEL. 555-1111

Tel.: 992 7552  
R.D.R.C.U.E., P.R.A.C., R.E.N.Y.S.A.  
Calle Rosita #57 entre 2 de Noviembre y Gral.  
R.M.S. TEL.: 992 7552  
REYNOSA, C.P. 88780, MEXICO

TEL.: 99 35 7244  
2AETAPA, CP. 8610, VILLAHERMOSA, TAB.  
CALLE HELIO LOTES 1, 2 Y 3 MZ., #1, COL. INDUSTRIAL.

CALLE 5 DE FEBRERO #57, SUR LT. 25 MZ 10, COL.  
CENTRO, C.P. 85000, CD. OBREGÓN, SON.  
TEL.: 644 413 2592

TEL.: 667 173 9139 / 173 8400  
MORA, C.P. 80143, CULIACÁN, SIN.  
A/A, JESÚS KUMATE SUR #4301, COL. HACIENDA DE LA

**FIX FERRETERIAS**  
SAN LUIS POTOSI, S.L.P., TEL.: 444 822 4341  
AV. UNIVERSIDAD #1850, COL. EL PASO, C.P. 78320.

**QUIINTANA ROO** **FIX FERRETERIAS**  
CARRERA FEDERAL MZ 46 LT 3 LOCAL 2, COL. EIDAL  
C.P. 77700 TEL. 084 362 340

**QUERÉTARO**  
ARU HERRAMIENTAS S.A DE C.V.  
Av. PINTOR DE MIRAGUAN #110, COL. RANCHO DE  
EMENDIO, C.P. 76842, SAN JUAN DEL RÍO, QRO.  
TEL.: 471 268 5444

**PUEBLA** SUCURSAL PUEBLA AV. PERIFERICO #2A SAN LORENZO ALMECTLA,  
CP. 72710, CUAUTLA, MEXICO, PUE.  
TEL.: 222 282 2827 / 48 / 85 / 98

OAXACA FIX FERRETERIAS  
AV. 20 DE NOVIEMBRE #1910, COL. CENTRO, C.P. 68300,  
Tuxtla Gutiérrez, Chiapas. TEL.: 287 196 3092


**NUEVO LEÓN** SUCURSAL MONTERREY  
CARRETERA LAREDO #300, 1MO MONTERREY PARKS,  
COLONIA PERIÁ DE ANAHUAC CP 66052 ECOBENDE

**NAVARIT HERAMIENTAS DE TEPIC**  
TEL.: 735 352 8931

MORELOS FIX FERRERIAS CPTIAN ANZURES #95, ESO, JOSE PEREZ COL.

SERVICIO Autorizado Truper® Consulte nuestra página web al: 800 690-6990 ó 800 0187-8737

ERGO-PRO  
GROUPS

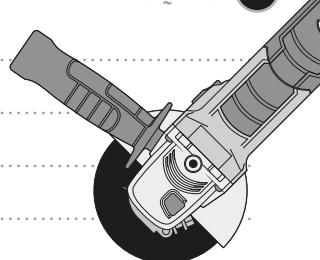

Notas

ERGO-PRO<sup>®</sup>  
TRUPER

## Mantenimiento

polvo y agua

almacenarla en un lugar seco y protegida de

### Almacenamiento

- Para mejores resultados, se recomienda utilizar discos de corte y/o desbastar carbonas.
- Cuando se haga el cambio de carbonas siempre deban reemplazarse los de 4 1/2" (115 mm) marca TRUPER.
- Cuando se haga el cambio de carbonas nunca de específicas que dañen el motor.
- Solo se deben usar carbonas de repuesto originales **TRUPER**.
- Despues de usar carbonas de repuesto siempre enciendan la herramienta durante 5 minutos para emparafar el contacto de los numeros de carbonas nuevas e igualmente en el portacarbón y solicite que desgasifique.
- Los carbonas deben revisarse periódicamente, y ser reemplazados siempre por un Centro de Servicio Autorizado **TRUPER**.

### Cambio de carbonas

Utilice únicamente repuestos y accesorios recomendados por el fabricante. En caso de que la herramienta no funcione la reparación debe ser realizada por algún Centro de Servicio Autorizado **TRUPER**.




### Reparación

- Revise que todos los componentes de la herramienta estén bien fijos.
- La carcasa no debe estar curvada o dañada.
- Revise que la herramienta esté bien fija.
- Revise que la herramienta esté bien fija.
- Ponga el agua sobre el motor, debe limpiar las ranuras de ventilación del motor regularmente.
- Nunca utilice agua u otros líquidos, solamente utilice un cepillo.
- Descociente siempre la herramienta antes de proceder a limpiarla.

matriles saturan muy rápido el disco y lo hacen inservible.

- A AFIENCIÓN** • Evite trabajar sobre un disco nuevo o de plomo. Pues estos es casos de que el disco gire sin trabaja al menos un minuto.
- Despues de instalar un motor nuevo permita que el peso de la herramienta para evitar que se sobrecargue la pieza en la posición correcta para evitar.
- Trabaje con el disco en la posición correcta para evitar que se dañe.

### Consejos útiles

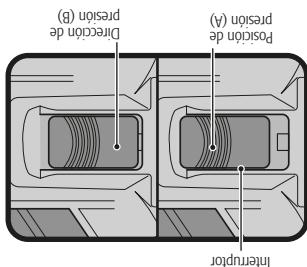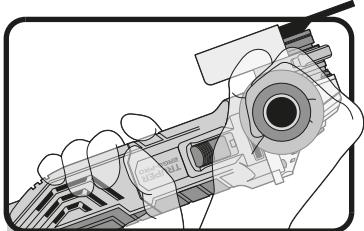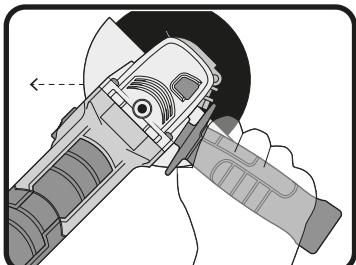


### Como sujetar adecuadamente la herramienta

- Sujete siempre la herramienta con ambas manos. Una mano sostiene la herramienta con una ligera presión constante. La otra mano gira la herramienta de forma suave y fluida.
- Tenga cuidado de no obstruir las ranuras de ventilación.
- Especialidades: Para un mejor resultado sostenga la herramienta de 15° a 30° con respecto a la pieza de trabajo.
- Para un trabajo que requiere una ligera vibración, sujetela de adelante hacia atrás con una ligera movilidad.
- Siempre sujetela de adelante hacia atrás con una ligera vibración constante. De esta forma la herramienta no se calienta demasiado, no se decolora y no se produce arañazos.

### Encendido

La esmeriladora angular es una herramienta eléctrica manual, se utiliza para esmerilar y cortar acero, tubos, hierro en ángulo, latillas, azulejos, piedras y/o piezas de cerámica, para quitar la rebaba de las superficies de metal, para niveles y para limpiar y desbastar.

## Puesta en marcha


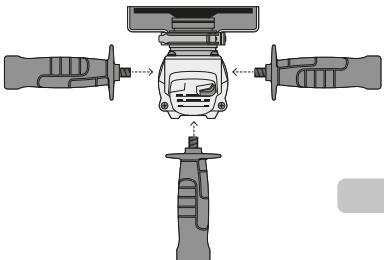


### Montaje

### Montaje del mango auxiliar

- Para una operación segura utilice el mango auxiliar, coloquelo en alguno de los tres orificios para montarlo que le facilita más el trabajo.

**ERGO-PRO**

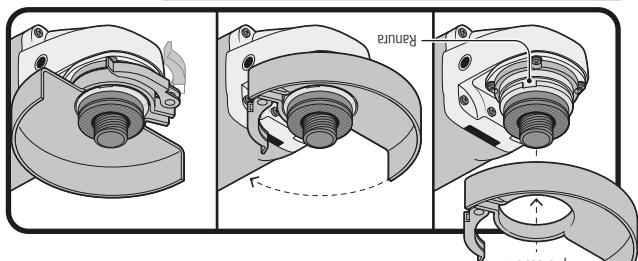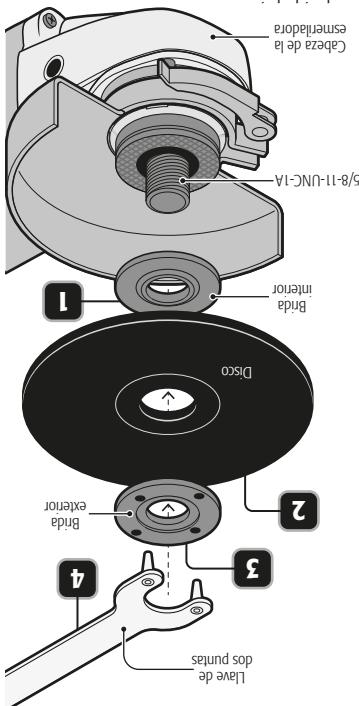


### Montaje del disco

- Apriete la rueda interior y haga coincidir las partes sobresalientes del protector de la rueda con las ranuras correspondientes de la abrazadera y gire la abrazadera para apretarla.
- Con la palanca de la abrazadera abierta, gire la guarda de protección hasta la posición de trabado deseada.
- Fije la empalma de la palanca de la abrazadera.

### Montaje de la guarda de protección

- Abra la abrazadera y haga coincidir las partes sobresalientes del protector de la rueda con las ranuras correspondientes de la abrazadera del eje.
- Inserte la rueda en la abrazadera y empuje la guarda de protección hacia abajo hasta que las partes sobresalientes enganchen y giren libremente con las ranuras correspondientes de la abrazadera del eje.

### Montaje

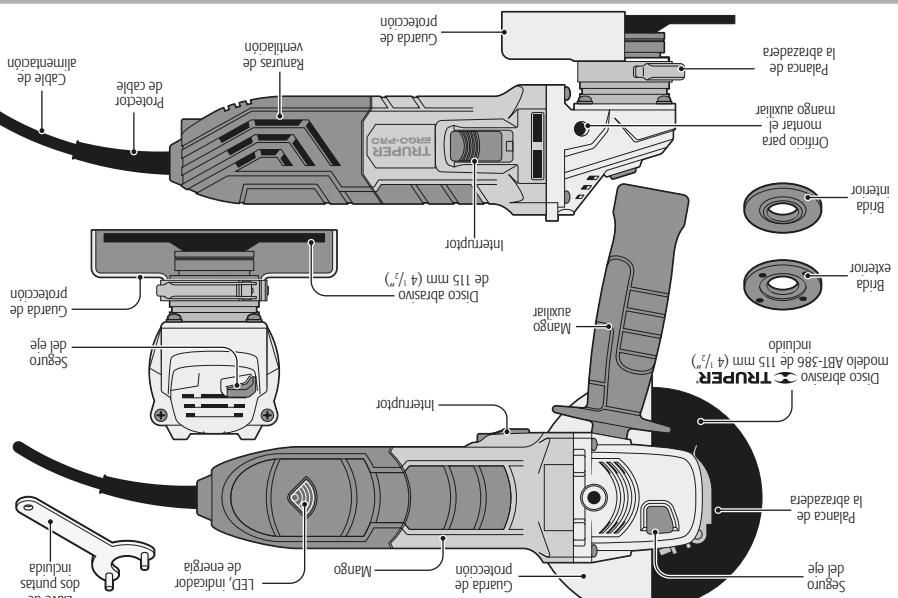







**ADVERTENCIA** Al operar herramientas eléctricas en exteriores, utilice una extensión de aluminio marcada como "uso exterior" marca **VOLTECK**. Estas extensiones son especiales para el uso en exteriores y reducen el riesgo de sufrir una descarga eléctrica.



AWG = Calibre de alambre estándar norteamericano American Wire Gauge. Referencia: NM-B-195-ANC E. Se permite la utilización siempre que las extensiones mismas estén conectadas en un arco de protección contra sobrecorriente.

|                  |           |                       |                      |                  |
|------------------|-----------|-----------------------|----------------------|------------------|
| de 0 hasta 10 A  | 18 AWG(*) | Número de conductores | Calibre de extensión | Amperes          |
| de 10 hasta 15 A | 16 AWG    | 3 (uno a tierra)      | de 1,8 m a 15 m      | de 0 hasta 15 m  |
| de 13 hasta 15 A | 16 AWG    | 14 AWG                | 14 AWG               | de 15 hasta 20 A |
| de 16 AWG        | 16 AWG    | 12 AWG                | 12 AWG               | 6 AWG            |
| de 18 AWG        | 18 AWG    |                       |                      |                  |

ampares indicados en la placa de datos de la herramienta. Si tiene dudas use el siguiente calibre más alto.

significante tabla muestra el tamaño correcto que debe usarse dependiendo de la longitud del cable y del motor. La como resultado se obtendrá una tensión en la línea, teniendo cable de un calibre inferior causaría daños de consumo su herramienta. Un



**ADVERTENCIA** Al usar un cable de extensión, asegúrese de usar el cable suficiente para transportar la corriente que consume su herramienta. Una conexión a tierra o de líquido durante la conexión eléctrica con conexión a tierra. La conexión a tierra es necesaria de un cable de conexión de tres partes con reforzada elimina la posibilidad de que el cable de conexión sea dañado.

**ADVERTENCIA** Antes de obtener acceso a las terminales, todos los circuitos de alimentación deben ser desconectados.



La construcción del dispositivo durante su operación. No lo exponga a líquidos y/o humedad.

Autoizadó **TRUPER**, con el fin de evitar algún riesgo de alta tensión por separación de tres partes con derriamiento de líquido durante su operación. No lo exponga a líquidos y/o humedad.

La clase de aislamiento térmico de los devanados del motor. Clase E  
La base de construcción tiene sujetacables tipo Y

|             |  |          |          |      |
|-------------|--|----------|----------|------|
| Conductores | • 18 AWG x 2C con temperatura de aislamiento de 105 °C | Clase II | Grado IP | IP20 |
|-------------|--|----------|----------|------|

El cable de alimentación tiene sujetacables tipo Y  
de descanso. Máximo 3 horas diárias.

|                  |  |           |                |
|------------------|--|-----------|----------------|
| Ciclo de trabajo | • 30 minutos de trabajo por 15 minutos | Velocidad | • 12 000 r/min |
|------------------|--|-----------|----------------|

|          |         |
|----------|---------|
| Potencia | • 850 W |
|----------|---------|

|           |       |
|-----------|-------|
| Corriente | • 6 A |
|-----------|-------|

|            |         |
|------------|---------|
| Frecuencia | • 60 Hz |
|------------|---------|

|         |           |
|---------|-----------|
| Tensión | • 127 V ~ |
|---------|-----------|

• 115 mm (4 1/2")

Descripción


• Esmeriladora angular

• 18156

ERGO-4580

**TRUPER®**

Especificaciones técnicas

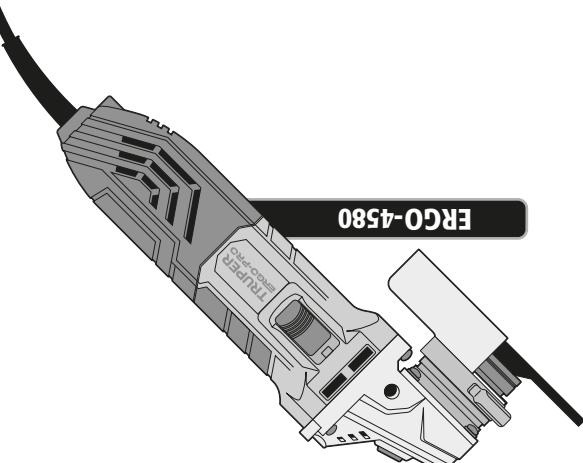

ERGO-4580

Para poder sacar el máximo provecho de la herramienta, alargar su vida útil, hacer válida la garantía en caso de ser necesario y evitar riesgos o lesiones graves, es fundamental leer este instructivo por completo antes de usarla.

Guarde este instructivo para futuras referencias.

Los gráficos de este instructivo son para referencia, pueden variar del aspecto real de la herramienta.

## ATENCIÓN

## Indice

- |    |                                     |
|----|-------------------------------------|
| 12 | Póliza de Garantía                  |
| 11 | Centros de Servicio Autorizados     |
| 10 | Notas                               |
| 9  | Mantenimiento                       |
| 8  | Puesta en marcha                    |
| 7  | Montaje                             |
| 7  | Partes                              |
| 5  | Advertencias de Seguridad           |
| 4  | Advertencias generales de Seguridad |
| 3  | Requerimientos eléctricos           |
| 3  | Especificaciones técnicas           |

**ERGO-PRO**  
**TRUPER®**



Lee este instructivo por completo  
antes de usar la herramienta.

**ATENCIÓN**




# ERGO-4580

Este instructivo es para:  
Modelo ERGO-4580  
Código 18156

850 W  
 $4\frac{1}{2}$ "  
115 mm  
Diámetro  
Potencia

## Esmerrilladora angular

Instructivo de

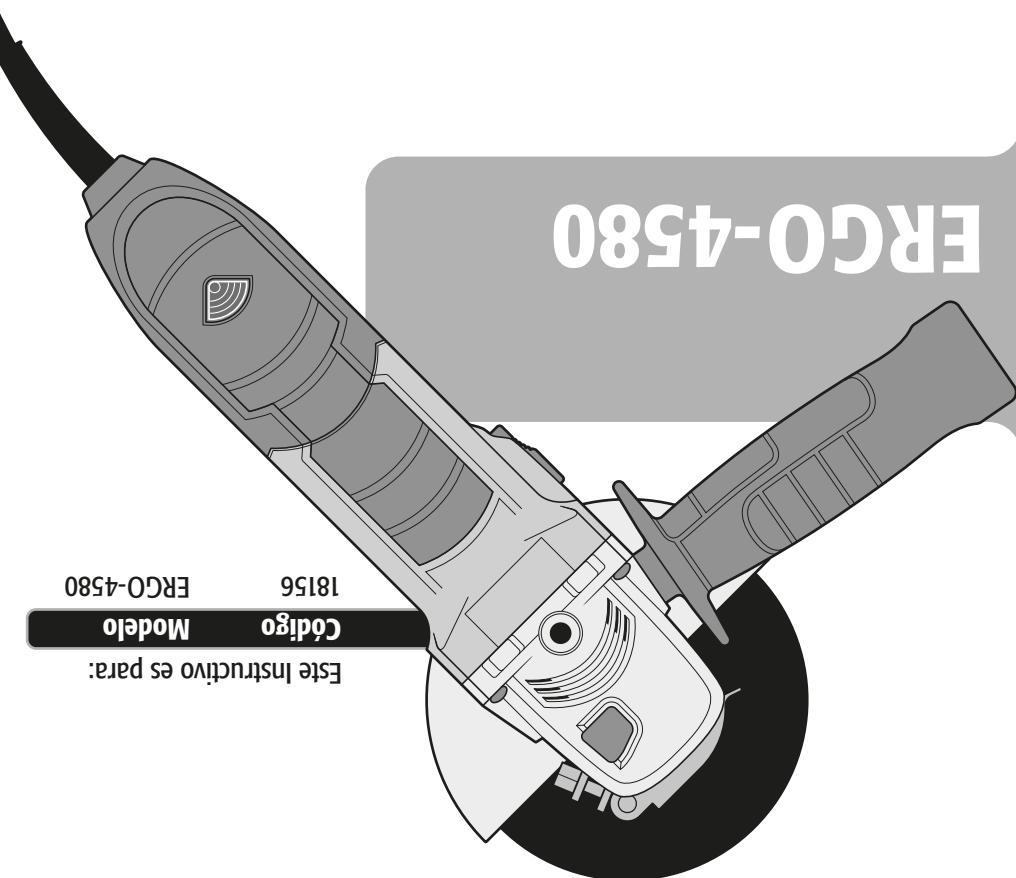

**ERGO-PRO**  
**TRUPER®**

ESPAÑOL  
ENGLISH