


Manual

# Reversible Air Drill

1/2"  
Chuck

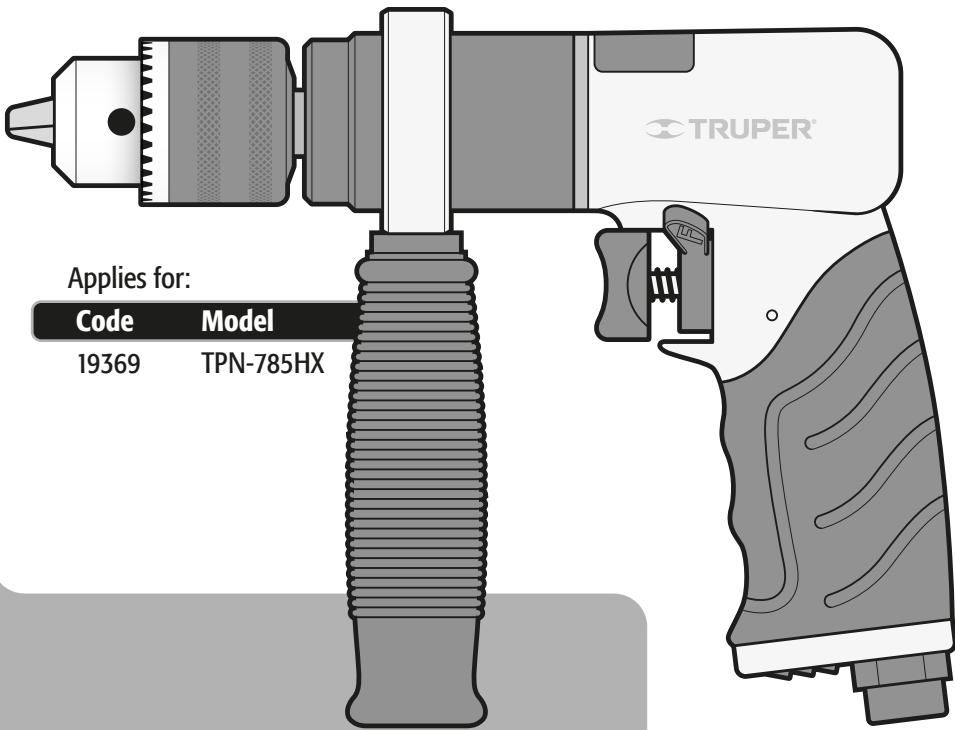

Applies for:

Code	Model
19369	TPN-785HX

## TPN-785HX



### WARNING

Use oil continuously and  
dosed to lubricate the tool.



### CAUTION



Read this manual thoroughly  
before using the tool.




Technical Data.....	3
Filtering and Lubrication Requirements.....	3
 General Safety Warnings for Pneumatic Tools.....	4
 Risk control when using pneumatic tools .....	5
Parts.....	7
Assembly .....	7
Star Up.....	8
Maintenance.....	8
Authorized Service Centers.....	9
Warranty Policy.....	10

## CAUTION

To gain the best performance of the tool, prolong the duty life, make the Warranty valid if necessary, and to avoid hazards of fatal injuries please read and understand this Manual before using the tool.

Keep this manual for future references.

The illustrations in this manual are for reference only. They might be different from the real tool.

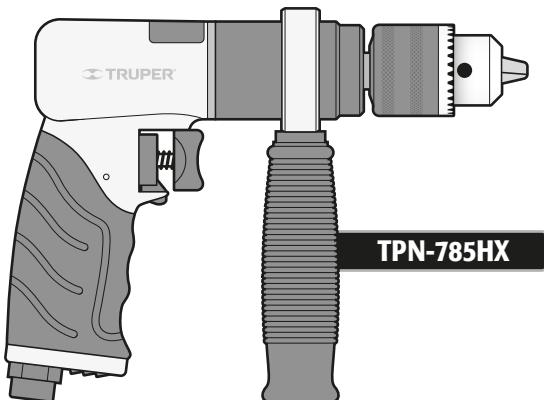

## TPN-785HX

<b>Code</b>	•	19369
<b>Description</b>	•	Reversible air drill
<b>Chuck</b>	•	1/2"
<b>Air Output</b>	•	Bottom
<b>Noise Level</b>	•	83 dB
<b>Vibration</b>	•	< 2.5 m/s <sup>2</sup>
<b>Free Speed</b>	•	800 RPM
<b>Weight Without Accessories</b>	•	3 lb
<b>Total Length</b>	•	8-1/4"
<b>Air Pressure</b>	•	90 PSI
<b>Air Consumption</b>	•	4 CFM
<b>Air Input Connection</b>	•	1/4 NPT
<b>Hose Minimum Recommended Diameter</b>	•	3/8"


**CAUTION** Please consider the increase in pressure in the line or the hose inside diameter to compensate the use of too long hoses (more than 26 ft). The hose minimum inside diameter shall be 3/8" and the connectors shall be 1/4 NPT. Use the right size and good quality couplers and accessories.

## Filtering and Lubrication Requirements

**CAUTION** Dust, water and lack of oil specific for pneumatic tools are the main cause of potential flaws with the tool. We recommend installing a **TRUPER® Brand UNI-LL-1/4** centralized filter-oil feeder system. This system assures lubrication reducing 80% oil consumption significantly increasing the breathing air quality for the operator.

- The filter-oil feeder system must be regulated to administer 3 to 6 drops per minute.
- Drain the water in the air compressor tank and also condensation in the hoses before using the tool.

Consult the air compressor instructions.

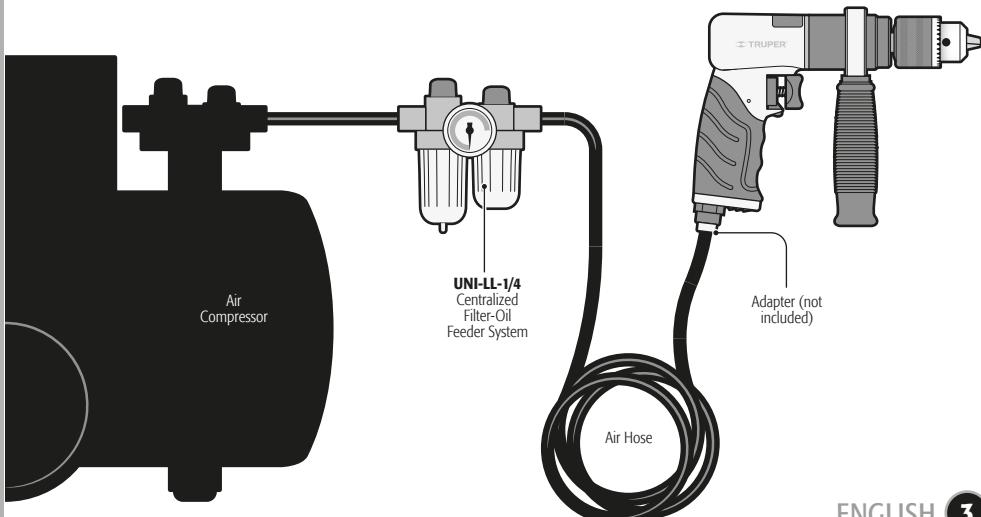

# General Safety Warnings for Pneumatic Tools

**Keep your work area clean, tidy and well lit.**

**CAUTION** Cluttered and dark areas may cause accidents.



**Never use the tool in explosive areas or in the presence of flammable liquids or with no ventilation.**

**DANGER** Sparks the tool generates could trigger an explosion or start a fire.



**Keep children and passersby at a safe distance while operating the tool.**

**WARNING** Distractions can cause losing control and cause accidents.



**Avoid making contact with power lines and circuits.**

**DANGER** Find and avoid power lines and circuits, especially hidden wiring as well as any grounded object.



**Stay alert, use care and common sense.**

**CAUTION** Familiarity with the tool operation could lead to distractions while using it. It could cause accidents.



**Refrain from using the tool if tired or under the influence of drugs, alcohol or medication.**

**DANGER** Being momentarily distracted while using the tool could cause severe personal injury.



**Operate the tool with guards and protection devices in place and in good working condition.**

**WARNING** Failure to comply with this warning is a hazard of severe personal injury.



**Securely fasten and support the work piece.**

**CAUTION** Use brackets and a stable work surface.

**Never force the tool.**

**CAUTION** Working within the tool's working design assures a better and safer job.



**Keep the tool in a safe place and out of the reach of children.**

**WARNING** Power tools are dangerous to inexperienced people.



**Wear proper clothes.**

**WARNING** Loose clothes, jewelry or long hair could get caught in the mobile parts.



**Keep hands away from rotating and/or mobile parts.**

**WARNING** Failure to comply with this warning is a hazard of severe personal injuries or crushing.



**Wear adequate protective safety accessories.**

**CAUTION** Wear eye protection, dust mask, non-skid safety shoes, helmet and ear plugs. In normal conditions, the risk of injury is reduced.



**Unplug the air hose from the tool before carrying out maintenance or replacing accessories.**

**WARNING** Prevent accidental startups that cause accidents.



**Refrain from operating the tool if the switch is not working or is not properly assembled.**

**WARNING** Failure to comply with this warning is a hazard of personal injury. Immediately send it to a **TRUPER®** Authorized Service Center.



**Do not overreach.**

**CAUTION** Good balance and support lead to better controlling the tool in unexpected situations.



**Never pull the air hose.**

**WARNING** Do not use it to carry or unplug the tool from the air outlet. Damaged or tangled hoses may burst and project residues towards the operator.



**Prevent unintentionally starting the tool.**

**WARNING** Double-check the motor is OFF before lubricating, setting up accessories or carry out maintenance.



**Remove brackets before turning on the tool.**

**DANGER** Additional tools or vices installed in a rotating part could cause severe personal injury.



**Double-check maintenance and good working conditions before using the tool.**

**CAUTION** Carefully check mobile parts, alignment and assembly. Do it periodically. Look for any damaged element or parts not working properly. Repair immediately in a **TRUPER®** Authorized Service Center.



**Accessories.**

**CAUTION** Use only accessories or spare parts indicated in this Manual or certified by **TRUPER®**.



**Never leave a running tool unattended.**

**CAUTION** Turn off and disconnect tool after using. Set it in a safe position to avoid severe injury.



# Risk Control When Using Pneumatic Tools



## Risk of injury in head and eyes



- ⚠ WARNING** • Compressed air out of pneumatic equipment may be dangerous. Objects like brackets, burrs, splinters, dust and other residues may be impelled towards head and eyes due to high speed of the air flow. The air flow itself can only injure soft tissue such as eyes, ears, etc.
- ⚠ CAUTION** • The tool attachments may get lose or break and project particles towards the operator or other operators in the work area.

## To prevent head and eyes injuries

- Always, when operating pneumatic equipment wear protection glasses in compliance with the ANSI Z87.1 Standard. As additional protection, wear a mask.
- Never aim the air flow towards people or animals.
- Disconnect the air hose from the tool when not in use.
- Never set a tool unattended when connected to the air outlet.
- Before using the tool verify all the parts and accessories are perfectly secured.



## Risk of explosion



- ⚠ WARNING** • Incorrect handling of pressure in pneumatic equipment may cause an explosion causing severe injuries.

## To prevent explosions

- Before using the tool double check the compressed air source is regulated to the tool specified pressure and must not exceed 1 380 kPa (200 PSI).

## Risk of hearing loss



- ⚠ WARNING** • Being exposed long periods of time to noise pneumatic tools produce may damage hearing permanently causing hearing loss.

## To prevent hearing loss



- Always, when operating pneumatic equipment wear hearing protection in compliance with the ANSI S3.19 Standard

## Risk of inhaling particles



- ⚠ WARNING** • Abrasive tools like grinders, sanders and cutting tools generate dust and particles that damage the lungs and respiratory system.
- Some materials like resin or adhesive are made with chemicals and the vapors emitted may cause serious damage if the operator is exposed for long periods of time.

## To prevent inhaling particles



- Always wear a face mask or breathing device when operating these types of tools.
- Always work in a clean, well ventilated area.

## Risk of electric shock



- ⚠ WARNING** • Pneumatic tools do not have electric insulation. If during the operation, the tool makes contact with a source of electricity, the energy will be conducted to the operator causing a fatal electrocution.

## To prevent electric shock

- Never use pneumatic tools to work energized electric wiring.
- Before operating the tool find the possible hidden wiring in the work zone to prevent making contact.
- Avoid contact with grounded surfaces like pipes, radiators or refrigerators. The risk of electrocution increases if the operator's body gets grounded.

## Risk of damaging the tool



- ⚠ WARNING** • Pneumatic tools forced beyond the capacity and lacking of adequate lubrication or used to loosen rusted nuts (with impact guns) will get damaged and make the Warranty void.

## To prevent damaging the tool

- Keep the tool duly lubricated.
- Do not force the tool.
- Apply "loose it all" liquid to rusted nuts or lugs before trying to loosen with the tool (impact gun).

## Risk of injuries

- WARNING** • Damaged hoses may burst and cause serious injuries or deafness.

• Pneumatic tools connected to the compressed air source, if operated by untrained staff or underage people, will cause severe injuries.

• The compressed air used in pneumatic equipment may be dangerous. Objects like vices, burrs, splinters, dust and other residues may be impelled by the high-speed air flow towards the operator or other people in the work area.

• Using inflation nozzles to clean or torch blowing may cause severe injuries.

• Tools and accessories not suitable, damaged or low quality like grinding discs, chisels, contacts, drills, brad nailer, staplers, etc., may shoot out during the operation and project particles causing severe injuries.

• Brackets may get lose and be projected causing severe injuries or damage to property.

• Tools that accidentally start may cause severe injuries.

• Tools and accessories with no maintenance may cause severe injuries.

• Tools using accessories without **TRUPER®** certification may cause severe injuries.

• Damaged or banged tools may cause severe injuries.



## To prevent injuries

- Do not abuse the hose or the connectors.
- Keep the hose away from sharp or abrasive edges.
- Unplug the hose when setting up accessories like grinding discs or bits.
- Never use the hose to carry the tool.
- Never pull the hose to unplug it.
- Do not expose the hose to heat, oil or solvents.
- Before operating the tool, verify the hoses are not damaged.

• Unplug the air hose when the tool is not in use. Store the tool in a safe place away from children or untrained people. Keep children and untrained people away from the work area.

• Keep the work area clean, tidy and with good lighting.  
• Remove any wrench or plier form the tool before operating.

• Do not use inflation nozzles to clean or to torch blowing.

• Use only parts, vices and accessories recommended by **TRUPER®**.


• Double check all connections are correctly installed.

• Never carry the tool by the trigger.  
• Disconnect the air hose out from the tool when not in use.  
• Never leave the tool unattended when connected to the air outlet.

• Keep the tool handle clean and dry, free of oil or grease.  
• Keep tools clean. A meticulously cleaned and oiled tool delivers a more effective performance and is easier to control.  
• Any type of repair can only be carried out in a **TRUPER®** Authorized Service Center.

• Use always accessories matching the tool speed.  
• Use only **TRUPER®** certified accessories.


• Do not use damaged or banged tools.

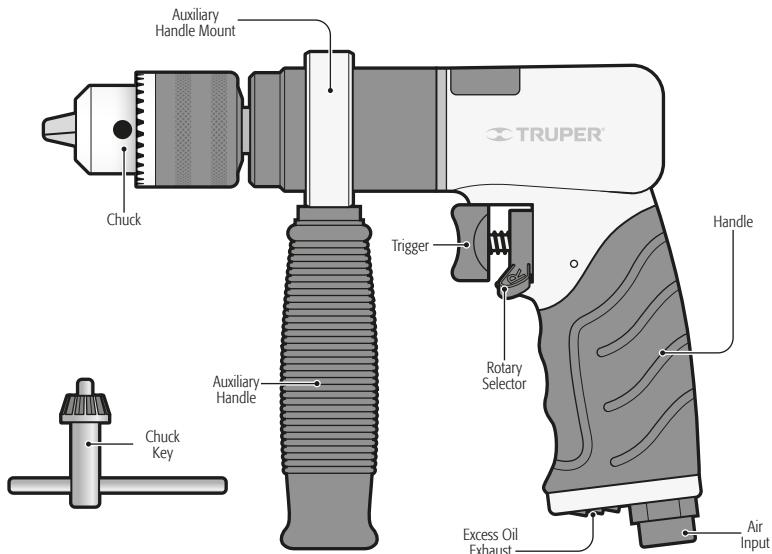

## Assembly


### Auxiliary Handle Set Up

1. Screw the auxiliary handle to the mount by turning it just a little.
2. Insert the drill head through the auxiliary handle mount.
3. Rotate the auxiliary handle together with its mount until is set up in an adequate position to operate the tool.
4. Turn the auxiliary handle to tighten the mount firmly into the drill head and prevent from moving.

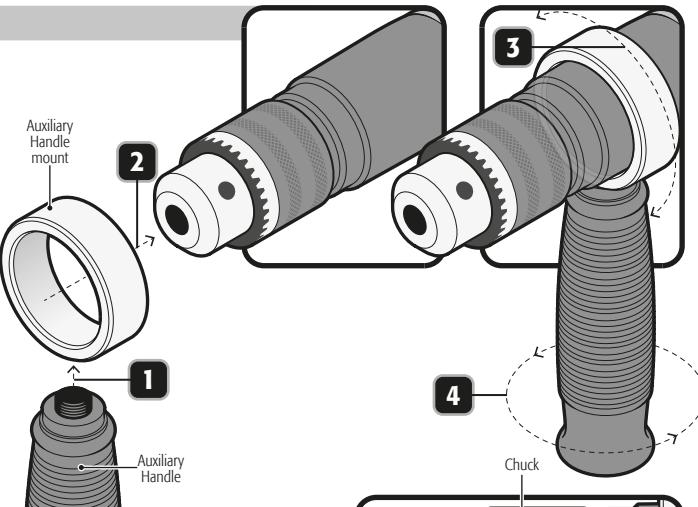

### Bit Installation

- Set the bit into the chuck until it stops. Secure it with the chuck key tightening the chuck in each one of the orifices alternately.

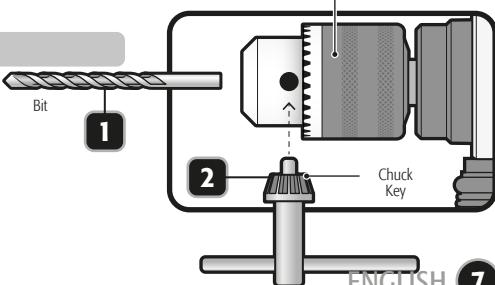

## Air intake connection

- Remove the plastic cap that covers the air inlet at the base of the handle.
- Connect the air hose to the tool using an adapter (not included) by screwing the adapter into the tool's air inlet.
- If working with different pneumatic tools and only one compressor, it is recommended to use a quick coupling (not included) together with the adapter to connect and disconnect the tools and interchange them easily.

## Turning On

- Turn ON the compressor and let it fill up.
- Regulate the air compressor output pressure from 90 PSI – 115 PSI.

**WARNING** The tool operates at this pressure range. Operating in the higher-pressure range will result in a shorter tool life.




- Press the trigger to make the chuck rotate.
- Release the trigger to stop the chuck.

## Rotation Direction

- So that the drill bit rotates forward and can drill, move the rotation selector upwards into the "F" Forward direction (**A**).
- To rotate in reverse, move the rotation selector downwards into the "R" Reverse position (**B**).

## Operation

- Locate the point to be drilled and mark it with a punch to give better support to the drill.
- Place the drill bit on the mark you made with the punch and press the trigger. Do not make contact with the point to be drilled with the moving drill. Do not press the trigger unless the tool is making contact with the work piece.
- Apply firm and constant pressure while drilling. Do not force the tool, otherwise it can get damaged.
- If making deep perforations retrieve the bit regularly to remove residues.

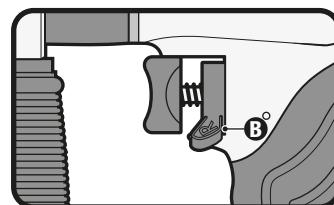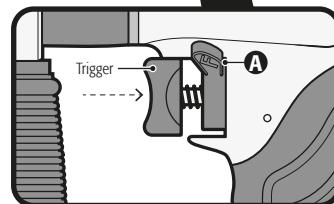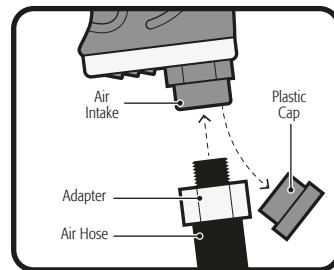

## Maintenance

### Lubrication

Pneumatic tools need constant lubrication along their useful life and during the operation. The compressed air needed in the tool to run carry humidity which could oxidize the motor and bearing in the tool. To prevent this possibility, it is necessary to constantly deliver lubricating oil through a **TRUPER** Brand **UNI-LL-1/4** centralized filter-oiler system installed between the air compressor and the tool.

- WARNING** • Any excess of oil in the motor is immediately expelled through the exceeding oil escape. Keep the escape free of obstructions and never point it towards people or objects.
- If not using the tool for long periods of time, it shall need to be lubricated with care.
  - After 60 hours' operation, the tool mechanism need a little greasing. Excessive grease may diminish power.

### Service

• Servicing the tool shall be carried out every 3 months only in a **TRUPER** Authorized Service Center. Service and maintenance carried out by not certified people may be dangerous and can cause severe personal injuries as well as making the product Warranty void.

- Malfunction in the tool caused by no using the recommended dose of lubrication, or not complying with this Instructions, or repairs carried out by people not certified by **TRUPER** will not be covered with the Warranty. We reserve the right to carry out technical improvements without notice.

# Authorized Service Centers



In the event of any problem contacting a Truper Authorized Service Center, please see our webpage [www.truper.com](http://www.truper.com) to get an updated list, or call our toll-free numbers **800 690-6990** or **800 0187-8737** to get information about the nearest Service Center.

AGUASCALIENTES	<b>DE TODO PARA LA CONSTRUCCIÓN</b> GRAL. BARRAGAN #1201, COL. CREMIAL, C.P. 20030, AGUASCALIENTES, AGS. TEL.: 449 994 0537	MORELOS	<b>FIX FERRETERÍAS</b> CAPITAN ANZURES #95, ESQ. JOSÉ PERDIZ, COL. CENTRO, C.P. 62740, CUAUTLA, MOR. TEL.: 735 352 8931
BAJA CALIFORNIA	<b>SUCURSAL TIJUANA</b> AV. LA ENCANTADA, LOTE #5, PARQUE INDUSTRIAL EL FLORIDO II, C.P. 22244, TIJUANA, B.C. TEL.: 664 969 5100	NAYARIT	<b>HERRAMIENTAS DE TEPIC</b> MAZATLÁN #117, COL. CENTRO, C.P. 63000, TEPIC, NAY. TEL.: 311 258 0540
BAJA CALIFORNIA SUR	<b>FIX FERRETERÍAS</b> FELIPE ÁNGELES ESQ. RUIZ CORTÍNEZ S/N, COL. PUEBLO NUEVO, C.P. 23670, CD. CONSTITUCIÓN, B.C.S. TEL.: 613 132 1115	NUEVO LEÓN	<b>SUCURSAL MONTERREY</b> CARRETERA LAREDO #300, 1B MONTERREY PARKS, COLONIA PUERTA DE ANÁHUAC, C.P. 66052, ESCOBEDO, NUEVO LEÓN, TEL.: 81 8352 8791 / 81 8352 8790
CAMPECHE	<b>TORILLERÍA Y FERRETERÍA AAA</b> AV. ALVARO OBREGÓN #524, COL. ESPERANZA C.P. 24080 CAMPECHE, CAMP. TEL.: 981 815 2808	OAXACA	<b>FIX FERRETERÍAS</b> AV. 20 DE NOVIEMBRE #910, COL. CENTRO, C.P. 68300, TUXTEPEC, OAX. TEL.: 287 106 3092
CHIAPAS	<b>FIX FERRETERÍAS</b> AV. CENTRAL SUR #27, COL. CENTRO, C.P. 30700, TAPACHULA, CHIS. TEL.: 962 118 4083	PUEBLA	<b>SUCURSAL PUEBLA</b> AV. PERIFÉRICO #2-A, SAN LORENZO ALMECATLA, C.P. 72710, CUATLACINGO, PUE. TEL.: 222 282 8282 / 84 / 85 / 86
CHIHUAHUA	<b>SUCURSAL CHIHUAHUA</b> AV. SILVESTRE TERRAZAS #12-11, PARQUE INDUSTRIAL BAFAR, CARRETERA MÉXICO CUAUHTEMOC, C.P. 31415, CHIHUAHUA, CHIH. TEL.: 614 434 0052	QUERÉTARO	<b>ARU HERRAMIENTAS S.A DE C.V.</b> AV. PUERTO DE VERACRUZ #110, COL. RANCHO DE ENMEDIO, C.P. 76842, SAN JUAN DEL RÍO, QRO. TEL.: 427 268 4544
MEXICO CITY	<b>FIX FERRETERÍAS</b> EL MONSTRUO DE CORREDIGORA, CORREDIGORA # 22, COL. CENTRO, C.P. 06060, CUAUHTEMOC, CDMX. TEL.: 55 5522 5031 / 5522 4861	QUINTANA ROO	<b>FIX FERRETERÍAS</b> CARRETERA FEDERAL MZ. 46 LT. 3 LOCAL 2, COL EJIDAL, C.P. 77710 PLAYA DEL CARMEN, QR. TEL.: 984 267 3140
COAHUILA	<b>SUCURSAL TORREÓN</b> CALLE METAL MECÁNICA #280, PARQUE INDUSTRIAL ORIENTE, C.P. 27278, TORREÓN, COAH. TEL.: 871 209 68 23	SAN LUIS POTOSÍ	<b>FIX FERRETERÍAS</b> AV. UNIVERSIDAD #1850, COL. EL PASEO, C.P. 78320, SAN LUIS POTOSÍ, SLP. TEL.: 444 822 4341
COLIMA	<b>BOMBAS Y MOTORES BYMTESA DE MANZANILLO</b> BLVD. MIGUEL DE LA MADRID #190, COL. 16 DE SEPTIEMBRE, C.P. 28239, MANZANILLO, COL. TEL.: 314 332 1986 / 332 0813	SINALOA	<b>SUCURSAL CULIACÁN</b> AV. JESÚS KUMATE SUR #4301, COL. HACIENDA DE LA MORA, C.P. 80143, CULIACÁN, SIN. TEL.: 667 173 9139 / 173 8400
DURANGO	<b>TORNILLOS ÁGUILA, S.A. DE C.V.</b> MAZURIÓ #200, COL. LÍOS ECHEVERRÍA, DURANGO, DGO. TEL.: 618 817 1946 / 618 818 2844	SONORA	<b>FIX FERRETERÍAS</b> CALLE 5 DE FEBRERO #517, SUR LT. 25 MZ. 10, COL. CENTRO, C.P. 85000, CD. OBREGÓN, SON. TEL.: 644 413 2392
ESTADO DE MÉXICO	<b>SUCURSAL CENTRO JILOTEPEC</b> AV. PARQUE INDUSTRIAL #1-A, C.P. 54240, JILOTEPEC, EDO. DE MÉX. TEL.: 761 782 9101 EXT. 5728 Y 5102	TABASCO	<b>SUCURSAL VILLAHERMOSA</b> CALLE HELIO LOTES 1, 2 Y 3 MZ. #1, COL. INDUSTRIAL, 2A ETAPA, C.P. 86010, VILLAHERMOSA, TAB. TEL.: 993 353 7244
GUANAJUATO	<b>CÍA. FERRETERA NUEVO MUNDO S.A. DE C.V.</b> AV. MÉXICO - JAPÓN #225, CD. INDUSTRIAL, C.P. 38010, CELAYA, GTO. TEL.: 461 617 578 / 79 / 80 / 88	TAMAULIPAS	<b>VM ORINGS Y REFACCIONES</b> CALLE ROSITA #527 ENTRE 20 DE NOVIEMBRE Y GRAL. RODRÍGUEZ, FRACC. REYNOSA, C.P. 88780, REYNOSA, TAMS. TEL.: 899 926 7552
GUERRERO	<b>CENTRO DE SERVICIO ECLIPSE</b> CALLE PRINCIPAL MZ.1 LT. 1, COL. SANTA FE, C.P. 39010, CHILPANCINGO, GRO. TEL.: 747 478 5793	TLAXCALA	<b>SERVICIOS Y HERRAMIENTAS INDUSTRIALES</b> PABLO SIDAR #132, COL. BARRIO DE SAN BARTOLOMÉ, C.P. 90970, SAN PABLO DEL MONTE, TLAX. TEL.: 222 271 7502
HIDALGO	<b>FERREPRECIOS S.A. DE C.V.</b> LIBERTAD ORIENTE #304 LOCAL 30, INTERIOR DE PASAJE ROBLEDO, COL. CENTRO, C.P. 43600, TULANCINGO, HGO. TEL.: 775 733 6615 / 775 733 6616	VERACRUZ	<b>LA CASA DISTRIBUIDORA TRUPER</b> BLVD. PRIMAVERA ESQ. HORTENSIA S/N, COL. PRIMAVERA C.P. 93308, POZA RICA, VER. TEL.: 782 823 8100 / 826 8484
JALISCO	<b>SUCURSAL GUADALAJARA</b> AV. ADOLFO B. HORN # 6800, COL: SANTA CRUZ DEL VALLE, C.P.: 45650, TLAJOMULCO DE ZÚÑIGA, JAL. TEL.: 33 3606 5285 AL 90	YUCATÁN	<b>SUCURSAL MÉRIDA</b> CALLE 33 #600 Y 602, LOCALIDAD ITZINCAB Y MULSAY, MPIO. UMAN, C.P. 97390, MÉRIDA, YUC. TEL.: 999 912 2451
MICHOACÁN	<b>FIX FERRETERÍAS</b> AV. PASEO DE LA REPÚBLICA #3140-A, COL. EX-HACIENDA DE LA HUERTA, C.P. 58050, MORELIA, MICH. TEL.: 443 334 6858		

**Code**

19369

**Model**

TPN-785HX

**Brand**

This product is guaranteed for 2 years. To make the warranty valid or purchase parts and components you must present the product in Corregidora 22, Col. Centro, Alc. Cuauhtémoc, CDMX C.P. 06060 or at the establishment where you purchased it, or at any Truper® Service Center listed in the annex to the warranty policy and/or in [www.truper.com](http://www.truper.com). Transportation costs resulting from compliance of this warranty will be covered by

For questions or comments, call **800-690-6990**. Made in China. Imported by Truper S.A. de C.V. Parque Industrial 1, Jilotepec, Edo. de Méx. C.P. 54240



Stamp of the business. Delivery date:

Sello del establecimiento comercial. Ficha de entrega:

Este producto es de garantía por 2 años. Para hacer válido la garantía o adquirir piezas y componentes debiera presentar el producto en Corefigura 22, Col. Centro. Alc. Cuauhtémoc CDMX CP 06060 o en el sitio web [www.truper.com](http://www.truper.com). Los gastos de transporte de servicio Truper® de los artículos en el envío para su cumplimiento están comprendidos dentro de los precios de los servicios de Truper®. Los gastos de envío y/o de envío de mercancías a través de servicios de envío de paquetería o de servicios de envío de paquetería en línea se cobrarán al cliente. Los gastos de envío y/o de envío de mercancías a través de servicios de envío de paquetería en línea se cobrarán al cliente.

Codilgo Modello Marca TPN-785HX CTRUPER. 19369



**Garantía  
Poliza de**

**TRUPER®**

En caso de tener algún problema para contactar un Centro de Servicio Autorizado Truper®, consulte nuestra página [www.truper.com](http://www.truper.com) donde obtendrá una lista de autorizadas, o llame al: **800 690-6990** ó **800 0187-8737** donde le informarán cuál es el Centro de Servicio más cercano.

<b>MORELOS</b> <b>FIX FERRERIAS</b> CAPITANIAZURIS #99, ESO, JOSE PEREZ, COL. TEL.: 755 352 8931	<b>SUCRALA TIJUANA</b> <b>DE TODO PARA LA CONSTRUCCION</b> C.RBL. BARRAGAN #1201, COL. GEMMA, CP. 20030. AGUASCALIENTES, TEL.: 49 994 0537
<b>NAYARIT</b> <b>HERRAMIENTAS DE TRUPER</b> MAZATLAN #117, COL. CENTRO, CP. 63000, TEPIC, NAY. TEL.: 311 258 0540	<b>SUCRALA TIJUANA</b> <b>DE TODO PARA LA CONSTRUCCION</b> AV. LA ENCANTADA, LOTE #5, COL. CONSTITUCION, BC. TEL.: 69 994 5100
<b>NUVELEON</b> <b>SUCRALA MOTORES</b> CARRERA LAUREN #300, COL. BONITA PARS, CP. 63000, TUXTEPEC, OAXACAH. TEL.: 287 106 5092	<b>SUCRALA CHIHUAHUA</b> <b>AV. ALVARO OBREGON #27, COL. CENTRO, CP. 30700,</b> <b>TAPACHULA, CHI.</b> TEL.: 962 118 4083
<b>OAXACA</b> <b>SUCRALA MOTORES</b> AV. 20 DE NOVIEMBRE #910, COL. CENTRO, CP. 63000, TUXTEPEC, OAX TEL.: 287 106 5092	<b>SUCRALA CHIHUAHUA</b> <b>AV. SILESTRE RIBERA MEXICO 1280, PARRUE INDUSTRIAL</b> <b>CHIHUAHUA, CHI.</b> TEL.: 614 434 0025
<b>QUINTANA ROO</b> <b>FIX FERRERIAS</b> CARRERA FEDERAL MZ. 46 LT. 3 LOCAL 2, COL. EJIDAL, CP. 77010 PIAZAS DEL CARMEN, Q.R. TEL.: 994 770 3140	<b>SOMORA</b> <b>SUCRALA CLILACIN</b> AV. UNIVERSIDAD #1850, COL. EL PASO, CP. 78320, MORA CR. 0843, CLILACIN, SON. TEL.: 64 41 3232
<b>SINALOA</b> <b>SUCRALA CLILACIN</b> SAN LUIS POTOSI, SL.P. TEL.: 44 22 4341 MORA CR. 0843, CLILACIN, SON. TEL.: 66 71 73 9139 / 73 8400	<b>DURANGO</b> <b>SUCRALA NEUVO MONDO S.A. DE C.V.</b> MAZARDO #400 COL. LUIS CORTEZ, DURANGO, COLOMBIA TEL.: 618 817 1946 / 618 818 2844
<b>QUERETARO</b> <b>AUU HERRAMIENTAS S.A. DE C.V.</b> ENMEXICO #10, SAN JUAN DEL RIO, Q.R. TEL.: 472 268 4544	<b>COLUMIA</b> <b>BOMARCA MOTORES BYMTESA DE MANZANILLO</b> SPETIMBRE CP. 28239, MANZANILLO, COL. TEL.: 314 352 1986 / 323 8013
<b>GUADALAJARA</b> <b>FIX FERRERIAS</b> CARRETERA FEDERAL MZ. 46 LT. 3 LOCAL 2, COL. EJIDAL, CP. 77010 PIAZAS DEL CARMEN, Q.R. TEL.: 994 770 3140	<b>COAHUILA</b> <b>SUCRALA TAPACHULA</b> ORBELE CP. 2228, TAPACHULA, COAH. TEL.: 87 209 68 25
<b>GUATEMALA</b> <b>FIX FERRERIAS</b> AV. PAREQUE INDUSTRIAL #1-1, COL. 4240, IQUITPEC, ED. DE MEX. TEL.: 76 78 210 EXT. 5728 5102	<b>GUANAJAUTO</b> <b>CA. FERRERIA NUEVO MONDO S.A. DE C.V.</b> AV. PRADERA INDUSTRIAL #223, CD. INDUSTRIAL, QUERETARO, C.P. 38010, TEL.: 747 178 5744
<b>TABASCO</b> <b>SUCRALA VILLAHERMOSA</b> CALLE HEUZO LOTES 1, 2 Y 3 MZ. #1, COL. INDUSTRIAL, TAB., CP. 89700, D.F. DIBRECU, TAB. TEL.: 993 352 7244	<b>HIDALGO</b> <b>CENTRO DE SERVICIO CEFISE</b> CALLE PRINCIPAL MZ.1 LT. 1, COL. SANTA FE, C.P. 39010, CHILPANCINGO, G.R., TEL.: 747 178 5793
<b>TAJAMULAPA</b> <b>V.M. ORGICOS Y HERMOSINOS</b> CALLE 20 DE NOVIEMBRE 20 DE NOVIEMBRE G.R., ROBLECU, TAB., CP. 88780, REYNOSA, C.P. 88780, TAMS. TEL.: 989 926 7552	<b>MICHOACAN</b> <b>FIX FERRERIAS S.A. DE C.V.</b> AV. PAZ DE LA REPUBLICA #3100, COL. SANTIA CRUZ DEL VALLE, C.P. 45655, TLAJUANICO DE PAULE, MEXICO
<b>TLAXCALA</b> <b>SERVICIOS Y HERMOSINOS INDUSTRIALES</b> PABLO SIERRA #125 COL. BARRODO DE LAS BALROTOMIE, TEL.: 222 717 7502	<b>JALISCO</b> <b>SUCRALA GUADALAJARA</b> VIAL. ADOFO B. HORN #800, COL. SANTIA CRUZ DEL VALLE, C.P. 45655, TLAJUANICO DE PAULE, MEXICO
<b>VERACRUZ</b> <b>L.A. CASA DISTRIBUIDORA TRUPER</b> BLD. PRIMEROS HORNETAS S/N, COL. P.R.M. TEL.: 782 830 8404	<b>COLIMA</b> <b>BOMARCA MOTORES BYMTESA DE MANZANILLO</b> SPETIMBRE CP. 28239, MANZANILLO, COL. TEL.: 314 352 1986 / 323 8013

# Puesta en marcha

**TRUPER®**

Encendido

- Recife el tapón plástico que cubre la entrada de aire en la base del mango.
  - Corte la manga de una adaptador de aire a la herramienta con un adaptador (no incluido), atrinillando el adaptador a la herramienta.
  - En caso de reabrir con distinto hermafroditas nemáticas y solo compresor, se recomienda el uso de un coplje rápido (no incluido) junto con el adaptador, para conectar y desconectar rápidamente las herramientas e intercambiarlas fácilmente.

## Operación

- Para que la bocla gire hacia adelante y proteja la cara del conductor, se debe girar el selector de dirección a la posición "F" (Forward o adelante) (A).
  - Para que la bocla gire hacia adelante y proteja la cara del conductor, se debe girar el selector de dirección a la posición "R" (Reverse o reversa), muévala al selector de giro hacia abajo a la posición "R", "de Revresa" (B).

## Dirección de rotación

- Etrenada de aire y permita que se libere.
  - Repogue la presión de salida del compresor de aire a 90 - 115 KPa (621 KPa - 793 KPa).
  - Ajuste la presión de operación para una mejoría de rendimiento.
  - Sustituye el gatillo para que el broquero se detenga.

Lubricación




- Lubricación Despues de cada 60 horas de operación el mecanismo de la barra mixta se debe rellenar con aceite E' necesario de


SERVICIO

- Después de cada 60 horas de operación el mecanismo de la herramienta se debilita y agota un poco. El exceso de grasa puede disminuir la potencia.

# Mantenimiento



- Utilique de la palabra y marquela con un cuadro en la punzón para tener un mejor apoyo a la broca.
  - Coloque la broca en la marca que realizó con el punzón y presione de gatillo. No haga una rotación con la broca en movimiento. Al principio de gatillo una mano le hará la rotación se encuentra en contacto con la pieza de trabajo.
  - Aplique una presión firme y constante durante la elaboración, sin forzar la herramienta, de lo contrario podría dañarla.
  - En caso de realizar perforaciones profundas saque la broca del orificio regularmente para retirar los residuos.

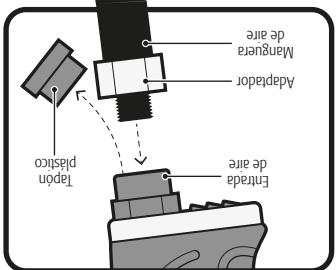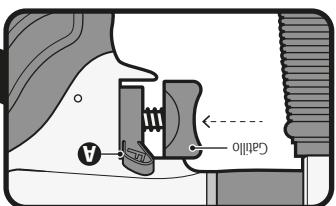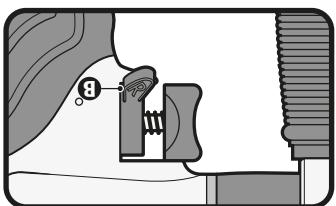

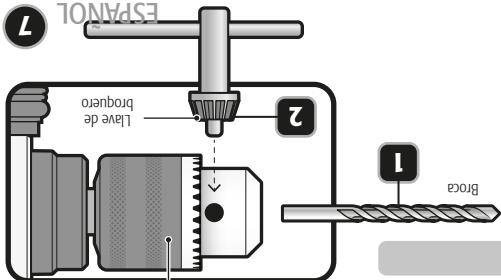

- Introduzca la broca dentro del broquero hasta que tope y segurela con la llave de broquero prestando especial atención.
- Broquero en cada uno de los orificios alternadamente.


### Instalación de la broca

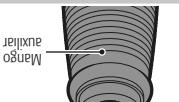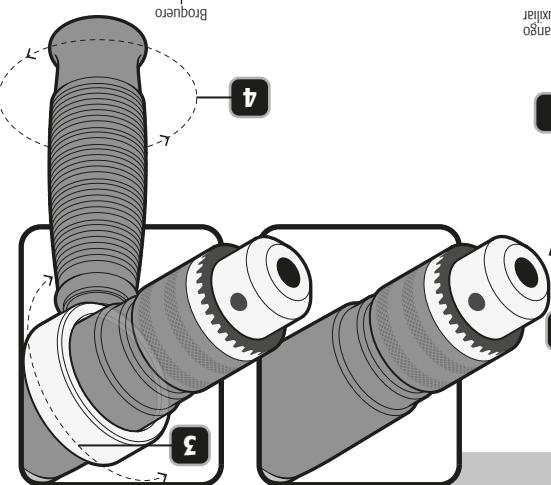

1. Atornille el manguito auxiliar a la montura girando solo un poco.
2. Introduzca el cabezal del taladro por la montura girando solo un poco.
3. Roté el manguito auxiliar juntito con su montura hasta colocarlo en una posición adecuada para operar la herramienta.
4. Gire el manguito auxiliar para apretar la montura firmemente a la cubierta del taladro y evitar que se mueva.

### Instalación del manguito auxiliar

## Ensamble

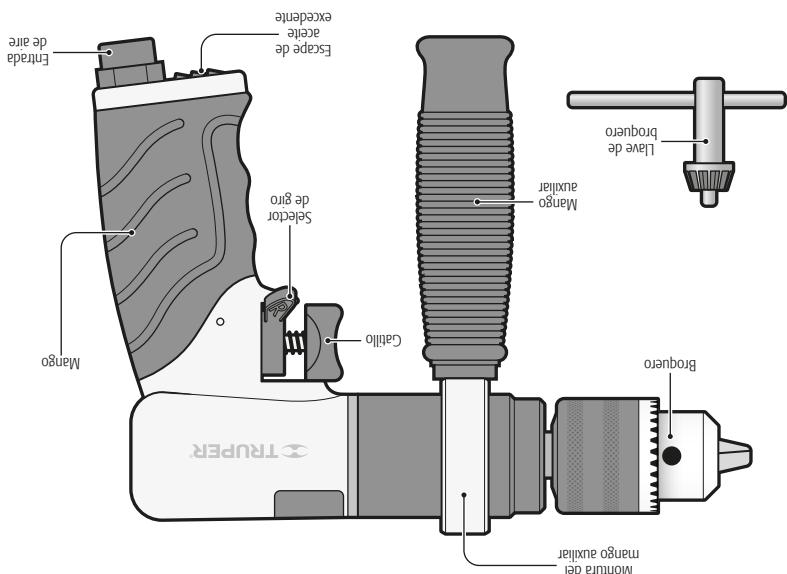

- No utilice herramientas y accesorios dañados o golpeados.
  - Las herramientas y accesorios dañados o golpeados provocar lesiones serias.

- Las heramientas y accesorios danados o golpeados pueden provocar lesiones serias.

三

- Utilice siempre accesorios que correspondan a la velocidad de la herramienta
  - Utilice accesorios certificados por TRUP

- Las herramientas que utilizan accesorios ho certificados por  TRUPER® pueden provocar lesiones serias.

۸

- Mantenga el mango de la herramienta limpia y seco.
  - Libre de aceite y grasa.
  - Mantenga las herramientas limpias. Una herramienta bien cuidada y lubricada brinda un funcionamiento más efectivo y es más fácil controlarla.
  - Consulte con su proveedor local sobre el servicio de reparación.
  - Centro de Servicio Autorizado **TRUPER**.

- Las heridas abiertas y accesorios que no recubren el mantenimiento adecuado pueden provocar lesiones serias.

mien  
g

- Nunca cargue la herramienta tomándola por el gatillo.
  - Descubra la magnífica de aire de la herramienta cuando no la esté utilizando.

- Las heridas que arancan accidentalmente pueden provocar lesiones serias.

3

- Utilice solo partes, abrazaderas, y accesorios recomendados por TRUPER®.

- Herramientas o accesorios no adecuados, dardos o de bala calibre como discos de esmeril, nucleos, conector's, tablillas, cuchillas, guijarreras, etc., pueden dispersar durante la operación, proyectando partículas que pueden causar lesiones.

eal.

- No use biquilas de inflado para limpiar o soplar.

- USAI doquimids de liliáaddo pied illimpidi o soplaleadi plantea producir lesiones serias.

- Desacunción de maniobras de alta cuadros de hermanamiento no se realizó en uso de líquido de refrigeración en la tubería.
  - La filtración de líquido de refrigeración en la tubería.

- Las hermanuras neuromotoras congeladas a la túnica de aire compuñido pueden ser operadas por personal no capacitado a menores de edad, derivando en lesiones severas.

S9

Para prevenir lesiones



Kiesgo de lesiones

SPONSOR

# Control de riesgos

**TRUPER®**

Para prevenir el daño a la herramienta

• **Efecto de contacto con superficies afiladas como interrumpientes.**  
• **U**nido posible alabado oculto en la zona de trabajo prepara una fuerza que hace contacto con el anteo de operar la máquina.

Para prevenir choque eléctrico

**AVERÍA EN CÁ** • las arranqueas neuromusculas que no cumplen con la ubicación adecuada, sean forzadas más allá de su capacidad o se utilicen para alargar tercias oxidadas (con pistolas de impacto) se dañarán, invalidando la garantía.

Riesgo de daño a la herramienta

Este terminal es adecuado para la conexión de dispositivos que requieren una tensión de operación de 12Vdc. La conexión se realiza mediante el terminal de color azul.

Riesgo de choque eléctrico

Algunos materiales como adhesivos y resinas contienen químicos que liberan vapores perjudiciales para la salud. Estos vapores se propagan rápidamente por el ambiente y pueden causar daños pulmonares y de sistema respiratorio.

Los polvos y partículas que quedan en el aire pueden causar daños a los pulmones y al sistema respiratorio.

Los sistemas de calefacción y ventilación de los edificios también contribuyen a la propagación de estos vapores.

Para minimizar el riesgo de exposición a estos vapores, es importante seguir las instrucciones de uso y manipulación de los materiales de acuerdo con las normas de seguridad establecidas.

para prevenir la inadecuación de partículas

**Riesgo de inhalación de particuladas**

Las harineras emulcidas por lágrimas perdió la audición.

dáhar el oido permanente provocando perdida de la audición.

FATIADA AUDITIVA PER UNA PREVENZIONE

Riesgo de pérdida auditiva  
explosión que ocasionó lesiones severas.  
pérdida de los equilibrios neurológicos puede provocar una


#### 1.4.2 Privatum et apud

**A DVERTENCIA** • El uso continuado de la máquina puede causar daños permanentes en las articulaciones y órganos blandos. Los aditamentos de la herramienta se podrían desgajar o romperse y provocar heridas graves. Operarla u otras personas en el área de trabajo.

Paid Preview Jesus loves Eli Cadena y sus

## **Control de riesgos**



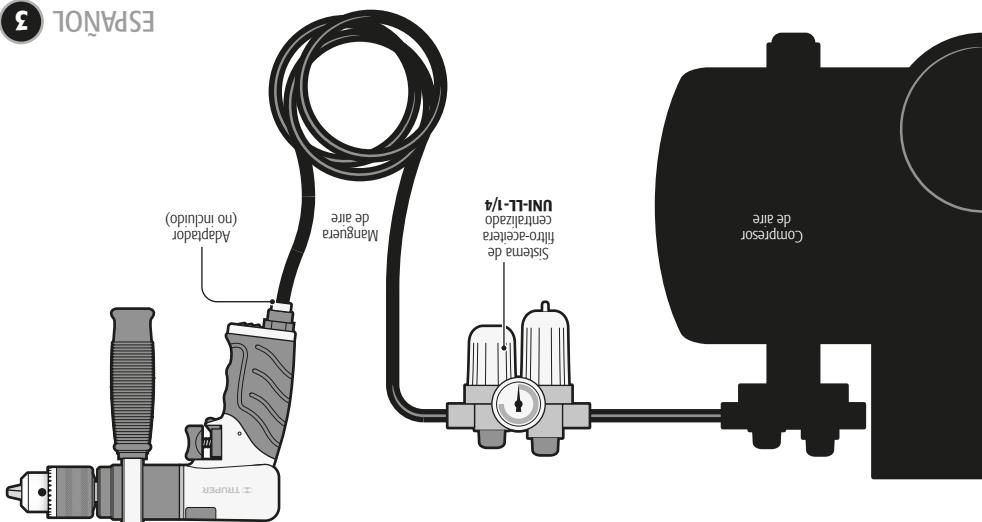

El sistema de filtro-acelerador debe regularse para que admite un flujo de 3 a 6 galones por minuto.

Siempre instale la válvula de aire que respire el operario.

**• TRUPER.** Este sistema se utiliza en la lubricación reducendo el consumo de aceite en un 80%, lo que incrementa la duración de los accesorios.

• **ATENCIÓN** Evite el uso de mangüeras muy largas (más de 8 metros). El diámetro interior mínimo de la manguera debe ser de 1/2" (13 mm) y los conectores deben ser de 1/4 NPT. Use coples y accesorios de buena calidad y del tamaño adecuado.

## Requerimientos de filtrado y lubricación

**• ATENCIÓN** Se debe considerar el aumento en la presión de la línea o el diámetro interior de la manguera para comprender el uso de mangüeras muy largas (más de 8 metros). El diámetro interior mínimo de la manguera debe ser de 1/2" (13 mm) y los conectores deben ser de 1/4 NPT. Use coples y accesorios de buena calidad y del tamaño adecuado.

**Diametro mínimo recomendado de la manguera**

• Conexión de entrada de aire 1/4 NPT

• Consumo de aire 13 l/min (4 CFM)

• Presión de aire 90 PSI (621 kPa)

• Longitud total 8-1/4" (210 mm)

• Peso sin accesorios 1.4 kg (3 lb)

• Velocidad libre 800 r/min

• Vibración <2.5 m/s<sup>2</sup>

• Nivel de ruido 83 dB


• Desalijo de aire inferior

• Broqueo 1/2" (13 mm)

• Descripción Taladro neumático reversible

• Código 19369

• TPN-785HX

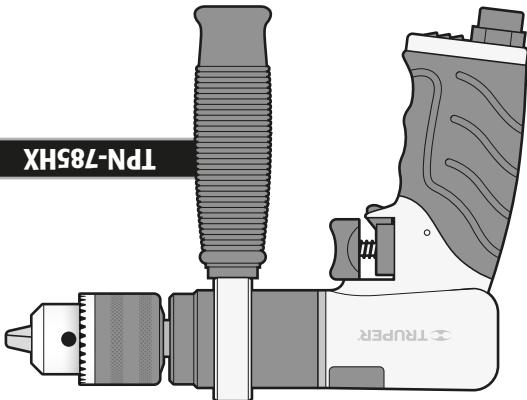

TPN-785HX

- A ATTENCIÓN**
- 1 Especificaciones técnicas ..... 3
  - 2 Requerimientos de filtrado y lubricación ..... 3
  - 3 Aderencias de Seguridad ..... 4
  - 4 Para uso de herramientas neumáticas ..... 5
  - 5 Control de riesgos ..... 7
  - 6 Puesta en marcha ..... 8
  - 7 Ensamble ..... 8
  - 8 Mantenimiento ..... 9
  - 9 Centros de Servicio Autorizados ..... 10
  - 10 Poliza de Garantía ..... 10
- Para poder sacar el máximo provecho de la herramienta, proverá su vida útil, hacer valida la garantía en caso de ser necesario y evitar riesgos o lesiones graves, es fundamental leer este instructivo por completo antes de usar la herramienta.
- Guarde este instructivo para futuras referencias.
- Los gráficos de este instructivo son para referencia, pueden variar del aspecto real de la herramienta.

**Indice****TRUPER®**



Lea este instructivo por completo  
antes de usar la herramienta.




ATENCIÓN

Utilice aceite de forma continua y  
dósilicada para lubrificar la herramienta.

ADVERTENCIA

# TPN-785HX

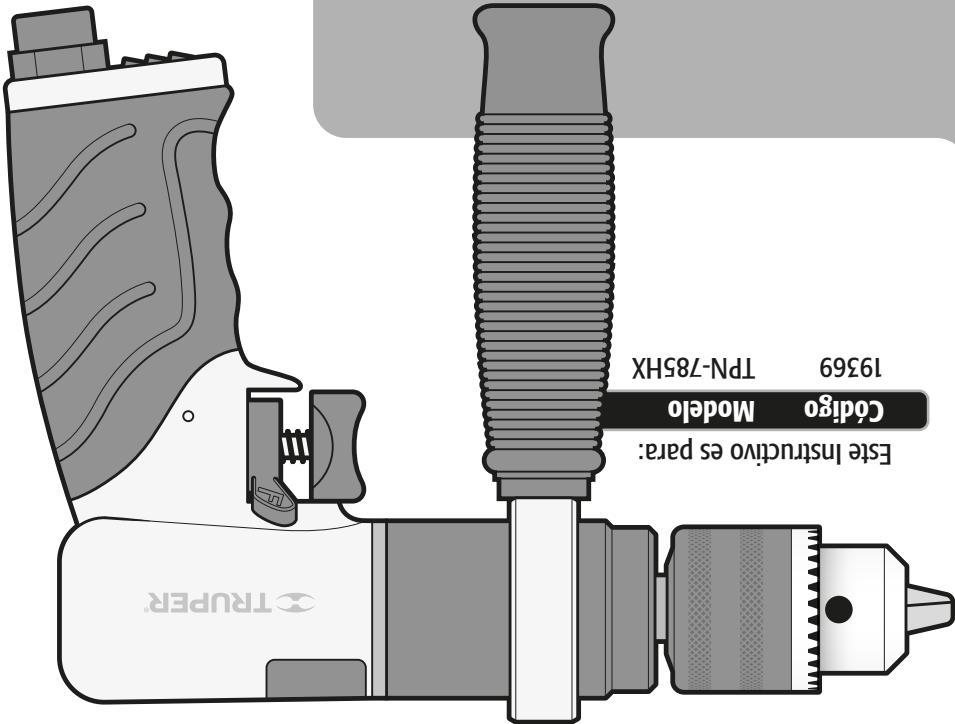

19369 TPN-785HX

Código Modelo

Este instructivo es para:

Broquero  
**1/2"**  
13 mm

Taladro neumático reversible

Instructivo de

**TRUPER®**

ESPAÑOL  
ENGLISH